DrayTek

Vigor2860 Series

VDSL2 Security Firewall

Your reliable networking solutions partner

User's Guide

V1.0

Vigor2860 Series
VDSL2 Security Firewall
User's Guide

Version: 1.0

Firmware Version: V3.7.1_RC5a

(For future update, please visit DrayTek web site)

Date: 22/02/2013

Copyright Information

Copyright Declarations

Copyright 2012 All rights reserved. This publication contains information that is protected by copyright. No part may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language without written permission from the copyright holders.

Trademarks

The following trademarks are used in this document:

- Microsoft is a registered trademark of Microsoft Corp.
- Windows, Windows 95, 98, Me, NT, 2000, XP, Vista and Explorer are trademarks of Microsoft Corp.
- Apple and Mac OS are registered trademarks of Apple Inc.
- Other products may be trademarks or registered trademarks of their respective manufacturers.

Safety Instructions and Approval

Safety Instructions

- Read the installation guide thoroughly before you set up the router.
- The router is a complicated electronic unit that may be repaired only be authorized and qualified personnel. Do not try to open or repair the router yourself.
- Do not place the router in a damp or humid place, e.g. a bathroom.
- The router should be used in a sheltered area, within a temperature range of +5 to +40 Celsius.
- Do not expose the router to direct sunlight or other heat sources. The housing and electronic components may be damaged by direct sunlight or heat sources.
- Do not deploy the cable for LAN connection outdoor to prevent electronic shock hazards.
- Keep the package out of reach of children.
- When you want to dispose of the router, please follow local regulations on conservation of the environment.

Warranty

We warrant to the original end user (purchaser) that the router will be free from any defects in workmanship or materials for a period of two (2) years from the date of purchase from the dealer. Please keep your purchase receipt in a safe place as it serves as proof of date of purchase. During the warranty period, and upon proof of purchase, should the product have indications of failure due to faulty workmanship and/or materials, we will, at our discretion, repair or replace the defective products or components, without charge for either parts or labor, to whatever extent we deem necessary tore-store the product to proper operating condition. Any replacement will consist of a new or re-manufactured functionally equivalent product of equal value, and will be offered solely at our discretion. This warranty will not apply if the product is modified, misused, tampered with, damaged by an act of God, or subjected to abnormal working conditions. The warranty does not cover the bundled or licensed software of other vendors. Defects which do not significantly affect the usability of the product will not be covered by the warranty. We reserve the right to revise the manual and online documentation and to make changes from time to time in the contents hereof without obligation to notify any person of such revision or changes.

Be a Registered Owner

Web registration is preferred. You can register your Vigor router via http://www.DrayTek.com.

Firmware & Tools Updates

Due to the continuous evolution of DrayTek technology, all routers will be regularly upgraded. Please consult the DrayTek web site for more information on newest firmware, tools and documents.

http://www.DrayTek.com

European Community Declarations

Manufacturer: DrayTek Corp.
Address: No. 26, Fu Shing Road, Hukou Township, Hsinchu Industrial Park, Hsinchu County, Taiwan 303
Product: Vigor2860 Series Router

DrayTek Corp. declares that Vigor2860 Series of routers are in compliance with the following essential requirements and other relevant provisions of R&TTE 1999/5/EC, ErP 2009/125/EC and RoHS 2011/65/EU.

The product conforms to the requirements of Electro-Magnetic Compatibility (EMC) Directive 2004/108/EC by complying with the requirements set forth in EN55022/Class B and EN55024/Class B.

The product conforms to the requirements of Low Voltage (LVD) Directive 2006/95/EC by complying with the requirements set forth in EN60950-1.

Regulatory Information

Federal Communication Commission Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and

(2) This device may accept any interference received, including interference that may cause undesired operation.

Please visit http://www.draytek.com/user/SupportDLRTTECE.php

This product is designed for the DSL and 2.4GHz WLAN network throughout the EC region. Please see the user manual for the applicable networks on your product.

Table of Contents

Introduction....1

1.1 Web Configuration Buttons Explanation 1

1.2 LED Indicators and Connectors 2

1.2.1 For Vigor2860 2
1.2.2 For Vigor2860n 4

1.3 Hardware Installation 6

1.4 Printer Installation 7

Basic Settings....13

2.1 Accessing Web Page 13

2.2 Changing Password 15

2.3 Quick Start Wizard 16

2.3.1 For WAN1 (ADSL/VDSL) 17
2.3.2 For WAN2 (Ethernet) 22
2.3.3 For WAN3 (USB) 31

2.4 Service Activation Wizard 33

2.5 Introducing Dashboard 36

2.5.1 Virtual Panel 38
2.5.2 Name with a Link 38
2.5.3 Quick Access for Common Used Menu 39
2.5.4 GUI Map 40
2.5.5 Web Console 41
2.5.6 Config Backup 42

2.6 Online Status 42

2.6.1 Physical Connection 42
2.6.2 Virtual WAN 45

2.7 Saving Configuration 45

2.8 Registering Vigor Router 46

Web Configuration 51

3.1 WAN 51

3.1.1 Basics of Internet Protocol (IP) Network 51
3.1.2 General Setup 53
3.1.3 Internet Access 60
3.1.4 Multi-PVCs 88
3.1.5 Multi-VLAN 94
3.1.6 Load-Balance Policy 97

3.2 LAN 99
3.2.1 Basics of LAN 99
3.2.2 General Setup 102
3.2.3 Static Route 111
3.2.4 VLAN 116
3.2.5 Bind IP to MAC 118
3.2.6 LAN Port Mirror 120
3.2.7 Web Portal Setup 121
3.3 NAT 123
3.3.1 Port Redirection 124
3.3.2 DMZ Host 126
3.3.3 Open Ports 130
3.3.4 Address Mapping 132
3.3.5 Port Triggering 134
3.4 Firewall 137
3.4.1 Basics for Firewall 137
3.4.2 General Setup 139
3.4.3 Filter Setup 144
3.4.4 DoS Defense 152
3.5 User Management 156
3.5.1 General Setup 157
3.5.2 User Profile 158
3.5.3 User Group 161
3.5.4 User Online Status 163
3.6 Objects Settings 164
3.6.1 IP Object 164
3.6.2 IP Group 166
3.6.3 IPv6 Object 168
3.6.4 IPv6 Group 170
3.6.5 Service Type Object 171
3.6.6 Service Type Group 173
3.6.7 Keyword Object 175
3.6.8 Keyword Group 177
3.6.9 File Extension Object 178
3.6.10 SMS/Mail Service Object 180
3.6.11 Notification Object 185
3.7 CSM Profile 187
3.7.1 APP Enforcement Profile 188
3.7.2 URL Content Filter Profile 190
3.7.3 Web Content Filter Profile 195
3.8 Bandwidth Management 199
3.8.1 Sessions Limit 199
3.8.2 Bandwidth Limit 201
3.8.3 Quality of Service 203
3.9 Applications 210
3.9.1 Dynamic DNS 210
3.9.2 Schedule 213
3.9.3 RADIUS 215
3.9.4 LDAP /Active Directory Setup 216
3.9.5 UPnP 220
3.9.6 IGMP 222
3.9.7 Wake on LAN 223

3.9.8 SMS / Mail Alert Service 224
3.10 VPN and Remote Access 226
3.10.1 VPN Client Wizard 226
3.10.2 VPN Server Wizard 233
3.10.3 Remote Access Control 238
3.10.4 PPP General Setup 238
3.10.5 IPSec General Setup 240
3.10.6 IPSec Peer Identity 242
3.10.7 OpenVPN General Setup 244
3.10.8 Remote Dial-in User 245
3.10.9 LAN to LAN 248
3.10.10 VPN TRUNK Management 259
3.10.11 Connection Management 268
3.11 Certificate Management 269
3.11.1 Local Certificate 269
3.11.2 Trusted CA Certificate 273
3.11.3 Certificate Backup 274
3.12 Wireless LAN 275
3.12.1 Basic Concepts 275
3.12.2 General Setup 277
3.12.3 Security 280
3.12.4 Access Control 282
3.12.5 WPS 283
3.12.6 WDS 286
3.12.7 Advanced Setting 289
3.12.8 WMM Configuration 290
3.12.9 AP Discovery 292
3.12.10 Station List 293
3.13 SSL VPN 294
3.13.1 General Setup 294
3.13.2 SSL Web Proxy 295
3.13.3 SSL Application 296
3.13.4 User Account 299
3.13.5 User Group 299
3.13.6 Online User Status 301
3.14 USB Application 302
3.14.1 USB General Settings 302
3.14.2 USB User Management 303
3.14.3 File Explorer 305
3.14.4 USB Disk Status 306
3.14.5 Syslog Explorer 307
3.14.6 Temperature Sensor 308
3.15 System Maintenance 310
3.15.1 System Status 310
3.15.2 TR-069 312
3.15.3 Administrator Password 313
3.15.4 User Password 314
3.15.5 Login Customization 316
3.15.6 Configuration Backup 317
3.15.7 Syslog/Mail Alert 319
3.15.8 Time and Date 322
3.15.9 Management 323
3.15.10 Reboot System 325
3.15.11 Firmware Upgrade 326

3.15.12 Activation 327
3.16 Diagnostics 328
3.16.1 Dial-out Triggering 329
3.16.2 Routing Table 330
3.16.3 ARP Cache Table 331
3.16.4 IPv6 Neighbour Table 331
3.16.5 DHCP Table 332
3.16.6 NAT Sessions Table 333
3.16.7 Ping Diagnosis 334
3.16.8 Data Flow Monitor 335
3.16.9 Traffic Graph 337
3.16.10 Trace Route 338
3.16.11 Web Firewall Syslog 339
3.16.12 TSPC Status 340
3.17 External Devices 341
3.17.1 All Devices 341
3.17.2 Access Point Devices 342

4 **Tutorials and Applications 349**

4.1 How to configure settings for IPv6 Service in Vigor2860 349
4.2 How to establish OpenVPN - host to LAN tunnels(authenticated without CA) via SmartVPN Client? 359
4.3 How can I get the files from USB storage device connecting to Vigor router? 363
4.4 How to Build a LAN-to-LAN VPN Between Remote Office and Headquarter via IPSec Tunnel (Main Mode) 366
4.5 How to Optimize the Bandwidth through QoS Technology 370
4.6 QoS Setting Example 374
4.7 How to Implement the LDAP/AD Authentication for User Management? 378
4.8 How to use Landing Page Feature 381
4.9 How to Send out SMS via Vigor Router 385
4.10 How to Create an Account for MyVigor 388
4.10.1 Create an Account via Vigor Router 388
4.10.2 Create an Account via MyVigor Web Site 392
4.11 How to Setup Address Mapping 396
4.12 How to Configure Certain Computers Accessing to Internet 400
4.13 How to Block Facebook Service Accessed by the Users via Web Content Filter / URL Content Filter 404

5 **Trouble Shooting 409**

5.1 Checking If the Hardware Status Is OK or Not 409
5.2 Checking If the Network Connection Settings on Your Computer Is OK or Not 410
5.3 Pinging the Router from Your Computer 412

5.4 Checking If the ISP Settings are OK or Not 413
5.5 Problems for 3G Network Connection 413
5.6 Backing to Factory Default Setting If Necessary 414
5.7 Contacting Your Dealer 415

Introduction

Vigor2860 series is a VDSL2 router. It integrates IP layer QoS, NAT session/bandwidth management to help users control works well with large bandwidth.

By adopting hardware-based VPN platform and hardware encryption of AES/DES/3DES, the router increases the performance of VPN greatly, and offers several protocols (such as IPSec/PPTP/L2TP) with up to **32** VPN tunnels.

The object-based design used in SPI (Stateful Packet Inspection) firewall allows users to set firewall policy with ease. CSM (Content Security Management) provides users control and management in IM (Instant Messenger) and P2P (Peer to Peer) more efficiency than before. By the way, DoS/DDoS prevention and URL/Web content filter strengthen the security outside and control inside. Object-based firewall is flexible and allows your network be safe.

In addition, Vigor2860 series supports USB interface for connecting USB printer to share printing function or 3G USB modem for network connection.

Vigor2860 series provides two-level management to simplify the configuration of network connection. The user mode allows user accessing into WEB interface via simple configuration. However, if users want to have advanced configurations, they can access into WEB interface through admin mode.

1.1 Web Configuration Buttons Explanation

Several main buttons appeared on the web pages are defined as the following:

OK	Save and apply current settings.
Cancel	Cancel current settings and recover to the previous saved settings.
Clear	Clear all the selections and parameters settings, including selection from drop-down list. All the values must be reset with factory default settings.
Add	Add new settings for specified item.
Edit	Edit the settings for the selected item.
Delete	Delete the selected item with the corresponding settings.

Note: For the other buttons shown on the web pages, please refer to Chapter 3, 4 for detailed explanation.

1.2 LED Indicators and Connectors

Before you use the Vigor router, please get acquainted with the LED indicators and connectors first.

1.2.1 For Vigor2860

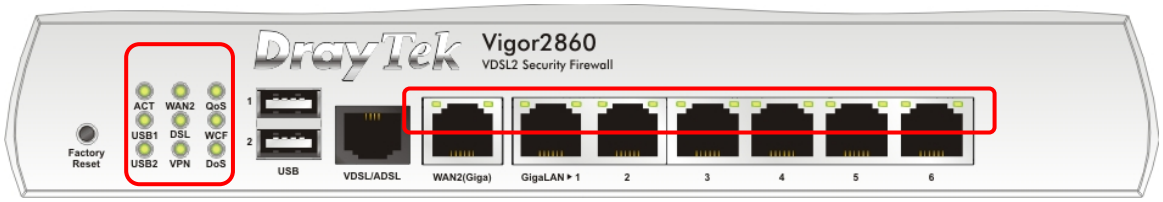

LED		Status	Explanation
ACT (Activity)		Blinking	The router is powered on and running normally.
		Off	The router is powered off.
USB1~2		On	USB device is connected and ready for use.
		Blinking	The data is transmitting.
WAN2		On	Internet connection is ready.
		Off	Internet connection is not ready.
		Blinking	The data is transmitting.
DSL		On	The router is ready to access Internet through DSL link.
		Blinking	Slowly: The DSL connection is ready. Quickly: The connection is training.
VPN		On	The VPN tunnel is active.
QoS		On	The QoS function is active.
WCF		On	The Web Content Filter is active. (It is enabled from **Firewall >> General Setup**).
DoS		On	The DoS/DDoS function is active.
		Blinking	It will blink while detecting an attack.
LED on Connector			
WAN2 (Giga)	Left LED	On	The port is connected.
		Off	The port is disconnected.
		Blinking	The data is transmitting.
	Right LED	On	The port is connected with 1000Mbps.
		Off	The port is connected with 10/100Mbps
GigaLAN 1~6	Left LED	On	The port is connected.
		Off	The port is disconnected.
		Blinking	The data is transmitting.
	Right LED	On	The port is connected with 1000Mbps.
		Off	The port is connected with 10/100Mbps

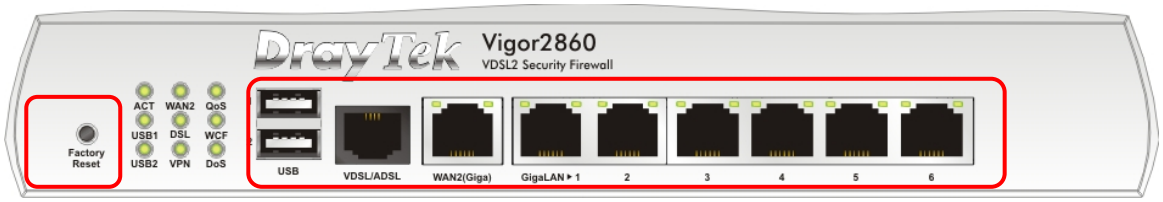

Interface	Description
Factory Reset	Restore the default settings. Usage: Turn on the router (ACT LED is blinking). Press the hole and keep for more than 5 seconds. When you see the ACT LED begins to blink rapidly than usual, release the button. Then the router will restart with the factory default configuration.
USB	Connecter for a USB device (for 3G USB Modem or printer).
VDSL/ADSL	Connecter for accessing the Internet.
WAN2	Connecter for local network devices or modem for accessing Internet.
GigaLAN (1-6)	Connecters for local network devices.
PWR	Connecter for a power adapter.
ON/OFF	Power Switch.

1.2.2 For Vigor2860n

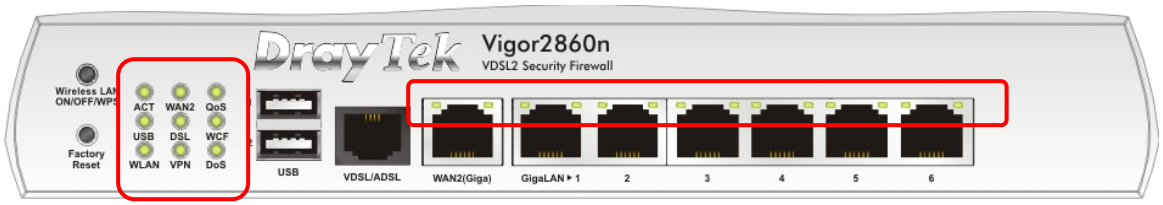

LED		Status	Explanation
ACT (Activity)		Blinking	The router is powered on and running normally.
		Off	The router is powered off.
USB		On	USB device is connected and ready for use.
		Blinking	The data is transmitting.
WLAN		On	Wireless access point is ready.
		Blinking	It will blink slowly while wireless traffic goes through. ACT and WLAN LEDs blink quickly and simultaneously when WPS is working, and will return to normal condition after two minutes. (You need to setup WPS within 2 minutes.)
WAN2		On	Internet connection is ready.
		Off	Internet connection is not ready.
		Blinking	The data is transmitting.
DSL		On	The router is ready to access Internet through DSL link.
		Blinking	Slowly: The DSL connection is ready. Quickly: The connection is training.
VPN		On	The VPN tunnel is active.
QoS		On	The QoS function is active.
WCF		On	The Web Content Filter is active. (It is enabled from **Firewall >> General Setup**).
DoS		On	The DoS/DDoS function is active.
		Blinking	It will blink while detecting an attack.
LED on Connector			
WAN2 (Giga)	Left LED	On	The port is connected.
		Off	The port is disconnected.
		Blinking	The data is transmitting.
	Right LED	On	The port is connected with 1000Mbps.
		Off	The port is connected with 10/100Mbps
GigaLAN 1~6	Left LED	On	The port is connected.
		Off	The port is disconnected.
		Blinking	The data is transmitting.
	Right LED	On	The port is connected with 1000Mbps.
		Off	The port is connected with 10/100Mbps

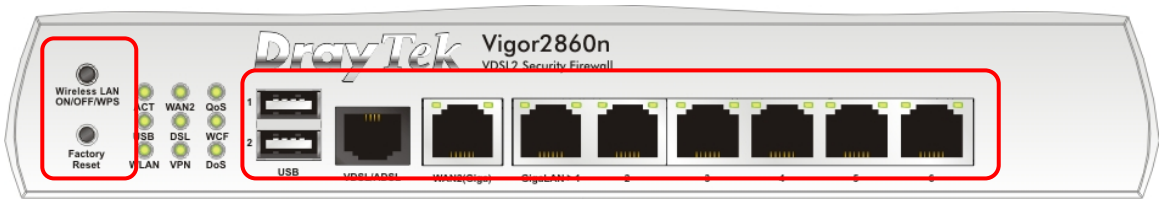

Interface	Description
Wireless LAN ON/OFF/WPS	Press "Wireless LAN ON/OFF/WPS" button once to wait for client device making network connection through WPS. Press "Wireless LAN ON/OFF/WPS" button twice to enable (WLAN LED on) or disable (WLAN LED off) wireless connection.
Factory Reset	Restore the default settings. Usage: Turn on the router (ACT LED is blinking). Press the hole and keep for more than 5 seconds. When you see the ACT LED begins to blink rapidly than usual, release the button. Then the router will restart with the factory default configuration.
USB	Connecter for a USB device (for 3G USB Modem or printer).
VDSL/ADSL	Connecter for accessing the Internet.
WAN2 (Giga)	Connecter for local network devices or modem for accessing Internet.
GigaLAN (1-6)	Connecters for local network devices.
PWR	Connecter for a power adapter.
ON/OFF	Power Switch.

1.3 Hardware Installation

Before starting to configure the router, you have to connect your devices correctly.

1. Connect the DSL interface to the land line jack with a DSL line cable.
2. Connect the cable Modem/DSL Modem/Media Converter to the WAN port of router with Ethernet cable (RJ-45).
3. Connect one end of an Ethernet cable (RJ-45) to one of the **LAN** ports of the router and the other end of the cable (RJ-45) into the Ethernet port on your computer.
4. Connect one end of the power adapter to the router's power port on the rear panel, and the other side into a wall outlet.
5. Power on the device by pressing down the power switch on the rear panel.
6. The system starts to initiate. After completing the system test, the **ACT** LED will light up and start blinking.

(For the hardware connection, we take *"n"* model as an example.)

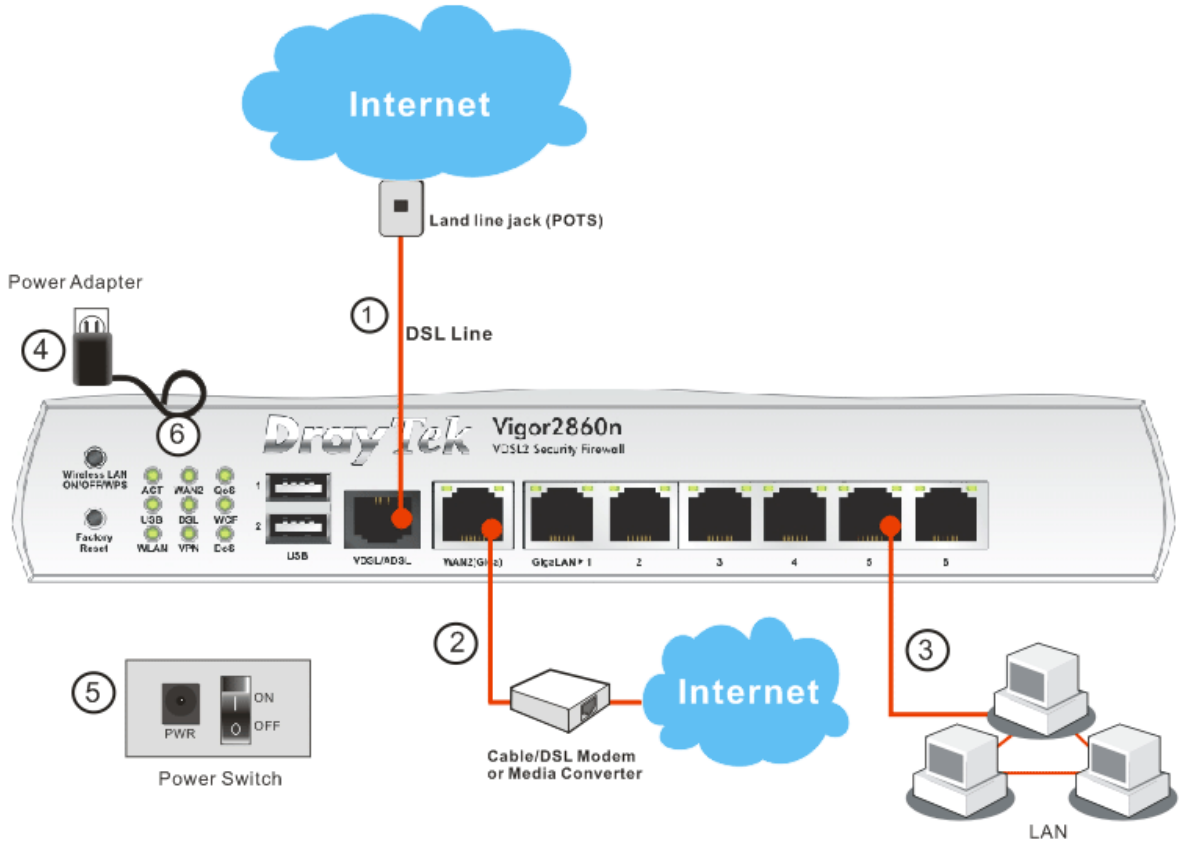

1.4 Printer Installation

You can install a printer onto the router for sharing printing. All the PCs connected this router can print documents via the router. The example provided here is made based on Windows XP/2000. For Windows 98/SE/Vista, please visit **www.DrayTek.com**.

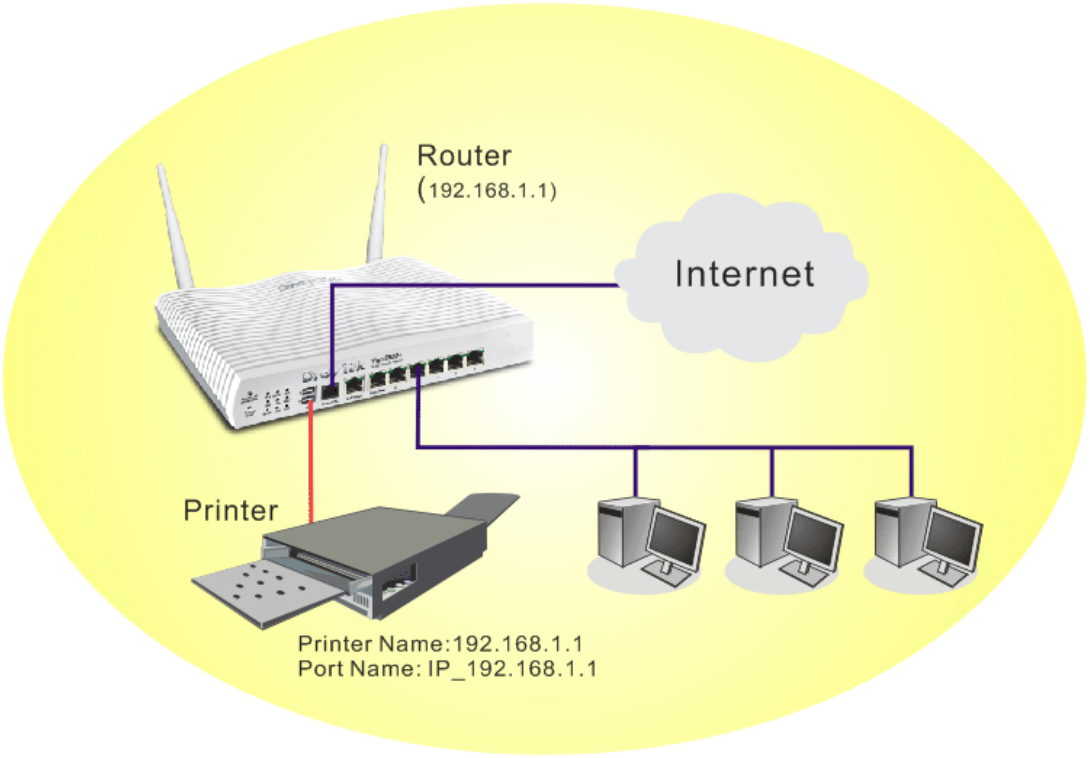

Before using it, please follow the steps below to configure settings for connected computers (or wireless clients).

1. Connect the printer with the router through USB/parallel port.
2. Open **Start->Settings-> Printer and Faxes**.

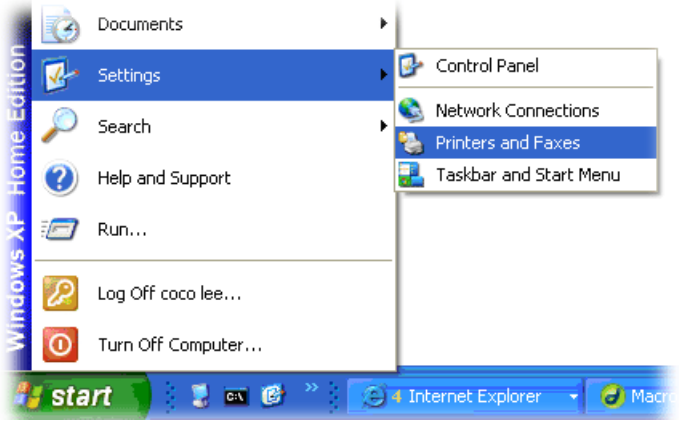

3. Open **File->Add Printer**. A welcome dialog will appear. Please click **Next**.

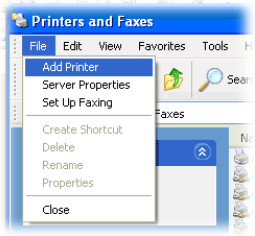

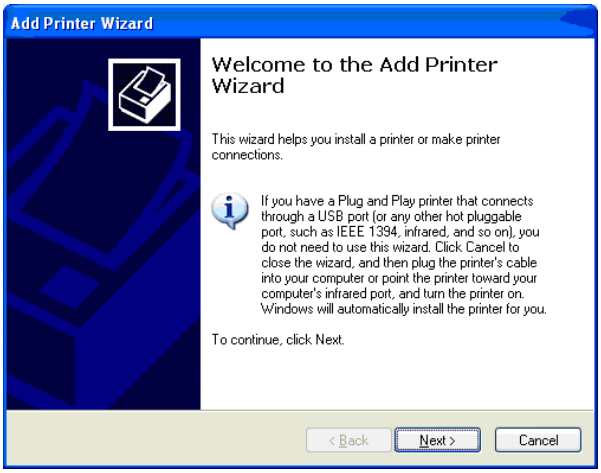
Add Printer Wizard
Welcome to the Add Printer Wizard
This wizard helps you install a printer or make printer connections.
If you have a Plug and Play printer that connects through a USB port (or any other hot pluggable port, such as IEEE 1394, infrared, and so on), you do not need to use this wizard. Click Cancel to close the wizard, and then plug the printer's cable into your computer or point the printer toward your computer's infrared port, and turn the printer on. Windows will automatically install the printer for you.
To continue, click Next.
< Back
Next >
Cancel

4. Click Local printer attached to this computer and click Next.

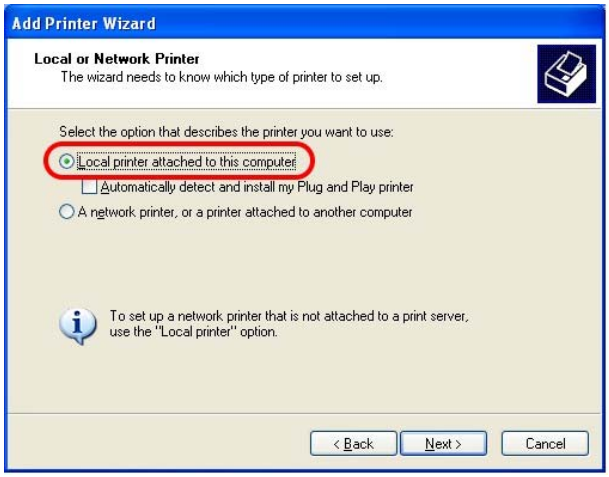
Add Printer Wizard
Local or Network Printer
The wizard needs to know which type of printer to set up.
Select the option that describes the printer you want to use:
Local printer attached to this computer
Automatically detect and install my Plug and Play printer
A network printer, or a printer attached to another computer
To set up a network printer that is not attached to a print server, use the "Local printer" option.
< Back
Next >
Cancel

5. In this dialog, choose **Create a new port Type of port** and use the drop down list to select **Standard TCP/IP Port**. Click **Next**.

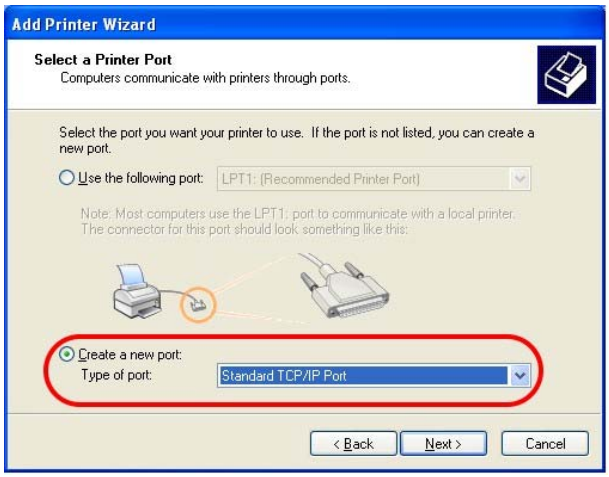
Add Printer Wizard
Select a Printer Port
Computers communicate with printers through ports.
Select the port you want your printer to use. If the port is not listed, you can create a new port.
Use the following port:
LPT1: (Recommended Printer Port)
Note: Most computers use the LPT1: port to communicate with a local printer.
The connector for this port should look something like this:
Create a new port:
Type of port:
Standard TCP/IP Port
< Back
Next >
Cancel

6. In the following dialog, type **192.168.1.1** (router's LAN IP) in the field of **Printer Name or IP Address** and type **IP_192.168.1.1** as the port name. Then, click **Next**.

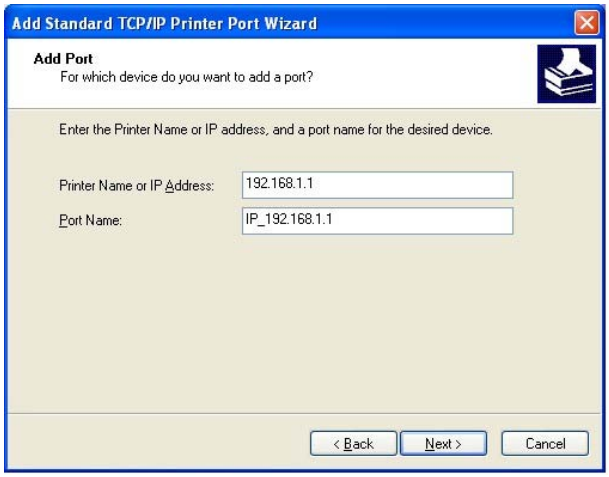
Add Standard TCP/IP Printer Port Wizard
Add Port
For which device do you want to add a port?
Enter the Printer Name or IP address, and a port name for the desired device.
Printer Name or IP Address:
192.168.1.1
Port Name:
IP_192.168.1.1
< Back
Next >
Cancel

7. Click Standard and choose Generic Network Card.

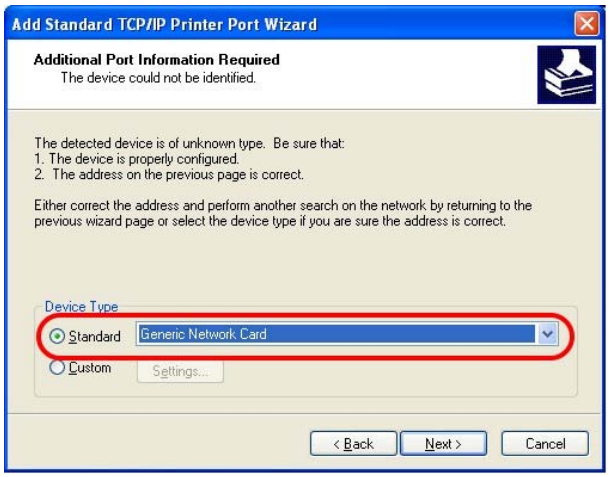
Add Standard TCP/IP Printer Port Wizard
Additional Port Information Required
The device could not be identified.
The detected device is of unknown type. Be sure that:
1. The device is properly configured.
2. The address on the previous page is correct.
Either correct the address and perform another search on the network by returning to the previous wizard page or select the device type if you are sure the address is correct.
Device Type
Standard
Generic Network Card
Custom
Settings...
< Back
Next >
Cancel

8. Then, in the following dialog, click **Finish**.

Add Standard TCP/IP Printer Port Wizard
Completing the Add Standard TCP/IP Printer Port Wizard
You have selected a port with the following characteristics.
SNMP: No
Protocol: RAW, Port 9100
Device: 192.168.1.1
Port Name: IP_192.168.1.1
Adapter Type: Generic Network Card
To complete this wizard, click Finish.
< Back
Finish
Cancel

9. Now, your system will ask you to choose right name of the printer that you installed onto the router. Such step can make correct driver loaded onto your PC. When you finish the selection, click **Next**.

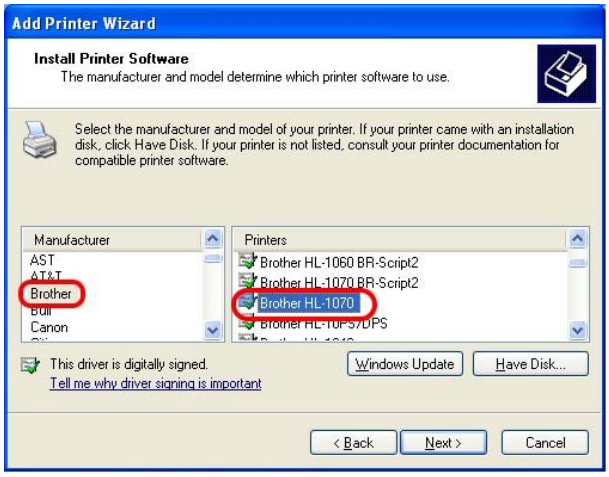
Add Printer Wizard
Install Printer Software
The manufacturer and model determine which printer software to use.
Select the manufacturer and model of your printer. If your printer came with an installation disk, click Have Disk. If your printer is not listed, consult your printer documentation for compatible printer software.
Manufacturer
AST
AT&T
Brother
Bull
Canon
Printers
Brother HL-1060 BR-Script2
Brother HL-1070 BR-Script2
Brother HL-1070
This driver is digitally signed.
Tell me why driver signing is important
Windows Update
Have Disk...
< Back
Next >
Cancel

10. For the final stage, you need to go back to **Control Panel-> Printers** and edit the property of the new printer you have added.

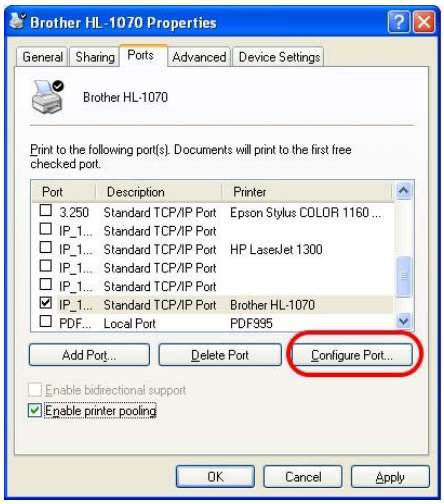

11. Select "**LPR**" on Protocol, type **p1** (number 1) as Queue Name. Then click **OK**. Next please refer to the red rectangle for choosing the correct protocol and LPR name.

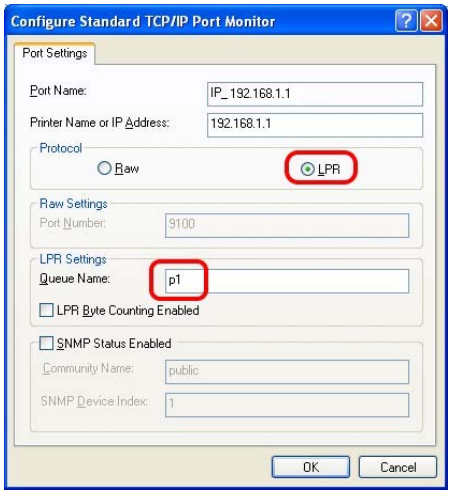

The printer can be used for printing now. Most of the printers with different manufacturers are compatible with vigor router.

Note 1: Some printers with the fax/scanning or other additional functions are not supported. If you do not know whether your printer is supported or not, please visit www.draytek.com to find out the printer list. Open **Support >FAQ/Application Notes**; find out the link of **USB>>Printer Server** and click it.

Then, click the **What types of printers are compatible with Vigor router**? link.

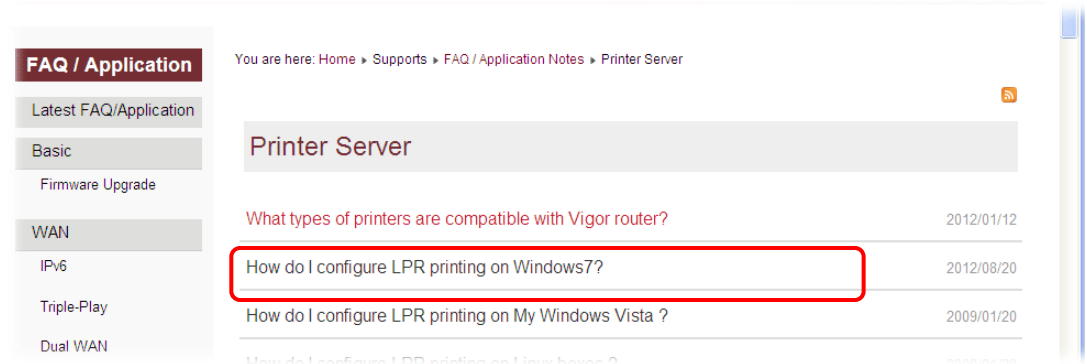

Note 2: Vigor router supports printing request from computers via LAN ports but not WAN port.

This page is left blank.

2 Basic Settings

For using the router properly, it is necessary for you to change the password of web configuration for security and adjust primary basic settings.

This chapter explains how to setup a password for accessing into the web user interface of Vigor router and how to adjust settings for accessing Internet successfully.

2.1 Accessing Web Page

1. Make sure your PC connects to the router correctly.

   You may either simply set up your computer to get IP dynamically from the router or set up the IP address of the computer to be the same subnet as **the default IP address of Vigor router 192.168.1.1**. For the detailed information, please refer to the later section - Trouble Shooting of the guide.

2. Open a web browser on your PC and type **http://192.168.1.1.** The following window will be open to ask for username and password.

3. Please type “admin/admin” as the Username/Password and click **Login**.

> **Notice:** If you fail to access to the web configuration, please go to “Trouble Shooting” for detecting and solving your problem.

4. Now, the **Main Screen** will appear.

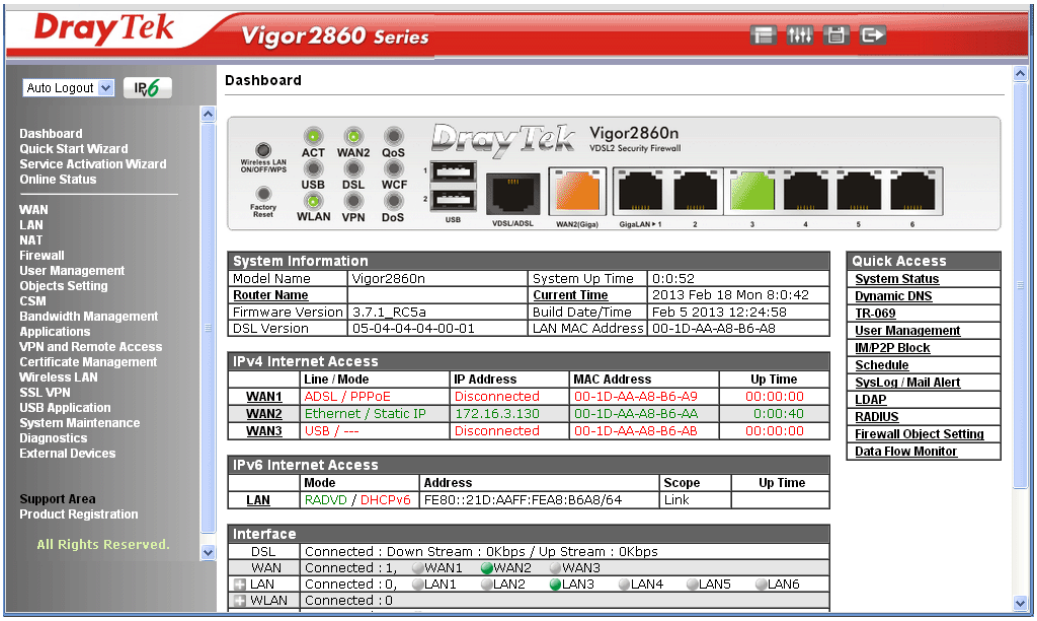

Note: The home page will be different slightly in accordance with the type of the router you have.

5. The web page can be logged out according to the chosen condition. The default setting is **Auto Logout**, which means the web configuration system will logout after 5 minutes without any operation. Change the setting for your necessity.

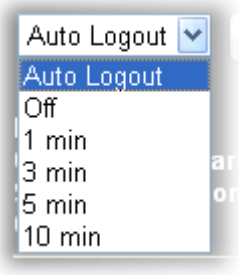

2.2 Changing Password

Please change the password for the original security of the router.

1. Open a web browser on your PC and type **http://192.168.1.1.** A pop-up window will open to ask for username and password.
2. Please type “admin/admin” as Username/Password for accessing into the web user interface with admin mode.
3. Go to **System Maintenance** page and choose **Administrator Password/**.

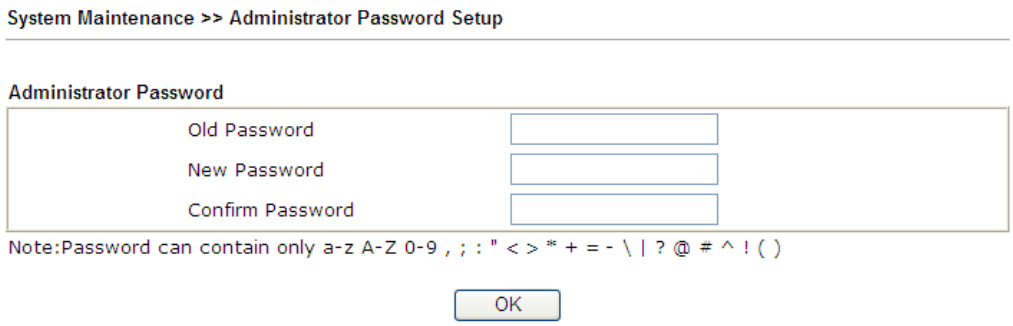
System Maintenance >> Administrator Password Setup
Administrator Password
Old Password
New Password
Confirm Password
Note:Password can contain only a-z A-Z 0-9 , ; : " < > * + = - \ | ? @ # ^ ! ( )
OK

4. Enter the login password (the default is “admin”) on the field of **Old Password**. Type **New Password**. Then click **OK** to continue.

> **Note:** The maximum length of the password you can set is 23 characters.

5. Now, the password has been changed. Next time, use the new password to access the Web user interface for this router.

> **Note:** Even the password is changed, the Username for logging to the web user interface is still “admin”.

2.3 Quick Start Wizard

If your router can be under an environment with high speed NAT, the configuration provide here can help you to deploy and use the router quickly. The first screen of **Quick Start Wizard** is entering login password. After typing the password, please click **Next**.

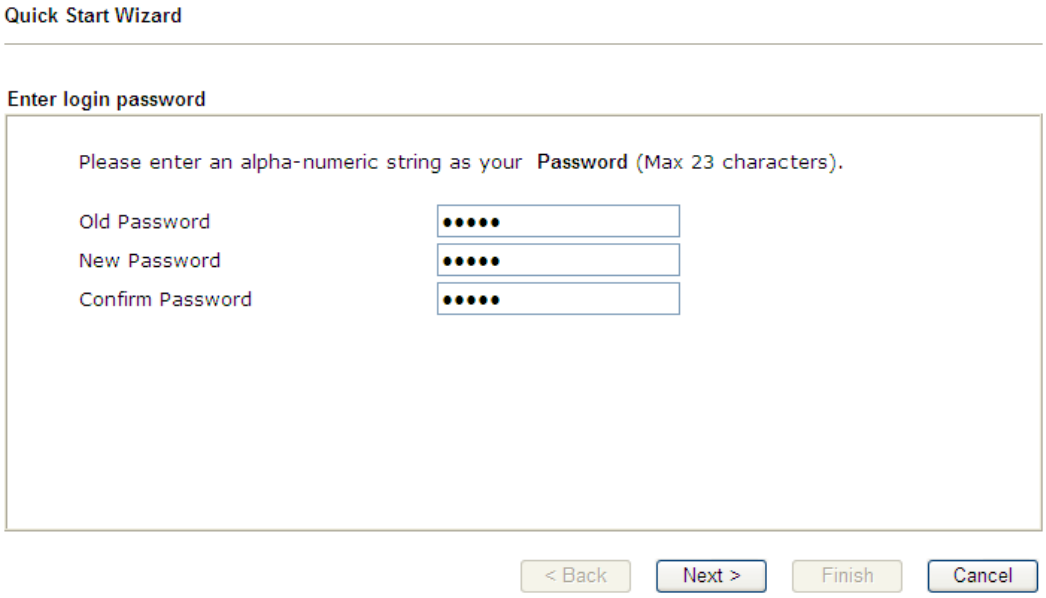

On the next page as shown below, please select the WAN interface that you use. If DSL interface is used, please choose WAN1; if Ethernet interface is used, please choose WAN2; if 3G USB modem is used, please choose WAN3. Then click **Next** for next step.

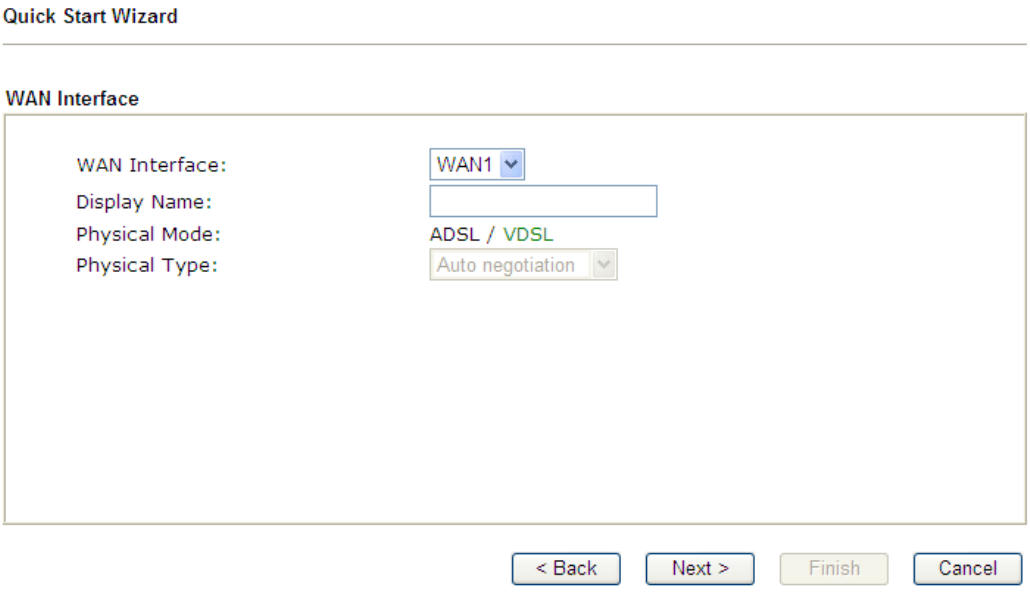

WAN1, WAN2 and WAN3 will bring up different configuration page. Refer to the following for detailed information.

2.3.1 For WAN1 (ADSL/VDSL)

WAN1 is specified for ADSL or VDSL connection.

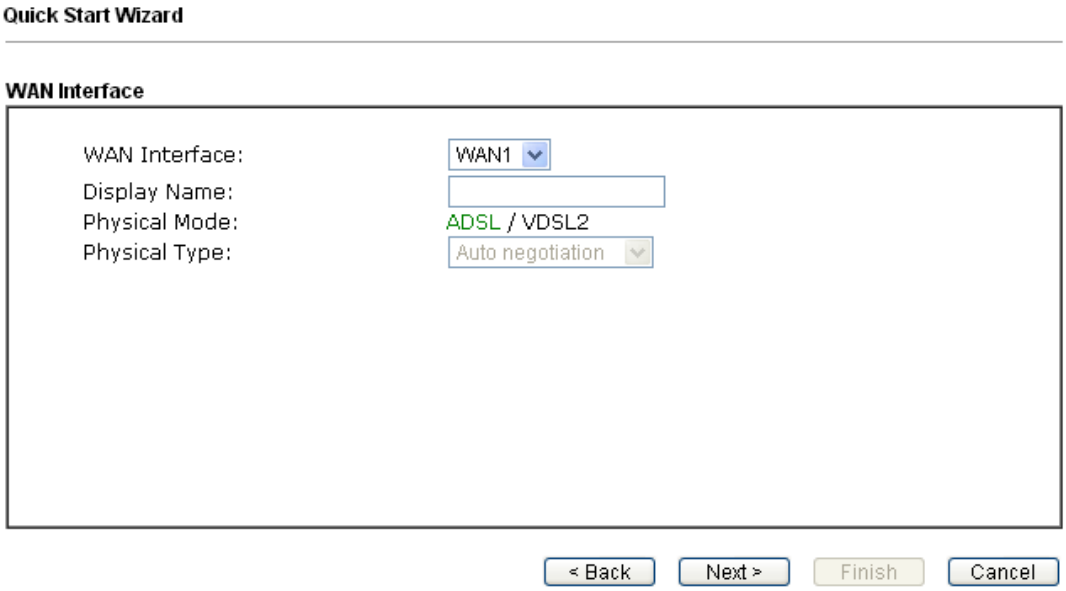

You have to select the appropriate Internet access type **according to the information from your ISP**. For example, you should select PPPoE mode if the ISP provides you PPPoE interface. In addition, the field of **For ADSL Only** will be available only when ADSL is detected. Then click **Next** for next step.

PPPoE/PPPoA

1. Choose **WAN1** as WAN Interface and click the **Next** button; you will get the following page.

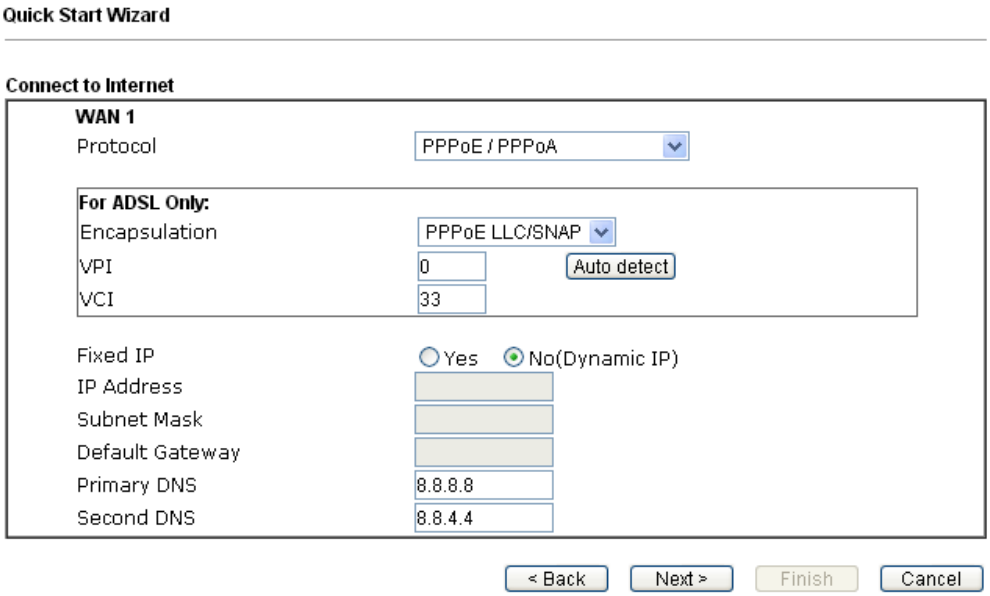

Available settings are explained as follows:

Item	Description
Protocol	There are two modes offered for you to choose for WAN1 interface.

	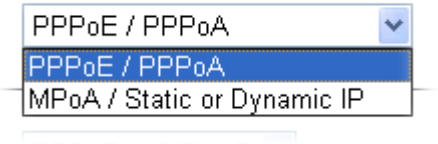 Choose **PPPoE or PPPoA** as the protocol.
For ADSL Only	Such field is provided for ADSL only. You have to choose encapsulation and type the values for VPI and VCI. Or, click **Auto detect** to find out the best values. 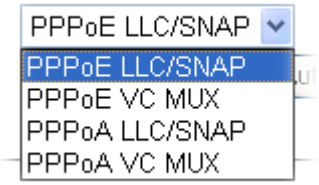
Fixed IP	Click **Yes** to enable Fixed IP feature.
IP Address	Type the IP address if **Fixed IP** is enabled.
Primary DNS	Type in the primary IP address for the router.
Secondary DNS	Type in secondary IP address for necessity in the future.
Back	Click it to return to previous setting page.
Next	Click it to get into the next setting page.
Cancel	Click it to give up the quick start wizard.

2. After finished the above settings, simply click **Next.** Manually enter the Username/Password provided by your ISP

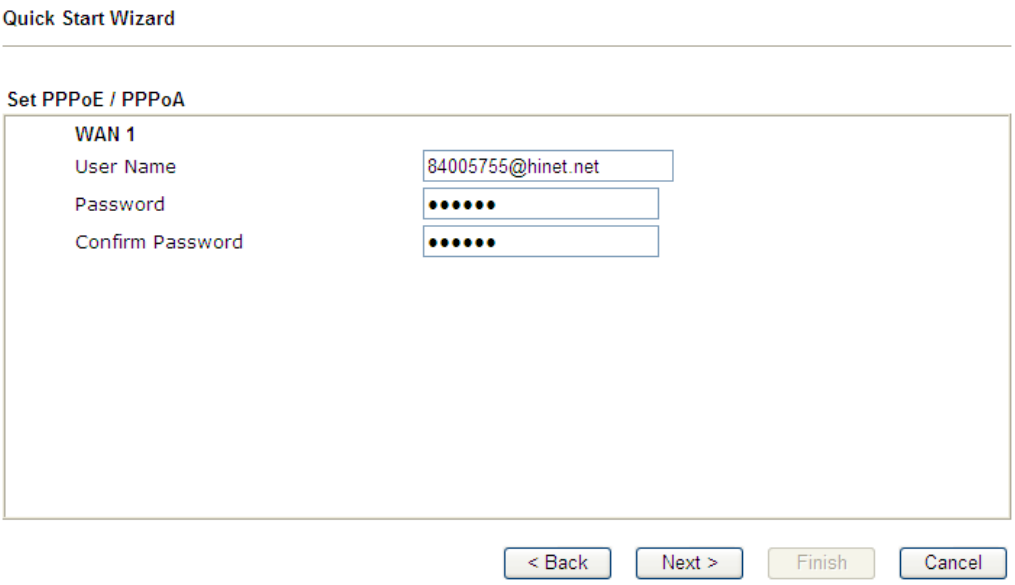

Available settings are explained as follows:

Item	Description
User Name	Assign a specific valid user name provided by the ISP.

Item	Description
	Note: The maximum length of the user name you can set is 63 characters.
Password	Assign a valid password provided by the ISP. **Note:** The maximum length of the password you can set is 62 characters.
Confirm Password	Retype the password.
Back	Click it to return to previous setting page.
Next	Click it to get into the next setting page.
Cancel	Click it to give up the quick start wizard.

3. After finished the above settings, click **Next** for viewing summary of such connection.

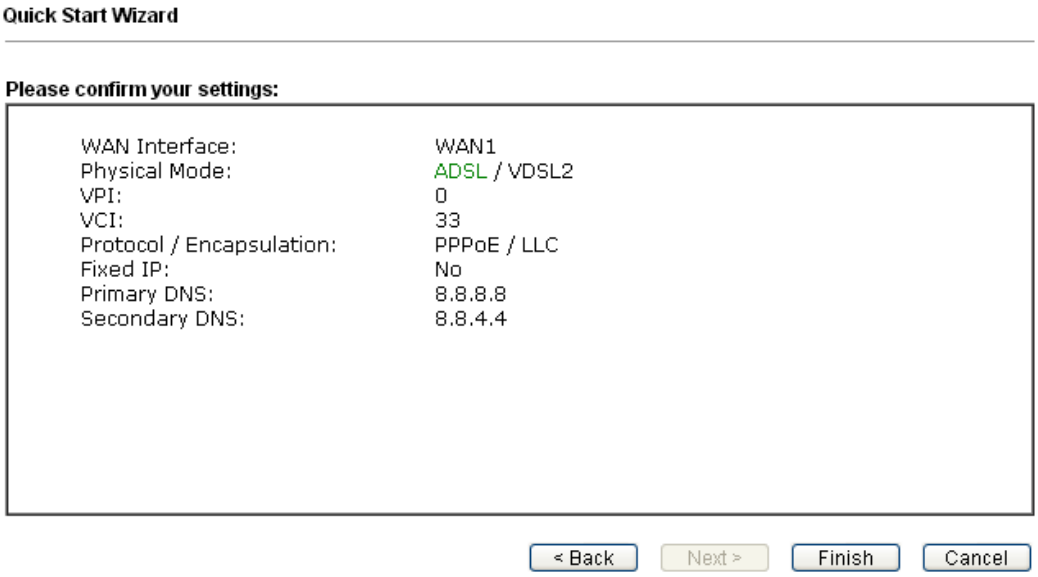

4. Click **Finish.** A page of **Quick Start Wizard Setup OK!!!** will appear. Then, the system status of this protocol will be shown.



5. Now, you can enjoy surfing on the Internet.

MPoA / Static or Dynamic IP

1. Choose **WAN1** as WAN Interface and click the **Next** button; you will get the following page.

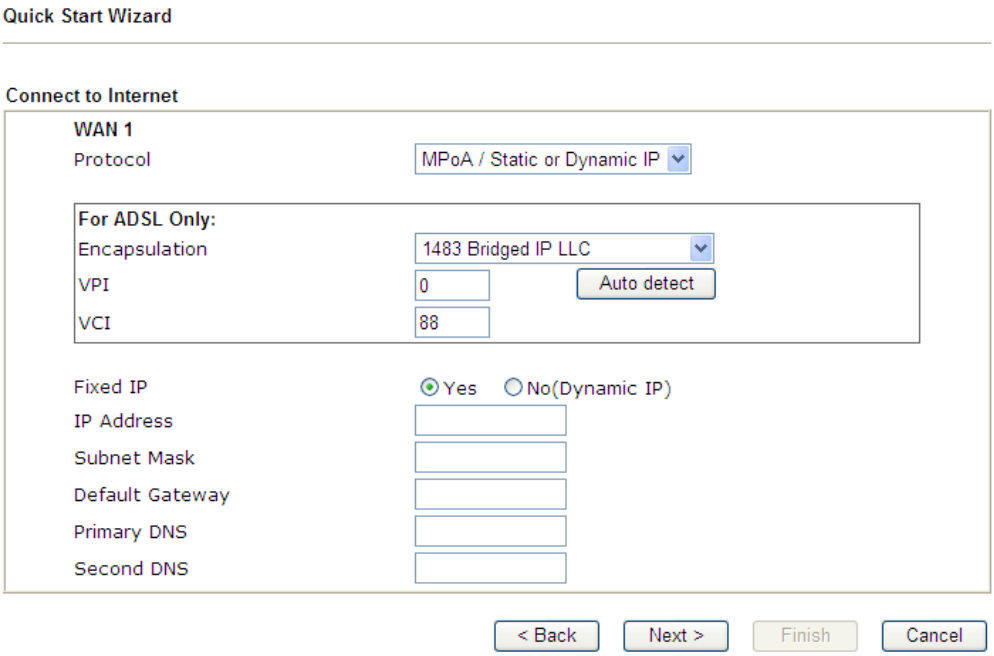

Available settings are explained as follows:

Item	Description
Protocol	There are two modes offered for you to choose for WAN1 interface. 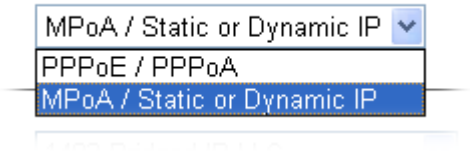 Choose **MPoA / Static or Dynamic IP** as the protocol.
For ADSL Only	Such field is provided for ADSL only. You have to choose encapsulation and type the values for VPI and VCI. Or, click **Auto detect** to find out the best values. 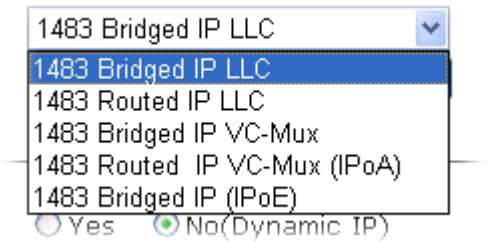
Fixed IP	Click **Yes** to enable Fixed IP feature.
IP Address	Type the IP address if **Fixed IP** is enabled.
Subnet Mask	Type the subnet mask.

Primary DNS	Type in the primary IP address for the router.
Secondary DNS	Type in secondary IP address for necessity in the future.
Back	Click it to return to previous setting page.
Next	Click it to get into the next setting page.
Cancel	Click it to give up the quick start wizard.

2. Please type in the IP address/mask/gateway information originally provided by your ISP. Then click **Next** for viewing summary of such connection.

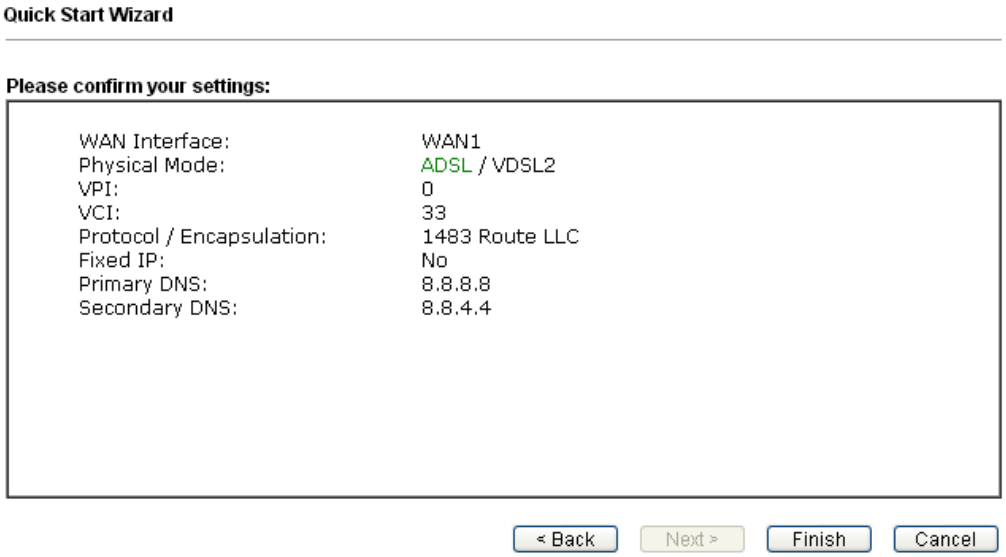

3. Click **Finish.** A page of **Quick Start Wizard Setup OK!!!** will appear. Then, the system status of this protocol will be shown.



4. Now, you can enjoy surfing on the Internet.

2.3.2 For WAN2 (Ethernet)

WAN2 is dedicated to physical mode in Ethernet. If you choose WAN2, please specify physical type. Then, click **Next**.

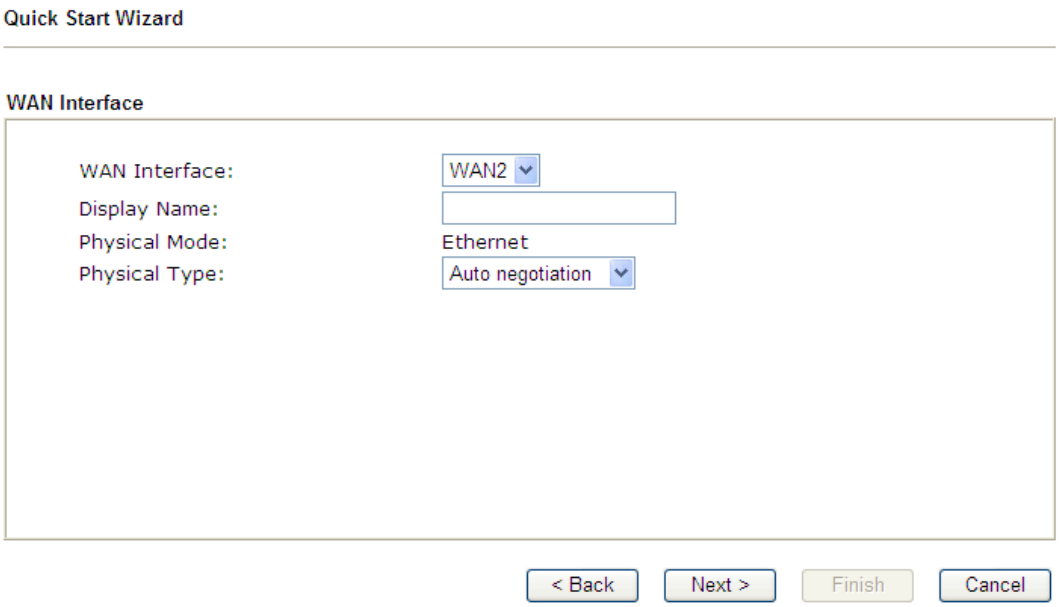

On the next page as shown below, please select the appropriate Internet access type according to the information from your ISP. For example, you should select PPPoE mode if the ISP provides you PPPoE interface. Then click **Next** for next step.

PPPoE

1. Choose **WAN2** as the WAN Interface and click the **Next** button. The following page will be open for you to specify Internet Access Type.

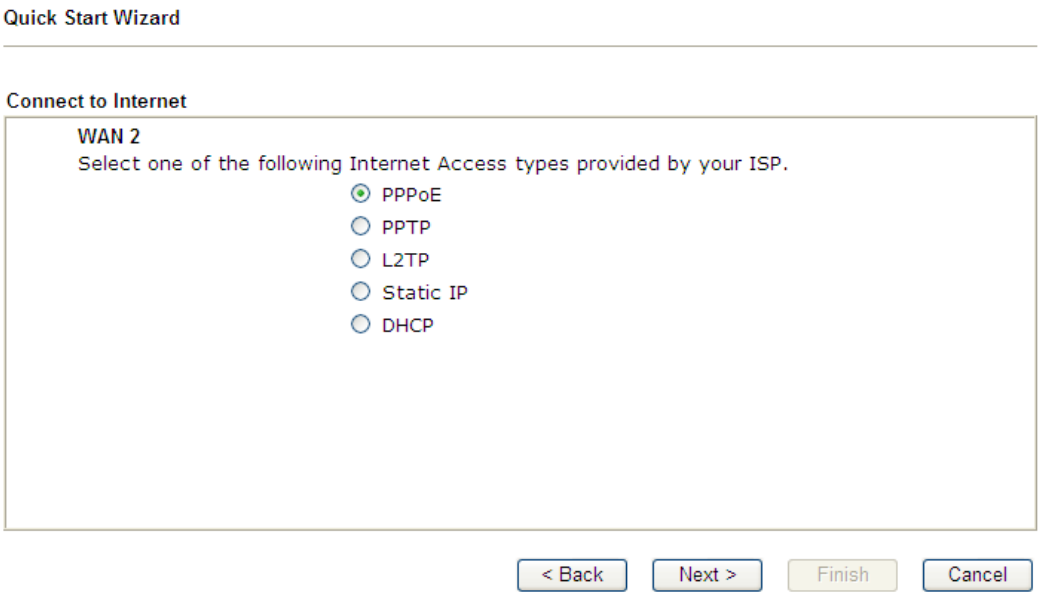

2. Click **PPPoE** as the Internet Access Type. Then click **Next** to continue.

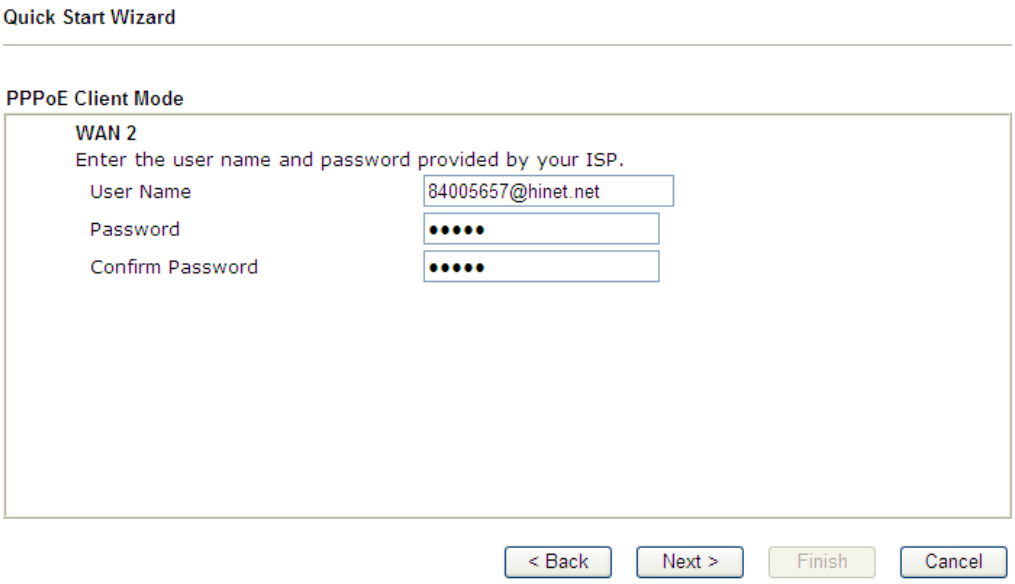

Available settings are explained as follows:

Item	Description
User Name	Assign a specific valid user name provided by the ISP. **Note:** The maximum length of the user name you can set is 63 characters.
Password	Assign a valid password provided by the ISP. **Note:** The maximum length of the password you can set is 62 characters.
Confirm Password	Retype the password.
Back	Click it to return to previous setting page.
Next	Click it to get into the next setting page.
Cancel	Click it to give up the quick start wizard.

3. Please manually enter the Username/Password provided by your ISP. Click **Next** for viewing summary of such connection.

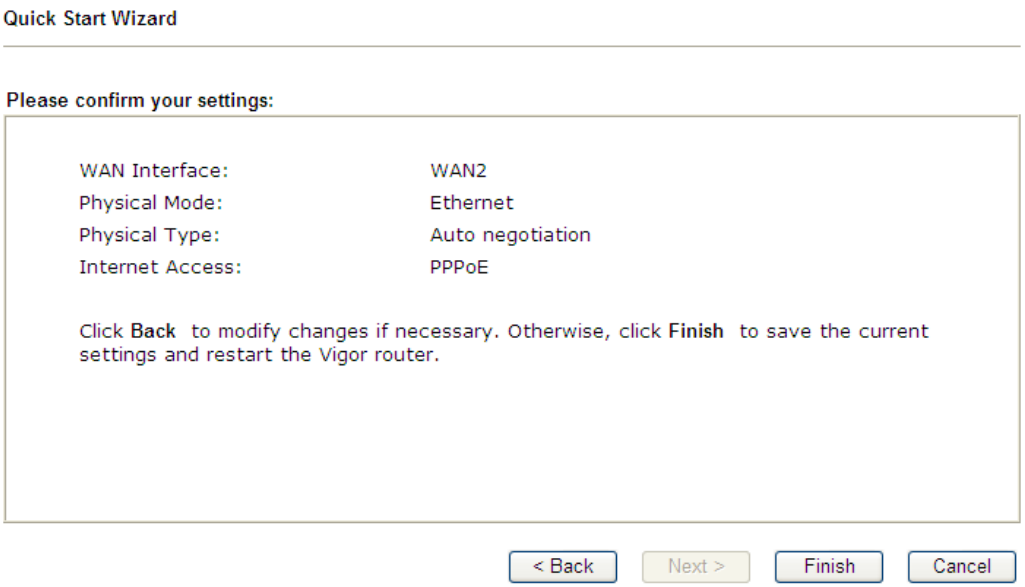
Quick Start Wizard
Please confirm your settings:
WAN Interface: WAN2
Physical Mode: Ethernet
Physical Type: Auto negotiation
Internet Access: PPPoE
Click Back to modify changes if necessary. Otherwise, click Finish to save the current settings and restart the Vigor router.
< Back
Next >
Finish
Cancel

4. Click **Finish.** A page of **Quick Start Wizard Setup OK!!!** will appear. Then, the system status of this protocol will be shown.



5. Now, you can enjoy surfing on the Internet.

PPTP/L2TP

1. Choose **WAN2** as the WAN Interface and click the **Next** button. The following page will be open for you to specify Internet Access Type.

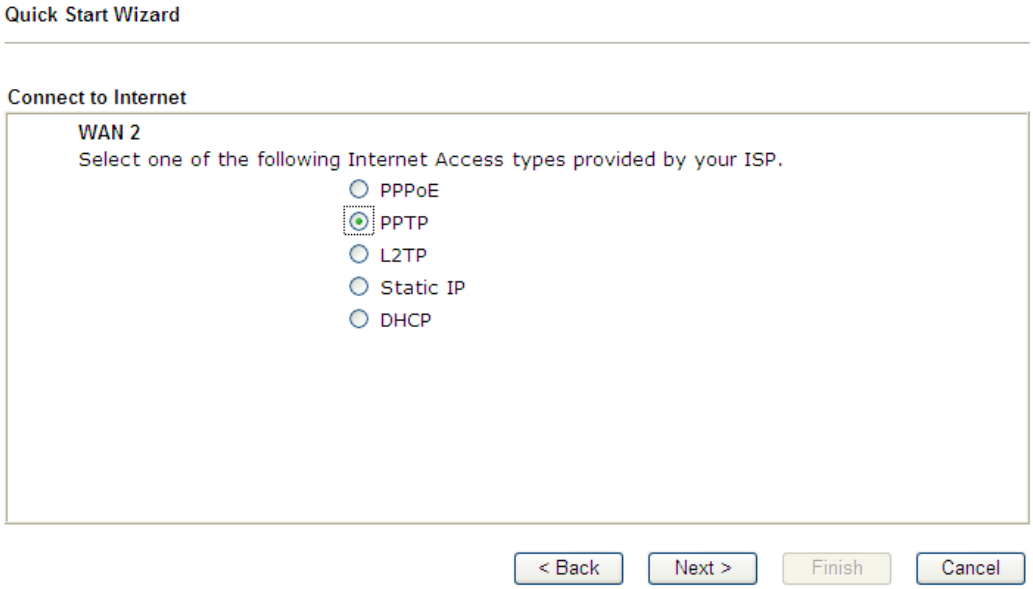

2. Click **PPTP/L2TP** as the Internet Access Type. Then click **Next** to continue.

Quick Start Wizard

PPTP Client Mode

WAN 2

Enter the user name, password, WAN IP configuration and PPTP server IP provided by your ISP.

User Name	5477aec
Password	●●●●●
Confirm Password	●●●●●

WAN IP Configuration

- ○ Obtain an IP address automatically
- ◉ Specify an IP address

IP Address	192.168.3.100
Subnet Mask	255.255.255.0
Gateway	192.168.3.1
Primary DNS	
Second DNS	
PPTP Server	

< Back | Next > | Finish | Cancel

Available settings are explained as follows:

Item	Description
User Name	Assign a specific valid user name provided by the ISP. **Note:** The maximum length of the user name you can set is 63 characters.
Password	Assign a valid password provided by the ISP. **Note:** The maximum length of the password you can set is 62 characters.
Confirm Password	Retype the password.
WAN IP Configuration	**Obtain an IP address automatically** – the router will get an IP address automatically from DHCP server. **Specify an IP address** – you have to type relational settings manually. **IP Address** - Type the IP address. **Subnet Mask** –Type the subnet mask. Gateway – Type the IP address of the gateway. **Primary DNS** –Type in the primary IP address for the router. **Second DNS** –Type in secondary IP address for necessity in the future.
PPTP Server / L2TP Server	Type the IP address of the server.
Back	Click it to return to previous setting page.
Next	Click it to get into the next setting page.
Cancel	Click it to give up the quick start wizard.

3. Please type in the IP address/mask/gateway information originally provided by your ISP. Then click **Next** for viewing summary of such connection.

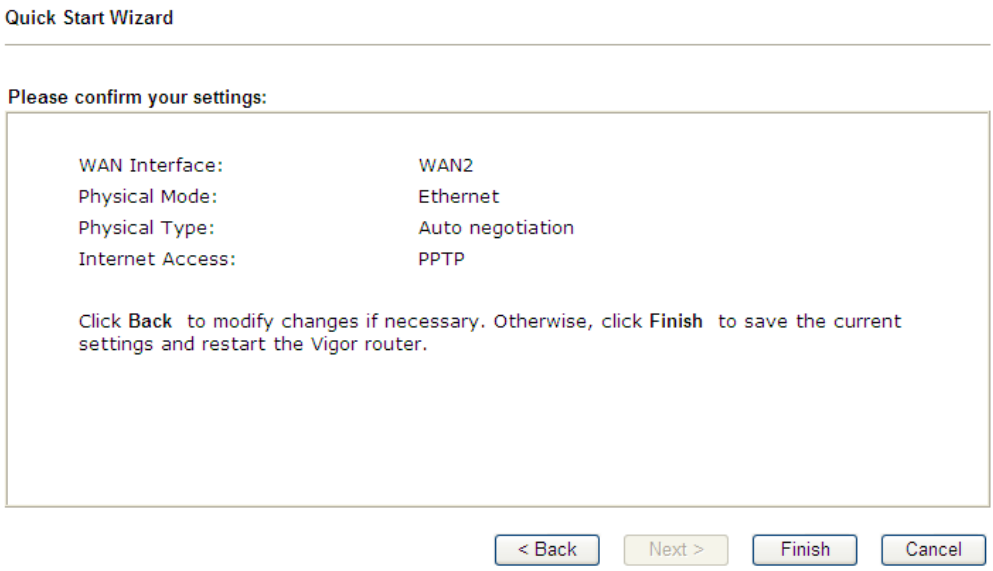
Quick Start Wizard
Please confirm your settings:
WAN Interface: WAN2
Physical Mode: Ethernet
Physical Type: Auto negotiation
Internet Access: PPTP
Click Back to modify changes if necessary. Otherwise, click Finish to save the current settings and restart the Vigor router.
< Back
Next >
Finish
Cancel

4. Click **Finish.** A page of **Quick Start Wizard Setup OK!!!** will appear. Then, the system status of this protocol will be shown.



5. Now, you can enjoy surfing on the Internet.

Static IP

1. Choose **WAN2** as the WAN Interface and click the **Next** button. The following page will be open for you to specify Internet Access Type.

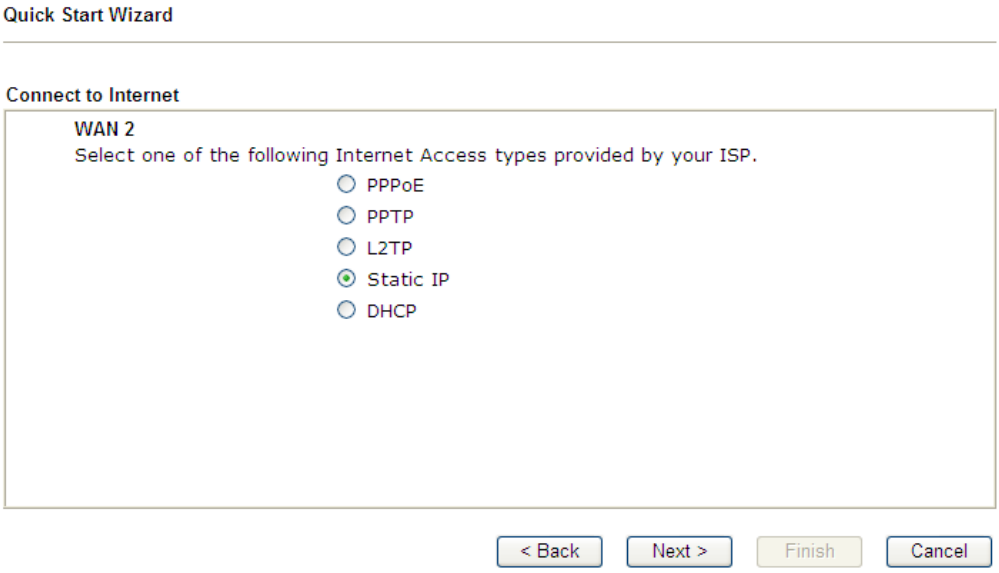

2. Click **Static IP** as the Internet Access type. Simply click **Next** to continue.

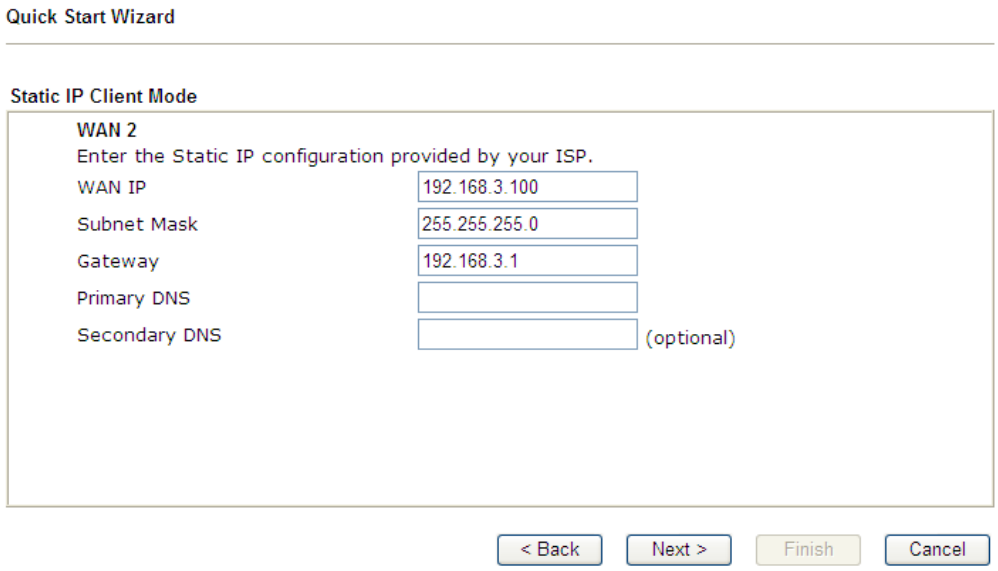

Available settings are explained as follows:

Item	Description
WAN IP	Type the IP address.
Subnet Mask	Type the subnet mask.
Gateway	Type the IP address of gateway.
Primary DNS	Type in the primary IP address for the router.
Secondary DNS	Type in secondary IP address for necessity in the future.
Back	Click it to return to previous setting page.
Next	Click it to get into the next setting page.
Cancel	Click it to give up the quick start wizard.

3. Please type in the IP address information originally provided by your ISP. Then click **Next** for next step.

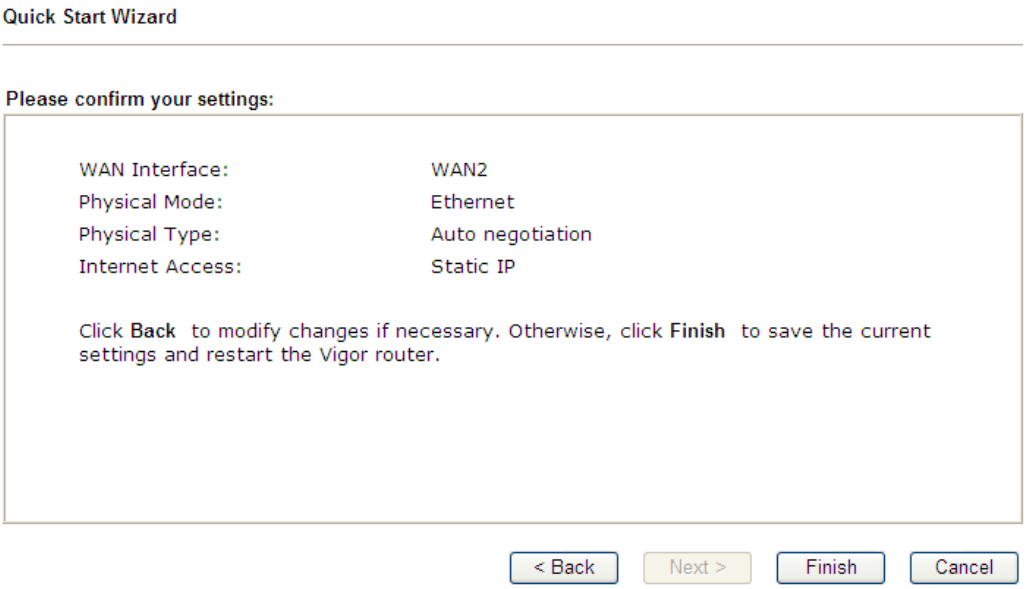
Quick Start Wizard
Please confirm your settings:
WAN Interface: WAN2
Physical Mode: Ethernet
Physical Type: Auto negotiation
Internet Access: Static IP
Click Back to modify changes if necessary. Otherwise, click Finish to save the current settings and restart the Vigor router.
< Back
Next >
Finish
Cancel

4. Click **Finish.** A page of **Quick Start Wizard Setup OK!!!** will appear. Then, the system status of this protocol will be shown.



5. Now, you can enjoy surfing on the Internet.

DHCP

1. Choose **WAN2** as WAN Interface and click the **Next** button. The following page will be open for you to specify Internet Access Type.

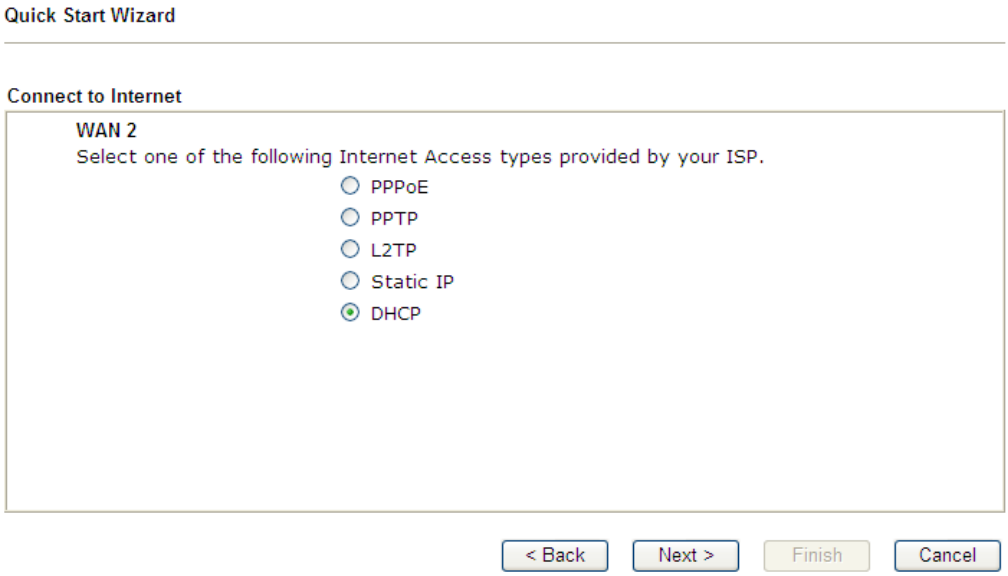

2. Click **DHCP** as the Internet Access type. Simply click **Next** to continue.

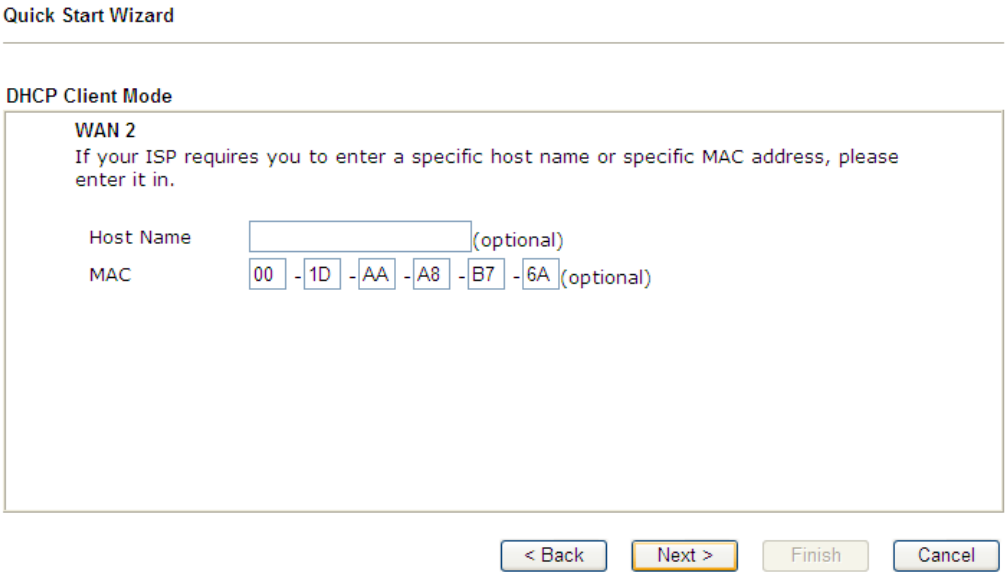
Quick Start Wizard
DHCP Client Mode
WAN 2
If your ISP requires you to enter a specific host name or specific MAC address, please enter it in.
Host Name
(optional)
MAC
00 - 1D - AA - A8 - B7 - 6A (optional)
< Back
Next >
Finish
Cancel

Available settings are explained as follows:

Item	Description
Host Name	Type the name of the host. **Note:** The maximum length of the host name you can set is 39 characters.
MAC	Some Cable service providers specify a specific MAC address for access authentication. In such cases you need to enter the MAC address.
Back	Click it to return to previous setting page.

Next	Click it to get into the next setting page.
Cancel	Click it to give up the quick start wizard.

3. After finished the settings above, click **Next** for viewing summary of such connection.

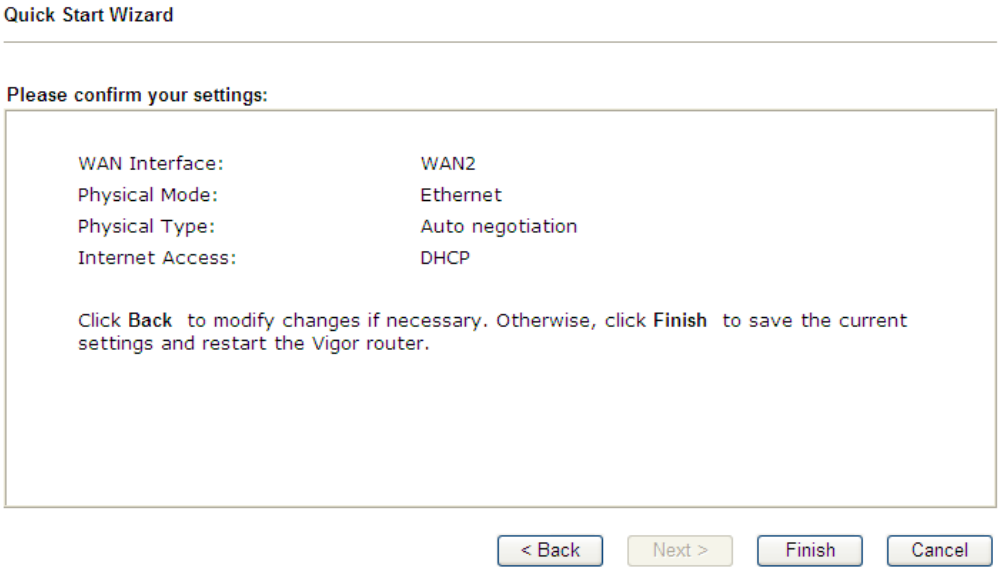
Quick Start Wizard
Please confirm your settings:
WAN Interface: WAN2
Physical Mode: Ethernet
Physical Type: Auto negotiation
Internet Access: DHCP
Click Back to modify changes if necessary. Otherwise, click Finish to save the current settings and restart the Vigor router.
< Back
Next >
Finish
Cancel

4. Click **Finish.** A page of **Quick Start Wizard Setup OK!!!** will appear. Then, the system status of this protocol will be shown.



5. Now, you can enjoy surfing on the Internet.

2.3.3 For WAN3 (USB)

WAN3 is dedicated to physical mode in USB. If WAN3 is selected, it is not necessary for you to type any information for such connection.

1. Choose **WAN3** as WAN Interface.

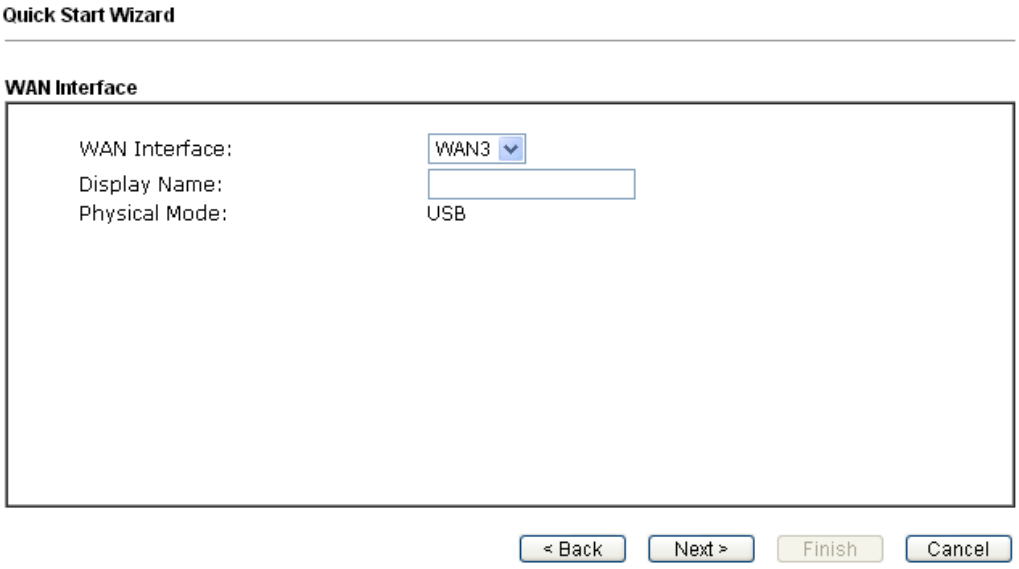

2. Then, click **Next** for getting the following page.

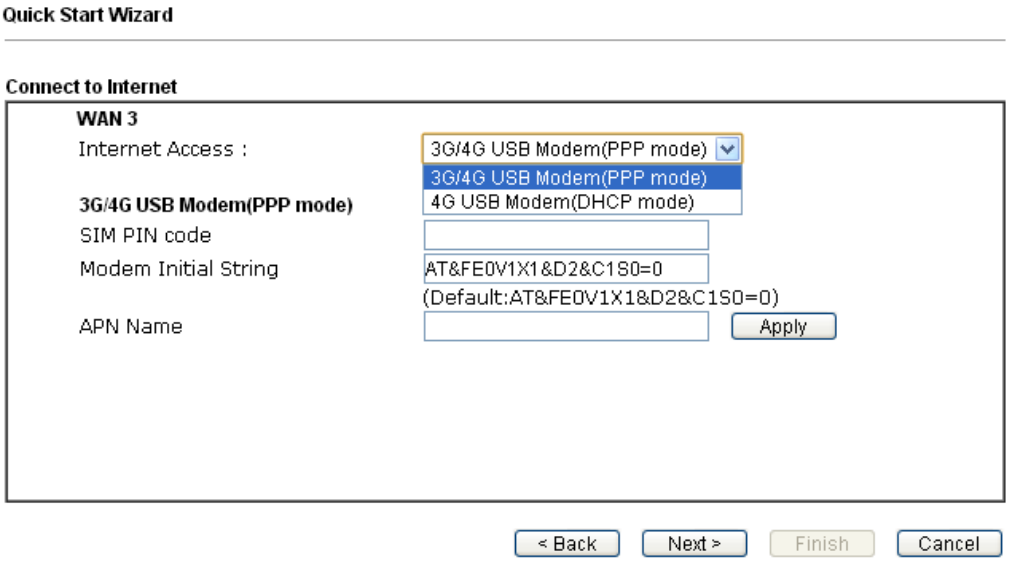

Available settings are explained as follows:

Item	Description
Internet Access	Choose one of the selections as the protocol of accessing the internet.
3G/4G USB Modem (PPP mode)	**SIM Pin code** –Type PIN code of the SIM card that will be used to access Internet. The maximum length of the pin code you can set is 15 characters. **Modem Initial String** – Such value is used to initialize

	USB modem. Please use the default value. If you have any question, please contact to your ISP. The maximum length of the string you can set is 47 characters. **APN Name** – APN means Access Point Name which is provided and required by some ISPs. Type the name and click **Apply**.
4G USB Modem (DHCP mode)	**SIM Pin code** –Type PIN code of the SIM card that will be used to access Internet. **Network Mode** – Force Vigor router to connect Internet with the mode specified here. If you choose 4G/3G/2G as network mode, the router will choose a suitable one according to the actual wireless signal automatically. **APN Name** – APN means Access Point Name which is provided and required by some ISPs.

3. Then, click **Next** for viewing summary of such connection.

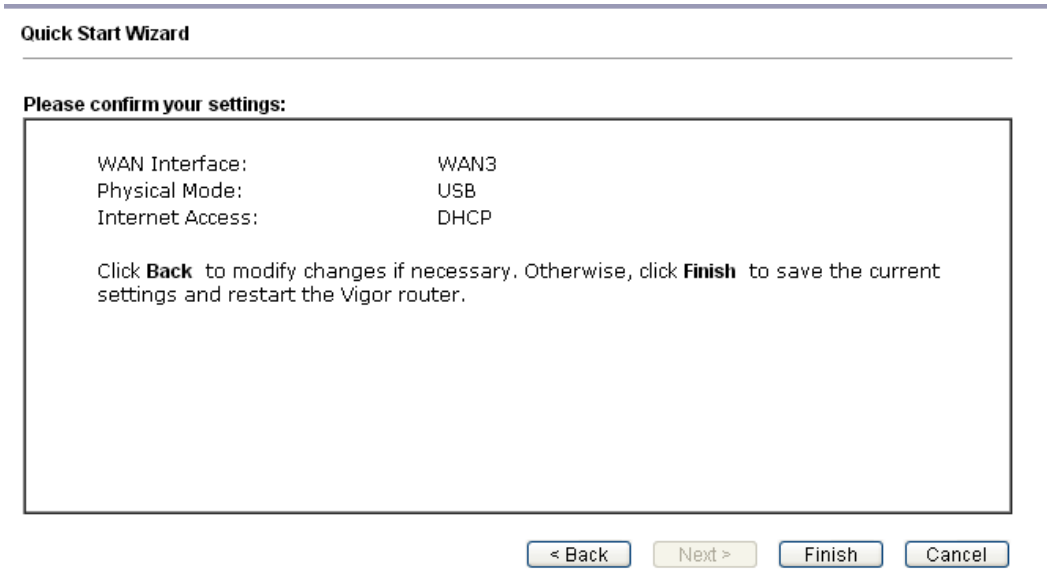
Quick Start Wizard
Please confirm your settings:
WAN Interface: WAN3
Physical Mode: USB
Internet Access: DHCP
Click Back to modify changes if necessary. Otherwise, click Finish to save the current settings and restart the Vigor router.
< Back
Next >
Finish
Cancel

4. Click **Finish.** A page of **Quick Start Wizard Setup OK!!!** will appear. Then, the system status of this protocol will be shown.



5. Now, you can enjoy surfing on the Internet.

2.4 Service Activation Wizard

Service Activation Wizard can guide you to activate WCF service (Web Content Filter) with a quick and easy way. **For the Service Activation Wizard is only available for admin operation, therefore, please type "admin/admin" on Username/Password while Logging into the web user interface.**

Service Activation Wizard is a tool which allows you to use trial version or update the license of WCF directly without accessing into the server (***MyVigor***) located on http://myvigor.draytek.com. For using Web Content Filter Profile, please refer to later section **Web Content Filter Profile** for detailed information.

Now, follow the steps listed below to activate WCF feature for your router.

Note: Such function is available only for **Admin Mode**.

1. Open **Service Activation Wizard**.

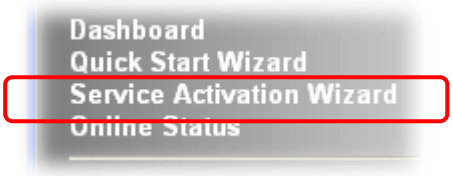

2. The screen of **Service Activation Wizard** will be shown as follows. Choose the one you need and click **Next**. In this case, we choose to activate free trail edition.

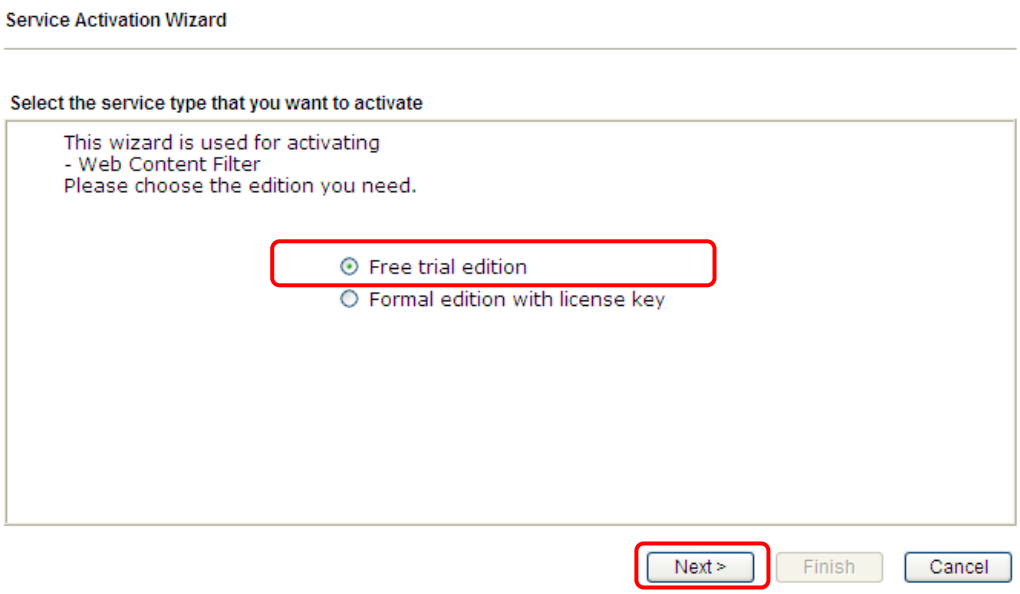
Service Activation Wizard
Select the service type that you want to activate
This wizard is used for activating
- Web Content Filter
Please choose the edition you need.
Free trial edition
Formal edition with license key
Next >
Finish
Cancel

Free trial edition: it offers a period of trial for you to get acquainted with WCF function.

Formal edition with license key: you can extend the license valid time manually.

Note: If you activate **Formal edition with license key** first, the free trial edition will be invalid.

3. In the following page, you can activate the Web content filter services at the same time or individually. When you finish the selection, please click **Next**.

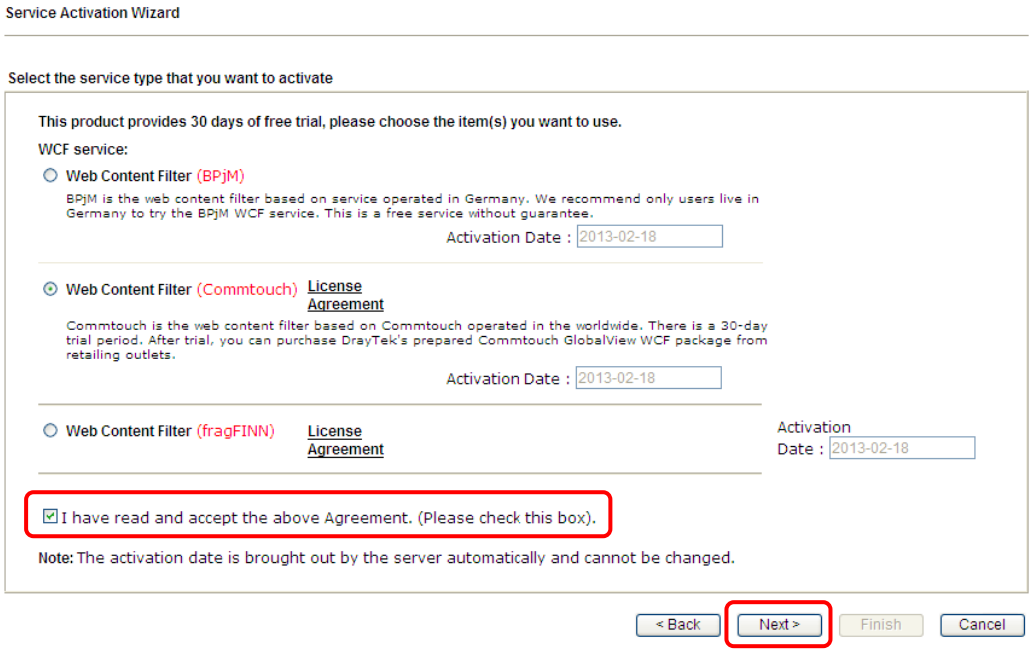
Service Activation Wizard
Select the service type that you want to activate
This product provides 30 days of free trial, please choose the item(s) you want to use.
WCF service:
Web Content Filter (BPjM)
BPjM is the web content filter based on service operated in Germany. We recommend only users live in Germany to try the BPjM WCF service. This is a free service without guarantee.
Activation Date : 2013-02-18
Web Content Filter (Commtouch) License Agreement
Commtouch is the web content filter based on Commtouch operated in the worldwide. There is a 30-day trial period. After trial, you can purchase DrayTek's prepared Commtouch GlobalView WCF package from retailing outlets.
Activation Date : 2013-02-18
Web Content Filter (fragFINN) License Agreement
Activation Date : 2013-02-18
I have read and accept the above Agreement. (Please check this box).
Note: The activation date is brought out by the server automatically and cannot be changed.
< Back
Next >
Finish
Cancel

Commtouch is the web content filter based on Commtouch operated in the worldwide. There is a 30-day trial period. After trial, you can purchase DrayTek's prepared Commtouch GlobalView WCF package from retailing outlets.

4. Setting confirmation page will be displayed as follows, please click **Next**.

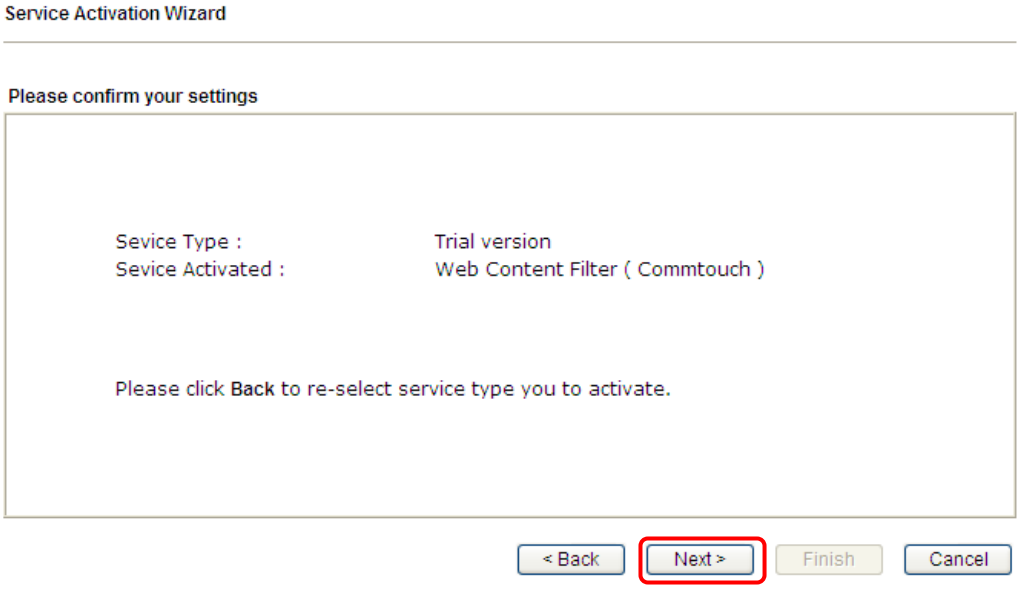
Service Activation Wizard
Please confirm your settings
Sevice Type : Trial version
Sevice Activated : Web Content Filter (Commtouch)
Please click Back to re-select service type you to activate.
< Back
Next >
Finish
Cancel

5. Wait for a moment till the following page appears.

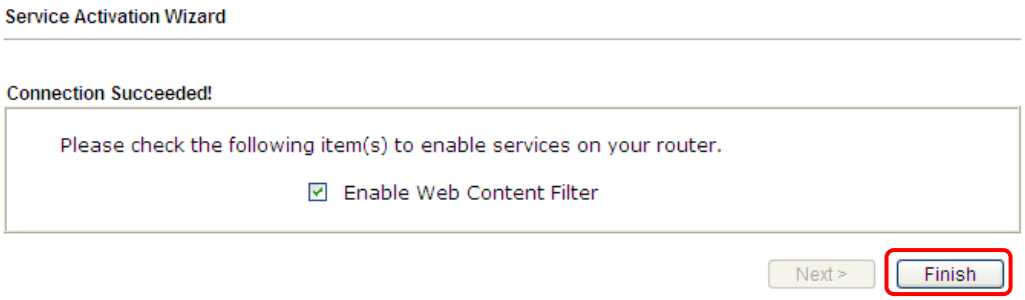

When such page appears, you can enable or disable these services for your necessity. Then, click **Finish.**

> **Note:** The service will be activated and applied as the default rule configured in **Firewall>>General Setup**.

6. Now, the web page will display the service that you have activated according to your selection(s). The valid time for the free trial of these services is one month.

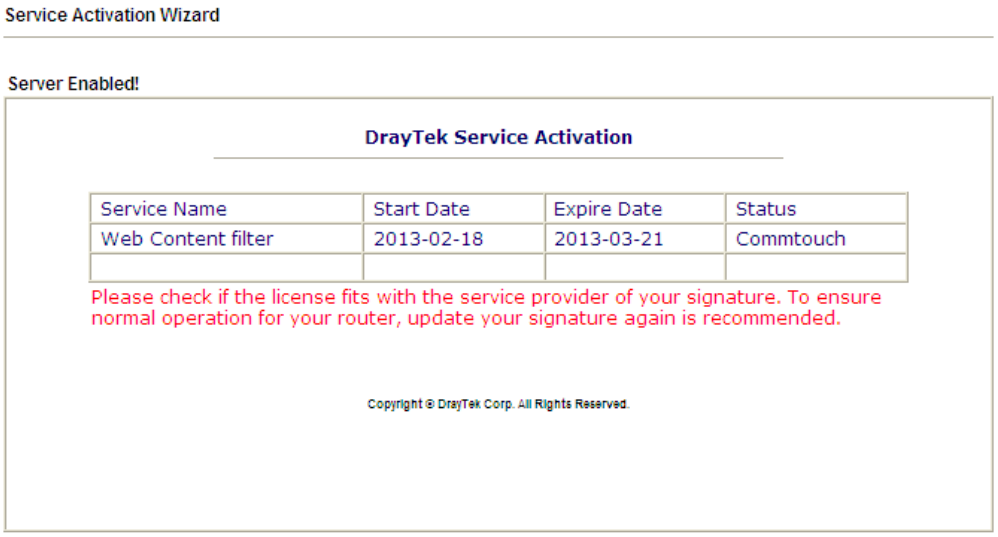
Service Activation Wizard
Server Enabled!
DrayTek Service Activation
Service Name
Start Date
Expire Date
Status
Web Content filter
2013-02-18
2013-03-21
Commtouch
Please check if the license fits with the service provider of your signature. To ensure normal operation for your router, update your signature again is recommended.
Copyright © DrayTek Corp. All Rights Reserved.

Later, if you need to extend the license valid time for the **same service,** you can also use the **Service Activation Wizard** again to reach your goal by clicking the radio button of **Formal edition with license key** and clicking **Next.**

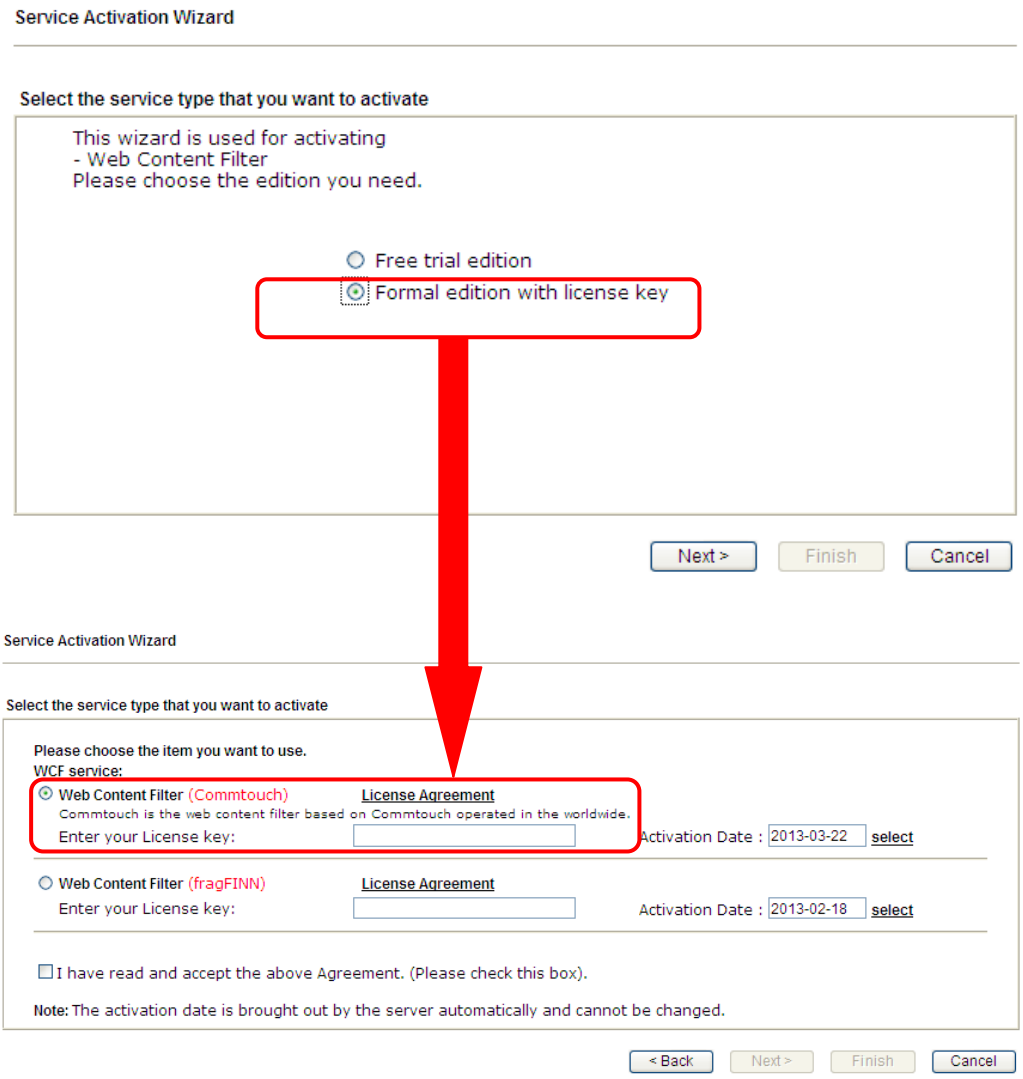
Service Activation Wizard
Select the service type that you want to activate
This wizard is used for activating
- Web Content Filter
Please choose the edition you need.
Free trial edition
Formal edition with license key
Next >
Finish
Cancel
Service Activation Wizard
Select the service type that you want to activate
Please choose the item you want to use.
WCF service:
Web Content Filter (Commtouch)
License Agreement
Commtouch is the web content filter based on Commtouch operated in the worldwide.
Enter your License key:
Activation Date : 2013-03-22
select
Web Content Filter (fragFINN)
License Agreement
Enter your License key:
Activation Date : 2013-02-18
select
I have read and accept the above Agreement. (Please check this box).
Note: The activation date is brought out by the server automatically and cannot be changed.
< Back
Next >
Finish
Cancel

2.5 Introducing Dashboard

Dashboard shows the connection status including System Information, IPv4 Internet Access, IPv6 Internet Access, Interface (physical connection), Security and Quick Access.

Click **Dashboard** from the main menu on the left side of the main page.

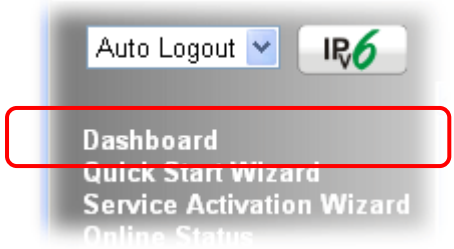

A web page with default selections will be displayed on the screen. Refer to the following figure:

Dashboard

System Information			
Model Name	Vigor2860n	System Up Time	0:47:55
Router Name		**Current Time**	2013 Feb 18 Mon 8:46:7
Firmware Version	3.7.1_RC5a	Build Date/Time	Feb 5 2013 12:24:58
DSL Version	05-04-04-04-00-01	LAN MAC Address	00-1D-AA-A8-B6-A8

IPv4 Internet Access				
	Line / Mode	**IP Address**	**MAC Address**	**Up Time**
WAN1	ADSL / PPPoE	Disconnected	00-1D-AA-A8-B6-A9	00:00:00
WAN2	Ethernet / Static IP	172.16.3.130	00-1D-AA-A8-B6-AA	0:47:43
WAN3	USB / ---	Disconnected	00-1D-AA-A8-B6-AB	00:00:00

IPv6 Internet Access				
	Mode	**Address**	**Scope**	**Up Time**
LAN	RADVD / DHCPv6	FE80::21D:AAFF:FEA8:B6A8/64	Link	

Interface	
DSL	Connected : Down Stream : 0Kbps / Up Stream : 0Kbps
WAN	Connected : 1, WAN1 WAN2 WAN3
LAN	Connected : 0, LAN1 LAN2 LAN3 LAN4 LAN5 LAN6
WLAN	Connected : 0
USB	Connected : 0, USB 1 0, USB 2

Security		
VPN	Connected : 0	**Remote Dial-in User** / **LAN to LAN**

Quick Access
System Status
Dynamic DNS
TR-069
User Management
IM/P2P Block
Schedule
SysLog / Mail Alert
LDAP
RADIUS
Firewall Object Setting
Data Flow Monitor

User Mode is OFF now.

2.5.1 Virtual Panel

On the top of the Dashboard, a virtual panel (simulating the physical panel of the router) displays the physical interface connection. It will be refreshed every five seconds.

Port	Color Displayed	Explanation
Ethernet Port (WAN/LAN)	Black	It means such port is disconnected.
	Green	It means such port is connected (with Giga transmission rate) physically.
	Orange	It means such port is connected physically.
VDSL/ADSL	Black	It means such port is disconnected.
	Green	It means such port is connected with VDSL.
	Orange	It means such port is connected with ADSL.
USB	Black	It means no USB device is connected.
	Green	It means a USB device is connected.
LED (left side)	Black	It means the router or the function is not working.
	Green	It means the router or the function is working.

For detailed information about the LED display, refer to **1.2 LED Indicators and Connectors**.

2.5.2 Name with a Link

A name with a link (e.g., Router Name, Current Time, WAN1 and etc.) below means you can click it to open the configuration page for modification.

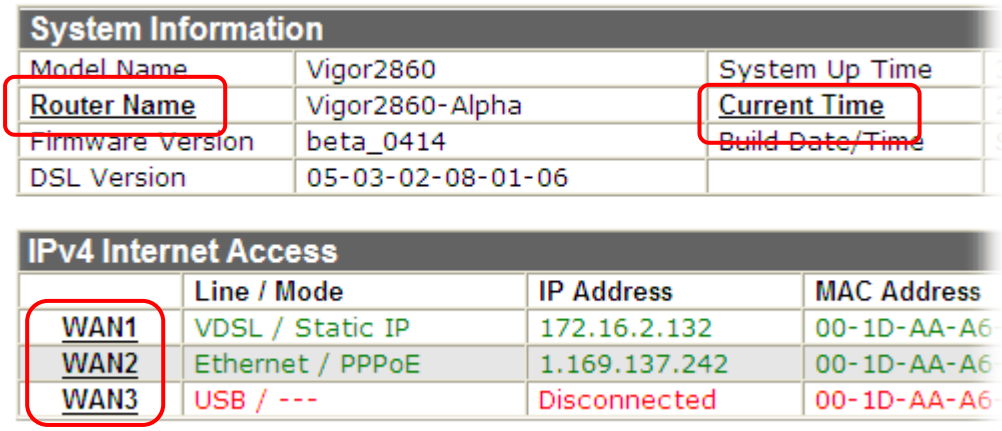

2.5.3 Quick Access for Common Used Menu

All the menu items can be accessed and arranged orderly on the left side of the main page for your request. However, some **important** and **common** used menu items which can be accessed in a quick way just for convenience.

Look at the right side of the Dashboard. You will find a group of common used functions grouped under **Quick Access**.

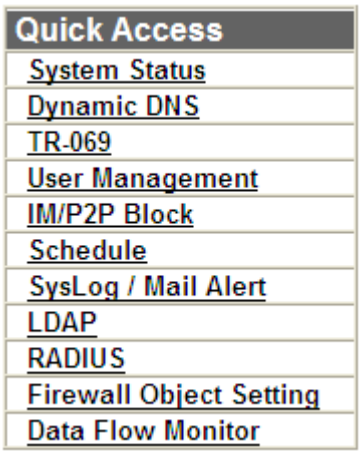

The function links of System Status, Dynamic DDNS, TR-069, User Management, IM/P2P Block, Schedule, Syslog/Mail Alert, LDAP, RADIUS, Firewall Object Setting and Data Flow Monitor are displayed here. Move your mouse cursor on any one of the links and click on it. The corresponding setting page will be open immediately.

In addition, quick access for VPN security settings such as **Remote Dial-in User** and **LAN to LAN** are located on the bottom of this page. Scroll down the page to find them and use them if required.

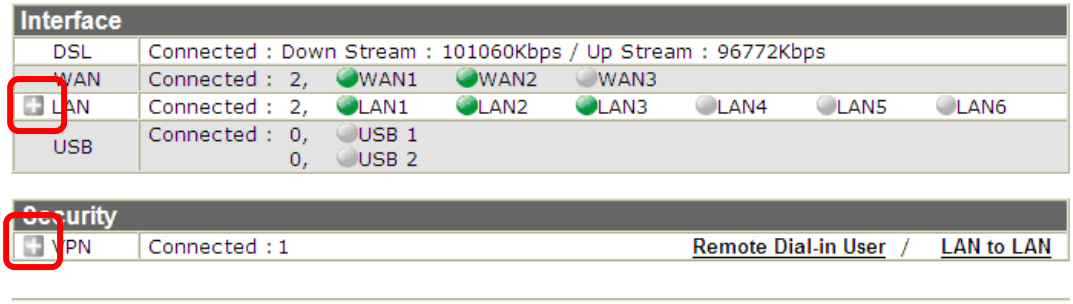

Note that there is a plus ( ) icon located on the left side of VPN/LAN. Click it to review the VPN connection(s) used presently.

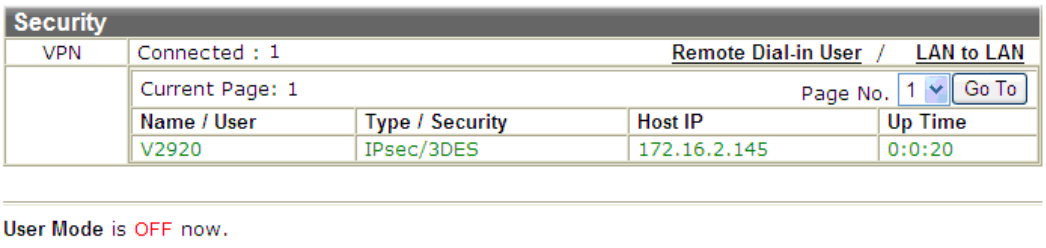

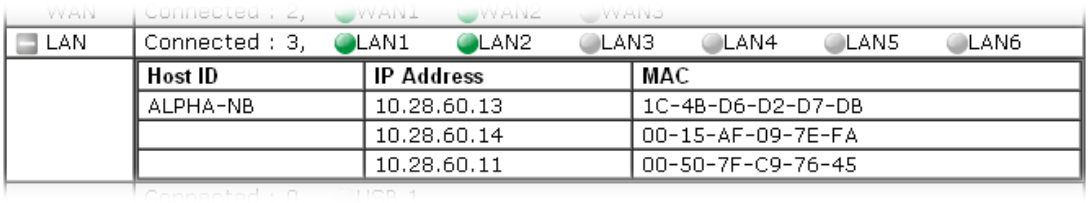

LAN	Connected : 3,	LAN1	LAN2	LAN3	LAN4	LAN5	LAN6
	Host ID	**IP Address**	**MAC**				
	ALPHA-NB	10.28.60.13	1C-4B-D6-D2-D7-DB				
		10.28.60.14	00-15-AF-09-7E-FA				
		10.28.60.11	00-50-7F-C9-76-45				

Host connected physically to the router via LAN port(s) will be displayed with green circles in the field of Connected.

All of the hosts (including wireless clients) displayed with Host ID, IP Address and MAC address indicates that the traffic would be transmitted through LAN port(s) and then the WAN port. The purpose is to perform the traffic monitor of the host(s).

2.5.4 GUI Map

All the functions the router supports are listed with table clearly in this page. Users can click the function link to access into the setting page of the function for detailed configuration. Click the icon on the top of the main screen to display all the functions.

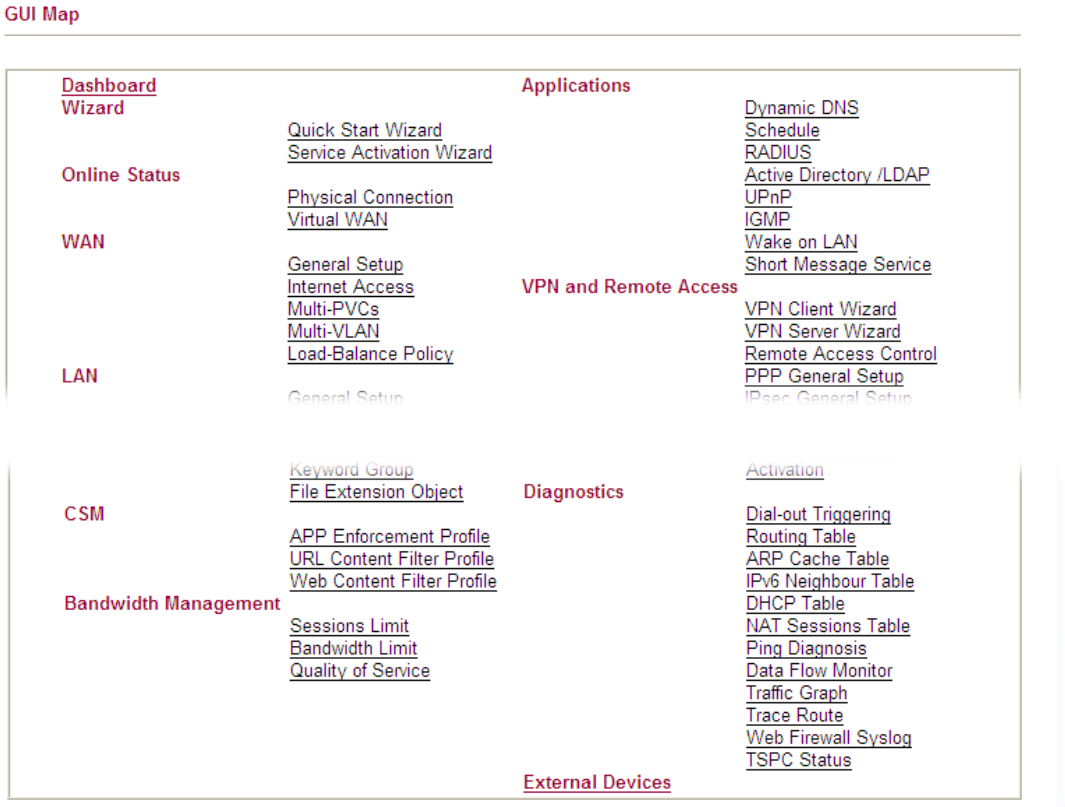

2.5.5 Web Console

It is not necessary to use the telnet command via DOS prompt. The changes made by using web console have the same effects as modified through web user interface. The functions/settings modified under Web Console also can be reviewed on the web user interface.

Click the **Web Console** icon on the top of the main screen to open the following screen.

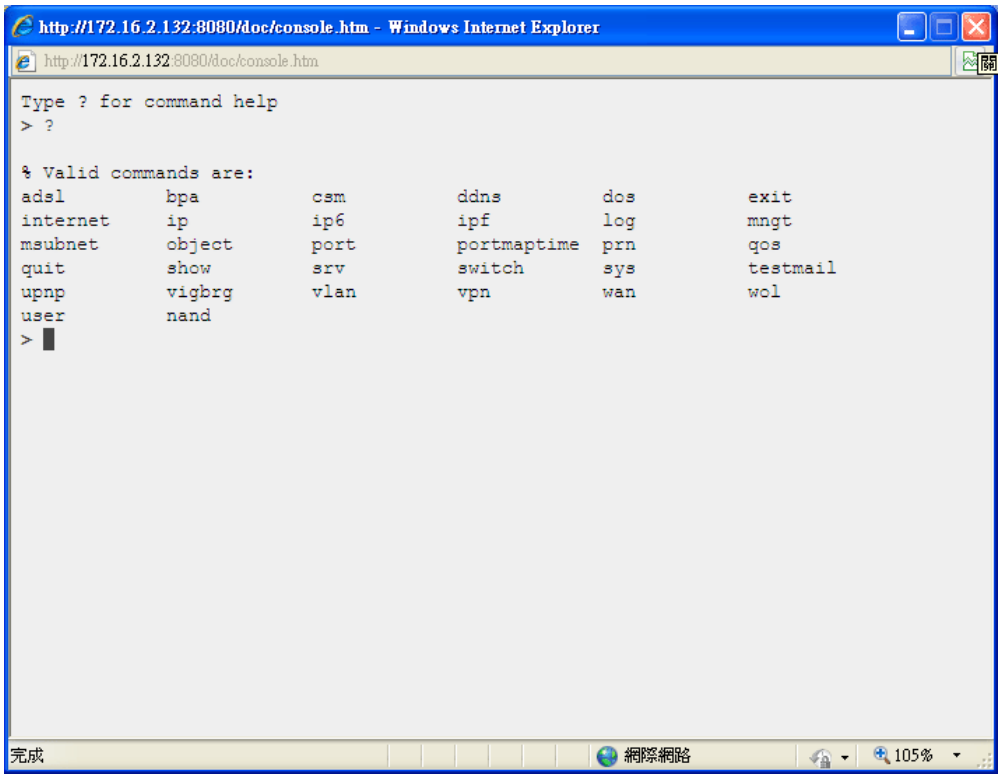

2.5.6 Config Backup

There is one way to store current used settings quickly by clicking the **Config Backup** icon. It allows you to backup current settings as a file. Such configuration file can be restored by using **System Maintenance>>Configuration Backup**.

Simply click the icon on the top of the main screen and a pop up dialog will appear.

Click **Save** to store the setting.

2.6 Online Status

2.6.1 Physical Connection

Such page displays the physical connection status such as LAN connection status, WAN connection status, ADSL information, and so on.

Physical Connection for IPv4 Protocol

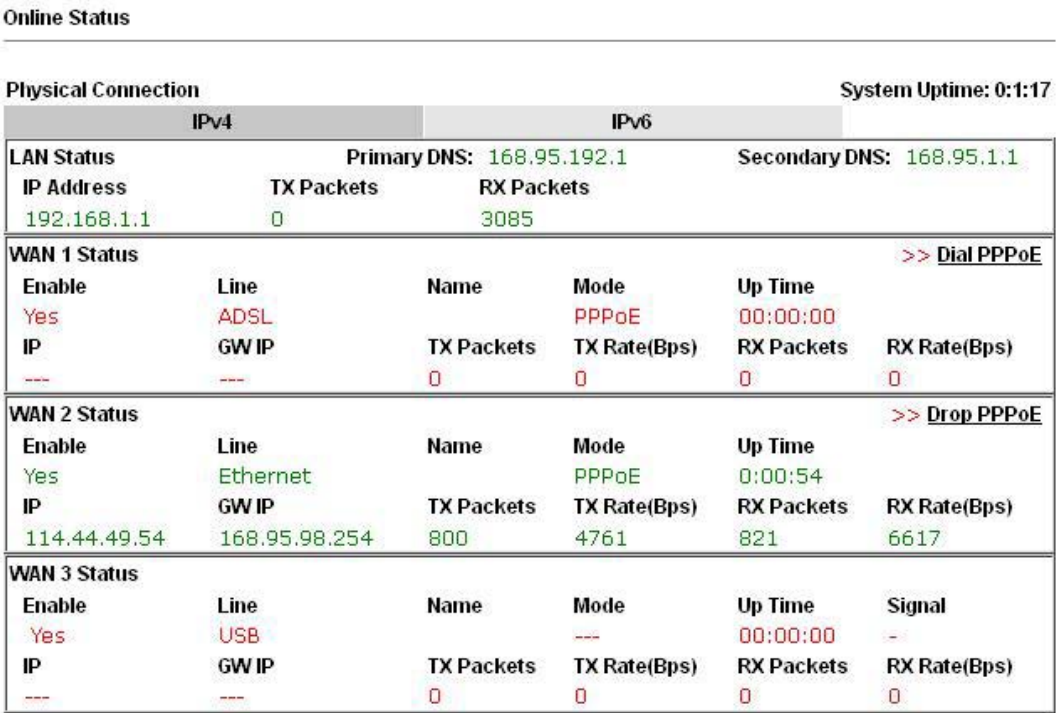

Physical Connection for IPv6 Protocol

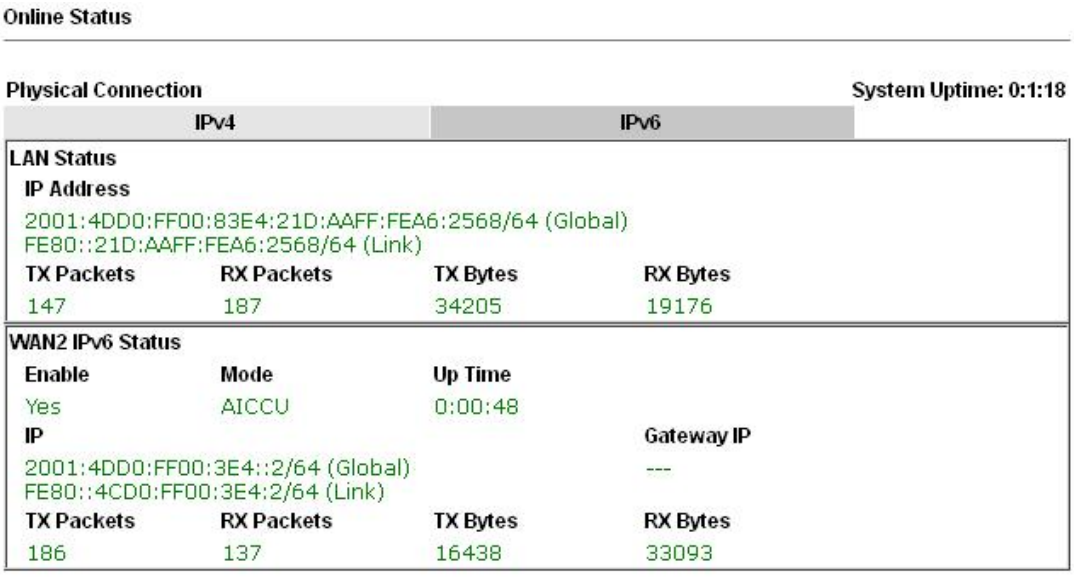

Detailed explanation (for IPv4) is shown below:

Item	Description
LAN Status	**Primary DNS**-Displays the primary DNS server address for WAN interface. **Secondary DNS** -Displays the secondary DNS server address for WAN interface. **IP Address**-Displays the IP address of the LAN interface. **TX Packets**-Displays the total transmitted packets at the

Item	Description
	LAN interface. **RX Packets**-Displays the total received packets at the LAN interface.
WAN1/WAN2/WAN3 Status	**Enable – Yes** in red means such interface is available but not enabled. **Yes** in green means such interface is enabled. **Line** – Displays the physical connection (VDSL, ADSL, Ethernet, or USB) of this interface. **Name** – Display the name of the router. **Mode** - Displays the type of WAN connection (e.g., PPPoE). **Up Time** - Displays the total uptime of the interface. **IP** - Displays the IP address of the WAN interface. **GW IP** - Displays the IP address of the default gateway. **TX Packets** - Displays the total transmitted packets at the WAN interface. **TX Rate** - Displays the speed of transmitted octets at the WAN interface. **RX Packets** - Displays the total number of received packets at the WAN interface. **RX Rate** - Displays the speed of received octets at the WAN interface.

Detailed explanation (for IPv6) is shown below:

Item	Description
LAN Status	**IP Address**- Displays the IPv6 address of the LAN interface.. **TX Packets**-Displays the total transmitted packets at the LAN interface. **RX Packets**-Displays the total received packets at the LAN interface. **TX Bytes** - Displays the speed of transmitted octets at the LAN interface. **RX Bytes** - Displays the speed of received octets at the LAN interface.
WAN IPv6 Status	**Enable – No** in red means such interface is available but not enabled. **Yes** in green means such interface is enabled. No in red means such interface is not available. **Mode** - Displays the type of WAN connection (e.g., TSPC). **Up Time** - Displays the total uptime of the interface. **IP** - Displays the IP address of the WAN interface. **Gateway IP** - Displays the IP address of the default gateway.

Note: The words in green mean that the WAN connection of that interface is ready for accessing Internet; the words in red mean that the WAN connection of that interface is not ready for accessing Internet.

2.6.2 Virtual WAN

Such page displays the virtual WAN connection information.

Virtual WAN are used by TR-069 management, VoIP service and so on.

The field of Application will list the purpose of such WAN connection.

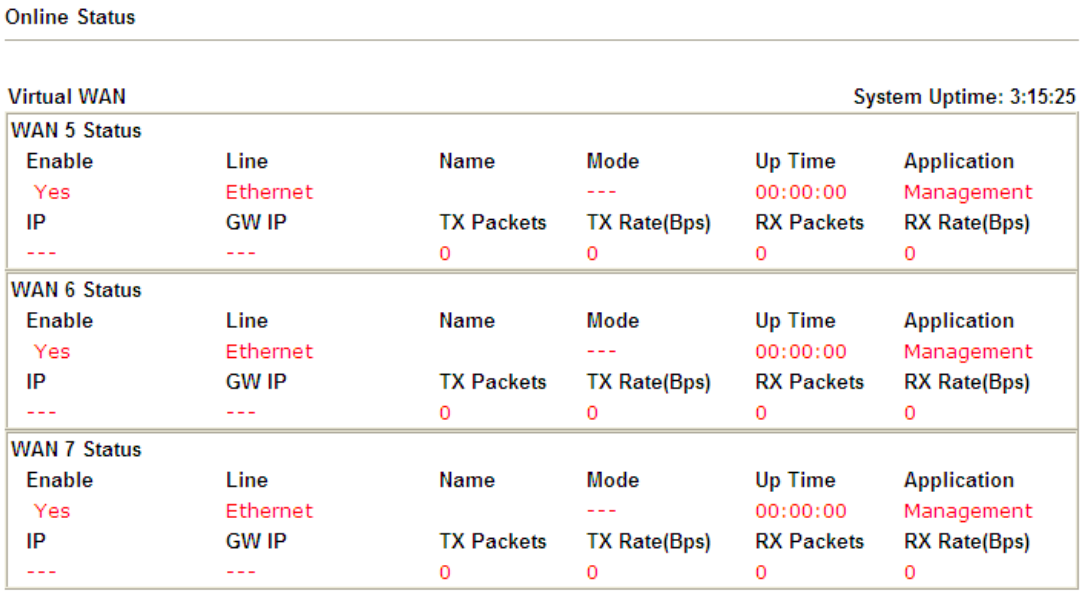
Online Status
Virtual WAN
System Uptime: 3:15:25
WAN 5 Status
Enable Line Name Mode Up Time Application
Yes Ethernet --- 00:00:00 Management
IP GW IP TX Packets TX Rate(Bps) RX Packets RX Rate(Bps)
--- --- 0 0 0 0
WAN 6 Status
Enable Line Name Mode Up Time Application
Yes Ethernet --- 00:00:00 Management
IP GW IP TX Packets TX Rate(Bps) RX Packets RX Rate(Bps)
--- --- 0 0 0 0
WAN 7 Status
Enable Line Name Mode Up Time Application
Yes Ethernet --- 00:00:00 Management
IP GW IP TX Packets TX Rate(Bps) RX Packets RX Rate(Bps)
--- --- 0 0 0 0

2.7 Saving Configuration

Each time you click **OK** on the web page for saving the configuration, you can find messages showing the system interaction with you.

Ready indicates the system is ready for you to input settings.

Settings Saved means your settings are saved once you click **Finish** or **OK** button.

2.8 Registering Vigor Router

You have finished the configuration of Quick Start Wizard and you can surf the Internet at any time. Now it is the time to register your Vigor router to MyVigor website for getting more service. Please follow the steps below to finish the router registration.

1 Please login the web configuration interface of Vigor router by typing "**admin/admin**" as User Name / Password.

2 Click **Support Area>>Production Registration** from the home page.

3 A **Login** page will be shown on the screen. Please type the account and password that you created previously. And click **Login**.

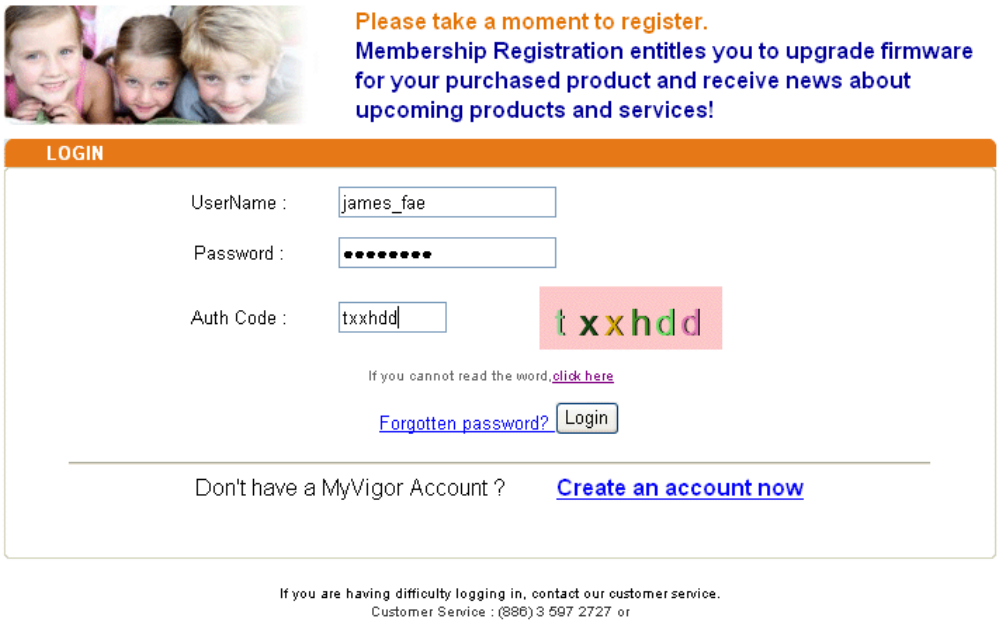
Please take a moment to register.
Membership Registration entitles you to upgrade firmware for your purchased product and receive news about upcoming products and services!
LOGIN
UserName :
james_fae
Password :
Auth Code :
txxhdd
t x x h d d
If you cannot read the word, click here
Forgotten password?
Login
Don't have a MyVigor Account ?
Create an account now
If you are having difficulty logging in, contact our customer service.
Customer Service : (886) 3 597 2727 or

4 The following page will be displayed after you logging in MyVigor. From this page, please click **Add** or **Product Registration**.

5 When the following page appears, please type in Nickname (for the router) and choose the right registration date from the popup calendar (it appears when you click on the box of Registration Date). After adding the basic information for the router, please click **Submit**.

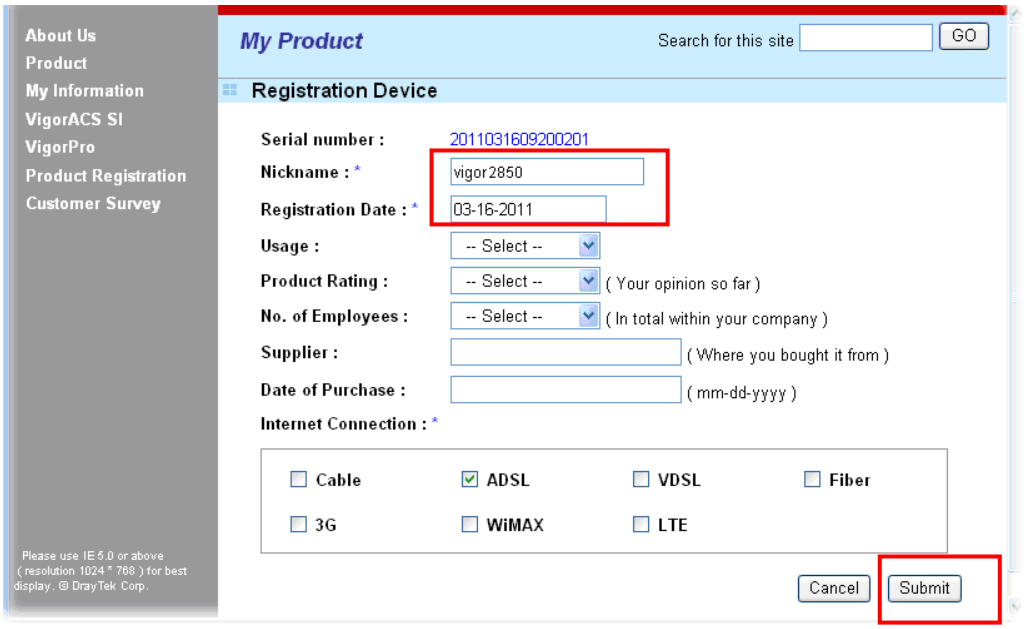

6 When the following page appears, your router information has been added to the database.

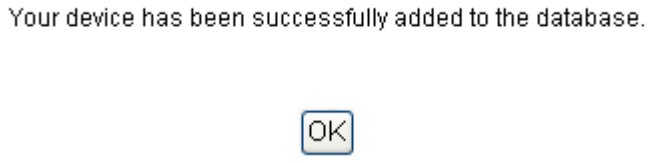

7 Now, you have finished the product registration.

8 After clicking **OK**, you will see the following page. Your router has been registered to *myvigor* website successfully.

If you have not activated web content filter service by using **Service Activation Wizard**, you can activate the service from this step. Please click the serial number link.

9 From the **Device's Service** section, click the **Trial**.

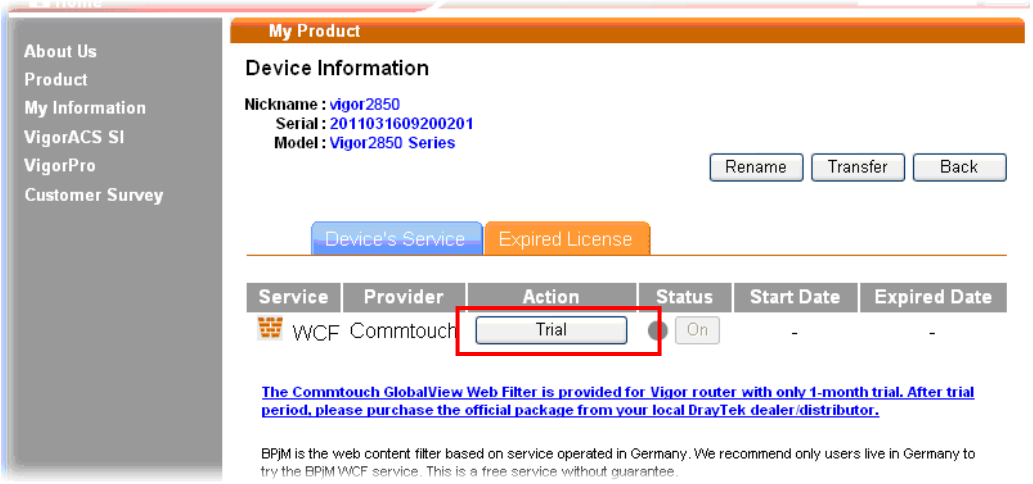

10 In the following page, check the box of "**I have read and accept the above Agreement**". The system will find out the date for you to activate this version of service. Then, click **Next**.

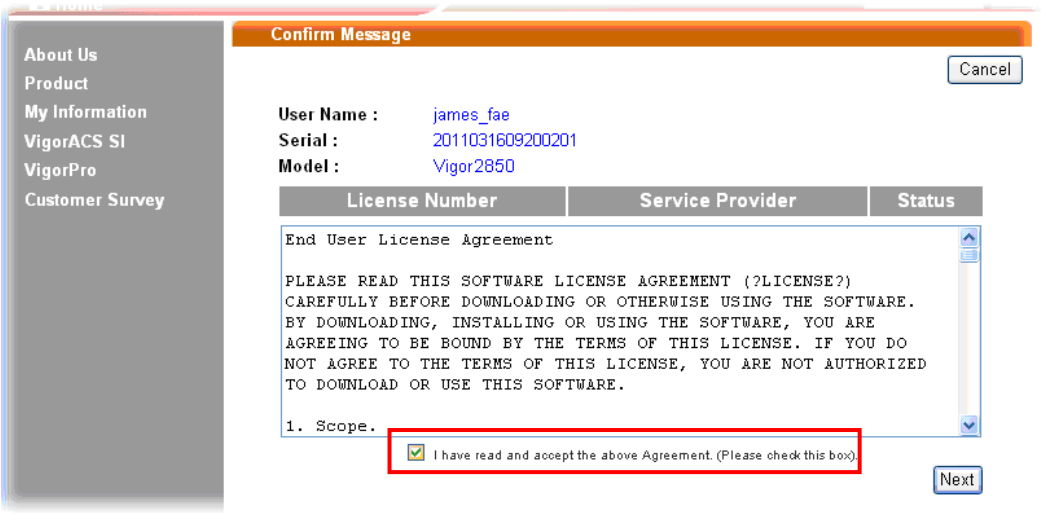
About Us
Product
My Information
VigorACS SI
VigorPro
Customer Survey
Confirm Message
Cancel
User Name : james_fae
Serial : 2011031609200201
Model : Vigor2850
License Number
Service Provider
Status
End User License Agreement
PLEASE READ THIS SOFTWARE LICENSE AGREEMENT (?LICENSE?) CAREFULLY BEFORE DOWNLOADING OR OTHERWISE USING THE SOFTWARE. BY DOWNLOADING, INSTALLING OR USING THE SOFTWARE, YOU ARE AGREEING TO BE BOUND BY THE TERMS OF THIS LICENSE. IF YOU DO NOT AGREE TO THE TERMS OF THIS LICENSE, YOU ARE NOT AUTHORIZED TO DOWNLOAD OR USE THIS SOFTWARE.
1. Scope.
I have read and accept the above Agreement. (Please check this box)
Next

11 When this page appears, click **Register**.

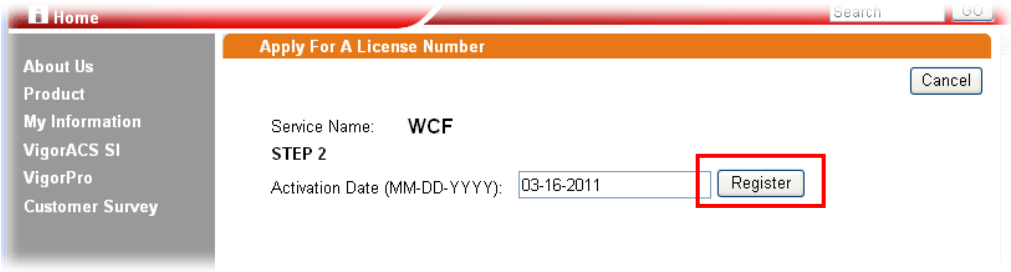

12 Wait for a moment until the following page appears.

DrayTek Service Activation
Service Name
Start Date
Expire Date
Status
Web Content filter
2011-03-28
2011-04-27
Commtouch
Please check if the license fits with the service provider of your signature. To ensure normal operation for your router, update your signature again is recommended.
Copyright © DrayTek Corp. All Rights Reserved.
Close

13 Click **Close**.

This page is left blank.

3 Web Configuration

This chapter will guide users to execute web configuration.

1. Open a web browser on your PC and type **http://192.168.1.1.** The window will ask for typing username and password.
2. Please type “admin/admin” on Username/Password for administration operation.

Now, the **Main Screen** will appear. Note that different model will have different web pages.

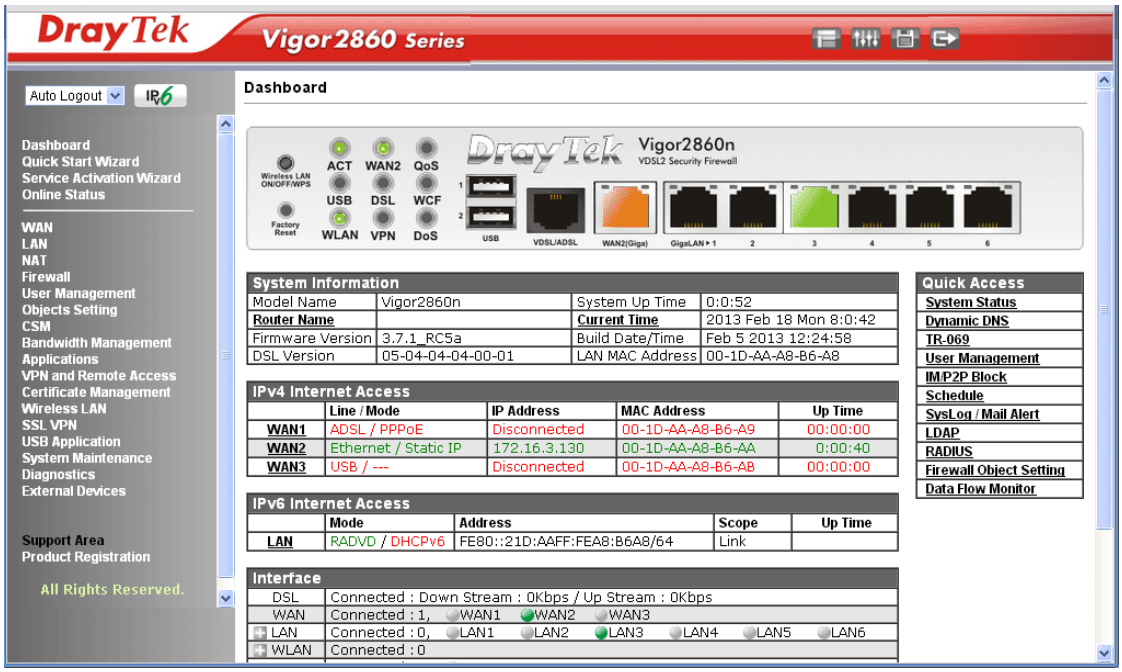

3.1 WAN

Quick Start Wizard offers user an easy method to quick setup the connection mode for the router. Moreover, if you want to adjust more settings for different WAN modes, please go to **WAN** group.

3.1.1 Basics of Internet Protocol (IP) Network

IP means Internet Protocol. Every device in an IP-based Network including routers, print server, and host PCs, needs an IP address to identify its location on the network. To avoid address conflicts, IP addresses are publicly registered with the Network Information Centre (NIC). Having a unique IP address is mandatory for those devices participated in the public network but not in the private TCP/IP local area networks (LANs), such as host PCs under the management of a router since they do not need to be accessed by the public. Hence, the NIC has reserved certain addresses that will never be registered publicly. These are known as ***private*** IP addresses, and are listed in the following ranges:

From 10.0.0.0 to 10.255.255.255
From 172.16.0.0 to 172.31.255.255
From 192.168.0.0 to 192.168.255.255

What are Public IP Address and Private IP Address

As the router plays a role to manage and further protect its LAN, it interconnects groups of host PCs. Each of them has a private IP address assigned by the built-in DHCP server of the Vigor router. The router itself will also use the default **private IP** address: 192.168.1.1 to communicate with the local hosts. Meanwhile, Vigor router will communicate with other network devices through a **public IP** address. When the data flow passing through, the Network Address Translation (NAT) function of the router will dedicate to translate public/private addresses, and the packets will be delivered to the correct host PC in the local area network. Thus, all the host PCs can share a common Internet connection.

Get Your Public IP Address from ISP

In ADSL deployment, the PPP (Point to Point)-style authentication and authorization is required for bridging customer premises equipment (CPE). Point to Point Protocol over Ethernet (PPPoE) connects a network of hosts via an access device to a remote access concentrator or aggregation concentrator. This implementation provides users with significant ease of use. Meanwhile it provides access control, billing, and type of service according to user requirement.

When a router begins to connect to your ISP, a serial of discovery process will occur to ask for a connection. Then a session will be created. Your user ID and password is authenticated via **PAP** or **CHAP** with **RADIUS** authentication system. And your IP address, DNS server, and other related information will usually be assigned by your ISP.

Network Connection by 3G USB Modem

For 3G mobile communication through Access Point is popular more and more, Vigor2860 adds the function of 3G network connection for such purpose. By connecting 3G USB Modem to the USB port of Vigor2860, it can support HSDPA/UMTS/EDGE/GPRS/GSM and the future 3G standard (HSUPA, etc). Vigor2860n with 3G USB Modem allows you to receive 3G signals at any place such as your car or certain location holding outdoor activity and share the bandwidth for using by more people. Users can use four LAN ports on the router to access Internet. Also, they can access Internet via 802.11n wireless function of Vigor2860n, and enjoy the powerful firewall, bandwidth management, VPN features of Vigor2860n series.

After connecting into the router, 3G USB Modem will be regarded as the third WAN port. However, the original WAN1 and WAN2 still can be used and Load-Balance can be done in the router. Besides, 3G USB Modem in WAN3 also can be used as backup device. Therefore, when WAN1 and WAN2 are not available, the router will use 3.5G for supporting automatically. The supported 3G USB Modem will be listed on DrayTek web site. Please visit www.draytek.com for more detailed information.

Below shows the menu items for **WAN**.

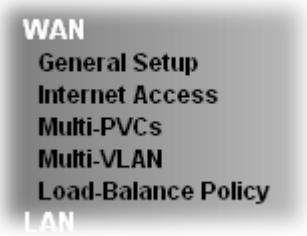

3.1.2 General Setup

This section will introduce some general settings of Internet and explain the connection modes for WAN1, WAN2 and WAN3 in details.

This router supports multiple-WAN function. It allows users to access Internet and combine the bandwidth of the multiple WANs to speed up the transmission through the network. Each WAN port can connect to different ISPs, Even if the ISPs use different technology to provide telecommunication service (such as DSL, Cable modem, etc.). If any connection problem occurred on one of the ISP connections, all the traffic will be guided and switched to the normal communication port for proper operation. Please configure WAN1, WAN2 and WAN3 settings.

This webpage allows you to set general setup for WAN1, WAN2 and WAN3 respectively. In default, WAN2 is disabled. If you want to enable it, simply click the WAN2 link and select **Yes** in the field of **Enable**.

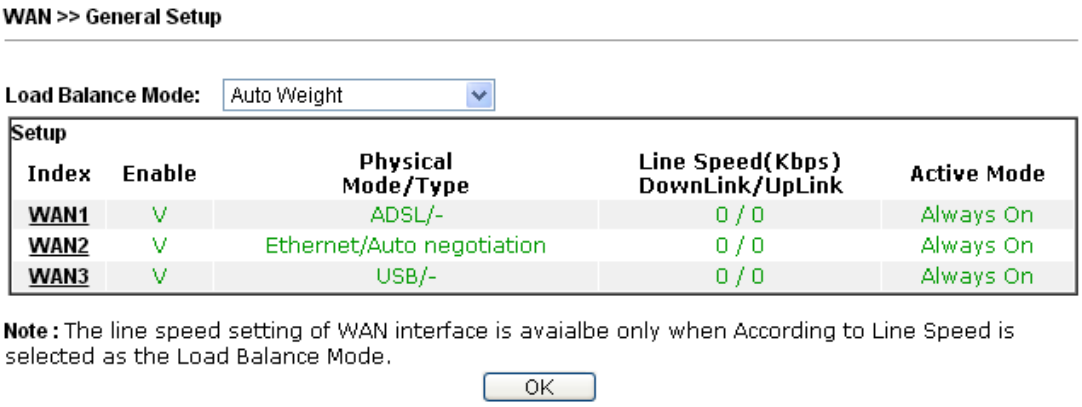
WAN >> General Setup
Load Balance Mode: Auto Weight
Setup
Index
Enable
Physical Mode/Type
Line Speed(Kbps) DownLink/UpLink
Active Mode
WAN1 V ADSL/- 0 / 0 Always On
WAN2 V Ethernet/Auto negotiation 0 / 0 Always On
WAN3 V USB/- 0 / 0 Always On
Note : The line speed setting of WAN interface is avaialbe only when According to Line Speed is selected as the Load Balance Mode.
OK

Available settings are explained as follows:

Item	Description
Load Balance Mode	This option is available for multiple-WAN for getting enough bandwidth for each WAN port. If you know the practical bandwidth for your WAN interface, please choose the setting of **According to Line Speed**. Otherwise, please choose **Auto Weigh** to let the router reach the best load balance. 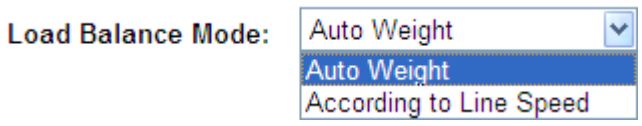
Index	Click the WAN interface link under Index to access into the WAN configuration page.
Enable	**V** means such WAN interface is enabled and ready to be used.

Physical Mode / Type	Display the physical mode and physical type of such WAN interface.
Line Speed	Display the downstream and upstream rate of such WAN interface.
Active Mode	Display whether such WAN interface is Active device or backup device.
Backup WAN	Display the Backup WAN interface for such WAN when it is disabled.

Note: In default, each WAN port is enabled.

After finished the above settings, click **OK** to save the settings.

WAN1 with ADSL/VDSL

Vigor router will **detect** the physical line is connected by ADSL or VDSL2 **automatically**. Therefore, this page allows you to configure settings for ADSL and VDSL2 at one time. That is, it is not necessary for you to configure different profile settings for ADSL and VDSL2 respectively.

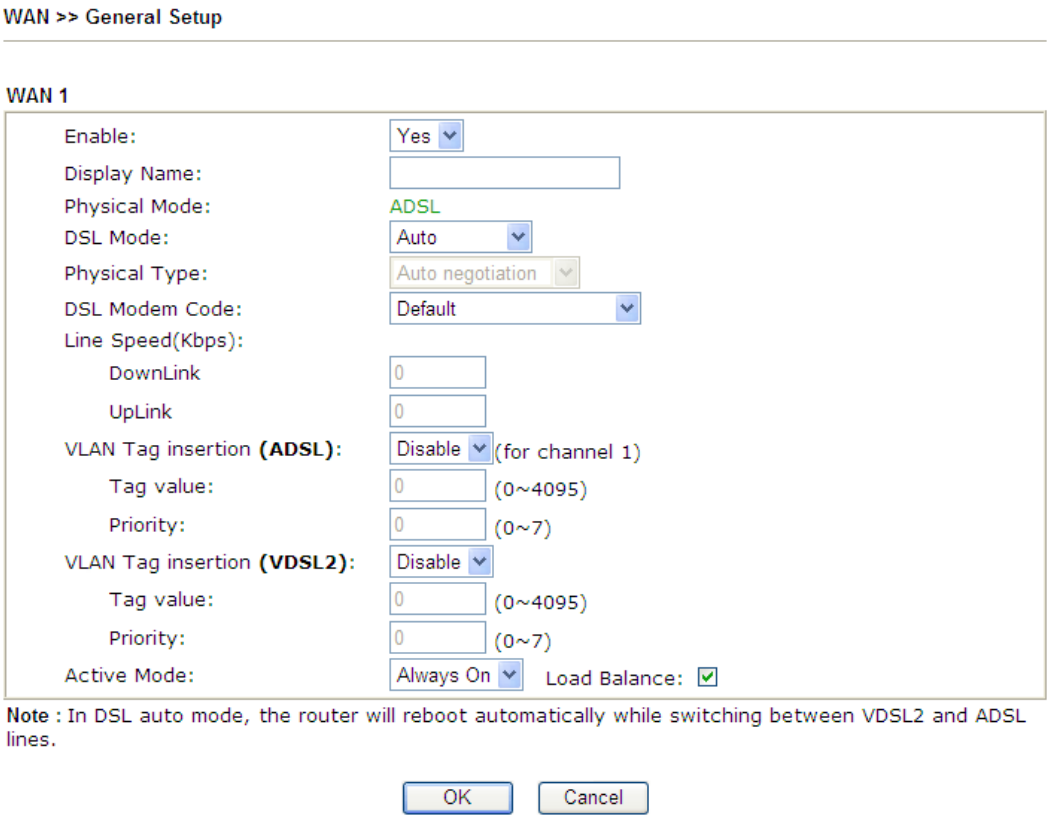
WAN >> General Setup
WAN 1
Enable: Yes
Display Name:
Physical Mode: ADSL
DSL Mode: Auto
Physical Type: Auto negotiation
DSL Modem Code: Default
Line Speed(Kbps):
DownLink 0
UpLink 0
VLAN Tag insertion (ADSL): Disable (for channel 1)
Tag value: 0 (0~4095)
Priority: 0 (0~7)
VLAN Tag insertion (VDSL2): Disable
Tag value: 0 (0~4095)
Priority: 0 (0~7)
Active Mode: Always On Load Balance:
Note : In DSL auto mode, the router will reboot automatically while switching between VDSL2 and ADSL lines.
OK
Cancel

Available settings are explained as follows:

Item	Description
Enable	Choose **Yes** to invoke the settings for this WAN interface. Choose **No** to disable the settings for this WAN interface.
Display Name	Type the description for such interface.

Physical Mode	Display the physical mode of such interface. If VDSL2 is detected, this field will display "**VDSL2**"; if ADSL is detected, it will display "**ADSL**".
DSL Mode	Specify the physical mode (VDSL or ADSL) for such router manually.
Physical Type	For such interface, no type can be selected.
DSL Modem Code	Choose the correct DSL modem code for ensuring the network connection. 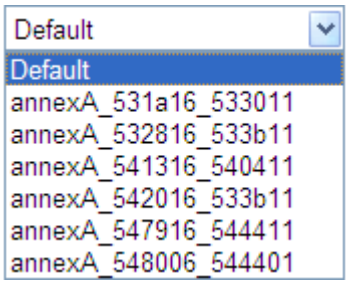 If you have no idea about the selection, simply choose **Default** or contact the dealer for assistance.
Line Speed (Kpbs)	If your choose **According to Line Speed** as the **Load Balance Mode** in previous page, please type the line speed for downloading and uploading for such WAN interface. The unit is kbps.
VLAN Tag insertion (ADSL)	The settings configured in this field are available for ADSL. **Enable** – Enable the function of VLAN with tag. The router will add specific VLAN number to all packets on the WAN while sending them out. Please type the tag value and specify the priority for the packets sending by WAN1. **Disable** – Disable the function of VLAN with tag. **Tag value** – Type the value as the VLAN ID number. The range is form 0 to 4095. **Priority** – Type the packet priority number for such VLAN. The range is from 0 to 7.
VLAN Tag insertion (VDSL2)	The settings configured in this field are available for VDSL2. **Enable** – Enable the function of VLAN with tag. The router will add specific VLAN number to all packets on the WAN while sending them out. Please type the tag value and specify the priority for the packets sending by WAN1. **Disable** – Disable the function of VLAN with tag. **Tag value** – Type the value as the VLAN ID number. The range is form 0 to 4095. **Priority** – Type the packet priority number for such VLAN. The range is from 0 to 7.

Active Mode	Choose **Always On** to make the WAN1 connection being activated always; 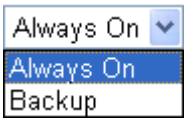 **Load Balance**: Check this box to enable **auto** load balance function for such WAN interface. When the data traffic is large, the WAN interface with the function enabled will balance the data transmission automatically among all of the WAN interfaces in connection status.
Backup Type	If you choose **Backup** as the **Active Mode**, **Backup Type** will appear. Please specify which WAN will be the Backup interface. 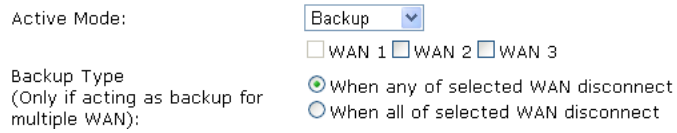 **When any of WAN disconnect** – Such backup WAN will be activated when any master WAN interface disconnects. **When all of selected WAN disconnect** – Such backup WAN will be activated only when all master WAN interfaces disconnect.

After finished the above settings, click **OK** to save the settings.

WAN2 with Ethernet

WAN2 is fixed with physical mode of Ethernet.

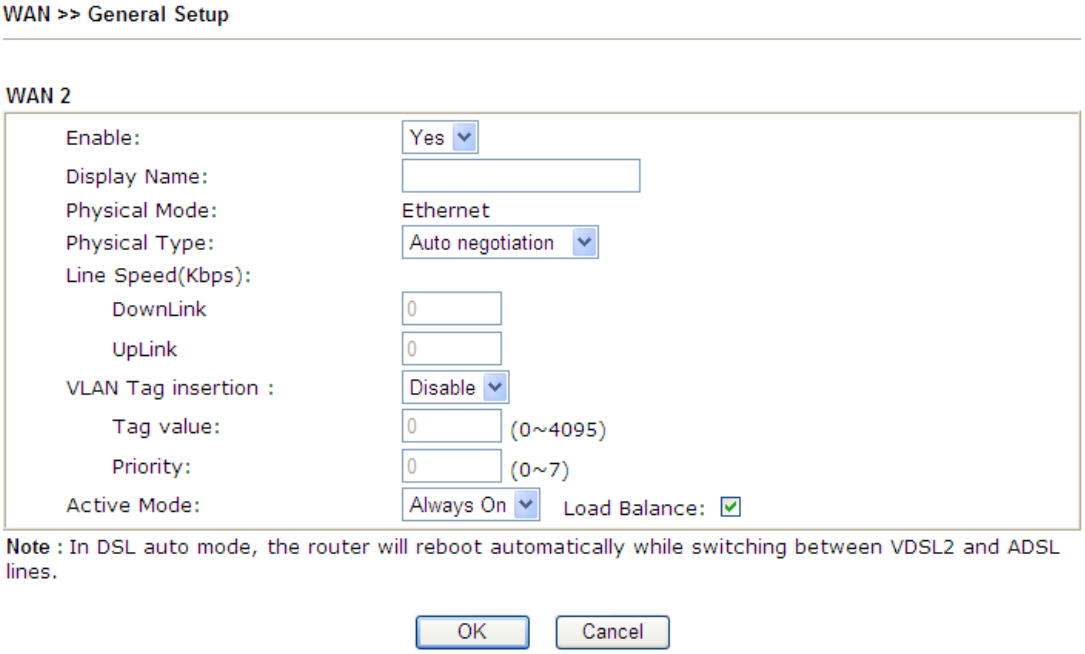

Available settings are explained as follows:

Item	Description
Enable	Choose **Yes** to invoke the settings for this WAN interface. Choose **No** to disable the settings for this WAN interface.
Display Name	Type the description for such WAN interface.
Physical Mode	Display the physical mode of such WAN interface.
Physical Type	You can change the physical type for WAN2 or choose **Auto negotiation** for determined by the system. 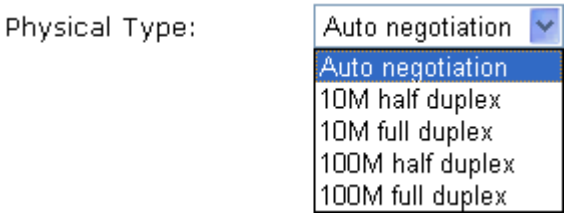
Line Speed	If your choose **According to Line Speed** as the **Load Balance Mode**, please type the line speed for downloading and uploading for such WAN interface. The unit is kbps.
VLAN Tag insertion	**Enable** – Enable the function of VLAN with tag. The router will add specific VLAN number to all packets on the WAN while sending them out. Please type the tag value and specify the priority for the packets sending by WAN1. **Disable** – Disable the function of VLAN with tag. **Tag value** – Type the value as the VLAN ID number. The range is form 0 to 4095. **Priority** – Type the packet priority number for such VLAN. The range is from 0 to 7.
Active Mode	Choose **Always On** to make the WAN2 connection being activated always. 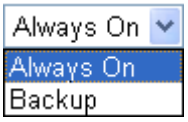 **Load Balance**: Check this box to enable **auto** load balance function for such WAN interface. When the data traffic is large, the WAN interface with the function enabled will balance the data transmission automatically among all of the WAN interfaces in connection status.

Backup Type	If you choose **Backup** as the **Active Mode**, **Backup Type** will appear. Please specify which WAN will be treated as the Backup WAN. 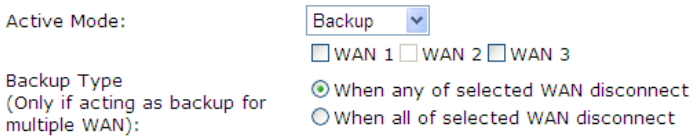 **When any of selected WAN disconnect** – Such backup WAN will be activated when any master WAN interface disconnects. **When all of selected WAN disconnect** – Such backup WAN will be activated only when all master WAN interfaces disconnect.

After finished the above settings, click **OK** to save the settings.

WAN3 with USB

To use 3G network connection through 3G USB Modem, please configure **WAN3** interface.

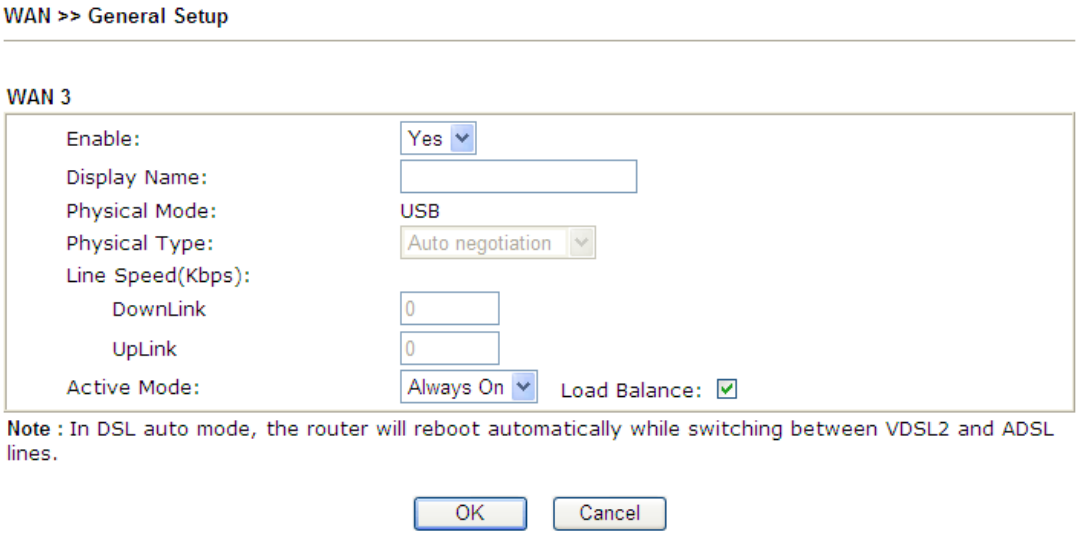

Available settings are explained as follows:

Item	Description
Enable	Choose **Yes** to invoke the settings for this WAN interface. Choose **No** to disable the settings for this WAN interface.
Display Name	Type the description for such WAN interface.
Physical Mode	Display the physical mode of such WAN interface.
Physical type	In such WAN interface, no type can be selected.
Line Speed	If your choose **According to Line Speed** as the **Load Balance Mode**, please type the line speed for downloading and uploading for such WAN interface. The unit is kbps.

Active Mode	Choose **Always On** to make the WAN3 connection being activated always. 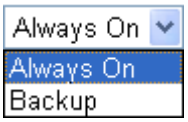 **Load Balance**: Check this box to enable **auto** load balance function for such WAN interface. When the data traffic is large, the WAN interface with the function enabled will balance the data transmission automatically among all of the WAN interfaces in connection status.
Backup Type	If you choose **Backup** as the **Active Mode**, **Backup Type** will appear. Please specify which WAN will be treated as the Backup WAN. 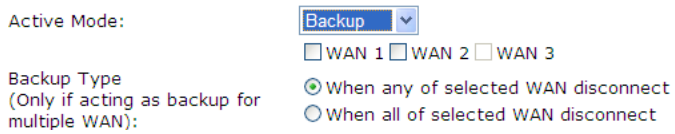 **When any of selected WAN disconnect** – Such backup WAN will be activated when any master WAN interface disconnects. **When all of selected WAN disconnect** – Such backup WAN will be activated only when all master WAN interfaces disconnect.

After finished the above settings, click **OK** to save the settings.

3.1.3 Internet Access

For the router supports multi-WAN function, the users can set different WAN settings (for WAN1/WAN2/WAN3) for Internet Access. Due to different Physical Mode for WAN interface, the Access Mode for these connections also varies. Refer to the following figures.

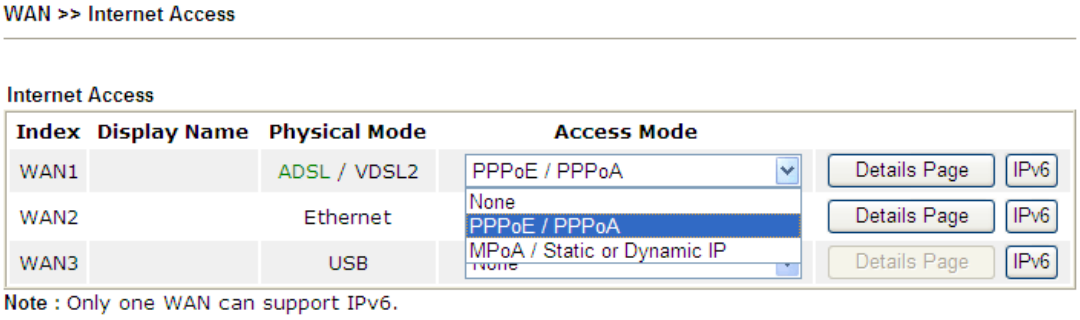

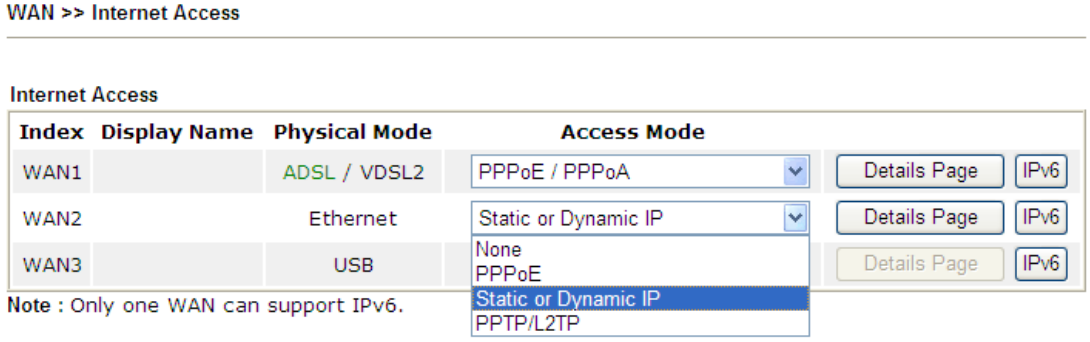

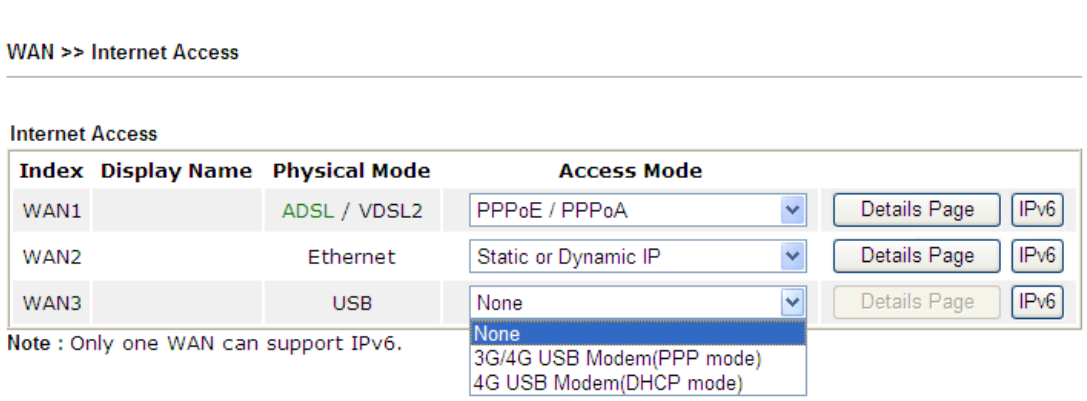

Available settings are explained as follows:

Item	Description
Index	Display the WAN interface.
Display Name	It shows the name of the WAN1/WAN2/WAN3 that entered in general setup.
Physical Mode	It shows the physical connection for WAN1(ADSL/VDSL2) /WAN2 (Ethernet) /WAN3 (3G USB Modem) according to the real network connection.
Access Mode	Use the drop down list to choose a proper access mode. The details page of that mode will be popped up. If not, click Details Page for accessing the page to configure the settings.

Details Page	This button will open different web page (based on IPv4) according to the access mode that you choose in WAN interface. Note that **Details Page** will be changed slightly based on ADSL/VDSL2 physical mode specified on **WAN>>General Setup**.
IPv6	This button will open different web page (based on Physical Mode) to setup IPv6 Internet Access Mode for WAN interface. If IPv6 service is active on this WAN interface, the color of "IPv6" will become green.

Details Page for PPPoE in WAN1 (Physical Mode: VDSL2)

To choose PPPoE as the accessing protocol of the Internet, please select **PPPoE** from the **WAN>>Internet Access >>WAN1** page. The following web page will be shown.

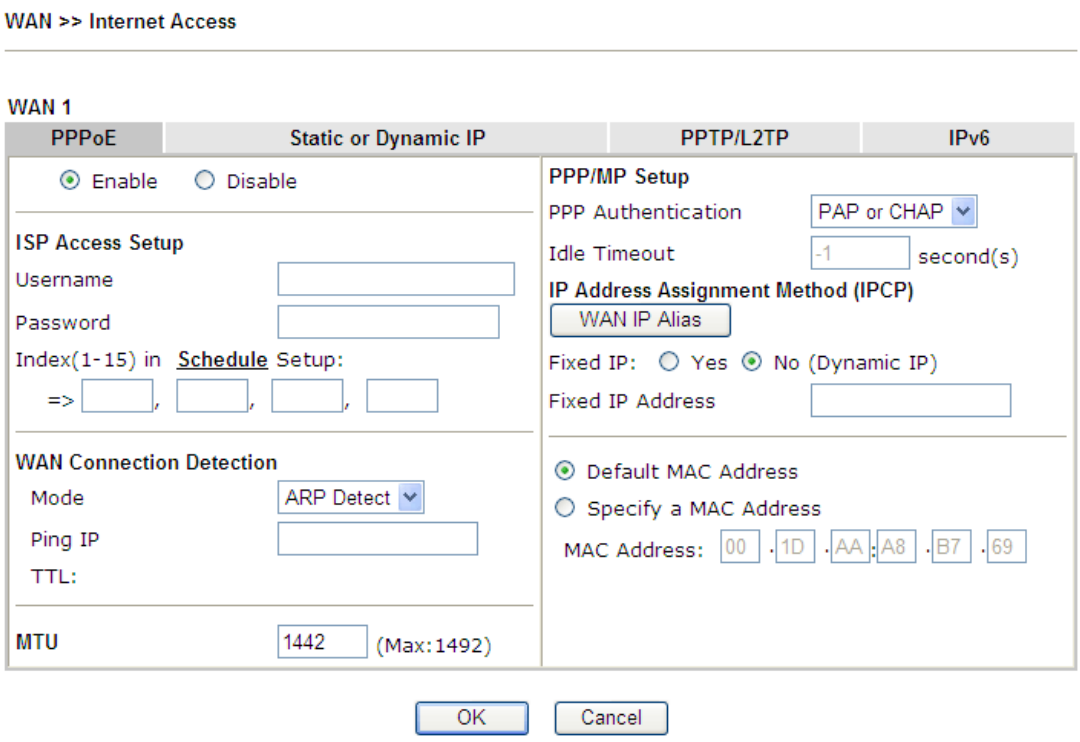

Available settings are explained as follows:

Item	Description
Enable/Disable	Click **Enable** for activating this function. If you click **Disable**, this function will be closed and all the settings that you adjusted in this page will be invalid.
ISP Access Setup	Enter your allocated username, password and authentication parameters according to the information provided by your ISP. **Username** – Type in the username provided by ISP in this field. **Password** – Type in the password provided by ISP in this

	field. **Index (1-15) in Schedule Setup -** You can type in four sets of time schedule for your request. All the schedules can be set previously in **Application** >> **Schedule** web page and you can use the number that you have set in that web page.
WAN Connection Detection	Such function allows you to verify whether network connection is alive or not through ARP Detect or Ping Detect. **Mode** – Choose **ARP Detect** or **Ping Detect** for the system to execute for WAN detection. **Ping IP** – If you choose Ping Detect as detection mode, you have to type IP address in this field for pinging. **TTL (Time to Live)** – Displays value for your reference. TTL value is set by telnet command.
MTU	It means Max Transmit Unit for packet. The default setting is 1442.
PPP/MP Setup	**PPP Authentication** – Select **PAP only** or **PAP or CHAP** for PPP. **Idle Timeout** – Set the timeout for breaking down the Internet after passing through the time without any action.
IP Address Assignment Method (IPCP)	Usually ISP dynamically assigns IP address to you each time you connect to it and request. In some case, your ISP provides service to always assign you the same IP address whenever you request. In this case, you can fill in this IP address in the Fixed IP field. Please contact your ISP before you want to use this function. **WAN IP Alias** - If you have multiple public IP addresses and would like to utilize them on the WAN interface, please use WAN IP Alias. You can set up to 8 public IP addresses other than the current one you are using. 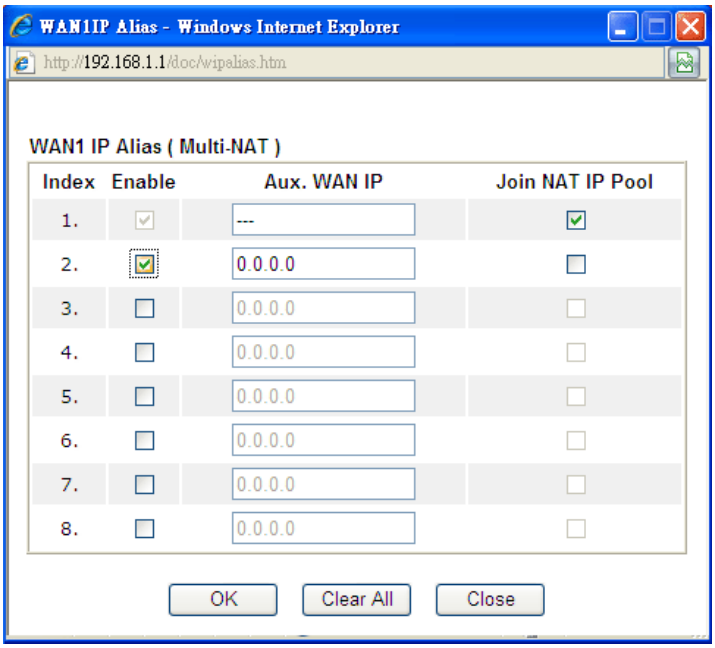 **Fixed IP** – Click **Yes** to use this function and type in a

	fixed IP address in the box of **Fixed IP Address**. **Default MAC Address** – You can use **Default MAC Address** or specify another MAC address by typing on the boxes of MAC Address for the router. **Specify a MAC Address –** Type the MAC address for the router manually.

Details Page for Static or Dynamic IP in WAN1 (Physical Mode: VDSL2)

MPoA is a specification that enables ATM services to be integrated with existing LANs, which use either Ethernet, token-ring or TCP/IP protocols. The goal of MPoA is to allow different LANs to send packets to each other via an ATM backbone.

To use **Static or Dynamic IP** as the accessing protocol of the Internet, select **Static or Dynamic IP** from the **WAN>>Internet Access >>WAN1** page. The following web page will appear.

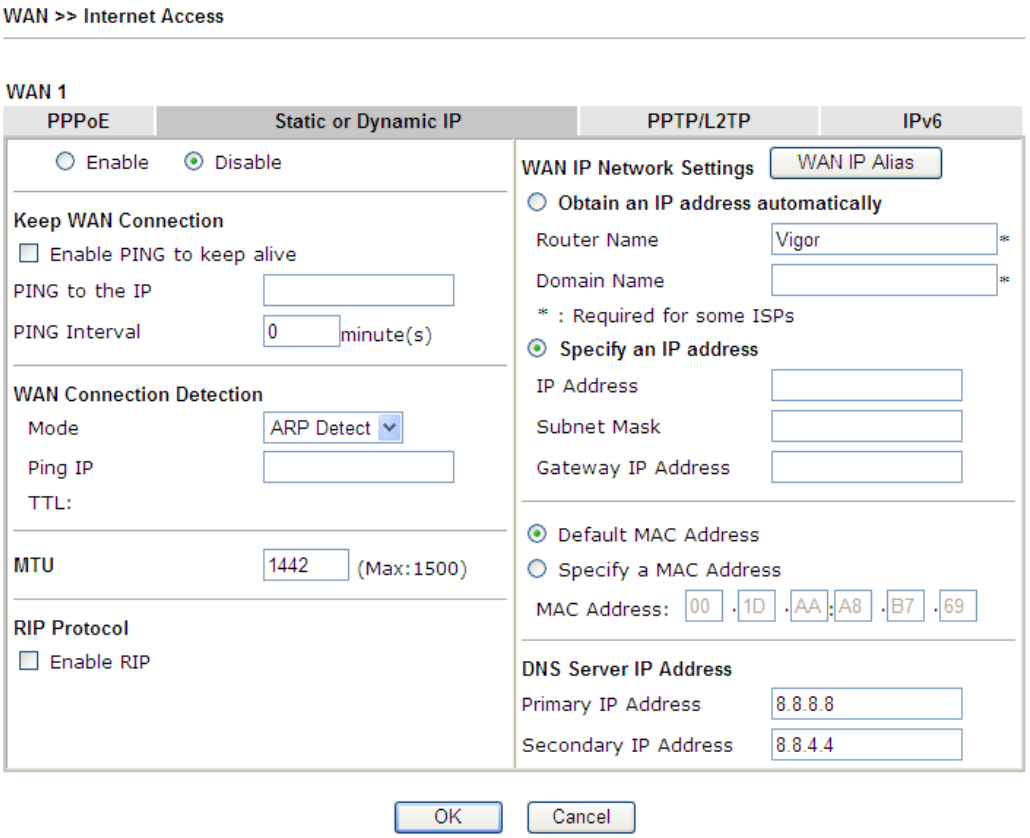

Available settings are explained as follows:

Item	Description
Enable/Disable	Click **Enable** for activating this function. If you click **Disable**, this function will be closed and all the settings that you adjusted in this page will be invalid.
WAN Connection Detection	Such function allows you to verify whether network connection is alive or not through ARP Detect or Ping Detect. **Mode** – Choose **ARP Detect** or **Ping Detect** for the system

	to execute for WAN detection. **Ping IP** – If you choose Ping Detect as detection mode, you have to type IP address in this field for pinging. **TTL (Time to Live)** – Displays value for your reference. TTL value is set by telnet command.
RIP Protocol	Routing Information Protocol is abbreviated as RIP （RFC1058）specifying how routers exchange routing tables information. Click **Enable RIP** for activating this function.
Bridge Mode	If you choose **Bridged IP** as the protocol, you can check this box to invoke the function. The router will work as a bridge modem.
WAN IP Network Settings	This group allows you to obtain an IP address automatically and allows you type in IP address manually. **WAN IP Alias** - If you have multiple public IP addresses and would like to utilize them on the WAN interface, please use WAN IP Alias. You can set up to 8 public IP addresses other than the current one you are using. Notice that this setting is available for WAN1 only. Type the additional WAN IP address and check the Enable box. Then click **OK** to exit the dialog. 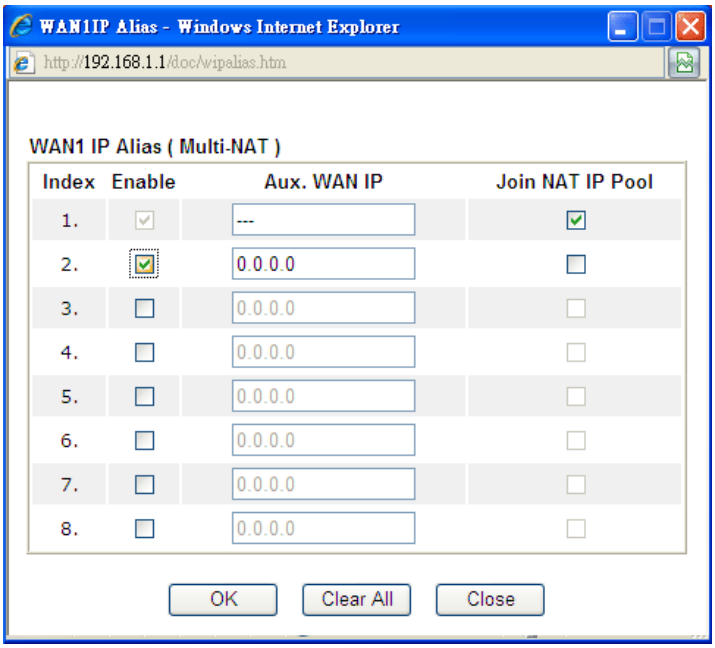 **Obtain an IP address automatically** – Click this button to obtain the IP address automatically. ● **Router Name** – Type in the router name provided by ISP. ● **Domain Name** – Type in the domain name that you have assigned. **Specify an IP address** – Click this radio button to specify some data. ● **IP Address** – Type in the private IP address. ● **Subnet Mask** – Type in the subnet mask.

	● **Gateway IP Address** – Type in gateway IP address. **Default MAC Address** – Type in MAC address for the router. You can use **Default MAC Address** or specify another MAC address for your necessity. **Specify a MAC Address** – Type in the MAC address for the router manually.
DNS Server IP Address	Type in the primary IP address for the router. If necessary, type in secondary IP address for necessity in the future.

After finishing all the settings here, please click **OK** to activate them.

Details Page for PPTP/L2TP in WAN1 (Physical Mode: VDSL2)

To use **PPTP/L2TP** as the accessing protocol of the internet, please click the **PPTP/L2TP** tab. The following web page will be shown.

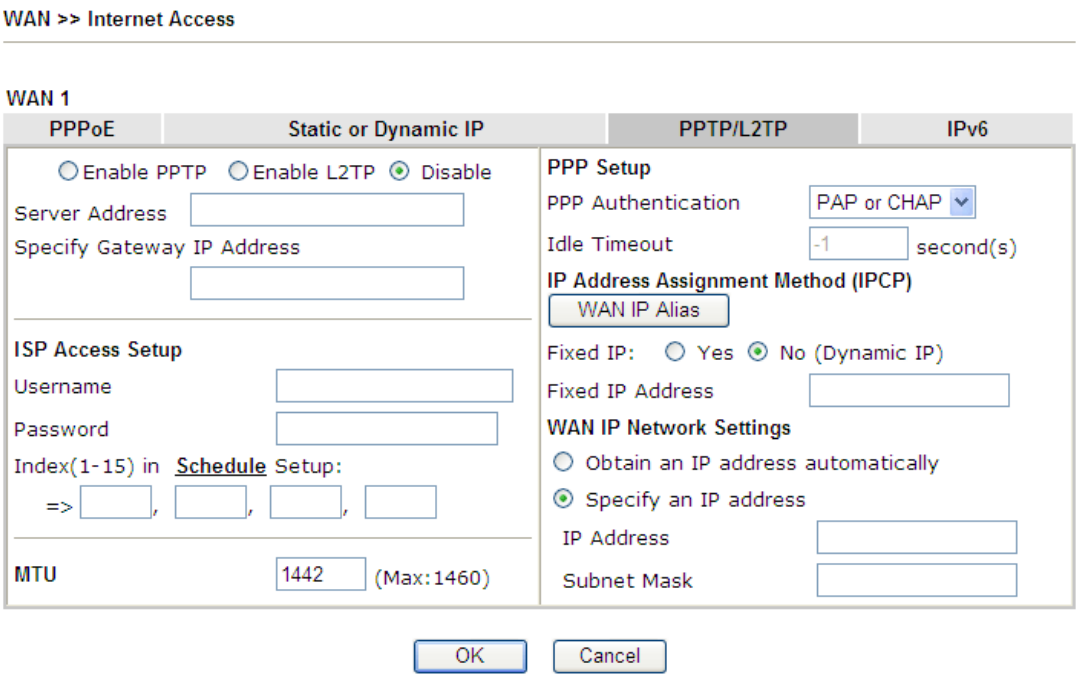

Available settings are explained as follows:

Item	Description
PPTP/L2TP	**Enable PPTP-** Click this radio button to enable a PPTP client to establish a tunnel to a DSL modem on the WAN interface. **Enable L2TP** - Click this radio button to enable a L2TP client to establish a tunnel to a DSL modem on the WAN interface. **Disable** – Click this radio button to close the connection through PPTP or L2TP. **Server Address** - Specify the IP address of the PPTP/L2TP server if you enable PPTP/L2TP client mode. **Specify Gateway IP Address** – Specify the gateway IP

	address for DHCP server.
ISP Access Setup	**Username** -Type in the username provided by ISP in this field. **Password** -Type in the password provided by ISP in this field. **Index (1-15) in Schedule Setup** - You can type in four sets of time schedule for your request. All the schedules can be set previously in **Application** >> **Schedule** web page and you can use the number that you have set in that web page.
MTU	It means Max Transmit Unit for packet. The default setting is 1442.
PPP Setup	**PPP Authentication** - Select **PAP only** or **PAP or CHAP** for PPP. **Idle Timeout** - Set the timeout for breaking down the Internet after passing through the time without any action.
IP Address Assignment Method(IPCP)	**WAN IP Alias** - If you have multiple public IP addresses and would like to utilize them on the WAN interface, please use WAN IP Alias. You can set up to 8 public IP addresses other than the current one you are using. 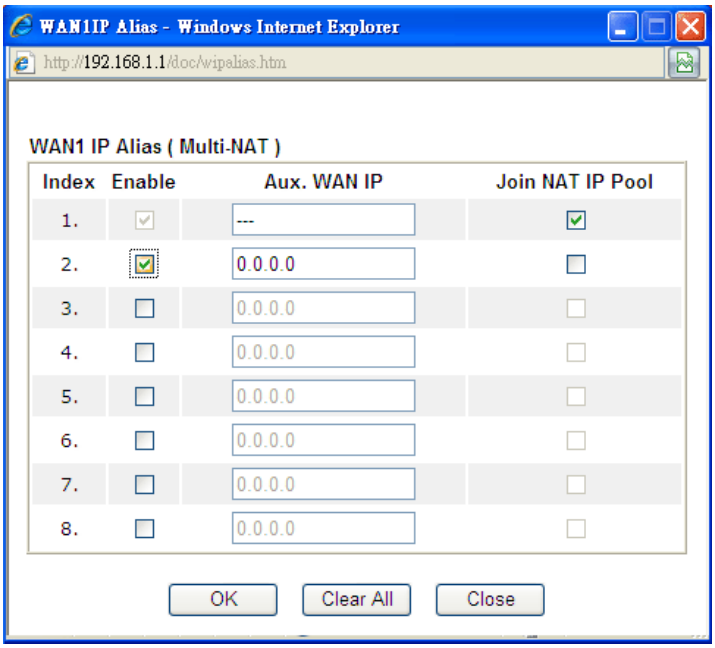 **Fixed IP** - Usually ISP dynamically assigns IP address to you each time you connect to it and request. In some case, your ISP provides service to always assign you the same IP address whenever you request. In this case, you can fill in this IP address in the Fixed IP field. Please contact your ISP before you want to use this function. Click **Yes** to use this function and type in a fixed IP address in the box. **Fixed IP Address** -Type a fixed IP address.
WAN IP Network Settings	**Obtain an IP address automatically** – Click this button to obtain the IP address automatically. **Specify an IP address** – Click this radio button to specify some data.

	● **IP Address** – Type the IP address. ● **Subnet Mask** – Type the subnet mask.

After finishing all the settings here, please click **OK** to activate them.

Details Page for PPPoE/PPPoA in WAN1 (Physical Mode: ADSL)

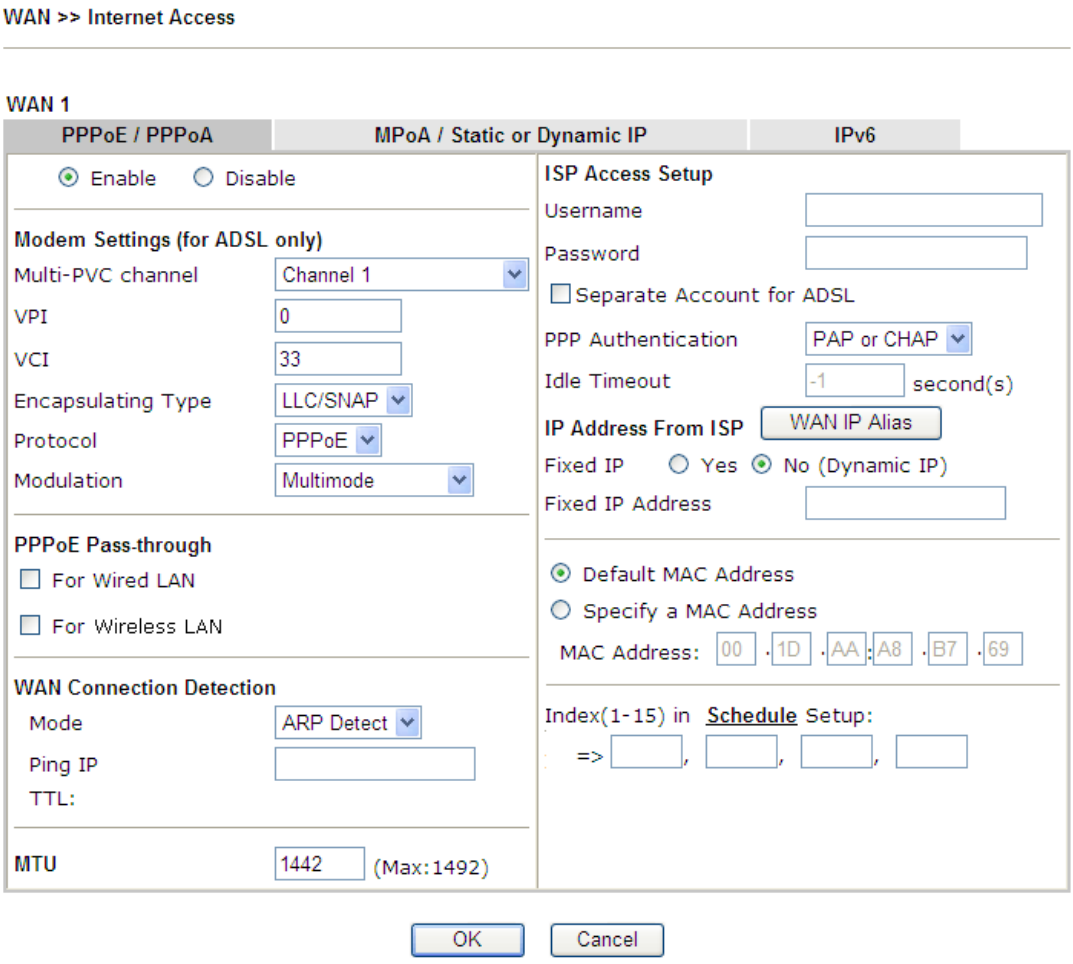

Available settings are explained as follows:

Item	Description
Enable/Disable	Click **Enable** for activating this function. If you click **Disable**, this function will be closed and all the settings that you adjusted in this page will be invalid.
Modem Settings (for ADSL only)	Set up the DSL parameters required by your ISP. These settings configured here are specified for ADSL only. **Multi-PVC channel** - The selections displayed here are determined by the page of **Internet Access** >> **Multi PVCs**. **Select M-PVCs Channel** means no selection will be chosen. **VPI** - Type in the value provided by ISP. **VCI** - Type in the value provided by ISP. **Encapsulating Type** - Drop down the list to choose the type provided by ISP.

	Protocol - Drop down the list to choose the one (PPPoE or PPPoA) provided by ISP. If you have already used **Quick Start Wizard** to set the protocol, then it is not necessary for you to change any settings in this group. **Modulation** –Default setting is Multimode. Choose the one that fits the requirement of your router. 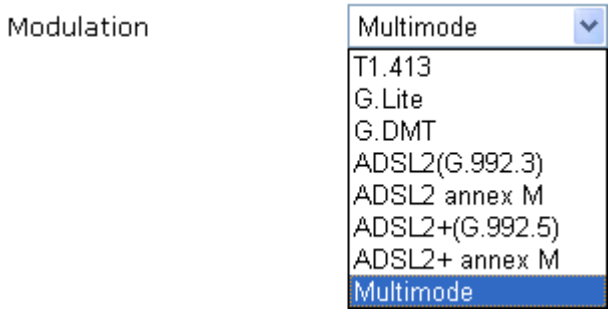
PPPoE Pass-through	The router offers PPPoE dial-up connection. Besides, you also can establish the PPPoE connection directly from local clients to your ISP via the Vigor router. When PPPoA protocol is selected, the PPPoE package transmitted by PC will be transformed into PPPoA package and sent to WAN server. Thus, the PC can access Internet through such direction. **For Wired LAN** – If you check this box, PCs on the same network can use another set of PPPoE session (different with the Host PC) to access into Internet. **For Wireless LAN** – It is available for *n* model. If you check this box, PCs on the same wireless network can use another set of PPPoE session (different with the Host PC) to access into Internet. **Note:** To have PPPoA Pass-through, please choose PPPoA protocol and check the box(es) here. The router will behave like a modem which only serves the PPPoE client on the LAN. That's, the router will offer PPPoA dial-up connection.
WAN Connection Detection	Such function allows you to verify whether network connection is alive or not through ARP Detect or Ping Detect. **Mode** – Choose **ARP Detect** or **Ping Detect** for the system to execute for WAN detection. **Ping IP** – If you choose Ping Detect as detection mode, you have to type IP address in this field for pinging. **TTL (Time to Live)** – Displays value for your reference. TTL value is set by telnet command.
MTU	It means Max Transmit Unit for packet. The default setting is 1442.
ISP Access Setup	Enter your allocated username, password and authentication parameters according to the information provided by your ISP. **Username** – Type in the username provided by ISP in this

	field. **Password** – Type in the password provided by ISP in this field. **Separate Account for ADSL** – In default, WAN1 supports VDSL2/ADSL and uses the same PPPoE account and password for connection. If required, you can configure another account and password for ADSL connection by checking this box. If it is checked, the system will ask you to type another group of account and password additionally. **PPP Authentication** – Select **PAP only** or **PAP or CHAP** for PPP. **Idle Timeout** – Set the timeout for breaking down the Internet after passing through the time without any action.
IP Address From ISP	Usually ISP dynamically assigns IP address to you each time you connect to it and request. In some case, your ISP provides service to always assign you the same IP address whenever you request. In this case, you can fill in this IP address in the Fixed IP field. Please contact your ISP before you want to use this function. **WAN IP Alias** - If you have multiple public IP addresses and would like to utilize them on the WAN interface, please use WAN IP Alias. You can set up to 8 public IP addresses other than the current one you are using. 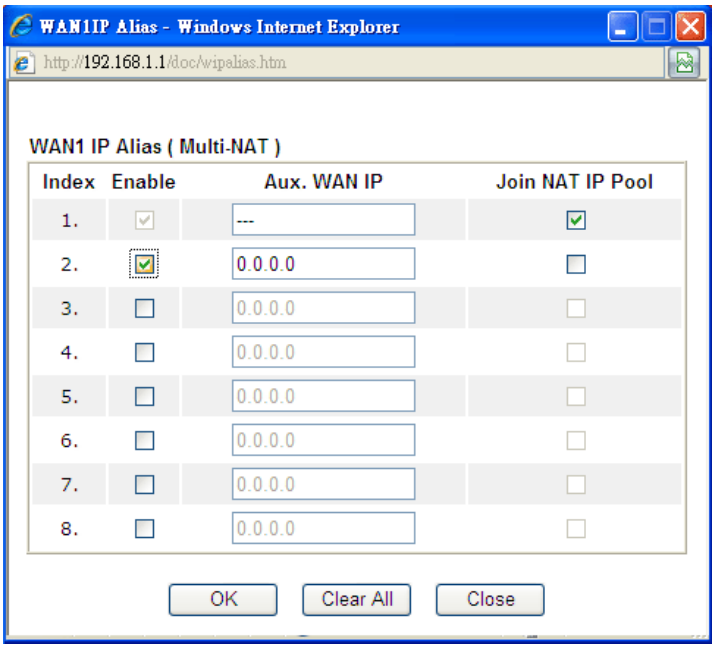 **Fixed IP** – Click **Yes** to use this function and type in a fixed IP address in the box of **Fixed IP Address**. **Default MAC Address** – You can use **Default MAC Address** or specify another MAC address by typing on the boxes of MAC Address for the router. **Specify a MAC Address –** Type the MAC address for the router manually. **Index (1-15) in Schedule Setup** - You can type in four sets of time schedule for your request. All the schedules can be set previously in **Applications** >> **Schedule** web page and

	you can use the number that you have set in that web page.

After finishing all the settings here, please click **OK** to activate them.

Details Page for MPoA/Static or Dynamic IP in WAN1 (Physical Mode: ADSL)

MPoA is a specification that enables ATM services to be integrated with existing LANs, which use either Ethernet, token-ring or TCP/IP protocols. The goal of MPoA is to allow different LANs to send packets to each other via an ATM backbone.

To use **MPoA/Static or Dynamic IP** as the accessing protocol of the Internet, select **MPoA /Static or Dynamic IP** from the **WAN>>Internet Access >>WAN1** page. The following web page will appear.

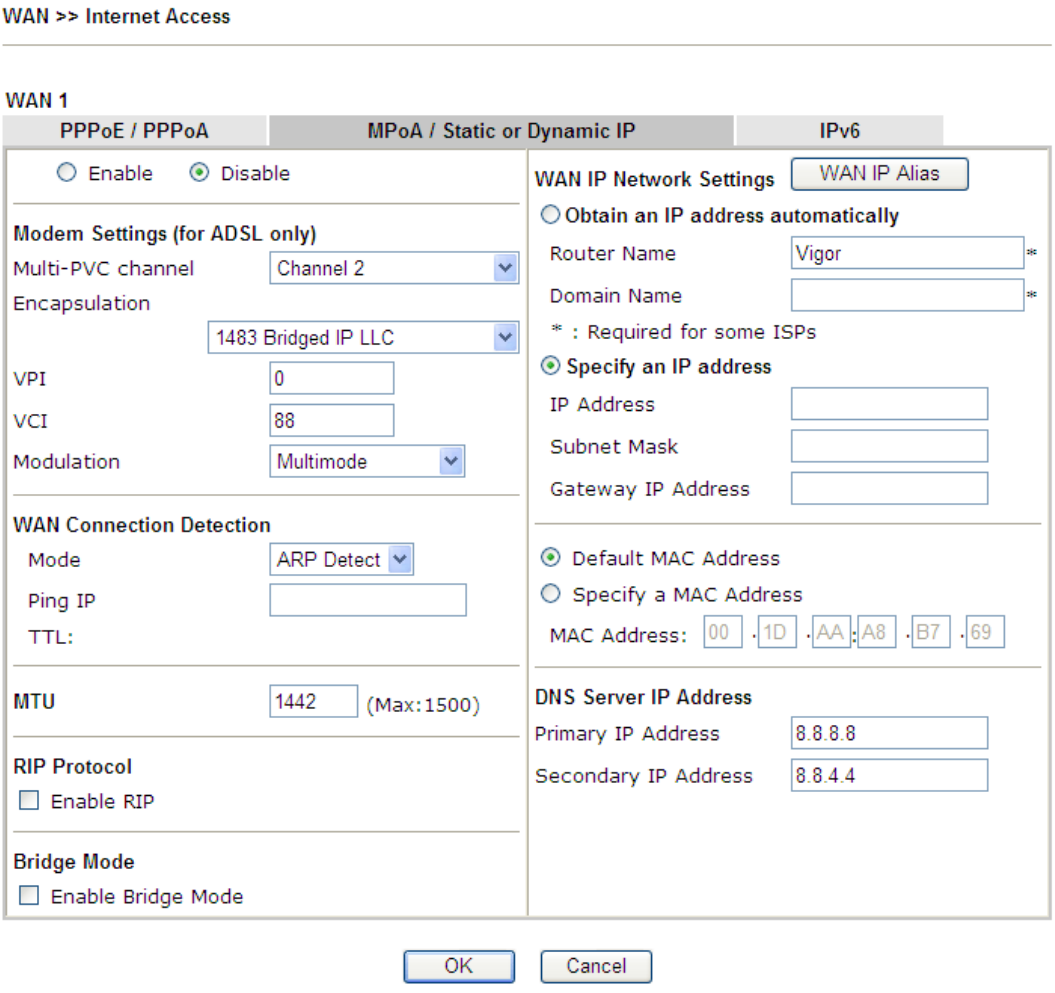

Available settings are explained as follows:

Item	Description
Enable/Disable	Click **Enable** for activating this function. If you click **Disable**, this function will be closed and all the settings that you adjusted in this page will be invalid.
Modem Settings (for ADSL only)	Set up the DSL parameters required by your ISP. These settings configured here are specified for ADSL only. **Multi-PVC channel** - The selections displayed here are determined by the page of **Internet Access** >>**Multi PVCs**.

	Select M-PVCs Channel means no selection will be chosen. **Encapsulating** - Drop down the list to choose the type provided by ISP. **VPI** - Type in the value provided by ISP. **VCI** - Type in the value provided by ISP. **Modulation** –Default setting is Multimode. Choose the one that fits the requirement of your router. 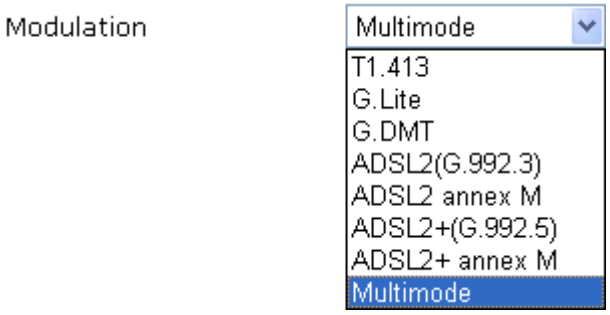
WAN Connection Detection	Such function allows you to verify whether network connection is alive or not through ARP Detect or Ping Detect. **Mode** – Choose **ARP Detect** or **Ping Detect** for the system to execute for WAN detection. **Ping IP** – If you choose Ping Detect as detection mode, you have to type IP address in this field for pinging. **TTL (Time to Live)** – Displays value for your reference. TTL value is set by telnet command.
MTU	It means Max Transmit Unit for packet. The default setting is 1442.
RIP Protocol	Routing Information Protocol is abbreviated as RIP （RFC1058）specifying how routers exchange routing tables information. Click **Enable RIP** for activating this function.
Bridge Mode	If you choose **Bridged IP** as the protocol, you can check this box to invoke the function. The router will work as a bridge modem.
WAN IP Network Settings	This group allows you to obtain an IP address automatically and allows you type in IP address manually. **WAN IP Alias** - If you have multiple public IP addresses and would like to utilize them on the WAN interface, please use WAN IP Alias. You can set up to 8 public IP addresses other than the current one you are using. Notice that this setting is available for WAN1 only. Type the additional WAN IP address and check the Enable box. Then click **OK** to exit the dialog.

	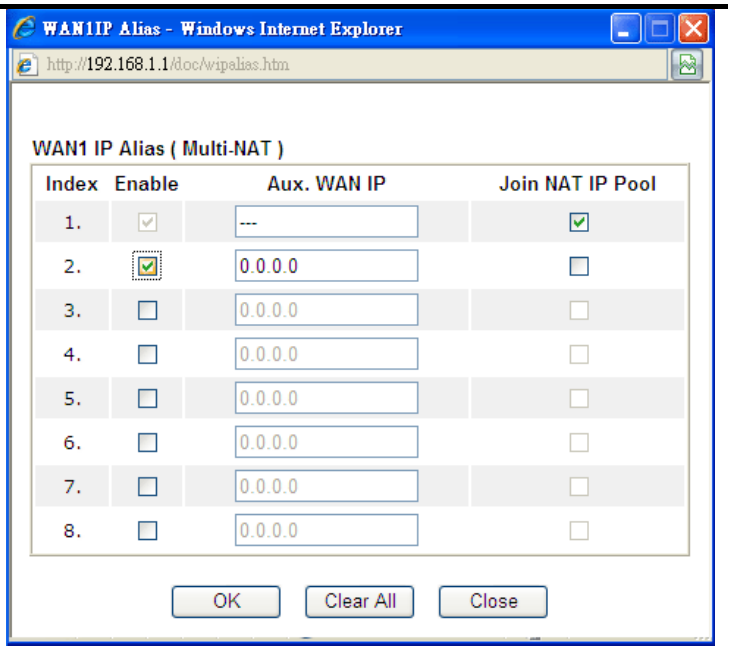 **Obtain an IP address automatically** – Click this button to obtain the IP address automatically. ● **Router Name** – Type in the router name provided by ISP. ● **Domain Name** – Type in the domain name that you have assigned. **Specify an IP address** – Click this radio button to specify some data. ● **IP Address** – Type in the private IP address. ● **Subnet Mask** – Type in the subnet mask. ● **Gateway IP Address** – Type in gateway IP address. **Default MAC Address** – Type in MAC address for the router. You can use **Default MAC Address** or specify another MAC address for your necessity. **Specify a MAC Address** – Type in the MAC address for the router manually.
DNS Server IP Address	Type in the primary IP address for the router. If necessary, type in secondary IP address for necessity in the future.

After finishing all the settings here, please click **OK** to activate them.

Details Page for PPPoE in WAN2

To choose PPPoE as the accessing protocol of the Internet, please select **PPPoE** from the **WAN>>Internet Access >>WAN2** page. The following web page will be shown.

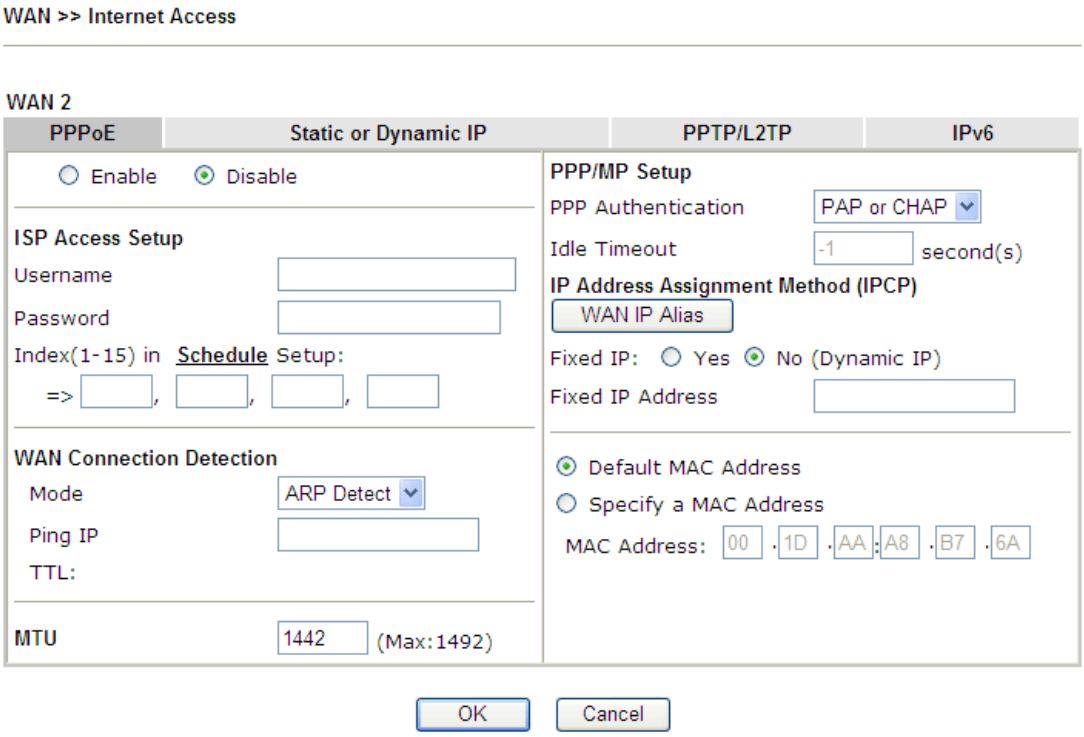

Available settings are explained as follows:

Item	Description
Enable/Disable	Click **Enable** for activating this function. If you click **Disable**, this function will be closed and all the settings that you adjusted in this page will be invalid.
ISP Access Setup	Enter your allocated username, password and authentication parameters according to the information provided by your ISP. **Username** – Type in the username provided by ISP in this field. The maximum length of the user name you can set is 63 characters. **Password** – Type in the password provided by ISP in this field. The maximum length of the password you can set is 62 characters. **Index (1-15) in Schedule Setup -** You can type in four sets of time schedule for your request. All the schedules can be set previously in **Application >> Schedule** web page and you can use the number that you have set in that web page.
WAN Connection Detection	Such function allows you to verify whether network connection is alive or not through ARP Detect or Ping Detect. **Mode** – Choose **ARP Detect** or **Ping Detect** for the system

	to execute for WAN detection. **Ping IP** – If you choose Ping Detect as detection mode, you have to type IP address in this field for pinging. **TTL (Time to Live)** – Displays value for your reference. TTL value is set by telnet command.
MTU	It means Max Transmit Unit for packet. The default setting is 1442.
PPP/MP Setup	**PPP Authentication** – Select **PAP only** or **PAP or CHAP** for PPP. **Idle Timeout** – Set the timeout for breaking down the Internet after passing through the time without any action.
IP Address Assignment Method (IPCP)	Usually ISP dynamically assigns IP address to you each time you connect to it and request. In some case, your ISP provides service to always assign you the same IP address whenever you request. In this case, you can fill in this IP address in the Fixed IP field. Please contact your ISP before you want to use this function. **WAN IP Alias** - If you have multiple public IP addresses and would like to utilize them on the WAN interface, please use WAN IP Alias. You can set up to 8 public IP addresses other than the current one you are using. Type the additional WAN IP address and check the Enable box. Then click **OK** to exit the dialog. 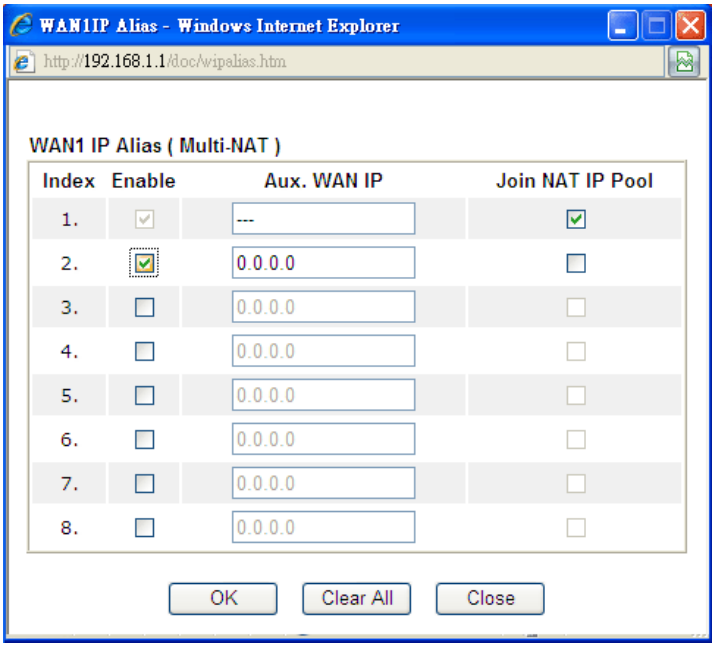 **Fixed IP** – Click **Yes** to use this function and type in a fixed IP address in the box of **Fixed IP Address**. **Default MAC Address** – You can use **Default MAC Address** or specify another MAC address by typing on the boxes of MAC Address for the router. **Specify a MAC Address –** Type the MAC address for the router manually.

After finishing all the settings here, please click **OK** to activate them.

Details Page for Static or Dynamic IP in WAN2

For static IP mode, you usually receive a fixed public IP address or a public subnet, namely multiple public IP addresses from your DSL or Cable ISP service providers. In most cases, a Cable service provider will offer a fixed public IP, while a DSL service provider will offer a public subnet. If you have a public subnet, you could assign an IP address or many IP address to the WAN interface.

To use **Static or Dynamic IP** as the accessing protocol of the internet, please click the **Static or Dynamic IP** tab. The following web page will be shown.

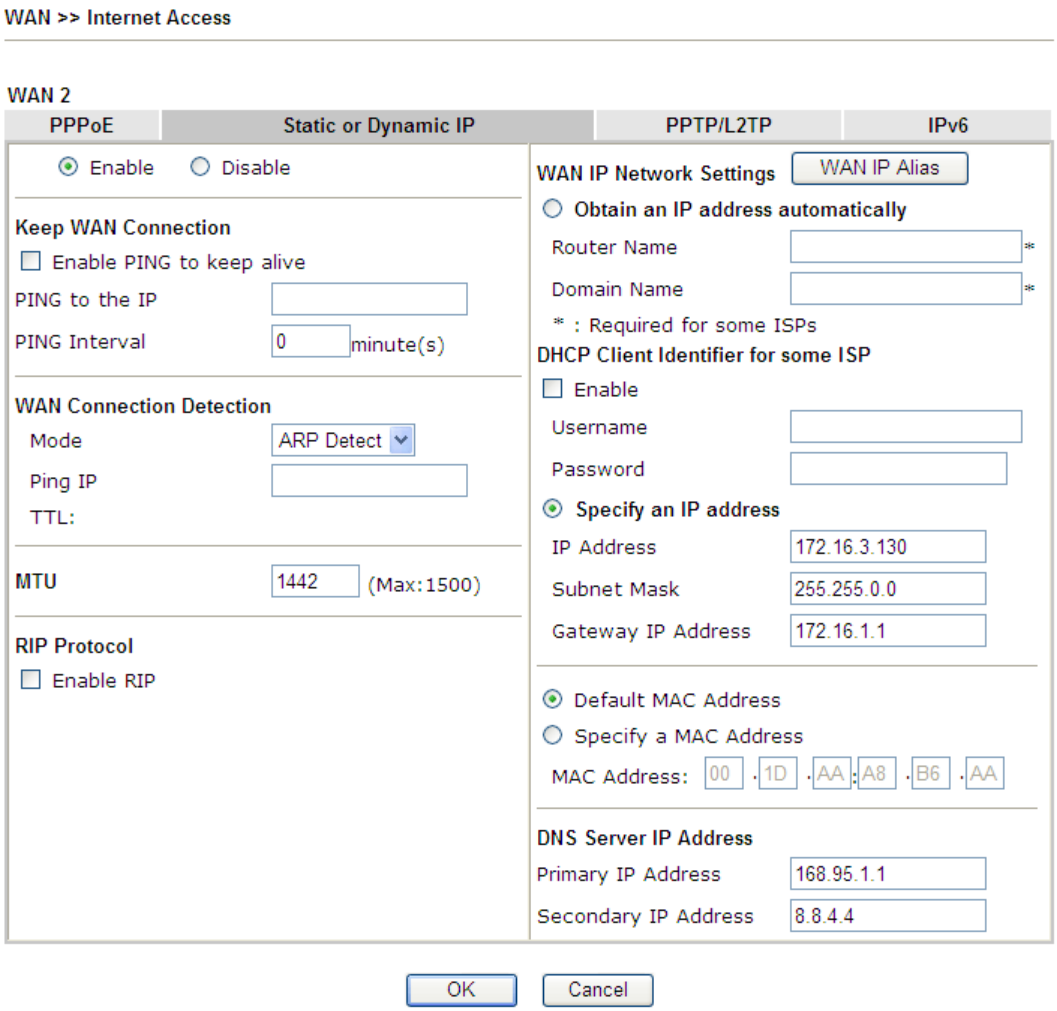

Available settings are explained as follows:

Item	Description
Enable / Disable	Click **Enable** for activating this function. If you click **Disable**, this function will be closed and all the settings that you adjusted in this page will be invalid.
Keep WAN Connection	Normally, this function is designed for Dynamic IP environments because some ISPs will drop connections if there is no traffic within certain periods of time. Check **Enable PING to keep alive** box to activate this function. **PING to the IP** - If you enable the PING function, please specify the IP address for the system to PING it for keeping alive.

	PING Interval - Enter the interval for the system to execute the PING operation.
WAN Connection Detection	Such function allows you to verify whether network connection is alive or not through ARP Detect or Ping Detect. **Mode** – Choose **ARP Detect** or **Ping Detect** for the system to execute for WAN detection. **Ping IP** – If you choose Ping Detect as detection mode, you have to type IP address in this field for pinging. **TTL (Time to Live)** – Displays value for your reference. TTL value is set by telnet command.
MTU	It means Max Transmit Unit for packet. The default setting is 1480.
RIP Protocol	Routing Information Protocol is abbreviated as RIP （RFC1058）specifying how routers exchange routing tables information. Click **Enable RIP** for activating this function.
WAN IP Network Settings	This group allows you to obtain an IP address automatically and allows you type in IP address manually. **WAN IP Alias** - If you have multiple public IP addresses and would like to utilize them on the WAN interface, please use WAN IP Alias. You can set up to 8 public IP addresses other than the current one you are using. 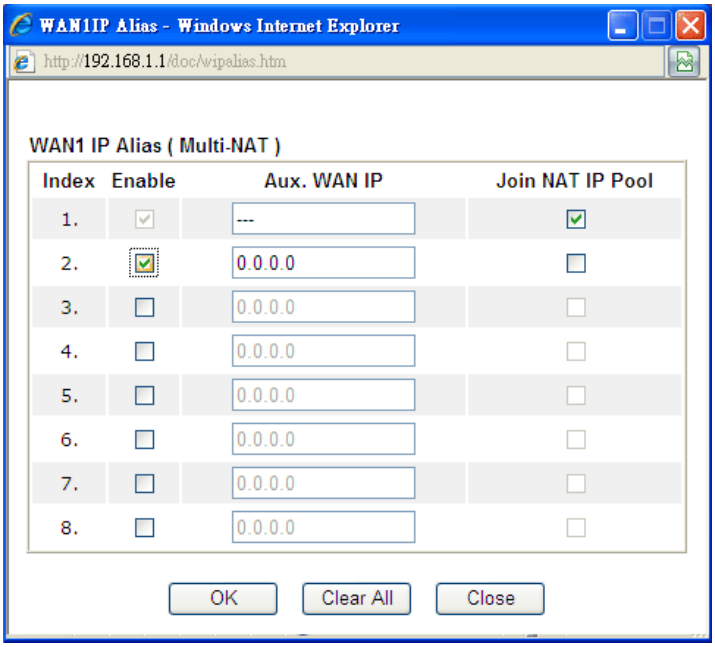 **Obtain an IP address automatically** – Click this button to obtain the IP address automatically if you want to use **Dynamic IP** mode. ● **Router Name**: Type in the router name provided by ISP. ● **Domain Name**: Type in the domain name that you have assigned. **DHCP Client Identifier for some ISP**

	● **Enable:** Check the box to specify username and password as the DHCP client identifier for some ISP. ● **Username:** Type a name as username. The maximum length of the user name you can set is 63 characters. ● **Password:** Type a password. The maximum length of the password you can set is 62 characters. **Specify an IP address** – Click this radio button to specify some data if you want to use **Static IP** mode. ● **IP Address**: Type the IP address. ● **Subnet Mask**: Type the subnet mask. ● **Gateway IP Address**: Type the gateway IP address. **Default MAC Address**: Click this radio button to use default MAC address for the router. **Specify a MAC Address**: Some Cable service providers specify a specific MAC address for access authentication. In such cases you need to click the **Specify a MAC Address** and enter the MAC address in the MAC Address field.
DNS Server IP Address	Type in the primary IP address for the router if you want to use **Static IP** mode. If necessary, type in secondary IP address for necessity in the future.

After finishing all the settings here, please click **OK** to activate them.

Details Page for PPTP/L2TP in WAN2

To use **PPTP/L2TP** as the accessing protocol of the internet, please click the **PPTP/L2TP** tab. The following web page will be shown.

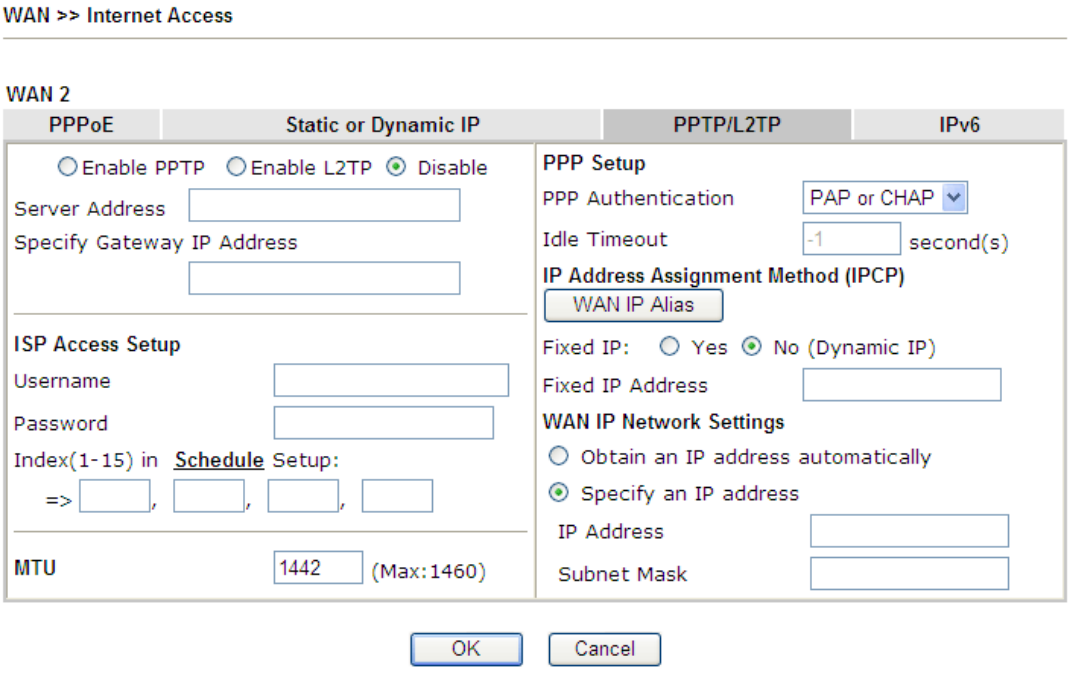

Available settings are explained as follows:

Item	Description
PPTP/L2TP	**Enable PPTP-** Click this radio button to enable a PPTP client to establish a tunnel to a DSL modem on the WAN interface. **Enable L2TP** - Click this radio button to enable a L2TP client to establish a tunnel to a DSL modem on the WAN interface. **Disable** – Click this radio button to close the connection through PPTP or L2TP. **Server Address** - Specify the IP address of the PPTP/L2TP server if you enable PPTP/L2TP client mode. **Specify Gateway IP Address** – Specify the gateway IP address for DHCP server.
ISP Access Setup	**Username** -Type in the username provided by ISP in this field. The maximum length of the user name you can set is 63 characters. **Password** -Type in the password provided by ISP in this field. The maximum length of the password you can set is 62 characters. **Index (1-15) in Schedule Setup -** You can type in four sets of time schedule for your request. All the schedules can be set previously in **Application >> Schedule** web page and you can use the number that you have set in that web page.
MTU	It means Max Transmit Unit for packet. The default setting is 1480.
PPP Setup	**PPP Authentication** - Select **PAP only** or **PAP or CHAP** for PPP. **Idle Timeout** - Set the timeout for breaking down the Internet after passing through the time without any action.
IP Address Assignment Method(IPCP)	**WAN IP Alias** - If you have multiple public IP addresses and would like to utilize them on the WAN interface, please use WAN IP Alias. You can set up to 8 public IP addresses other than the current one you are using.

	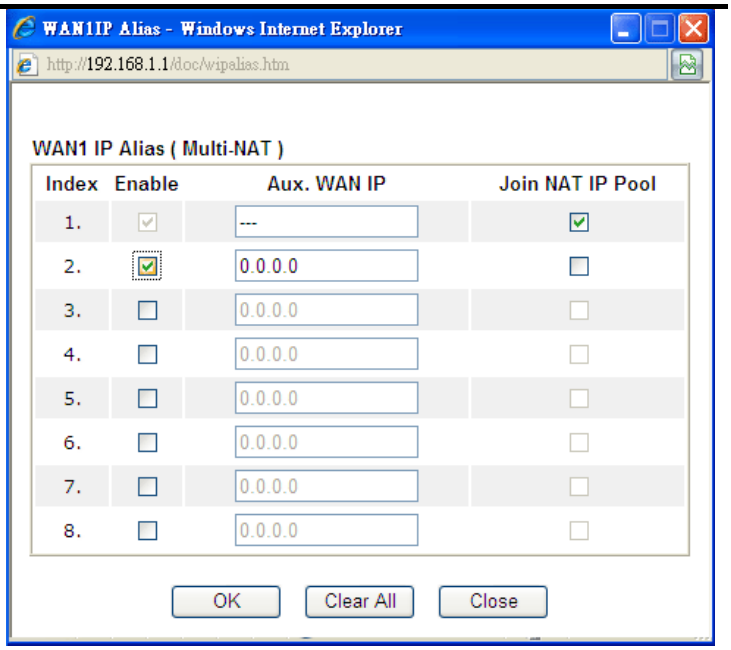 **Fixed IP** - Usually ISP dynamically assigns IP address to you each time you connect to it and request. In some case, your ISP provides service to always assign you the same IP address whenever you request. In this case, you can fill in this IP address in the Fixed IP field. Please contact your ISP before you want to use this function. Click **Yes** to use this function and type in a fixed IP address in the box. **Fixed IP Address** -Type a fixed IP address.
WAN IP Network Settings	**Obtain an IP address automatically** – Click this button to obtain the IP address automatically. **Specify an IP address** – Click this radio button to specify some data. ● **IP Address** – Type the IP address. ● **Subnet Mask** – Type the subnet mask.

After finishing all the settings here, please click **OK** to activate them.

Details Page for 3G/4G USB Modem (PPP mode) in WAN3

To use **3G/4G USB Modem (PPP mode)** as the accessing protocol of the internet, please choose **Internet Access** from **WAN** menu. Then, select **3G/4G USB Modem (PPP mode)** for WAN3. The following web page will be shown.

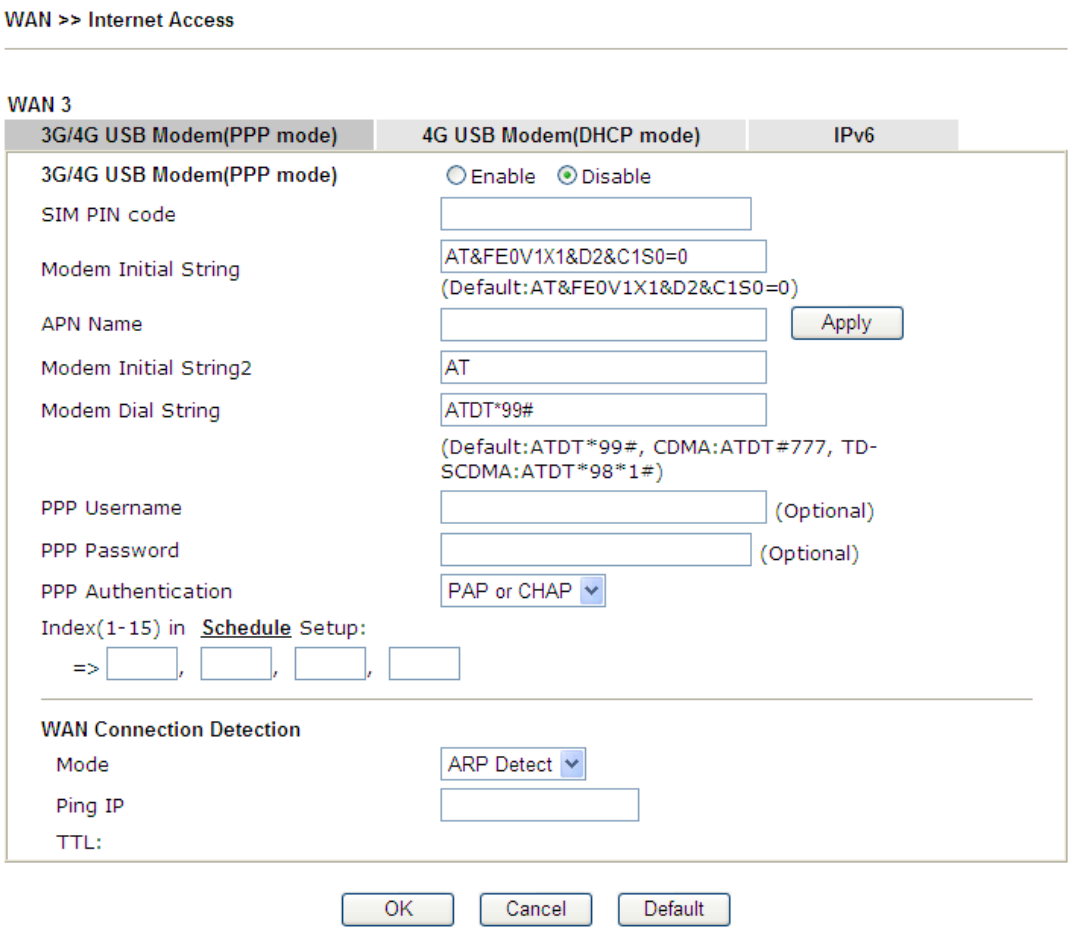

Available settings are explained as follows:

Item	Description
3G /4G USB Modem (PPP mode)	Click **Enable** for activating this function. If you click **Disable**, this function will be closed and all the settings that you adjusted in this page will be invalid.
SIM PIN code	Type PIN code of the SIM card that will be used to access Internet. The maximum length of the PIN code you can set is 15 characters.
Modem Initial String	Such value is used to initialize USB modem. Please use the default value. If you have any question, please contact to your ISP. The maximum length of the string you can set is 47 characters.
APN Name	APN means Access Point Name which is provided and required by some ISPs. Type the name and click **Apply**. The maximum length of the name you can set is 43 characters.

Modem Initial String2	The initial string 1 is shared with APN. In some cases, user may need another initial AT command to restrict 3G band or do any special settings. The maximum length of the string you can set is 47 characters.
Modem Dial String	Such value is used to dial through USB mode. Please use the default value. If you have any question, please contact to your ISP. The maximum length of the string you can set is 31 characters.
PPP Username	Type the PPP username (optional). The maximum length of the name you can set is 63 characters.
PPP Password	Type the PPP password (optional). The maximum length of the password you can set is 62 characters.
PPP Authentication	Select **PAP only** or **PAP or CHAP** for PPP.
Index (1-15) in Schedule Setup	You can type in four sets of time schedule for your request. All the schedules can be set previously in **Application** >> **Schedule** web page and you can use the number that you have set in that web page
WAN Connection Detection	Such function allows you to verify whether network connection is alive or not through ARP Detect or Ping Detect. **Mode** – Choose **ARP Detect** or **Ping Detect** for the system to execute for WAN detection. **Ping IP** – If you choose Ping Detect as detection mode, you have to type IP address in this field for pinging. **TTL (Time to Live)** – Displays value for your reference. TTL value is set by telnet command.

After finishing all the settings here, please click **OK** to activate them.

Details Page for 4G USB Modem (DHCP mode) in WAN3

To use **4G USB Modem (DHCP mode)** as the accessing protocol of the internet, please choose **Internet Access** from **WAN** menu. Then, select **4G USB Modem (DHCP mode)** for WAN3. The following web page will be shown.

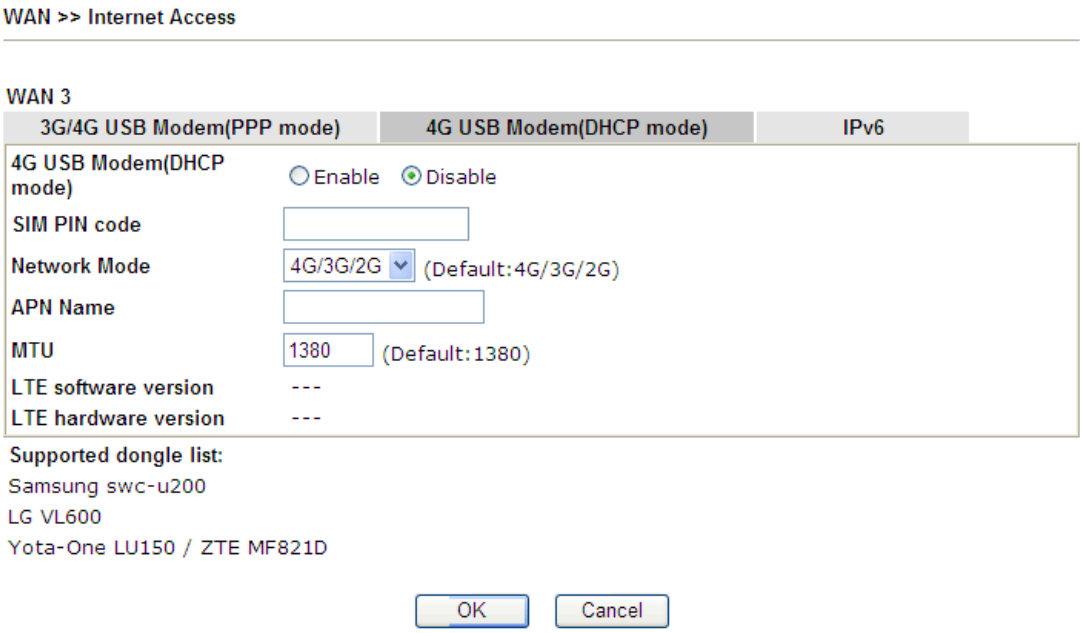

Available settings are explained as follows:

Item	Description
4G USB Modem (DHCP mode)	Click **Enable** for activating this function. If you click **Disable**, this function will be closed and all the settings that you adjusted in this page will be invalid.
SIM PIN code	Type PIN code of the SIM card that will be used to access Internet. The maximum length of the PIN code you can set is 19 characters.
Network Mode	Force Vigor router to connect Internet with the mode specified here. If you choose 4G/3G/2G as network mode, the router will choose a suitable one according to the actual wireless signal automatically.
APN Name	APN means Access Point Name which is provided and required by some ISPs. Type the name and click **Apply.** The maximum length of the name you can set is 47 characters.
MTU	It means Max Transmit Unit for packet. The default setting is 1380.

After finishing all the settings here, please click **OK** to activate them.

Details Page for IPv6 – Offline in WAN1/WAN2/WAN3

When Offline is selected, the IPv6 connection will be disabled.

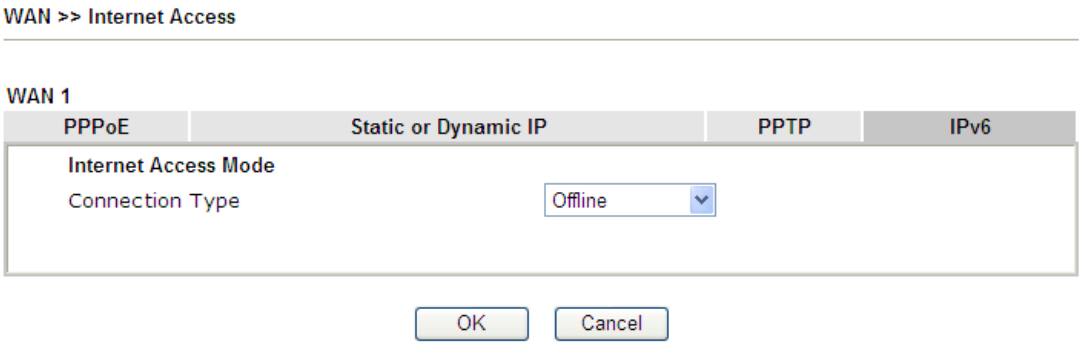

Details Page for IPv6 – PPP in WAN1/WAN2

During the procedure of IPv4 PPPoE connection, we can get the IPv6 Link Local Address between the gateway and Vigor router through IPv6CP. Later, use DHCPv6 or Accept RA to acquire the IPv6 prefix address (such as: 2001:B010:7300:200::/64) offered by the ISP. In addition, PCs under LAN also can have the public IPv6 address for Internet access by means of the generated prefix.

No need to type any other information for PPP mode.

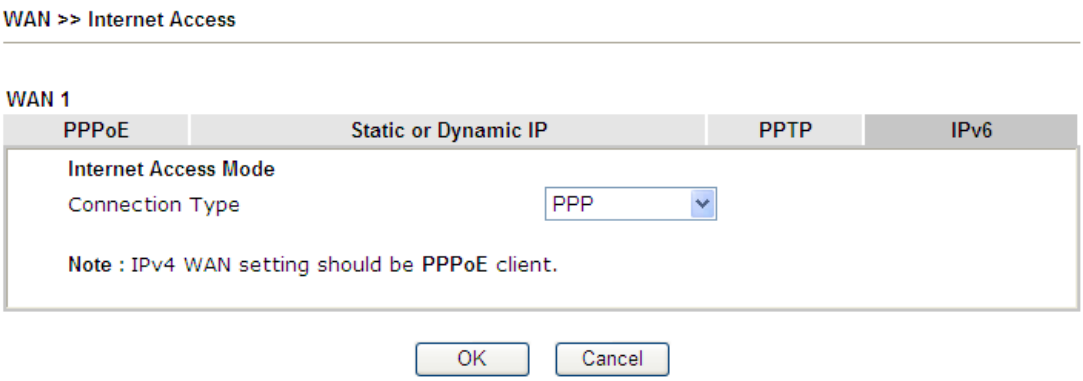

Below shows an example for successful IPv6 connection based on PPP mode.

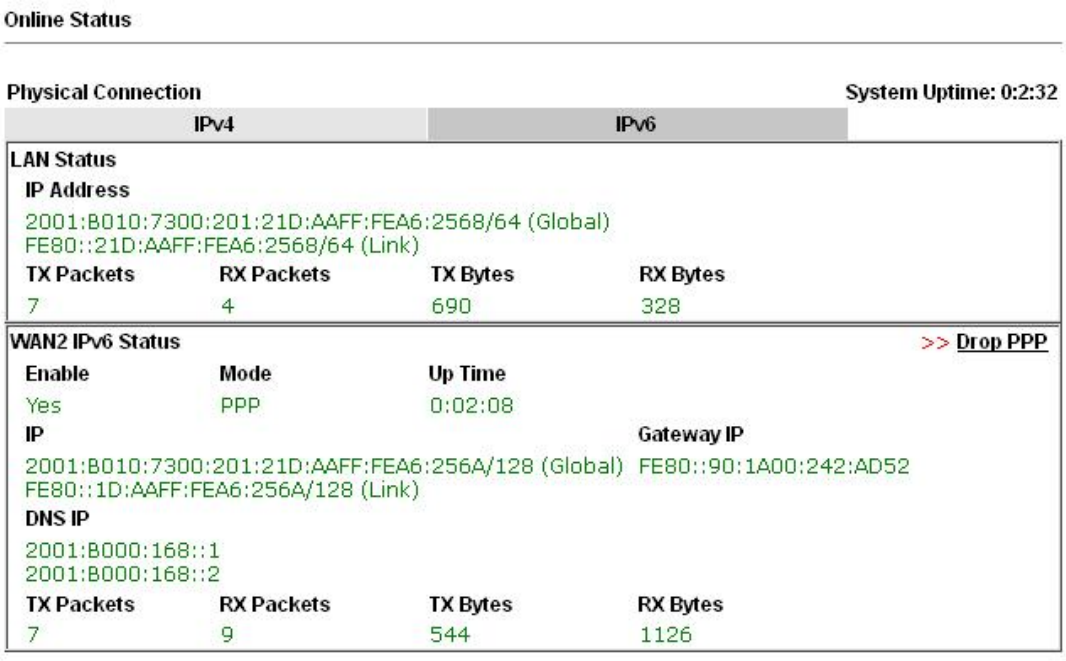

Note: At present, the **IPv6 prefix** can be acquired via the PPPoE mode connection which is available for the areas such as Taiwan (hinet), the Netherlands, Australia and UK.

Details Page for IPv6 – TSPC in WAN1/WAN2/WAN3

Tunnel setup protocol client (TSPC) is an application which could help you to connect to IPv6 network easily.

Please make sure your IPv4 WAN connection is OK and apply one free account from hexago (http://gogonet.gogo6.com/page/freenet6-account) before you try to use TSPC for network connection. TSPC would connect to tunnel broker and requests a tunnel according to the specifications inside the configuration file. It gets a public IPv6 IP address and an IPv6 prefix from the tunnel broker and then monitors the state of the tunnel in background.

After getting the IPv6 prefix and starting router advertisement daemon (RADVD), the PC behind this router can directly connect to IPv6 the Internet.

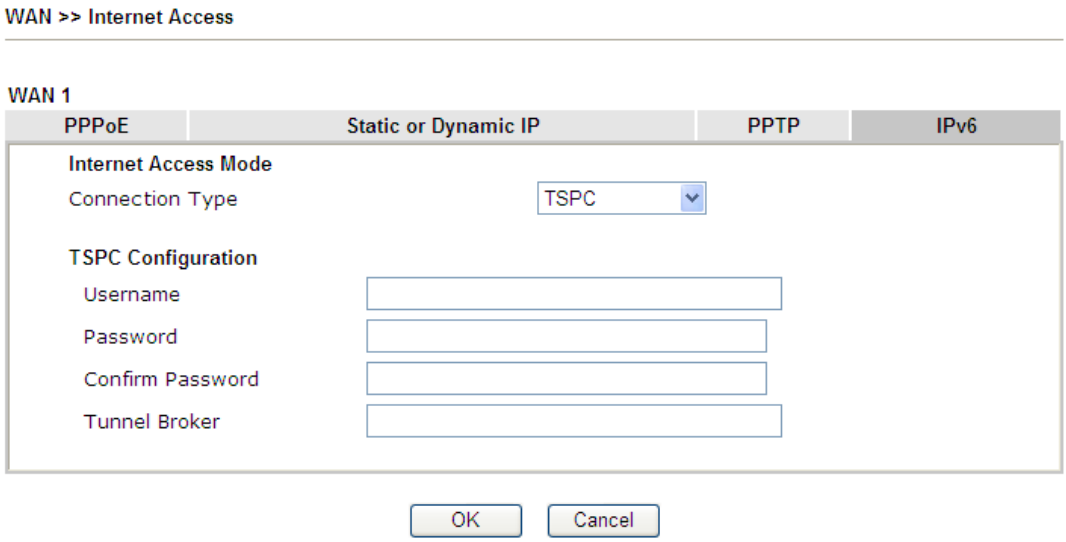

Available settings are explained as follows:

Item	Description
Username	Type the name obtained from the broker. It is suggested for you to apply another username and password for http://gogonet.gogo6.com/page/freenet6-account. The maximum length of the name you can set is 63 characters.
Password	Type the password assigned with the user name. The maximum length of the name you can set is 19 characters.
Confirm Password	Type the password again to make the confirmation.
Tunnel Broker	Type the address for the tunnel broker IP, FQDN or an optional port number.

After finished the above settings, click **OK** to save the settings.

Details Page for IPv6 – AICCU in WAN1/WAN2/WAN3

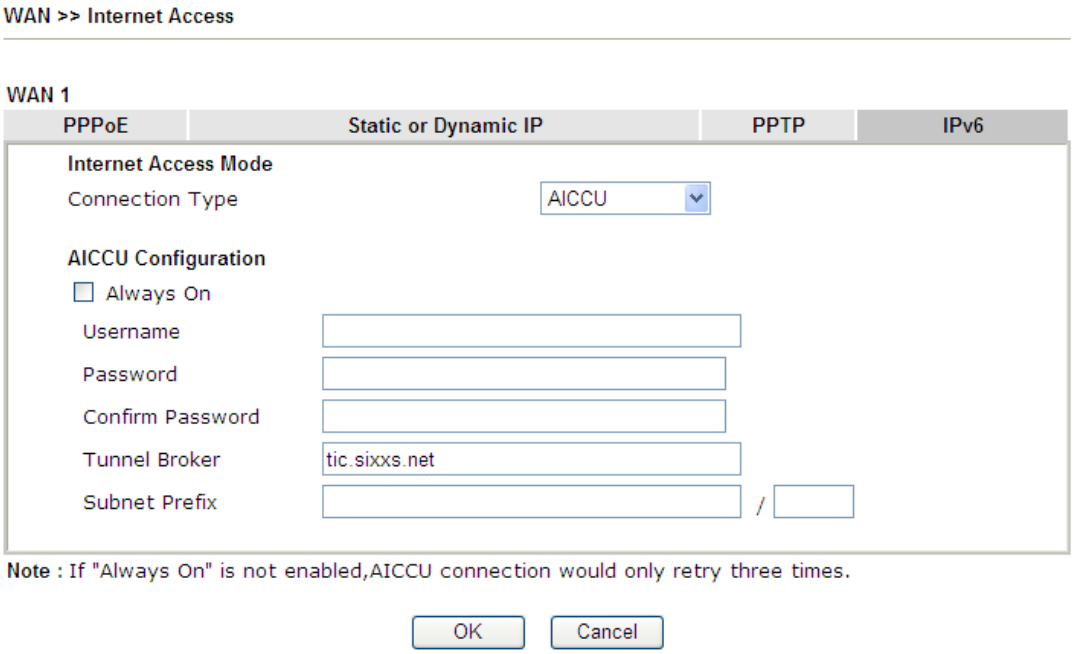

Available settings are explained as follows:

Item	Description
Always On	Check this box to keep the network connection always.
Username	Type the name obtained from the broker. Please apply new account at http://www.sixxs.net/. It is suggested for you to apply another username and password. The maximum length of the name you can set is 19 characters.
Password	Type the password assigned with the user name. The maximum length of the password you can set is 19 characters.
Confirm Password	Type the password again to make the confirmation.
Tunnel Broker	Type the address for the tunnel broker IP, FQDN or an optional port number.
Subnet Prefix	Type the subnet prefix address getting from service provider. The maximum length of the prefix you can set is 128 characters.

After finished the above settings, click **OK** to save the settings.

Details Page for IPv6 – DHCPv6 Client in WAN1/WAN2

DHCPv6 client mode would use DHCPv6 protocol to obtain IPv6 address from server.

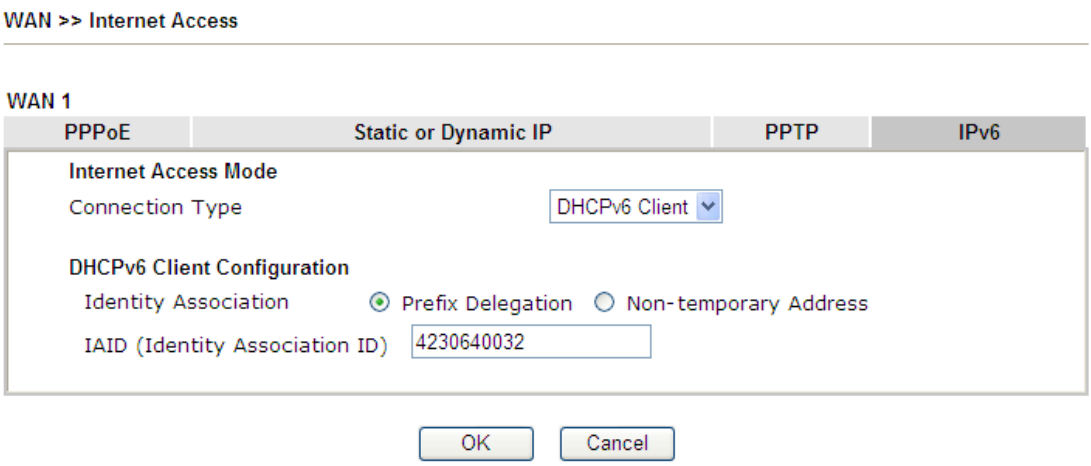

Available settings are explained as follows:

Item	Description
Identify Association	Choose **Prefix Delegation** or **Non-temporary Address** as the identify association.
IAID	Type a number as IAID.

After finished the above settings, click **OK** to save the settings.

Details Page for IPv6 – Static IPv6 in WAN1/WAN2

This type allows you to setup static IPv6 address for WAN interface.

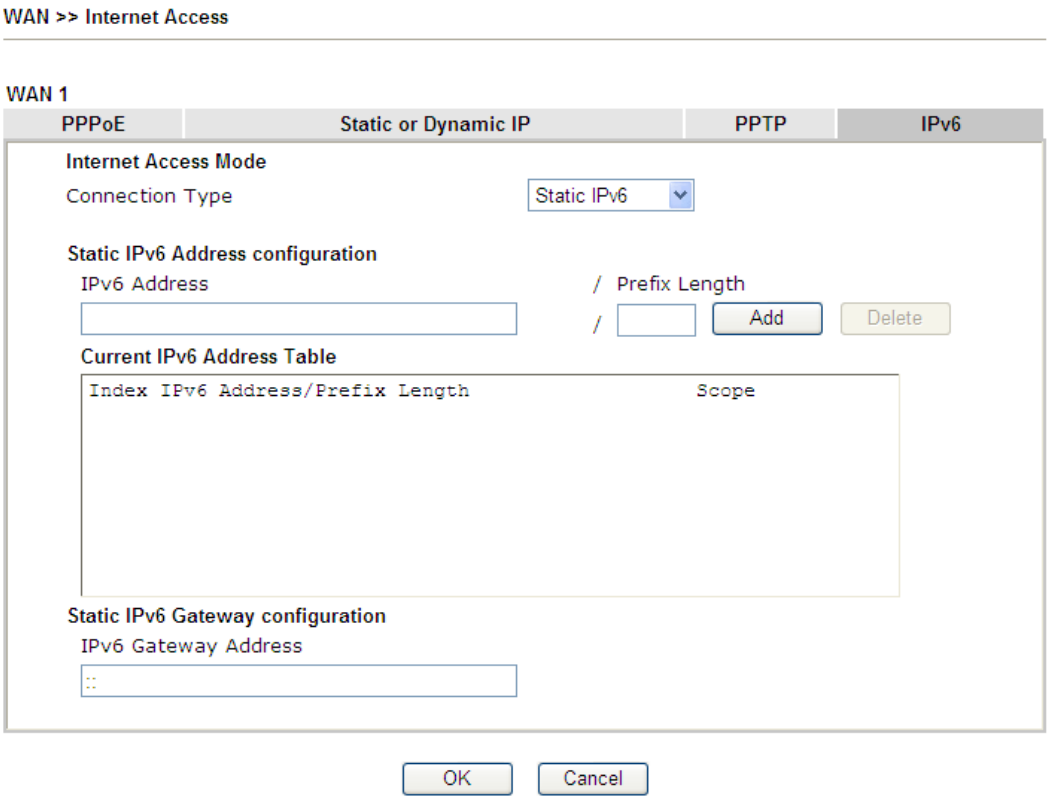

Available settings are explained as follows:

Item	Description
Static IPv6 Address configuration	**IPv6 Address –** Type the IPv6 Static IP Address. **Prefix Length –** Type the fixed value for prefix length. **Add –** Click it to add a new entry. **Delete –** Click it to remove an existed entry.
Current IPv6 Address Table	Display current interface IPv6 address.
Static IPv6 Gateway Configuration	**IPv6 Gateway Address -** Type your IPv6 gateway address here.

After finished the above settings, click **OK** to save the settings.

3.1.4 Multi-PVCs

This router allows you to create multi-PVCs for different data transferring for using. Simply go to **Internet Access** and select **Multi-PVCs** page.

General

The system allows you to set up to eight channels which are ready for choosing as the first PVC line that will be used as multi-PVCs.

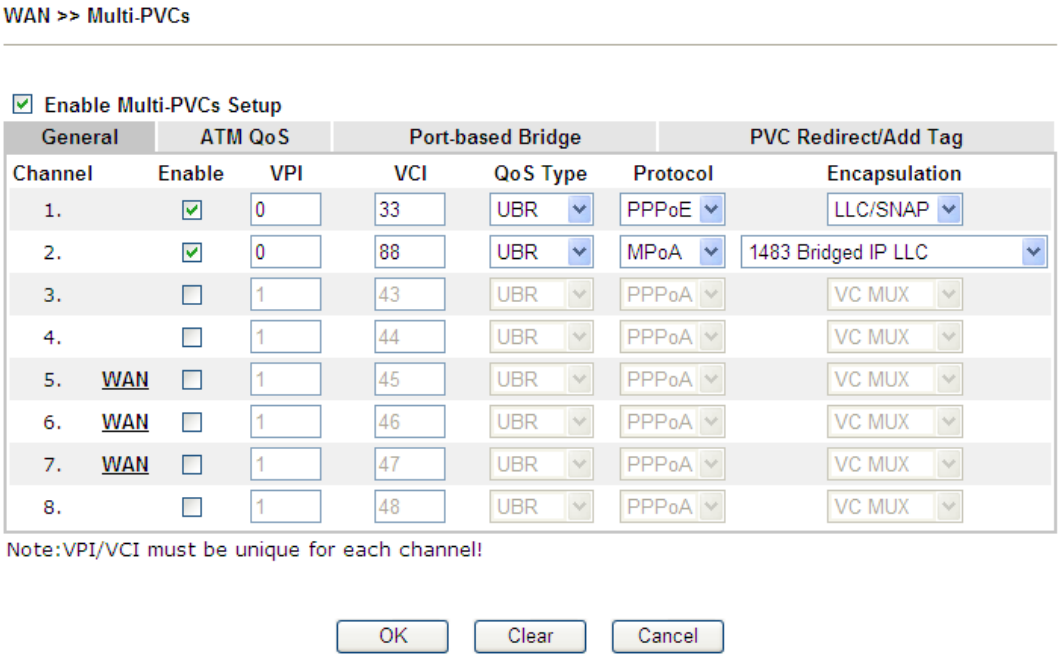

Available settings are explained as follows:

Item	Description
Enable Multi-PVCs Setup	Check the box to enable such function.
Enable	Check this box to enable that channel. The channels that you enabled here will be shown in the **Multi-PVC channel** drop down list on the web page of **Internet Access**. Though you can enable eight channels in this page, yet only one channel can be chosen on the web page of **Internet Access**.
VPI	Type in the value provided by your ISP.
VCI	Type in the value provided by your ISP.
QoS Type	Select a proper QoS type for the channel. **QoS Type** UBR UBR CBR ABR nrtVBR rtVBR

Protocol	Select a proper protocol for this channel. **Protocol** PPPoE PPPoA PPPoE MPoA
Encapsulation	Choose a proper type for this channel. The types will be different according to the protocol setting that you choose. VC MUX VC MUX LLC/SNAP 1483 Route IP LLC 1483 Bridged IP LLC 1483 Route IP LLC 1483 Bridged IP VC-Mux 1483 Routed IP VC-Mux(IPoA) 1483 Bridged IP(IPoE)

After finished the above settings, click **OK** to save the settings.

WAN links for Channel 5, 6 and 7 are provided for router-borne application such as **TR-069**. The settings must be applied and obtained from your ISP. For your special request, please contact with your ISP and then click WAN link of Channel 5, 6 or 7 to configure your router.

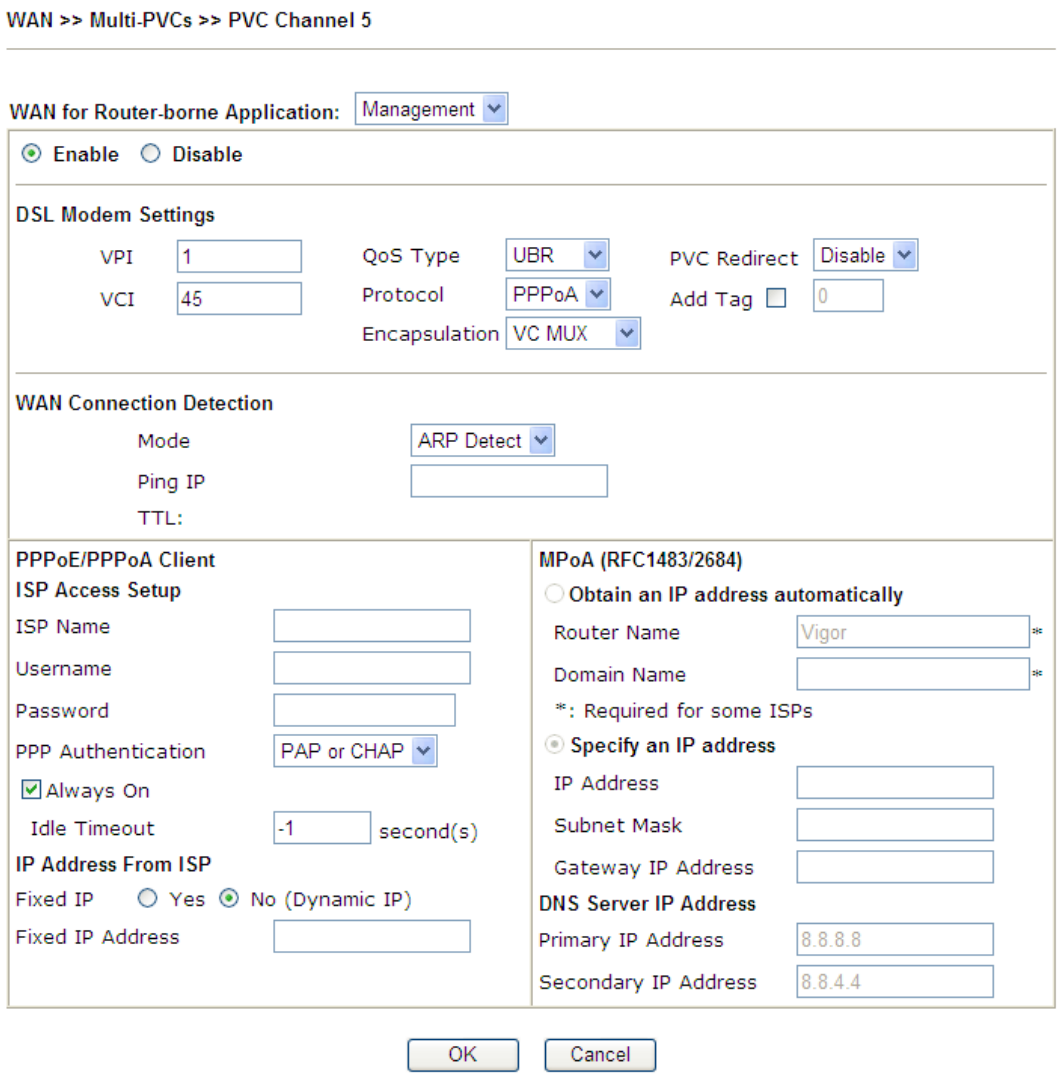

Available settings are explained as follows:

Item	Description
WAN for Router-borne Application	Choose the router service for channel 5, 6 or 7. **Management** - It can be specified for general management (Web configuration/telnet/TR069). If you choose Management, the configuration for this PVC will be effective for Web configuration/telnet/TR069. **VoIP** - It can be specified for VoIP only. If you choose VoIP, the configuration for this PVC will be effective for VoIP data transmitting and receiving.
DSL Modem Settings	**VPI** - Type in the value provided by ISP. **VCI** - Type in the value provided by ISP. **QoS Type -** Select a proper QoS type for the channel according to the information that your ISP provides. **Protocol** - Drop down the list to choose the one (PPPoE or PPPoA) provided by ISP. **Encapsulation** - Drop down the list to choose the type provided by ISP. **PVC Redirect** – Choose on PVC to be bound with such WAN interface. **Add Tag** – It is used to identify the usage of PVC, check this box to invoke this setting. And type the number for VLAN ID (number).
WAN Connection Detection	Such function allows you to verify whether network connection is alive or not through ARP Detect or Ping Detect. **Mode** – Choose **ARP Detect** or **Ping Detect** for the system to execute for WAN detection. **Ping IP** – If you choose Ping Detect as detection mode, you have to type IP address in this field for pinging. **TTL (Time to Live)** – Displays value for your reference. TTL value is set by telnet command.
PPPoE/PPPoA Client	Enter your allocated username, password and authentication parameters according to the information provided by your ISP. **ISP Name** – Type in the name of your ISP. **Username** – Type in the username provided by ISP in this field. The maximum length of the name you can set is 80 characters. **Password** – Type in the password provided by ISP in this field. The maximum length of the password you can set is 48 characters. **PPP Authentication** – Select **PAP only** or **PAP or CHAP** for PPP. **Always On** – Check it to keep the network connection always. **Idle Timeout** – Set the timeout for breaking down the

	Internet after passing through the time without any action. **Fixed IP** – Click **Yes** to use this function and type in a fixed IP address in the box of **Fixed IP Address**.
MPoA (RFC1483/2684)	**Obtain an IP address automatically** – Click this button to obtain the IP address automatically. ● **Router Name** – Type in the router name provided by ISP. ● **Domain Name** – Type in the domain name that you have assigned. **Specify an IP address** – Click this radio button to specify some data. ● **IP Address** – Type in the private IP address. ● **Subnet Mask** – Type in the subnet mask. ● **Gateway IP Address** – Type in gateway IP address. **DNS Server IP Address -** Type in the primary IP address for the router if you want to use **Static IP** mode. If necessary, type in secondary IP address for necessity in the future.

After finished the above settings, click **OK** to save the settings and return to previous page.

ATM QoS

Such configuration is applied to upstream packets. Such information will be provided by ISP. Please contact with your ISP for detailed information.

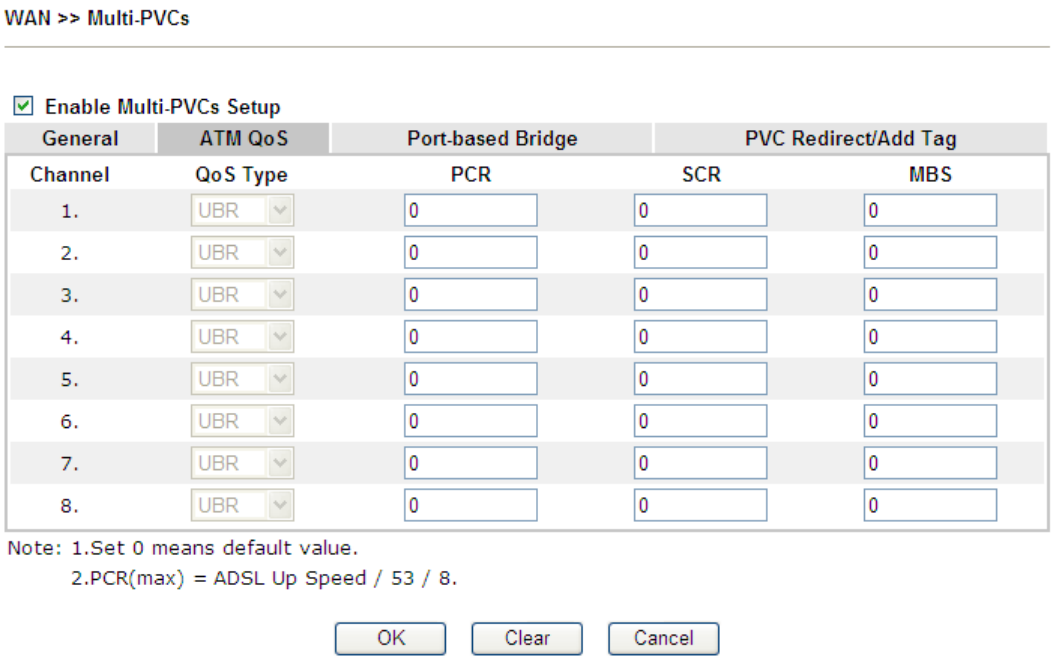

Available settings are explained as follows:

Item	Description

QoS Type	Select a proper QoS type for the channel according to the information that your ISP provides. 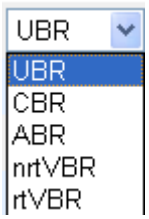
PCR	It represents Peak Cell Rate. The default setting is “0”.
SCR	It represents Sustainable Cell Rate. The value of SCR must be smaller than PCR.
MBS	It represents Maximum Burst Size. The range of the value is 10 to 50.

After finished the above settings, click **OK** to save the settings

Port-based Bridge

General page lets you set the first PVC. As to set the second PVC line, please click the **Port-based Bridge** tab to open Bridge configuration page.

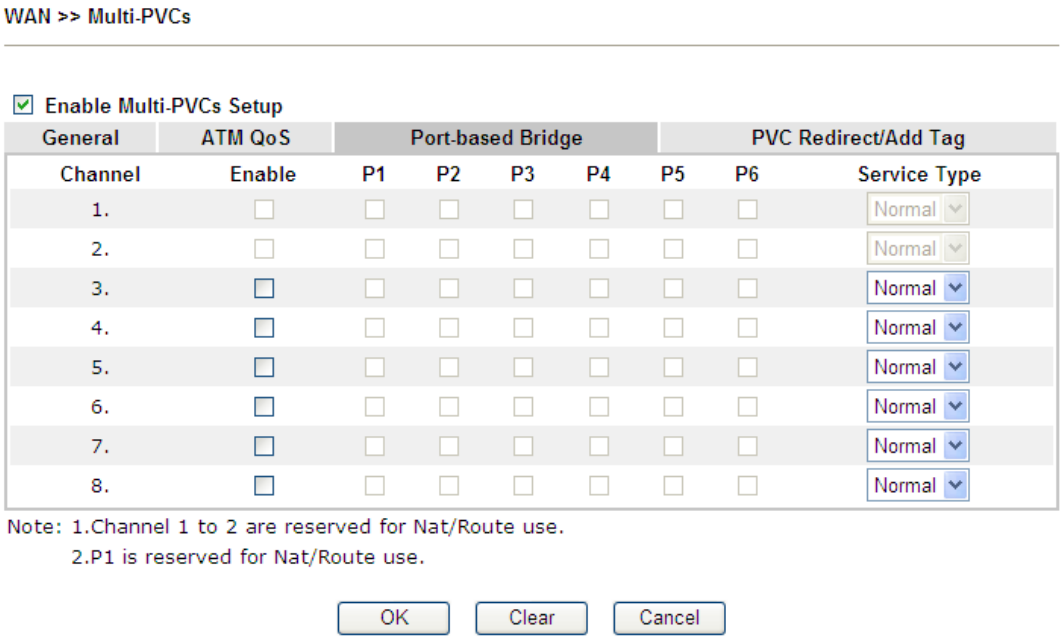

Available settings are explained as follows:

Item	Description
Enable	Check this box to enable that channel. Only channel 3 to 8 can be set in this page, for channel 1 to 2 are reserved for NAT using.
P1 to P6	It means the LAN port 1 to 6. Check the box to designate the LAN port for channel 3 to 8.

Service Type	Normally, service type is used for the service of video stream (e.g., IPTV). It can divide the packets from remote control and from video stream into different PVC. Such feature is used for specific application. Please choose **Normal** as the **Service Type**. **Normal** – It means that the PVC can accept all packets. **IGMP** –It means that such PVC can accept IGMP packets only. Such type just meets a specific environment on some ISPs. Data and IGMP packets will be transmitted and received with different PVC.

Click **Clear** to remove all the configurations in this page if you do not satisfy it. When you finish the configuration, please click **OK** to save and exit this page. Or click **Cancel** to abort the configuration and exit this page.

PVC Redirect/Add Tag

This page allows you to make a channel sharing the same network connection (VPI/VCI) with specified channel. For example, Channel 3 is set with *PVC Redirect=1*. It means that such channel will use the physical connection of Channel 1 to have data transmission. In other word, two WAN interfaces share the same physical WAN connection.

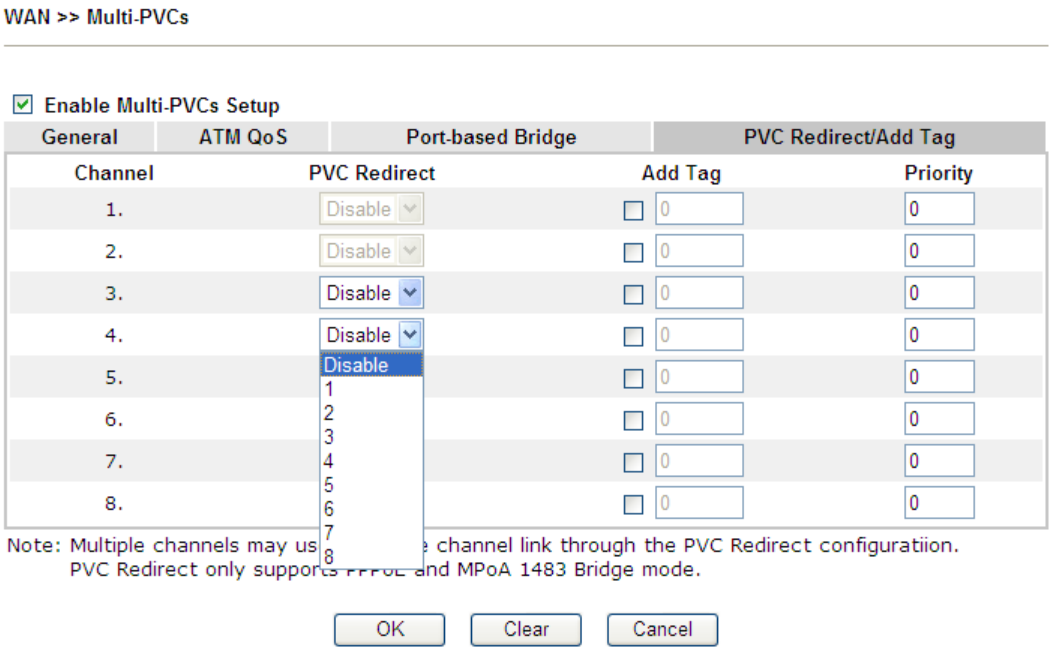

Available settings are explained as follows:

Item	Description
PVC Redirect	Specify one PVC channel for redirection. 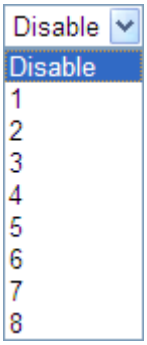
Add Tag	To identify the usage of PVC, check this box to invoke this setting. And type the number for VLAN ID (number).
Priority	To add the packet priority number for such VLAN. The range is from 0 to 7.

Click **Clear** to remove all the configurations in this page if you do not satisfy it. When you finish the configuration, please click **OK** to save and exit this page. Or click **Cancel** to abort the configuration and exit this page.

3.1.5 Multi-VLAN

This router allows you to create multi-VLAN for different data transferring for using. Simply go to **WAN** and select **Multi-VLAN**.

General

The system allows you to set up to eight channels for multi-VLAN.

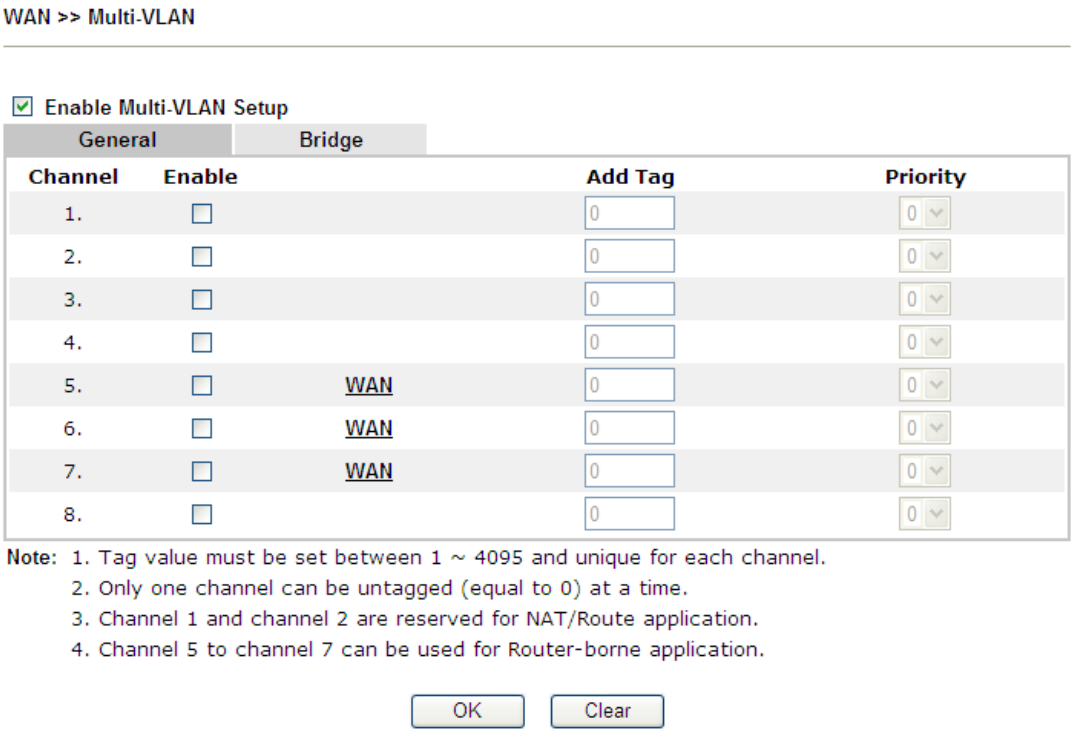

Available settings are explained as follows:

Item	Description
Enable	Check it to enable such function.
Channel	Display the number of each channel.
Enable	Check this box to enable that channel. The channels that you enabled here will be shown in the **Multi-VLAN** channel drop down list on the web page of **Internet Access**. Though you can enable eight channels in this page, yet only one channel can be chosen on the web page of **Internet Access**.
Add Tag	To identify the usage of VLAN, check this box to invoke this setting. And type the number for VLAN ID (number).
Priority	To add the packet priority number for such VLAN. The range is from 0 to 7.

WAN link for Channel 5, 6 and 7 are provided for router-borne application such as **TR-069**. The settings must be applied and obtained from your ISP. For your special request, please contact with your ISP and then click WAN link of Channel 5, 6 or 7 to configure your router.

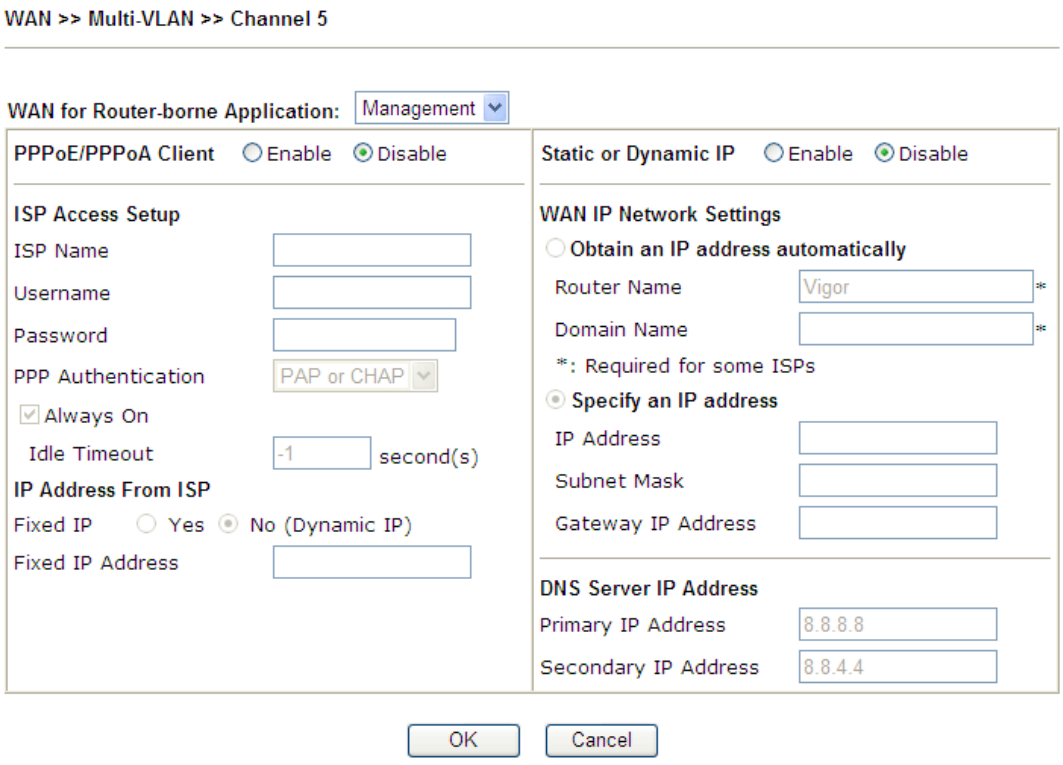

Available settings are explained as follows:

Item	Description
WAN for Router-borne Application	Choose the router service for channel 5, 6 or 7. **Management** - It can be specified for general management (Web configuration/telnet/TR069). If you choose Management, the configuration for this VLAN will be effective for Web configuration/telnet/TR069. **VoIP** - It can be specified for VoIP only. If you choose VoIP, the configuration for this VLAN will be effective for

	VoIP data transmitting and receiving. **IPTV -** It can be specified for IPTV only. If you choose IPTV, the configuration for this VLAN will be effective for IPTV data transmitting and receiving.

For other settings, refer to **Details Page for PPPoE in WAN1.**

Bridge

General page lets you set the first channel. As to set the third channel, please click the **Bridge** tab to open **Bridge** configuration page.

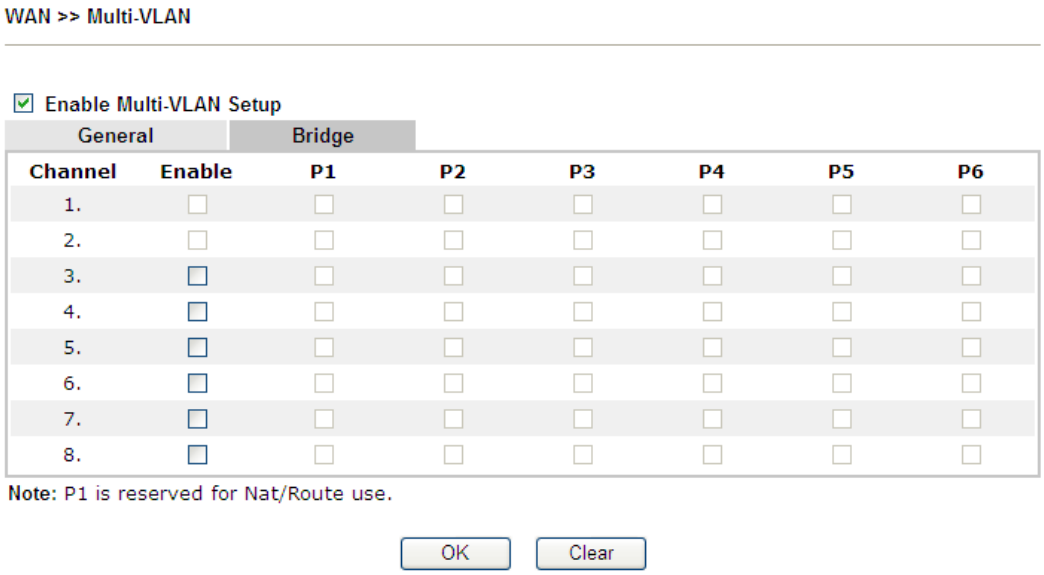

Available settings are explained as follows:

Item	Description
Enable	Check this box to enable that channel. Only channel 3 to 8 can be set in this page, for channel 1 to 2 are reserved for NAT/Route using.
P1 to P6	It means the LAN port 1 to 6. Check the box to designate the LAN port for channel 3 to 8.

Click **Clear** to remove all the configurations in this page if you do not satisfy it. When you finish the configuration, please click **OK** to save and exit this page. Or click **Cancel** to abort the configuration and exit this page.

3.1.6 Load-Balance Policy

This router supports the function of load balancing. It can assign traffic with protocol type, IP address for specific host, a subnet of hosts, and port range to be allocated in WAN1, WAN2, and WAN3 interface. The user can assign traffic category and force it to go to dedicate network interface based on the following web page setup. Twenty policies of load-balance are supported by this router.

> **Note:** Load-Balance Policy is running only when WAN1, WAN2 and WAN3 are activated.

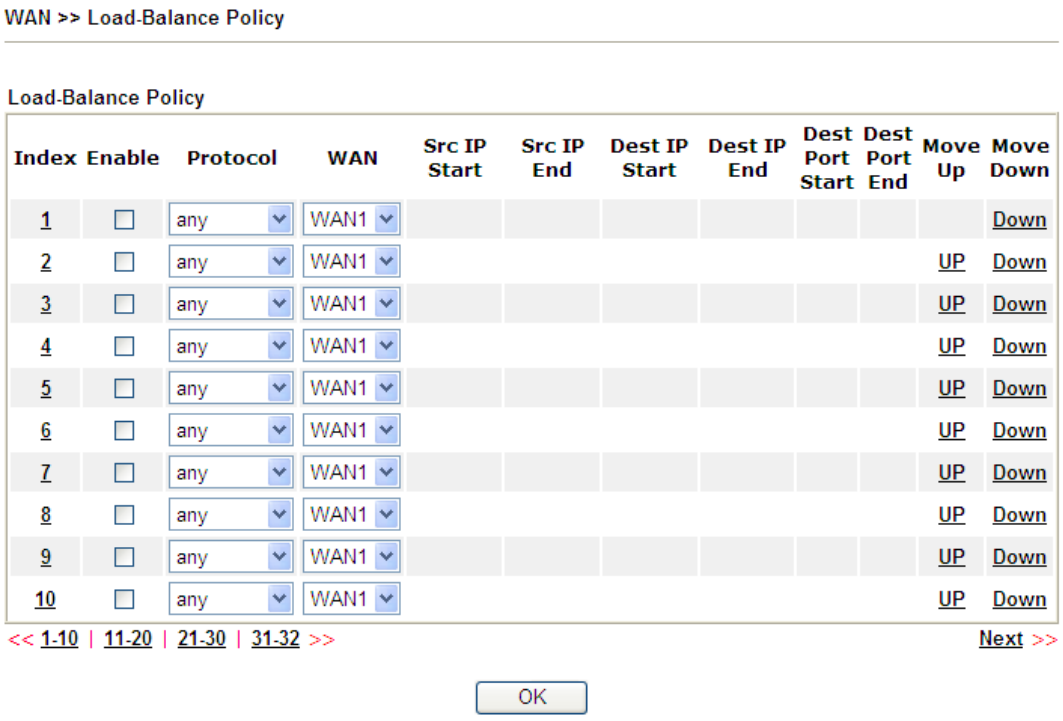
WAN >> Load-Balance Policy
Load-Balance Policy
Index Enable Protocol WAN Src IP Start Src IP End Dest IP Start Dest IP End Dest Port Start Dest Port End Move Up Move Down
1 any WAN1 Down
2 any WAN1 UP Down
3 any WAN1 UP Down
4 any WAN1 UP Down
5 any WAN1 UP Down
6 any WAN1 UP Down
7 any WAN1 UP Down
8 any WAN1 UP Down
9 any WAN1 UP Down
10 any WAN1 UP Down
<< 1-10 | 11-20 | 21-30 | 31-32 >>
Next >>
OK

Available settings are explained as follows:

Item	Description
Index	Click the number of index to access into the load-balance policy configuration web page.
Enable	Check this box to enable this policy.
Protocol	Use the drop-down menu to change the protocol for the WAN interface.
WAN	Use the drop-down menu to change the WAN interface.
Src IP Start	Displays the IP address for the start of the source IP.
Src IP End	Displays the IP address for the end of the source IP.
Dest IP Start	Displays the IP address for the start of the destination IP.
Dest IP End	Displays the IP address for the end of the destination IP.
Dest Port Start	Displays the IP address for the start of the destination port.
Dest Port End	Displays the IP address for the end of the destination port.
Move UP/Move Down	Use **Up** or **Down** link to move the order of the policy.

Click **Index 1** to access into the following page for configuring load-balance policy.

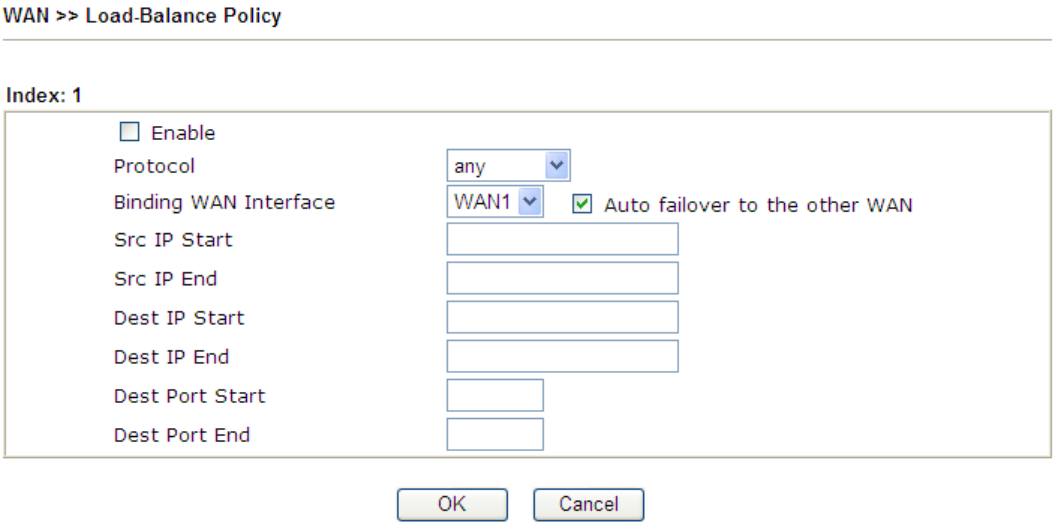

Available settings are explained as follows:

Item	Description
Enable	Check this box to enable this policy.
Protocol	Use the drop-down menu to choose a proper protocol for the WAN interface. 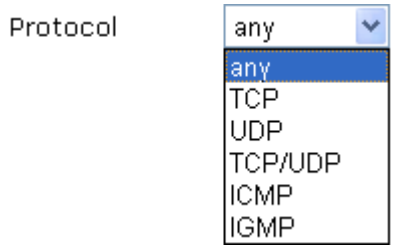
Binding WAN interface	Choose the WAN interface (WAN1/WAN2/WAN3) for binding. **Auto failover to other WAN** – Check this button to lead the data passing through other WAN automatically when the selected WAN interface is failover.
Src IP Start	Type the source IP start for the specified WAN interface.
Src IP End	Type the source IP end for the specified WAN interface. If this field is blank, it means that all the source IPs inside the LAN will be passed through the WAN interface.
Dest IP Start	Type the destination IP start for the specified WAN interface.
Dest IP End	Type the destination IP end for the specified WAN interface. If this field is blank, it means that all the destination IPs will be passed through the WAN interface.
Dest Port Start	Type the destination port start for the destination IP.

Dest Port End	Type the destination port end for the destination IP. If this field is blank, it means that all the destination ports will be passed through the WAN interface.

When you finish the configuration, please click **OK** to save and exit this page.

WAN >> Load-Balance Policy
Load-Balance Policy
Index Enable Protocol WAN Src IP Start Src IP End Dest IP Start Dest IP End Dest Port Start Dest Port End Move Up Mov Dow
1 any WAN1 192.168.1.56 192.168.1.60 172.16.3.88 172.16.3.92 Dow
2 any WAN1 UP Dow

3.2 LAN

Local Area Network (LAN) is a group of subnets regulated and ruled by router. The design of network structure is related to what type of public IP addresses coming from your ISP.

3.2.1 Basics of LAN

The most generic function of Vigor router is NAT. It creates a private subnet of your own. As mentioned previously, the router will talk to other public hosts on the Internet by using public IP address and talking to local hosts by using its private IP address. What NAT does is to translate the packets from public IP address to private IP address to forward the right packets to the right host and vice versa. Besides, Vigor router has a built-in DHCP server that assigns private IP address to each local host. See the following diagram for a briefly understanding.

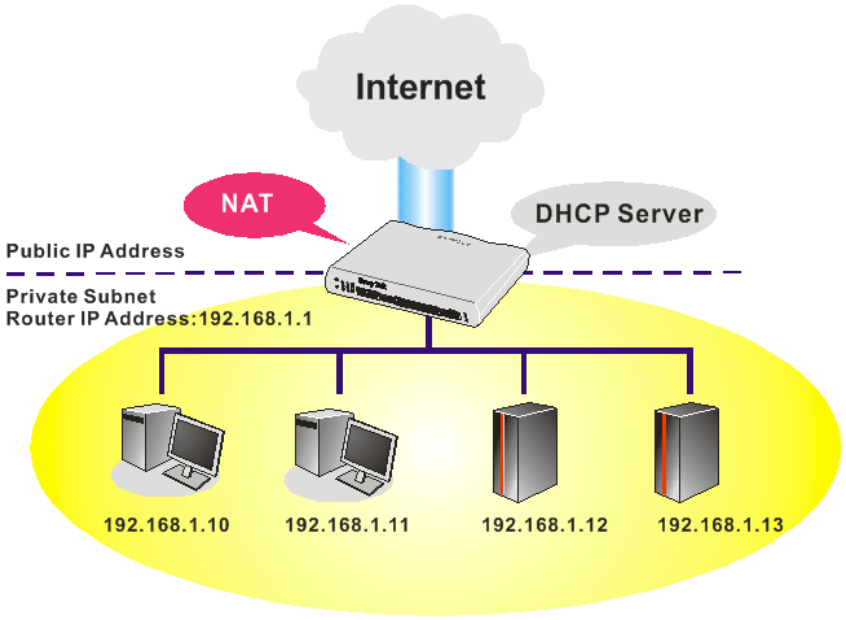

In some special case, you may have a public IP subnet from your ISP such as 220.135.240.0/24. This means that you can set up a public subnet or call second subnet that each host is equipped with a public IP address. As a part of the public subnet, the Vigor router will serve for IP routing to help hosts in the public subnet to communicate with other public hosts or servers outside. Therefore, the router should be set as the gateway for public hosts.

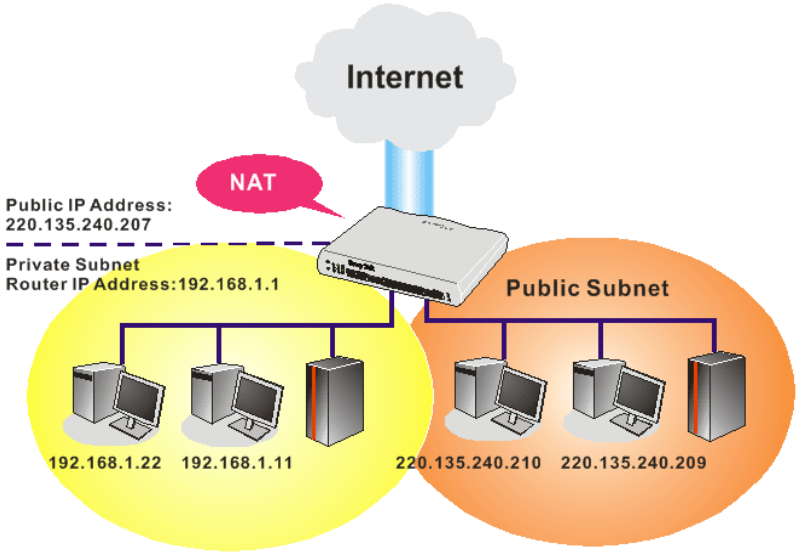

What is Routing Information Protocol (RIP)

Vigor router will exchange routing information with neighboring routers using the RIP to accomplish IP routing. This allows users to change the information of the router such as IP address and the routers will automatically inform for each other.

What is Static Route

When you have several subnets in your LAN, sometimes a more effective and quicker way for connection is the **Static routes** function rather than other method. You may simply set rules to

forward data from one specified subnet to another specified subnet without the presence of RIP.

What are Virtual LANs and Rate Control

You can group local hosts by physical ports and create up to 4 virtual LANs. To manage the communication between different groups, please set up rules in Virtual LAN (VLAN) function and the rate of each.

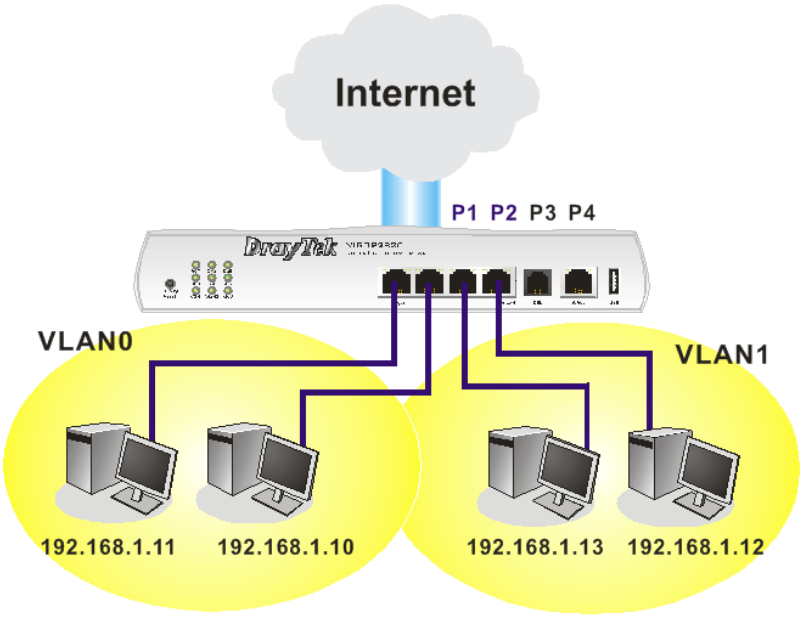

3.2.2 General Setup

This page provides you the general settings for LAN. Click **LAN** to open the LAN settings page and choose **General Setup**.

There are four subnets provided by the router which allow users to divide groups into different subnets (LAN1 – LAN6). In addition, different subnets can link for each other by configuring **Inter-LAN Routing**. At present, LAN1 setting is fixed with NAT mode only. LAN2 – LAN6 can be operated under **NAT** or **Route** mode. IP Routed Subnet can be operated under Route mode.

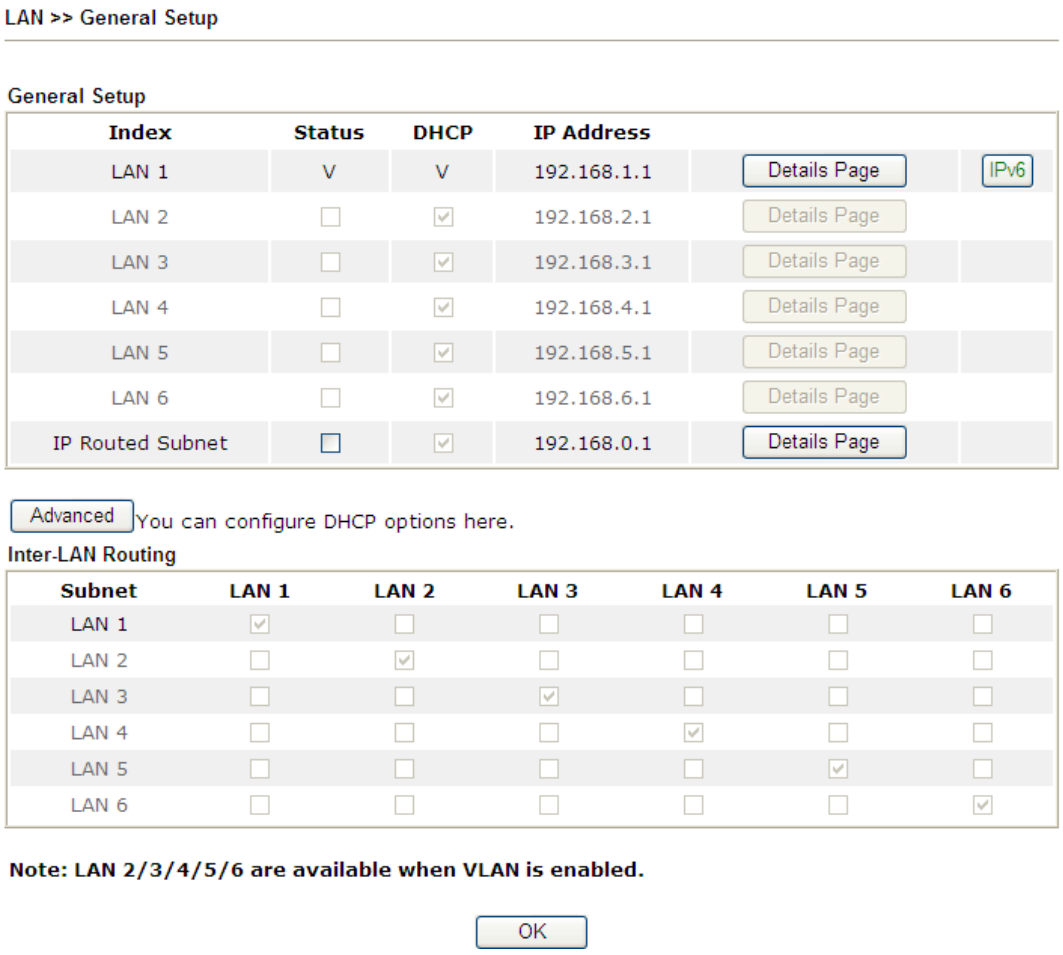

Available settings are explained as follows:

Item	Description
General Setup	Allow to configure settings for each subnet respectively. **Index -** Display all of the LAN items. **Status-** Basically, LAN1 status is enabled in default. LAN2 –LAN6 and IP Routed Subnet can be observed by checking the box of **Status**. **DHCP-** LAN1 is configured with DHCP in default. If required, please check the DHCP box for each LAN. **IP Address -** Display the IP address for each LAN item. Such information is set in default and you can not modify it. **Details Page -** Click it to access into the setting page. Each LAN will have different LAN configuration page. **Each LAN must be configured in different subnet.**

	IPv6 – Click it to access into the settings page of IPv6.
Advanced	DHCP packets can be processed by adding option number and data information when such function is enabled. 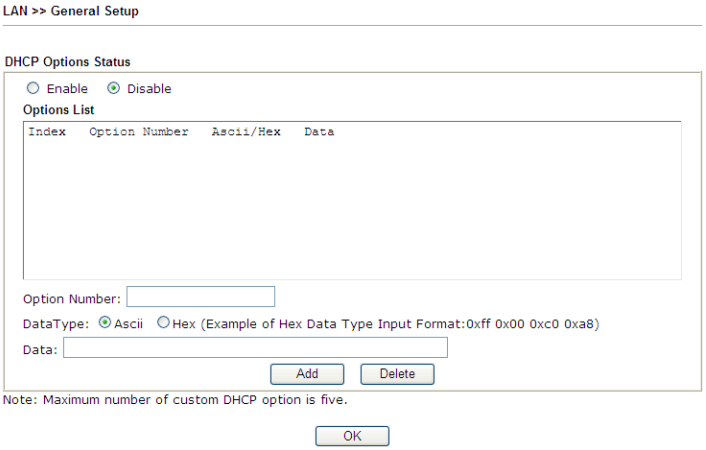 E**nable/Disable** – Enable/Disable the function of DHCP Option. Each DHCP option is composed by an option number with data. For example, Option number:100 Data: abcd When such function is enabled, the specified values for DHCP option will be seen in DHCP reply packets. **Option Number** – Type a number for such function. **DataType** – Choose the type (ASCII or Hex) for the data to be stored. **Data** – Type the content of the data to be processed by the function of DHCP option.
Inter-LAN Routing	Check the box to link two or more different subnets (LAN and LAN).

When you finish the configuration, please click **OK** to save and exit this page.

Details Page for LAN1 – Ethernet TCP/IP and DHCP Setup

There are two configuration pages for LAN1, Ethernet TCP/IP and DHCP Setup (based on IPv4) and IPv6 Setup. Click the tab for each type and refer to the following explanations for detailed information.

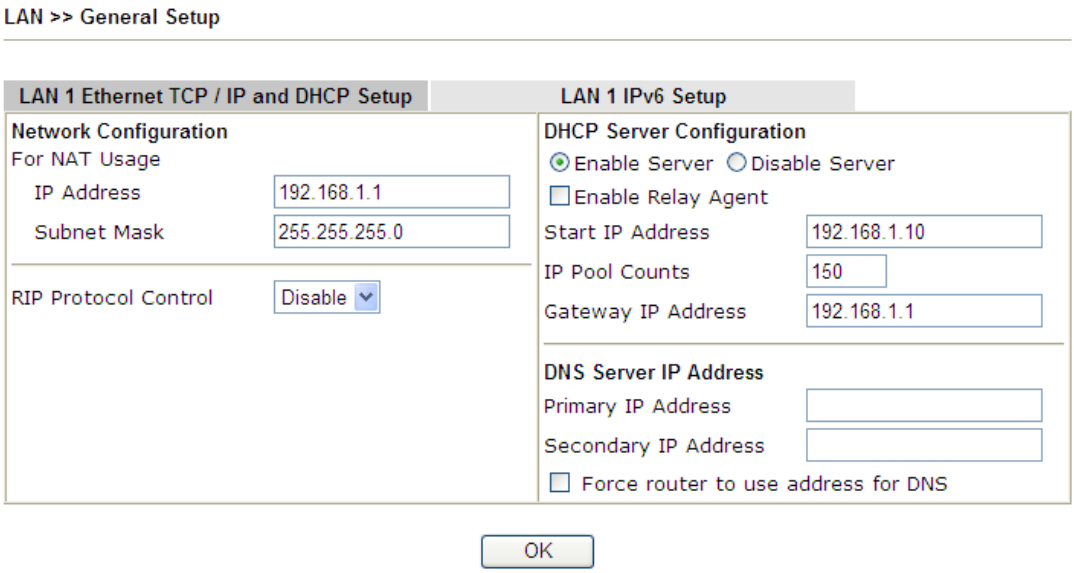

Available settings are explained as follows:

Item	Description
Network Configuration	**For NAT Usage,** **IP Address** - Type in private IP address for connecting to a local private network (Default: 192.168.1.1). **Subnet Mask** - Type in an address code that determines the size of the network. (Default: 255.255.255.0/ 24) **RIP Protocol Control,** **Disable -** deactivate the RIP protocol. It will lead to a stoppage of the exchange of routing information between routers. (Default) **Enable –** activate the RIP protocol.
DHCP Server Configuration	DHCP stands for Dynamic Host Configuration Protocol. The router by factory default acts a DHCP server for your network so it automatically dispatch related IP settings to any local user configured as a DHCP client. It is highly recommended that you leave the router enabled as a DHCP server if you do not have a DHCP server for your network. If you want to use another DHCP server in the network other than the Vigor Router's, you can let Relay Agent help you to redirect the DHCP request to the specified location. **Enable Server -** Let the router assign IP address to every host in the LAN. **Disable Server –** Let you manually assign IP address to every host in the LAN. **Enable Relay Agent –**Specify which subnet that DHCP server is located the relay agent should redirect the DHCP

	request to. **DHCP Server IP Address –** It is available when **Enable Relay Agent** is checked. Set the IP address of the DHCP server you are going to use so the Relay Agent can help to forward the DHCP request to the DHCP server. **Start IP Address -** Enter a value of the IP address pool for the DHCP server to start with when issuing IP addresses. If the 1st IP address of your router is 192.168.1.1, the starting IP address must be 192.168.1.2 or greater, but smaller than 192.168.1.254. **IP Pool Counts -** Enter the maximum number of PCs that you want the DHCP server to assign IP addresses to. The default is 50 and the maximum is 253. **Gateway IP Address -** Enter a value of the gateway IP address for the DHCP server. The value is usually as same as the 1st IP address of the router, which means the router is the default gateway.
DNS Server IP Address	DNS stands for Domain Name System. Every Internet host must have a unique IP address, also they may have a human-friendly, easy to remember name such as www.yahoo.com. The DNS server converts the user-friendly name into its equivalent IP address. **Primary IP Address -**You must specify a DNS server IP address here because your ISP should provide you with usually more than one DNS Server. If your ISP does not provide it, the router will automatically apply default DNS Server IP address: 194.109.6.66 to this field. **Secondary IP Address -** You can specify secondary DNS server IP address here because your ISP often provides you more than one DNS Server. If your ISP does not provide it, the router will automatically apply default secondary DNS Server IP address: 194.98.0.1 to this field. The default DNS Server IP address can be found via Online Status: 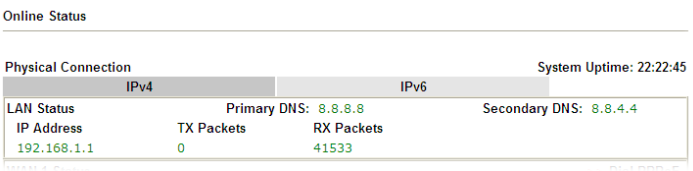 If both the Primary IP and Secondary IP Address fields are left empty, the router will assign its own IP address to local users as a DNS proxy server and maintain a DNS cache. If the IP address of a domain name is already in the DNS cache, the router will resolve the domain name immediately. Otherwise, the router forwards the DNS query packet to the external DNS server by establishing a WAN (e.g. DSL/Cable) connection. **Force router to use address for DNS-** Force Vigor router to use DNS servers in this page instead of DNS servers given by the Internet Access server (PPPoE, PPTP, L2TP or DHCP server).

When you finish the configuration, please click **OK** to save and exit this page.

Details Page for LAN1 – IPv6 Setup

There are two configuration pages for LAN1, Ethernet TCP/IP and DHCP Setup (based on IPv4) and IPv6 Setup. Click the tab for each type and refer to the following explanations for detailed information. Below shows the settings page for IPv6.

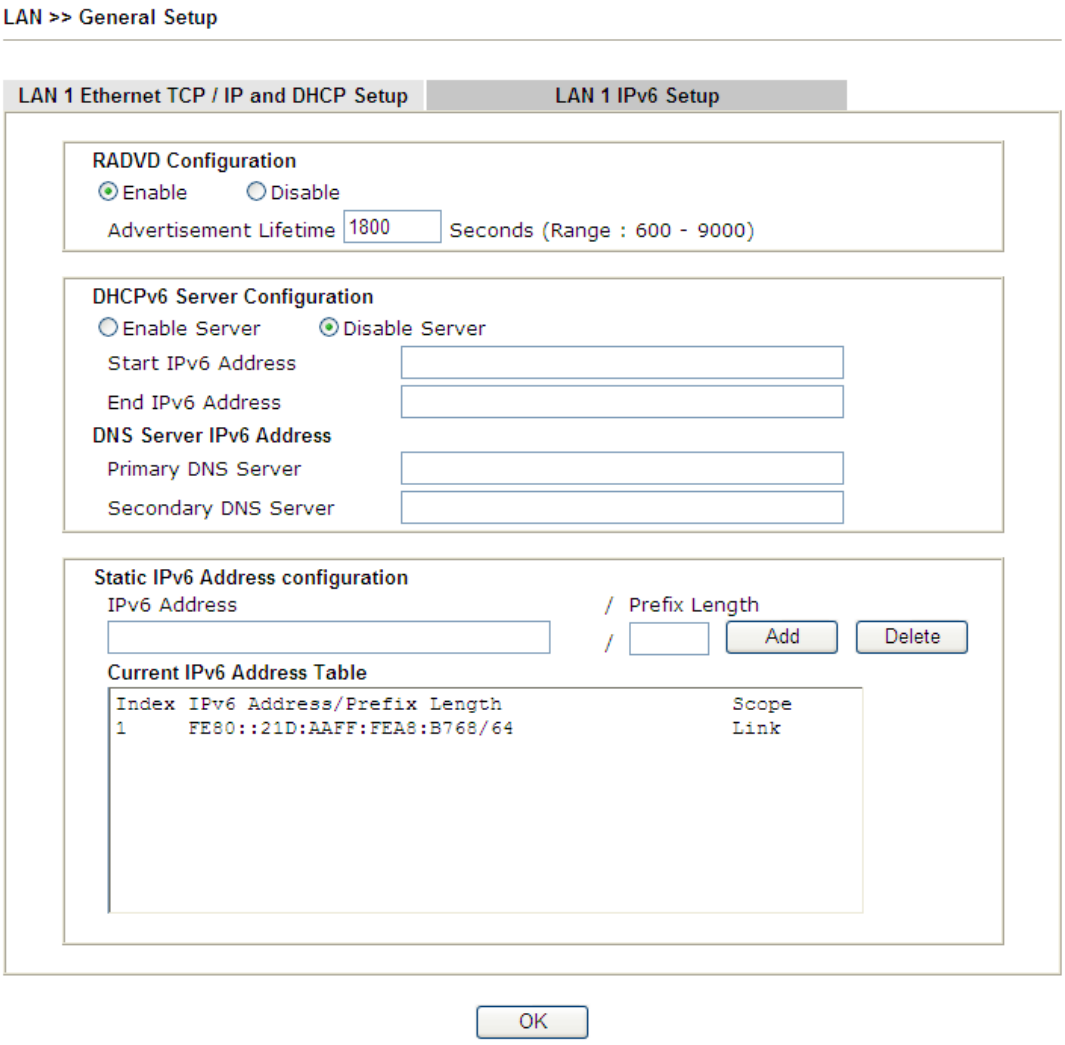

It provides 2 daemons for LAN side IPv6 address configuration. One is **RADVD**(stateless) and the other is **DHCPv6 Server** (Stateful).

Available settings are explained as follows:

Item	Description
RADVD Configuration	**Enable** – Click it to enable RADVD server. The router advertisement daemon (radvd) sends Router Advertisement messages, specified by RFC 2461, to a local Ethernet LAN periodically and when requested by a node sending a Router Solicitation message. These messages are required for IPv6 stateless auto-configuration. **Disable** – Click it to disable RADVD server. **Advertisement Lifetime** - The lifetime associated with the default router in units of seconds. It's used to control the lifetime of the prefix. The maximum value corresponds to

	18.2 hours. A lifetime of 0 indicates that the router is not a default router and should not appear on the default router list.
DHCPv6 Server Configuration	**Enable Server** –Click it to enable DHCPv6 server. DHCPv6 Server could assign IPv6 address to PC according to the Start/End IPv6 address configuration. **Disable Server** –Click it to disable DHCPv6 server. **Start IPv6 Address** / **End IPv6 Address** –Type the start and end address for IPv6 server.
DNS Server IPv6 Address	**Primary DNS Sever** – Type the IPv6 address for Primary DNS server. **Secondary DNS Server** –Type another IPv6 address for DNS server if required.
Static IPv6 Address configuration	**IPv6 Address** –Type static IPv6 address for LAN. **Prefix Length –** Type the fixed value for prefix length. **Add –** Click it to add a new entry. **Delete –** Click it to remove an existed entry.
Current IPv6 Address Table	Display current used IPv6 addresses.

When you finish the configuration, please click **OK** to save and exit this page.

Details Page for LAN2 ~ LAN6

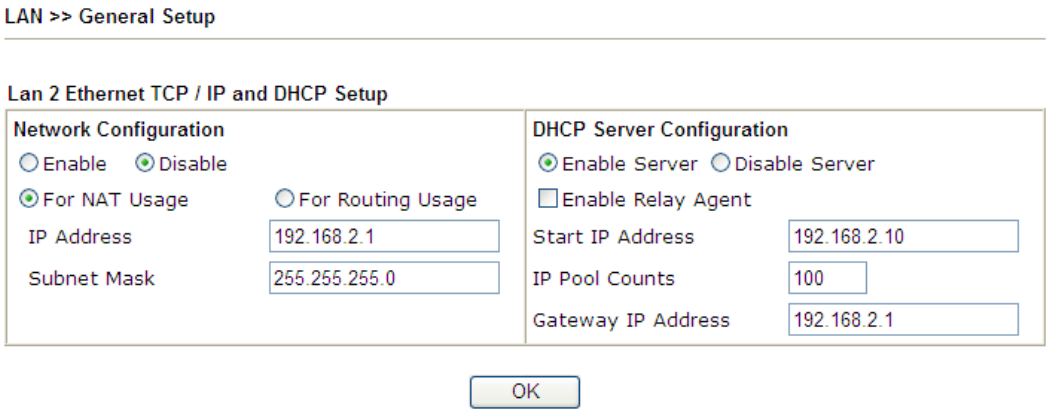

Available settings are explained as follows:

Item	Description
Network Configuration	**Enable/Disable -** Click **Enable** to enable such configuration; click **Disable** to disable such configuration. **For NAT Usage -** Click this radio button to invoke NAT function. **For Routing Usage -** Click this radio button to invoke this function. **IP Address -** Type in private IP address for connecting to a local private network (Default: 192.168.1.1). **Subnet Mask -** Type in an address code that determines the size of the network. (Default: 255.255.255.0/ 24)
DHCP Server Configuration	DHCP stands for Dynamic Host Configuration Protocol. The router by factory default acts a DHCP server for your network so it automatically dispatch related IP settings to any local user configured as a DHCP client. It is highly recommended that you leave the router enabled as a DHCP server if you do not have a DHCP server for your network. **Enable Server -** Let the router assign IP address to every host in the LAN. **Disable Server –** Let you manually assign IP address to every host in the LAN. **Enable Relay Agent -** If you want to use another DHCP server in the network other than the Vigor Router's, you can let Relay Agent help you to redirect the DHCP request to the specified location. **DHCP Server IP Address –** It is available when **Enable Relay Agent** is checked. Set the IP address of the DHCP server you are going to use so the Relay Agent can help to forward the DHCP request to the DHCP server. **Start IP Address -** Enter a value of the IP address pool for the DHCP server to start with when issuing IP addresses. If the 1st IP address of your router is 192.168.1.1, the starting IP address must be 192.168.1.2 or greater, but smaller than 192.168.1.254.

	IP Pool Counts - Enter the maximum number of PCs that you want the DHCP server to assign IP addresses to. The default is 50 and the maximum is 253. **Gateway IP Address -** Enter a value of the gateway IP address for the DHCP server. The value is usually as same as the 1st IP address of the router, which means the router is the default gateway.

When you finish the configuration, please click **OK** to save and exit this page.

Details Page for IP Routed Subnet

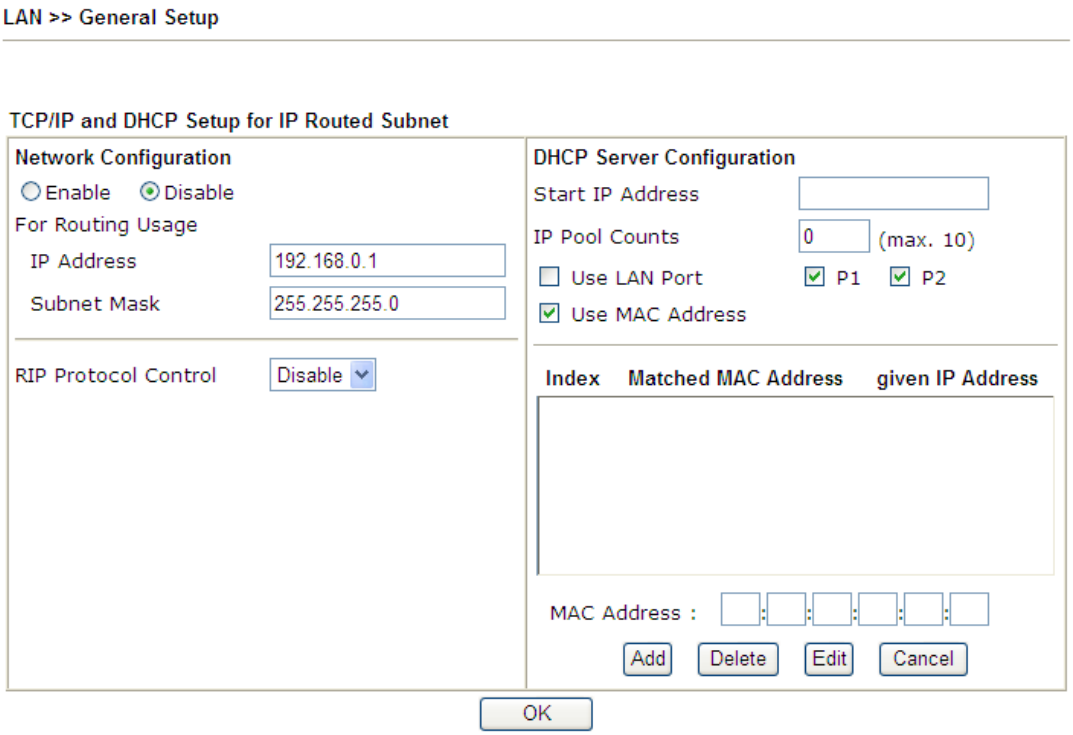

Available settings are explained as follows:

Item	Description
Network Configuration	**Enable/Disable -** Click **Enable** to enable such configuration; click **Disable** to disable such configuration. **For Routing Usage,** **IP Address -** Type in private IP address for connecting to a local private network (Default: 192.168.1.1). **Subnet Mask -** Type in an address code that determines the size of the network. (Default: 255.255.255.0/ 24) **RIP Protocol Control,** **Disable -** deactivate the RIP protocol. It will lead to a stoppage of the exchange of routing information between routers. (Default) **Enable –** activate the RIP protocol.

DHCP Server Configuration	DHCP stands for Dynamic Host Configuration Protocol. The router by factory default acts a DHCP server for your network so it automatically dispatch related IP settings to any local user configured as a DHCP client. It is highly recommended that you leave the router enabled as a DHCP server if you do not have a DHCP server for your network. If you want to use another DHCP server in the network other than the Vigor Router's, you can let Relay Agent help you to redirect the DHCP request to the specified location. **Start IP Address -** Enter a value of the IP address pool for the DHCP server to start with when issuing IP addresses. If the 1st IP address of your router is 192.168.1.1, the starting IP address must be 192.168.1.2 or greater, but smaller than 192.168.1.254. **IP Pool Counts -** Enter the maximum number of PCs that you want the DHCP server to assign IP addresses to. The default is 50 and the maximum is 253. **Use LAN Port –** Specify an IP for IP Route Subnet. If it is enabled, DHCP server will assign IP address automatically for the clients coming from P1 and/or P2. Please check the box of P1 and P2. **Use MAC Address -** Check such box to specify MAC address. **MAC Address:** Enter the MAC Address of the host one by one and click **Add** to create a list of hosts to be assigned, deleted or edited IP address from above pool. Set a list of MAC Address for 2nd DHCP server will help router to assign the correct IP address of the correct subnet to the correct host. So those hosts in 2nd subnet won't get an IP address belonging to 1st subnet. **Add –** Type the MAC address in the boxes and click this button to add. **Delete** – Click it to delete the selected MAC address. **Edit** – Click it to edit the selected MAC address. **Cancel** – Click it to cancel the job of adding, deleting and editing.

When you finish the configuration, please click **OK** to save and exit this page.

3.2.3 Static Route

Go to **LAN** to open setting page and choose **Static Route**. The router offers IPv4 and IPv6 for you to configure the static route. Both protocols bring different web pages.

Static Route for IPv4

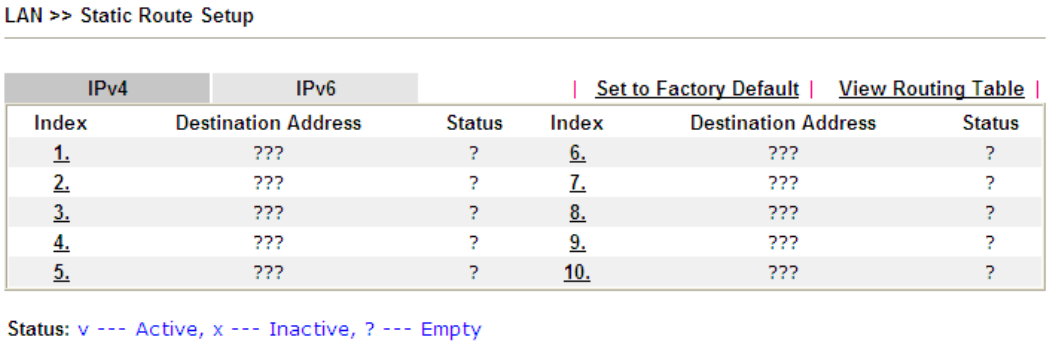

Available settings are explained as follows:

Item	Description
Index	The number (1 to 10) under Index allows you to open next page to set up static route.
Destination Address	Displays the destination address of the static route.
Status	Displays the status of the static route.
Set to Factory Default	Clear all of the settings and return to factory default settings.
Viewing Routing Table	Displays the routing table for your reference. 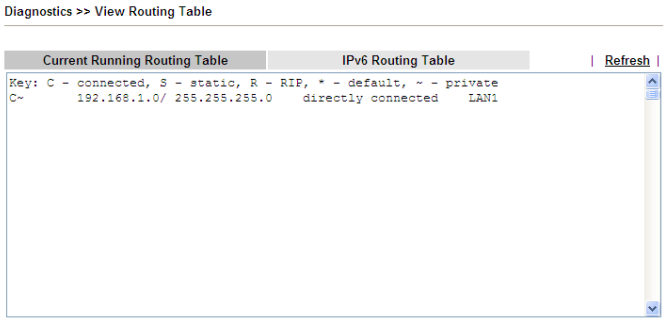

Add Static Routes to Private and Public Networks

Here is an example (based on IPv4) of setting Static Route in Main Router so that user A and B locating in different subnet can talk to each other via the router. Assuming the Internet access has been configured and the router works properly:

- use the Main Router to surf the Internet.
- create a private subnet 192.168.10.0 using an internal Router A (192.168.1.2)
- create a public subnet 211.100.88.0 via an internal Router B (192.168.1.3).
- have set Main Router 192.168.1.1 as the default gateway for the Router A 192.168.1.2.

Before setting Static Route, user A cannot talk to user B for Router A can only forward recognized packets to its default gateway Main Router.

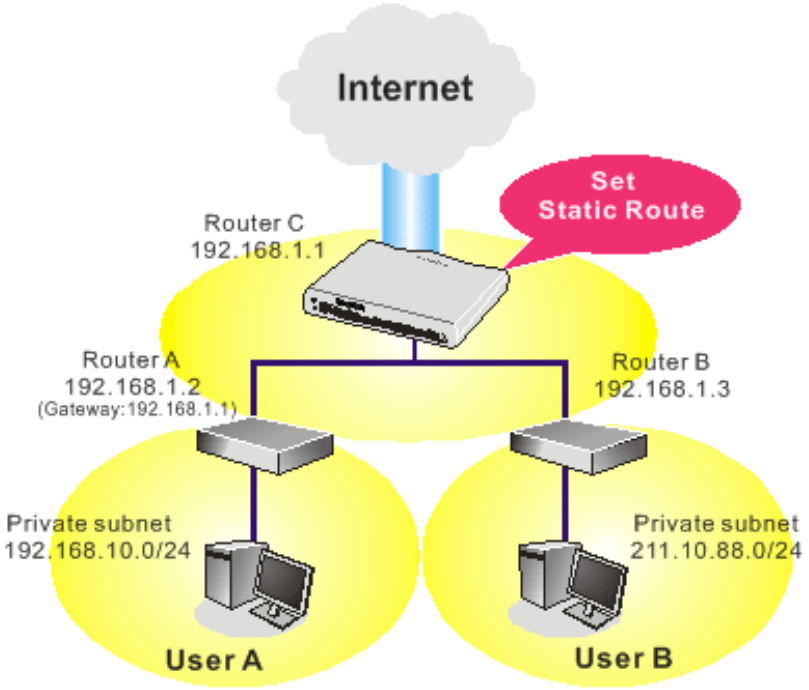

1. Go to **LAN** page and click **General Setup**, select 1st Subnet as the **RIP Protocol Control.** Then click the **OK** button.

> **Note:** There are two reasons that we have to apply RIP Protocol Control on 1st Subnet. The first is that the LAN interface can exchange RIP packets with the neighboring routers via the 1st subnet (192.168.1.0/24). The second is that those hosts on the internal private subnets (ex. 192.168.10.0/24) can access the Internet via the router, and continuously exchange of IP routing information with different subnets.

2. Click the **LAN >> Static Route** and click on the **Index Number 1.** Check the **Enable** box. Please add a static route as shown below, which regulates all packets destined to 192.168.10.0 will be forwarded to 192.168.1.2. Click **OK**.

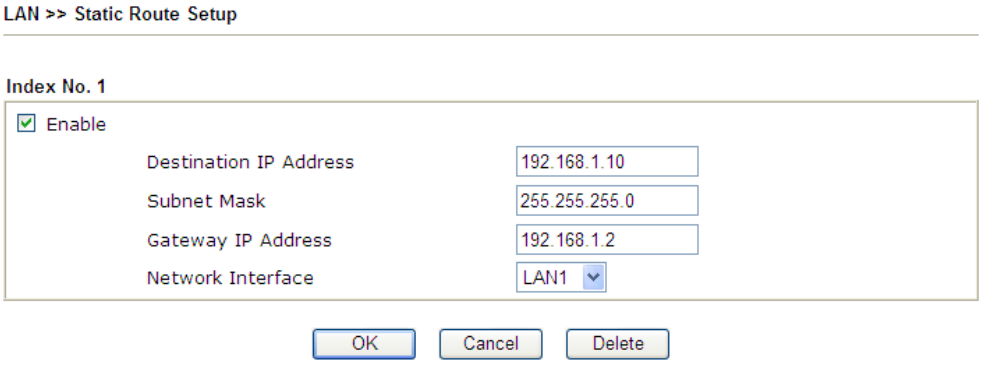

Available settings are explained as follows:

Item	Description
Enable	Click it to enable this profile.
Destination IP Address	Type an IP address as the destination of such static route.
Subnet Mask	Type the subnet mask for such static route.
Network Interface	Use the drop down list to specify an interface for such static route.

3. Return to **Static Route Setup** page. Click on another **Index Number** to add another static route as show below, which regulates all packets destined to 211.100.88.0 will be forwarded to 192.168.1.3. Click **OK**.

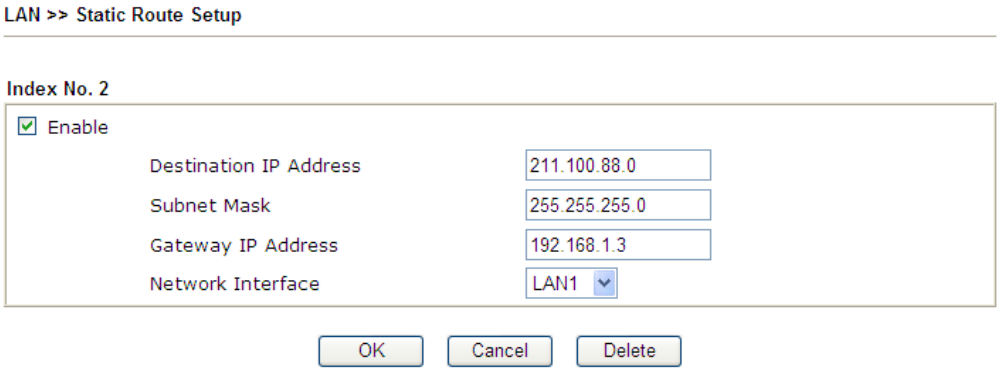

4. Go to **Diagnostics** and choose **Routing Table** to verify current routing table.

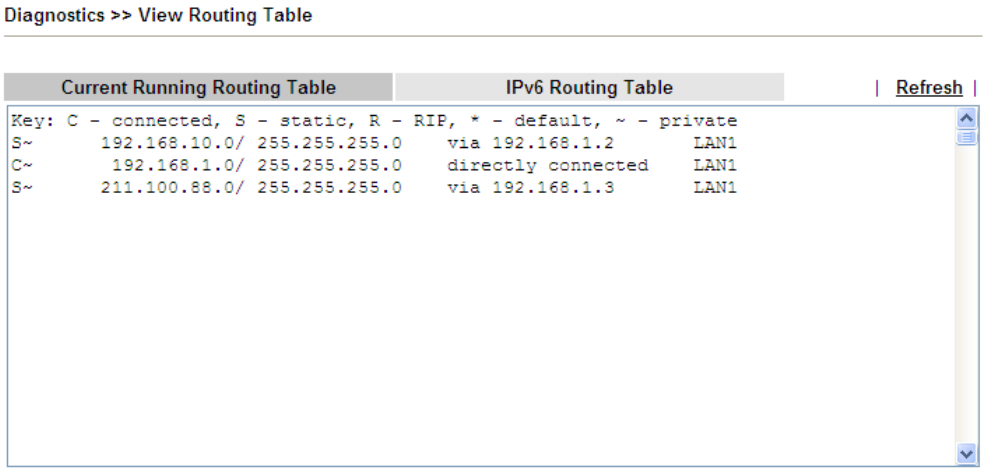
Diagnostics >> View Routing Table
Current Running Routing Table
IPv6 Routing Table
Refresh
Key: C - connected, S - static, R - RIP, * - default, ~ - private
S~ 192.168.10.0/ 255.255.255.0 via 192.168.1.2 LAN1
C~ 192.168.1.0/ 255.255.255.0 directly connected LAN1
S~ 211.100.88.0/ 255.255.255.0 via 192.168.1.3 LAN1

Static Route for IPv6

You can set up to 40 profiles for IPv6 static route. Click the IPv6 tab to open the following page:

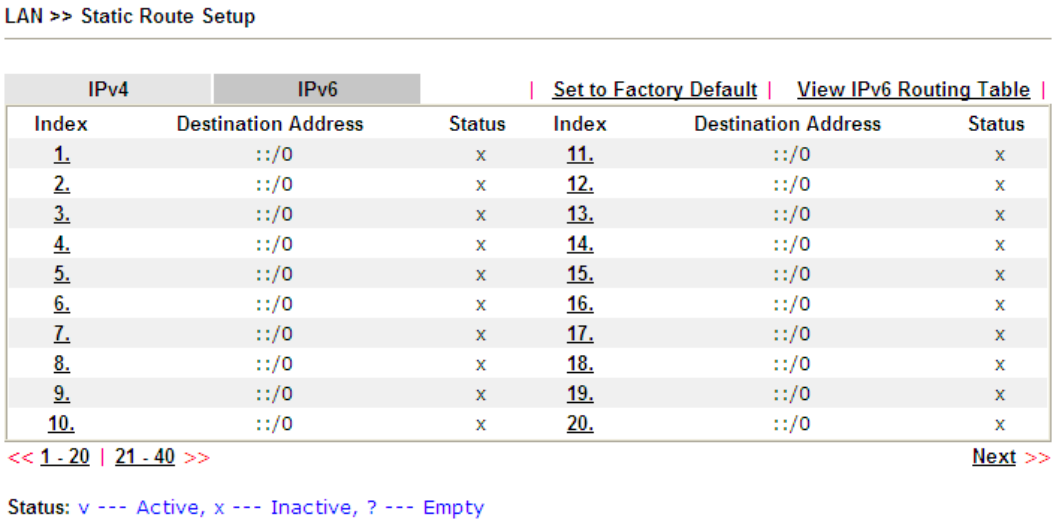
LAN >> Static Route Setup
IPv4
IPv6
Set to Factory Default
View IPv6 Routing Table
Index Destination Address Status Index Destination Address Status
1. ::/0 x 11. ::/0 x
2. ::/0 x 12. ::/0 x
3. ::/0 x 13. ::/0 x
4. ::/0 x 14. ::/0 x
5. ::/0 x 15. ::/0 x
6. ::/0 x 16. ::/0 x
7. ::/0 x 17. ::/0 x
8. ::/0 x 18. ::/0 x
9. ::/0 x 19. ::/0 x
10. ::/0 x 20. ::/0 x
<< 1 - 20 | 21 - 40 >>
Next >>
Status: v --- Active, x --- Inactive, ? --- Empty

Available settings are explained as follows:

Item	Description
Index	The number (1 to 40) under Index allows you to open next page to set up static route.
Destination Address	Displays the destination address of the static route.
Status	Displays the status of the static route.
Set to Factory Default	Clear all of the settings and return to factory default settings.
Viewing IPv6 Routing Table	Displays the routing table for your reference.

Click any underline of index number to get the following page.

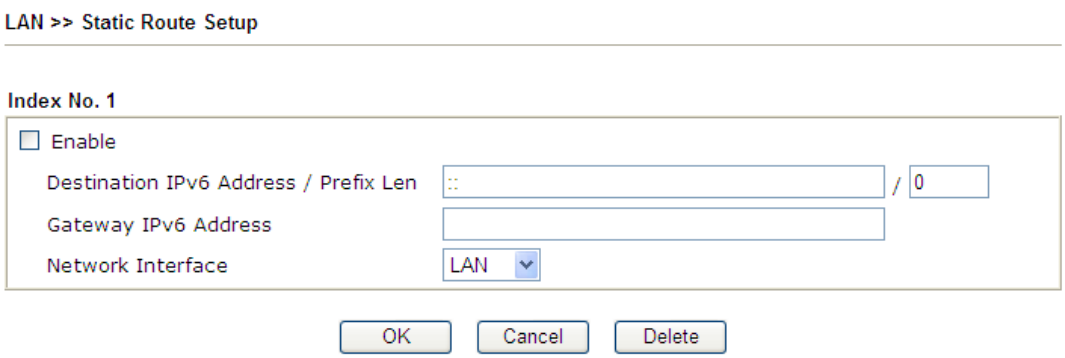

Available settings are explained as follows:

Item	Description
Enable	Click it to enable this profile.
Destination IPv6 Address / Prefix Len	Type the IP address with the prefix length for this entry.
Gateway IPv6 Address	Type the gateway address for this entry.
Network Interface	Use the drop down list to specify an interface for this static route.

When you finish the configuration, please click **OK** to save and exit this page.

3.2.4 VLAN

Virtual LAN function provides you a very convenient way to manage hosts by grouping them based on the physical port. You can also manage the in/out rate of each port. Go to **LAN** page and select **VLAN**. The following page will appear. Click **Enable** to invoke VLAN function.

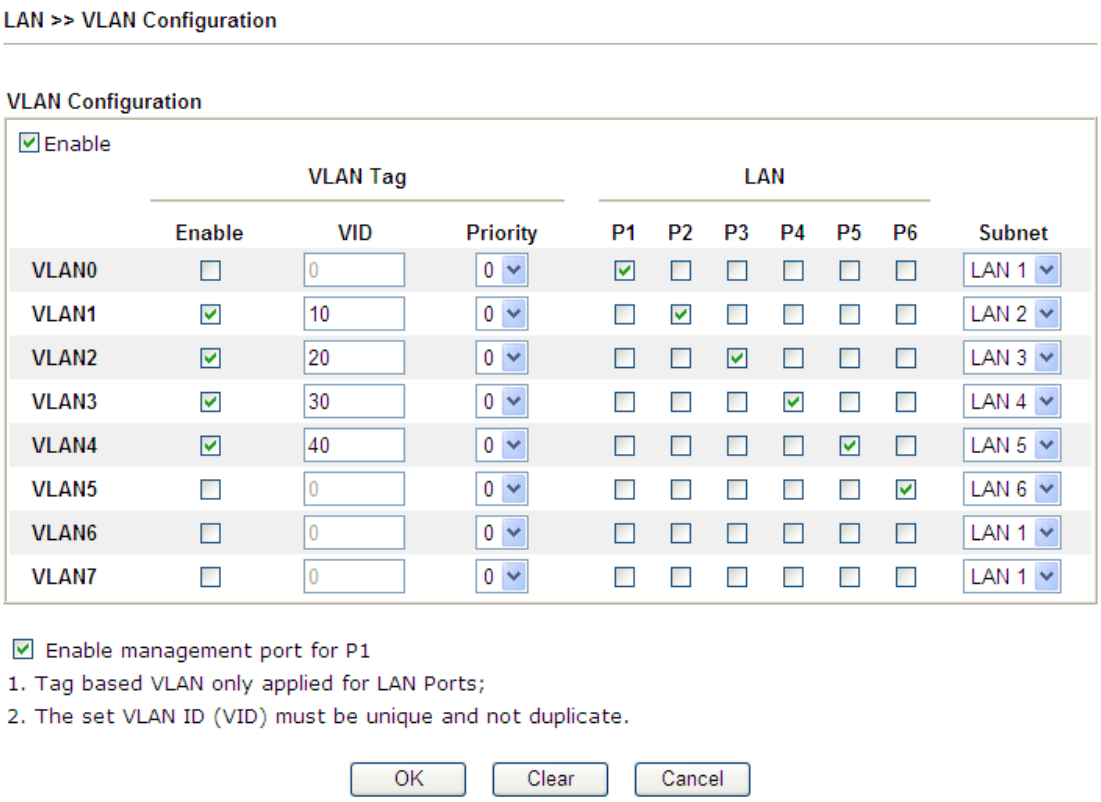

Note: Settings in this page only applied to LAN port but not WAN port.

Available settings are explained as follows:

Item	Description
Enable	Click it to enable VLAN configuration.
VLAN Tag	**Enable** – Check the box to enable the function of VLAN with tag. The router will add specific VLAN number to all packets on the LAN while sending them out. Please type the tag value and specify the priority for the packets sending by LAN. **VID** – Type the value as the VLAN ID number. The range is form 0 to 4095. **Priority** – Type the packet priority number for such VLAN. The range is from 0 to 7.
LAN	**P1 – P6** – Check the LAN port(s) to be grouped under the selected VLAN.

Subnet	Choose one of them to make the selected VLAN mapping to the specified subnet only. For example, LAN1 is specified for VLAN0. It means that PCs grouped under VLAN0 can get the IP address(es) that specified by the subnet. 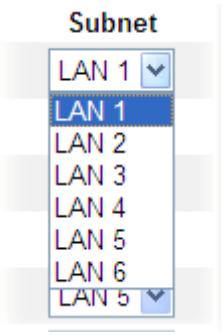
Enable management port for P1	It can help users to communicate with the router still even though configuring wrong VLAN tag setting. For Vigor router has one LAN physical port only, it is recommended to enable the management port (LAN 1) to ensure the data transmission is unimpeded.

Note: Leave one VLAN untagged at least to prevent from not connecting to Vigor router due to unexpected error.

To add or remove a VLAN, please refer to the following example.

1. If, VLAN 0 is consisted of hosts linked to P1 and P2 and VLAN 1 is consisted of hosts linked to P3 and P4. VLAN0 and VLAN1 are configured with different subnets.

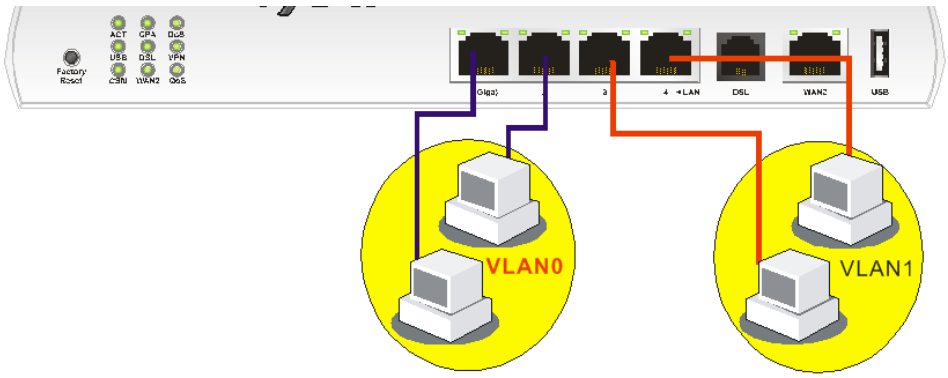

2. After checking the box to enable VLAN function, you will check the table according to the needs as shown below. Click **OK** to save the settings.

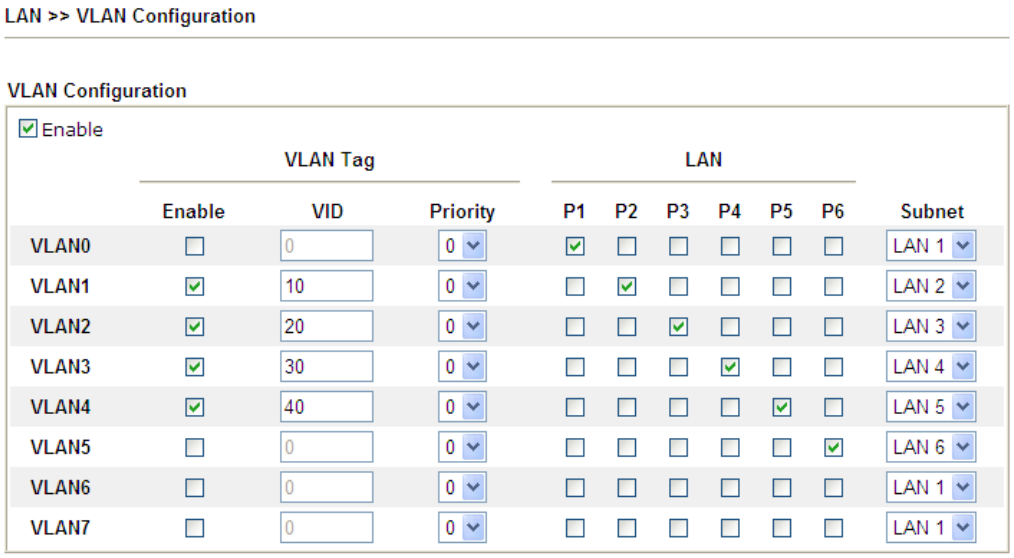

To remove VLAN, uncheck the needed box and click **OK** to save the results.

3.2.5 Bind IP to MAC

This function is used to bind the IP and MAC address in LAN to have a strengthening control in network. When this function is enabled, all the assigned IP and MAC address binding together cannot be changed. If you modified the binding IP or MAC address, it might cause you not access into the Internet.

Click **LAN** and click **Bind IP to MAC** to open the setup page.

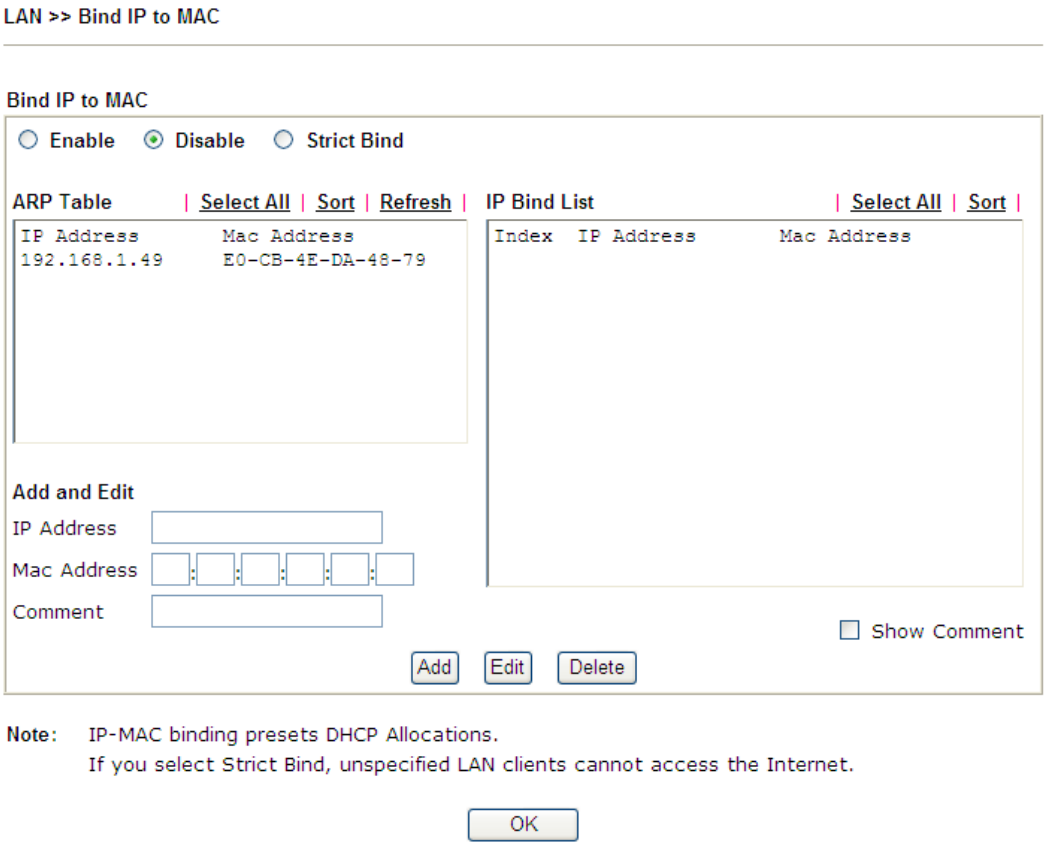

Available settings are explained as follows:

Item	Description
Enable	Click this radio button to invoke this function. However, IP/MAC which is not listed in IP Bind List also can connect to Internet.
Disable	Click this radio button to disable this function. All the settings on this page will be invalid.
Strict Bind	Click this radio button to block the connection of the IP/MAC which is not listed in IP Bind List.
ARP Table	This table is the LAN ARP table of this router. The information for IP and MAC will be displayed in this field. Each pair of IP and MAC address listed in ARP table can be selected and added to IP Bind List by clicking **Add** below.
Select All	Click this link to select all the items in the ARP table.
Sort	Reorder the table based on the IP address.
Refresh	Refresh the ARP table listed below to obtain the newest ARP table information.
Add and Edit	**IP Address** – Type the IP address that will be used for the specified MAC address. **Mac Address** – Type the MAC address that is used to bind with the assigned IP address. **Comment** – Type a brief description for the entry. **Show Comment** – Check this box to display the comment on IP Bind List box.
IP Bind List	It displays a list for the IP bind to MAC information.
Add	It allows you to add the one you choose from the ARP table or the IP/MAC address typed in **Add and Edit** to the table of **IP Bind List**.
Edit	It allows you to edit and modify the selected IP address and MAC address that you create before.
Delete	You can remove any item listed in **IP Bind List**. Simply click and select the one, and click **Delete**. The selected item will be removed from the **IP Bind List**.

Note: Before you select **Strict Bind**, you have to bind one set of IP/MAC address for one PC. If not, no one of the PCs can access into Internet. And the web user interface of the router might not be accessed.

When you finish the configuration, click **OK** to save the settings.

3.2.6 LAN Port Mirror

LAN port mirror can be applied for the users in LAN. Generally speaking, this function copies traffic from one or more specific ports to a target port. This mechanism helps manager track the network errors or abnormal packets transmission without interrupting the flow of data access the network. By the way, user can apply this function to monitor all traffics which user needs to check.

There are some advantages supported in this feature. First, it is more economical without other detecting equipments to be set up. Second, it may be able to view traffic on one or more ports within a VLAN at the same time. Third, it can transfer all data traffics to be mirrored to one analyzer connect to the mirroring port. Last, it is more convenient and easy to configure in user's interface.

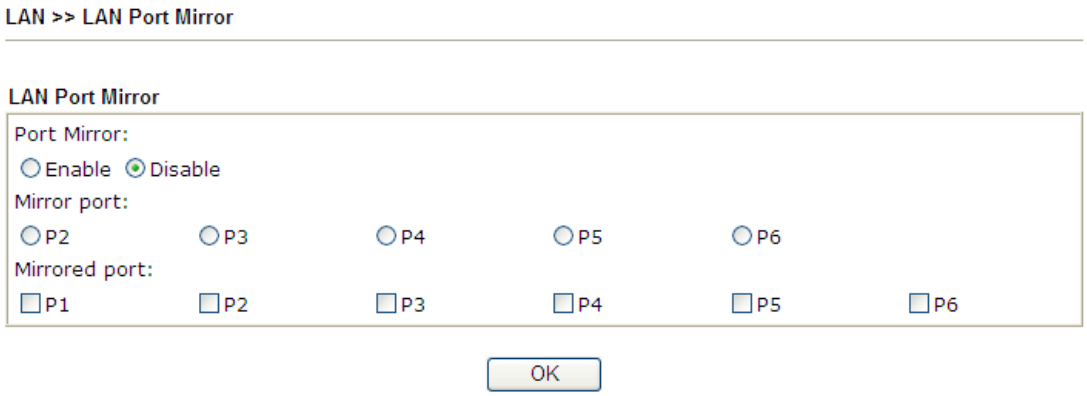

Available settings are explained as follows:

Item	Description
Port Mirror	Check **Enable** to activate this function. Or, check **Disable** to close this function.
Mirror Port	Select a port to view traffic sent from mirrored ports.
Mirrored port	Select which ports are necessary to be mirrored.

After finishing all the settings here, please click **OK** to save the configuration.

3.2.7 Web Portal Setup

This page allows you to configure a profile with specified URL for accessing into or display a message when a wireless/LAN user connects to Internet through this router. No matter what the purpose of the wireless/LAN client is, he/she will be forced into the URL configured here while trying to access into the Internet or the desired web page through this router. That is, a company which wants to have an advertisement for its products to users can specify the URL in this page to reach its goal.

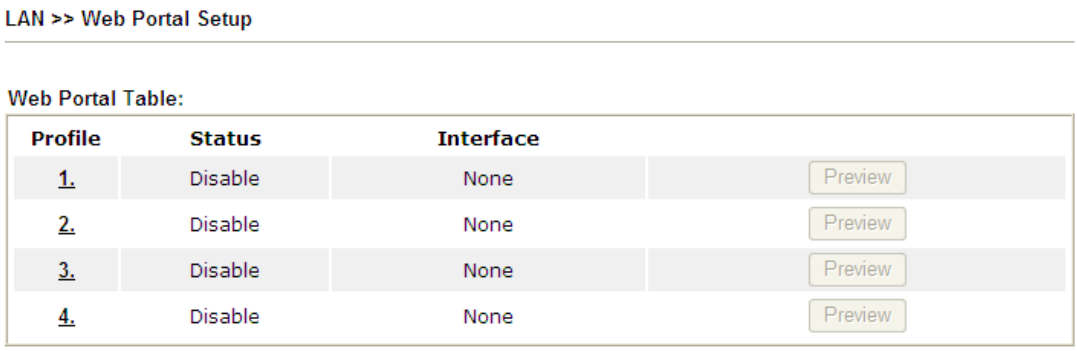

Each item is explained as follows:

Item	Description
Profile	Display the number link which allows you to configure the profile.
Status	Display the content (Disable, URL Redirect or Message) of the profile.
Interface	Display the applied interfaced of the profile.
Preview	Open a preview window according to the configured settings.

To configure the profile, click any index number link to open the following page.

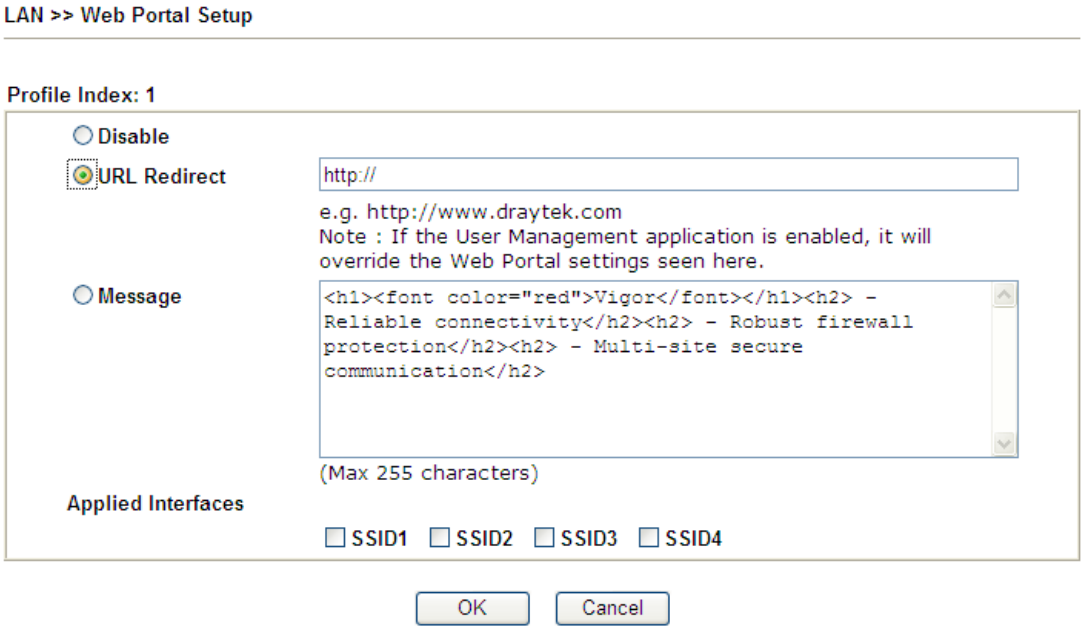

Available settings are explained as follows:

Item	Description
Disable	Click this button to close this function.
URL Redirect	Any user who wants to access into Internet through this router will be redirected to the URL specified here first. It is a useful method for the purpose of advertisement. For example, force the wireless user(s) in hotel to access into the web page that the hotel wants the user(s) to visit.
Message	Type words or sentences here. The message will be displayed on the screen for several seconds when the wireless users access into the web page through the router.
Applied Interfaces	Check the box(es) representing different interfaces to be applied by such profile. The advantage is that each SSID (1/2/3/4) for wireless network can be applied with different web portal separately.

After finishing all the settings here, please click **OK** to save the configuration.

3.3 NAT

Usually, the router serves as an NAT (Network Address Translation) router. NAT is a mechanism that one or more private IP addresses can be mapped into a single public one. Public IP address is usually assigned by your ISP, for which you may get charged. Private IP addresses are recognized only among internal hosts.

When the outgoing packets destined to some public server on the Internet reach the NAT router, the router will change its source address into the public IP address of the router, select the available public port, and then forward it. At the same time, the router shall list an entry in a table to memorize this address/port-mapping relationship. When the public server response, the incoming traffic, of course, is destined to the router's public IP address and the router will do the inversion based on its table. Therefore, the internal host can communicate with external host smoothly.

The benefit of the NAT includes:

- **Save cost on applying public IP address and apply efficient usage of IP address.** NAT allows the internal IP addresses of local hosts to be translated into one public IP address, thus you can have only one IP address on behalf of the entire internal hosts.
- **Enhance security of the internal network by obscuring the IP address.** There are many attacks aiming victims based on the IP address. Since the attacker cannot be aware of any private IP addresses, the NAT function can protect the internal network.

Note: On NAT page, you will see the private IP address defined in RFC-1918. Usually we use the 192.168.1.0/24 subnet for the router. As stated before, the NAT facility can map one or more IP addresses and/or service ports into different specified services. In other words, the NAT function can be achieved by using port mapping methods.

Below shows the menu items for NAT.

3.3.1 Port Redirection

Port Redirection is usually set up for server related service inside the local network (LAN), such as web servers, FTP servers, E-mail servers etc. Most of the case, you need a public IP address for each server and this public IP address/domain name are recognized by all users. Since the server is actually located inside the LAN, the network well protected by NAT of the router, and identified by its private IP address/port, the goal of Port Redirection function is to forward all access request with public IP address from external users to the mapping private IP address/port of the server.

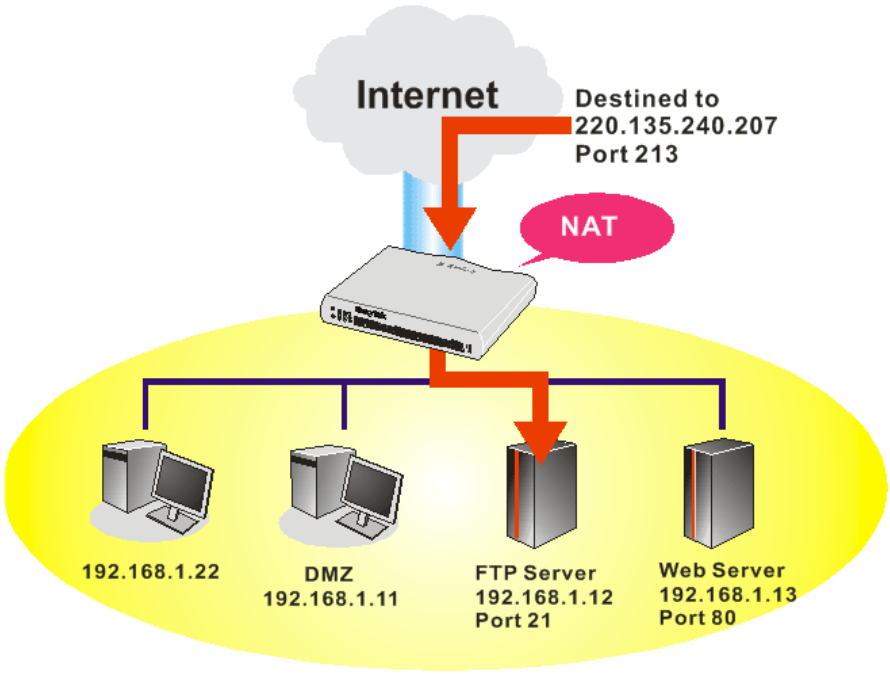

The port redirection can only apply to incoming traffic.

To use this function, please go to **NAT** page and choose **Port Redirection** web page. The **Port Redirection Table** provides 20 port-mapping entries for the internal hosts.

NAT >> Port Redirection

Port Redirection | Set to Factory Default |

Index	Service Name	Public Port	Private IP	Status
1.				x
2.				x
3.				x
4.				x
5.				x
6.				x
7.				x
8.				x
9.				x
10.				x

<< 1-10 | 11-20 >> Next >>

Press any number under Index to access into next page for configuring port redirection.

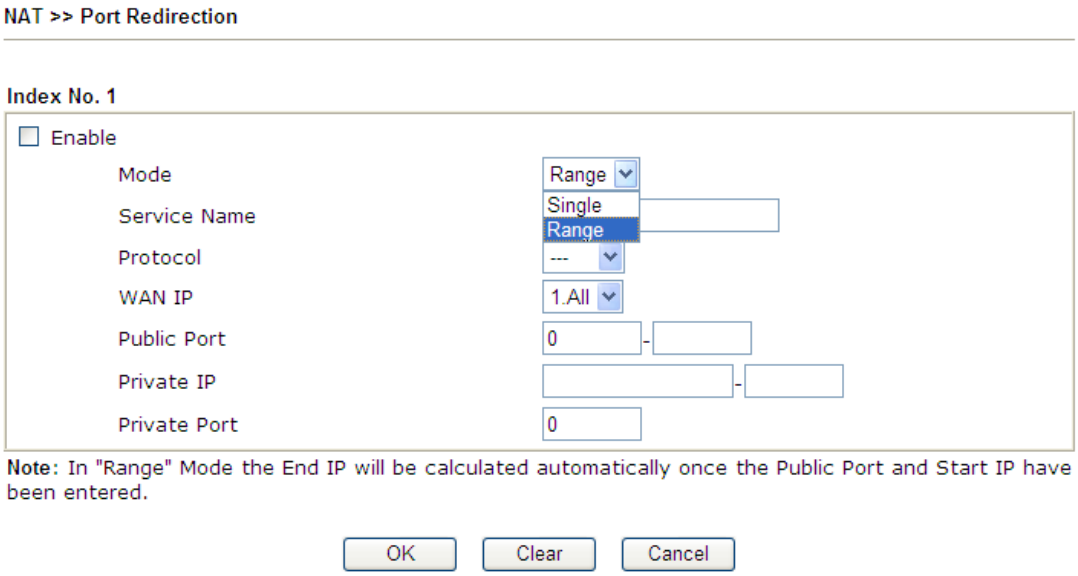

Available settings are explained as follows:

Item	Description
Enable	Check this box to enable such port redirection setting.
Mode	Two options (Single and Range) are provided here for you to choose. To set a range for the specific service, select **Range**. In Range mode, if the public port (start port and end port) and the starting IP of private IP had been entered, the system will calculate and display the ending IP of private IP automatically.
Service Name	Enter the description of the specific network service.
Protocol	Select the transport layer protocol (TCP or UDP).
WAN IP	Select the WAN IP used for port redirection. There are eight WAN IP alias that can be selected and used for port redirection. The default setting is **All** which means all the incoming data from any port will be redirected to specified range of IP address and port.
Public Port	Specify which port can be redirected to the specified **Private IP and Port** of the internal host. If you choose **Range** as the port redirection mode, you will see two boxes on this field. Simply type the required number on the first box. The second one will be assigned automatically later.
Private IP	Specify the private IP address of the internal host providing the service. If you choose **Range** as the port redirection mode, you will see two boxes on this field. Type a complete IP address in the first box (as the starting point) and the fourth digits in the second box (as the end point).
Private Port	Specify the private port number of the service offered by the internal host.

After finishing all the settings here, please click **OK** to save the configuration.

Note that the router has its own built-in services (servers) such as Telnet, HTTP and FTP etc. Since the common port numbers of these services (servers) are all the same, you may need to reset the router in order to avoid confliction.

For example, the built-in web user interface in the router is with default port 80, which may conflict with the web server in the local network, http://192.168.1.13:80. Therefore, you need to **change the router's http port to any one other than the default port 80** to avoid conflict, such as 8080. This can be set in the **System Maintenance >>Management Setup**. You then will access the admin screen of by suffixing the IP address with 8080, e.g., http://192.168.1.1:8080 instead of port 80.

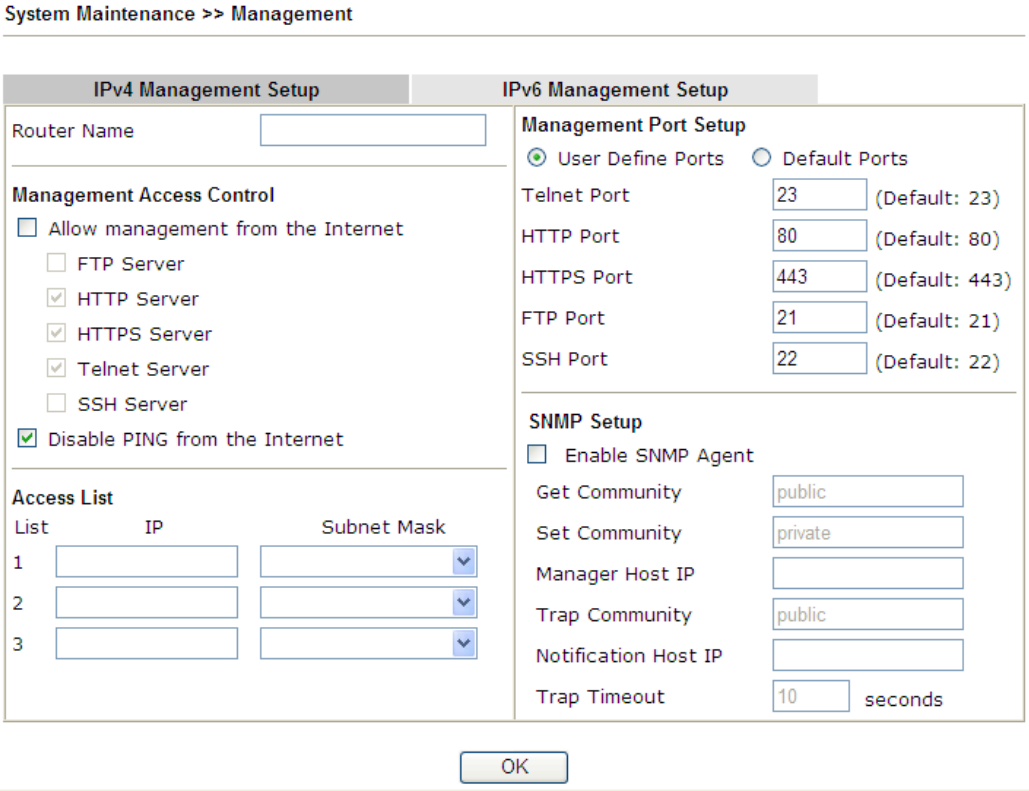

3.3.2 DMZ Host

As mentioned above, **Port Redirection** can redirect incoming TCP/UDP or other traffic on particular ports to the specific private IP address/port of host in the LAN. However, other IP protocols, for example Protocols 50 (ESP) and 51 (AH), do not travel on a fixed port. Vigor router provides a facility **DMZ Host** that maps ALL unsolicited data on any protocol to a single host in the LAN. Regular web surfing and other such Internet activities from other clients will continue to work without inappropriate interruption. **DMZ Host** allows a defined internal user to be totally exposed to the Internet, which usually helps some special applications such as Netmeeting or Internet Games etc.

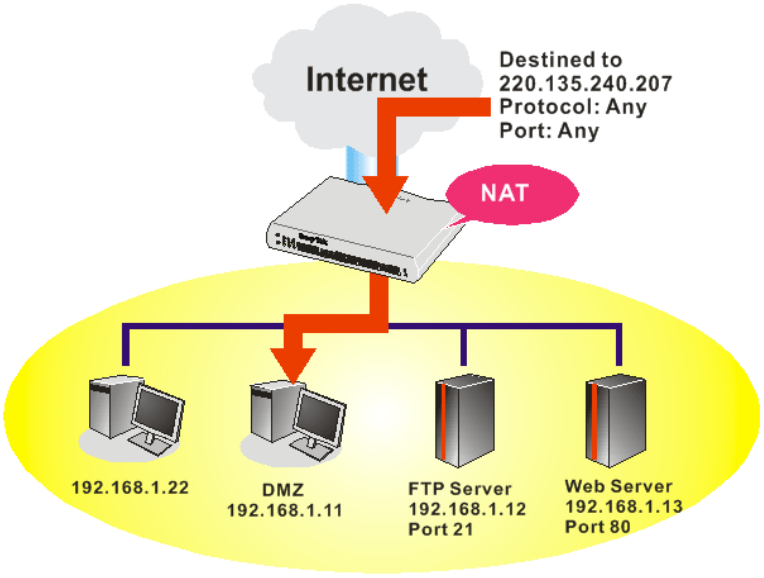

The security properties of NAT are somewhat bypassed if you set up DMZ host. We suggest you to add additional filter rules or a secondary firewall.

Click **DMZ Host** to open the following page. You can set different DMZ host for each WAN interface. Click the WAN tab to switch into the configuration page for that WAN.

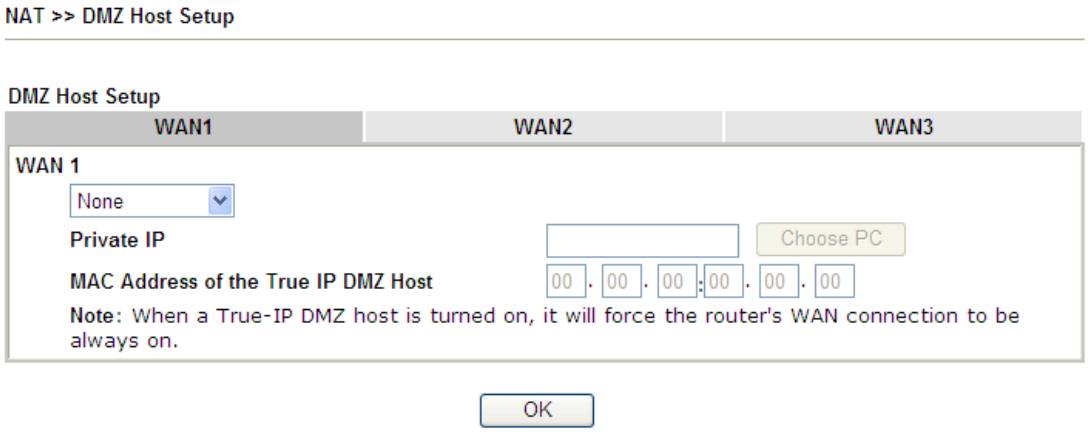
NAT >> DMZ Host Setup
DMZ Host Setup
WAN1
WAN2
WAN3
WAN 1
None
Private IP
Choose PC
MAC Address of the True IP DMZ Host
00 . 00 . 00 : 00 . 00 . 00
Note: When a True-IP DMZ host is turned on, it will force the router's WAN connection to be always on.
OK

Available settings are explained as follows:

Item	Description
WAN 1 None None Private IP Active True IP	Choose **Private IP** or **Active True IP** first. **Active True IP** selection is available for WAN1 only.
Private IP	Enter the private IP address of the DMZ host, or click Choose PC to select one.
Choose PC	Click this button and then a window will automatically pop up, as depicted below. The window consists of a list of private IP addresses of all hosts in your LAN network. Select one private IP address in the list to be the DMZ host.

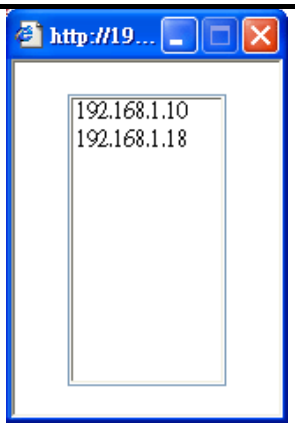

When you have selected one private IP from the above dialog, the IP address will be shown on the following screen. Click **OK** to save the setting.

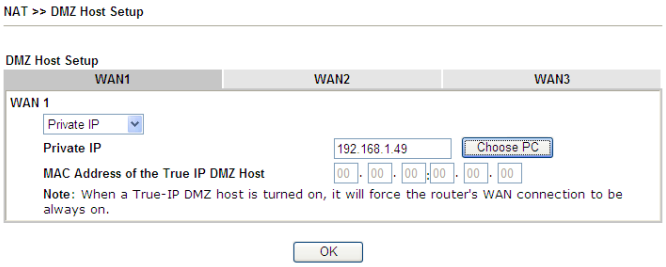
NAT >> DMZ Host Setup
DMZ Host Setup
WAN1
WAN2
WAN3
WAN 1
Private IP
Private IP
192.168.1.49
Choose PC
MAC Address of the True IP DMZ Host
00 . 00 . 00 . 00 . 00 . 00
Note: When a True-IP DMZ host is turned on, it will force the router's WAN connection to be always on.
OK

DMZ Host for WAN2 and WAN3 is slightly different with WAN1. **Active True IP** selection is available for WAN1 only.

See the following figure.

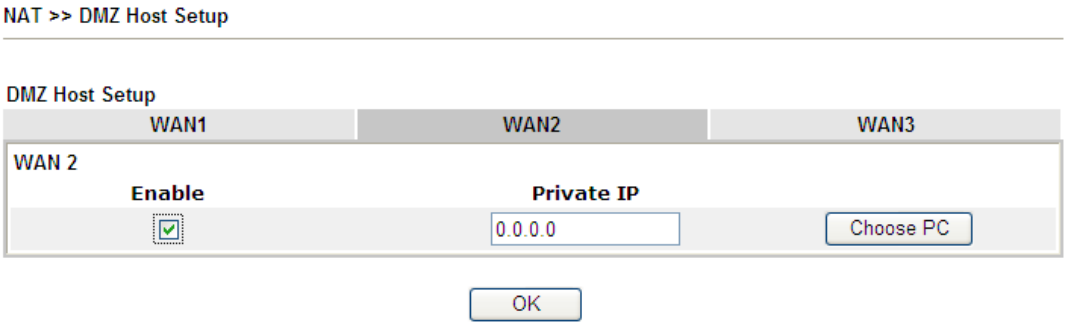

If you previously have set up **WAN Alias** for **PPPoE** or **Static or Dynamic IP** mode in WAN2 interface**,** you will find them in **Aux. WAN IP** for your selection.

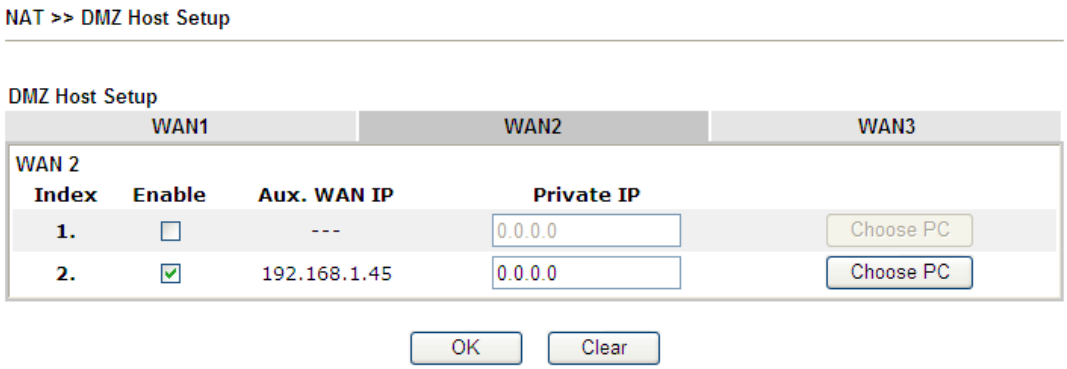

Available settings are explained as follows:

Item	Description
Enable	Check to enable the DMZ Host function.
Private IP	Enter the private IP address of the DMZ host, or click Choose PC to select one.
Choose PC	Click this button and then a window will automatically pop up, as depicted below. The window consists of a list of private IP addresses of all hosts in your LAN network. Select one private IP address in the list to be the DMZ host. 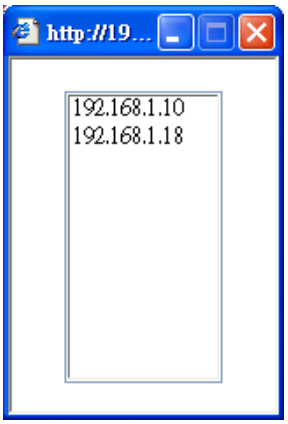 When you have selected one private IP from the above dialog, the IP address will be shown on the following screen. Click **OK** to save the setting. 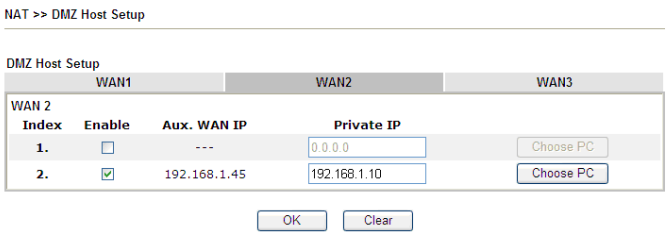

After finishing all the settings here, please click **OK** to save the configuration.

3.3.3 Open Ports

Open Ports allows you to open a range of ports for the traffic of special applications.

Common application of Open Ports includes P2P application (e.g., BT, KaZaA, Gnutella, WinMX, eMule and others), Internet Camera etc. Ensure that you keep the application involved up-to-date to avoid falling victim to any security exploits.

Click **Open Ports** to open the following page:

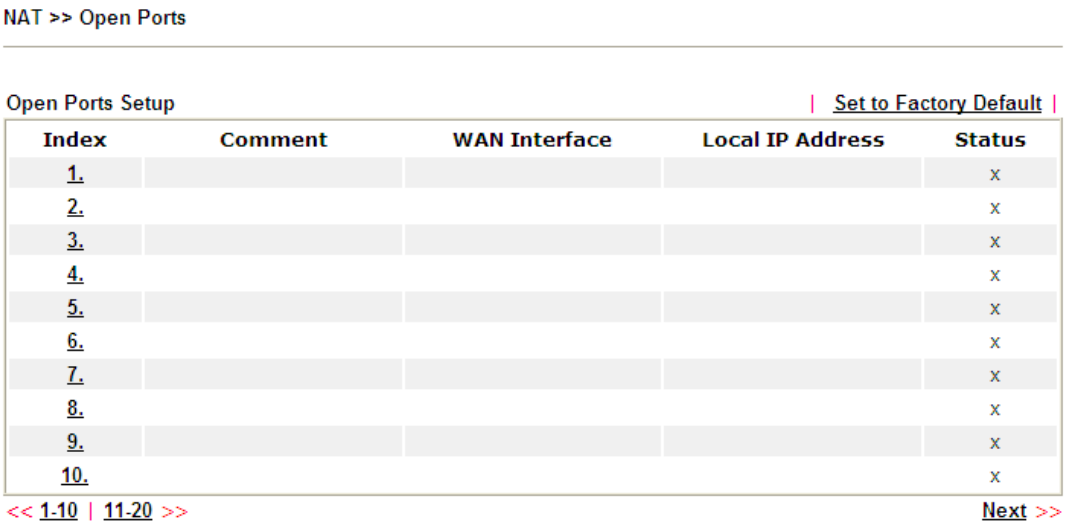

Available settings are explained as follows:

Item	Description
Index	Indicate the relative number for the particular entry that you want to offer service in a local host. You should click the appropriate index number to edit or clear the corresponding entry.
Comment	Specify the name for the defined network service.
WAN Interface	Display the WAN interface used by such index.
Local IP Address	Display the private IP address of the local host offering the service.
Status	Display the state for the corresponding entry. X or V is to represent the **Inactive** or **Active** state.

To add or edit port settings, click one index number on the page. The index entry setup page will pop up. In each index entry, you can specify **10** port ranges for diverse services.

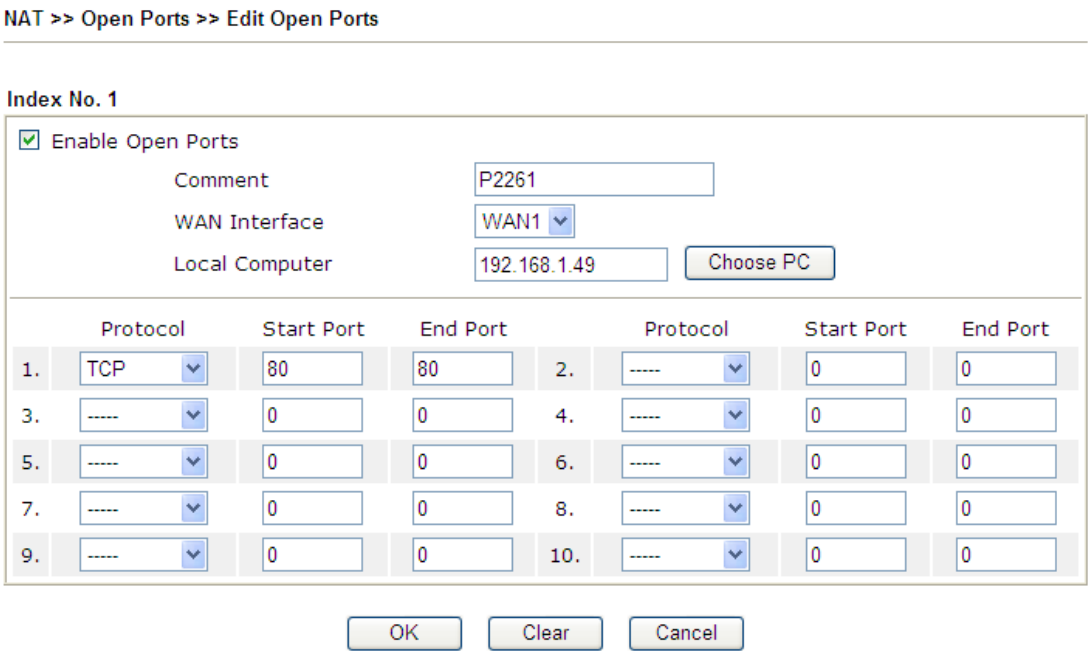

Available settings are explained as follows:

Item	Description
Enable Open Ports	Check to enable this entry.
Comment	Make a name for the defined network application/service.
WAN Interface	Specify the WAN interface that will be used for this entry.
WAN IP	Specify the WAN IP address that will be used for this entry. This setting is available when WAN IP Alias is configured.
Local Computer	Enter the private IP address of the local host or click **Choose PC** to select one. **Choose PC -** Click this button and, subsequently, a window having a list of private IP addresses of local hosts will automatically pop up. Select the appropriate IP address of the local host in the list.
Protocol	Specify the transport layer protocol. It could be **TCP**, **UDP**, or ----- (none) for selection.
Start Port	Specify the starting port number of the service offered by the local host.
End Port	Specify the ending port number of the service offered by the local host.

After finishing all the settings here, please click **OK** to save the configuration.

NAT >> Open Ports

Open Ports Setup | Set to Factory Default |

Index	Comment	WAN Interface	Local IP Address	Status
1.	P2261	WAN1	192.168.1.49	v
2.				x
3.				x
4.				x
5.				x
6.				x
7.				x

3.3.4 Address Mapping

Address Mapping is used to map a specified private IP or a range of private IPs of NAT subnet into a specified WAN IP (or WAN IP alias IP). Refer to the following figure.

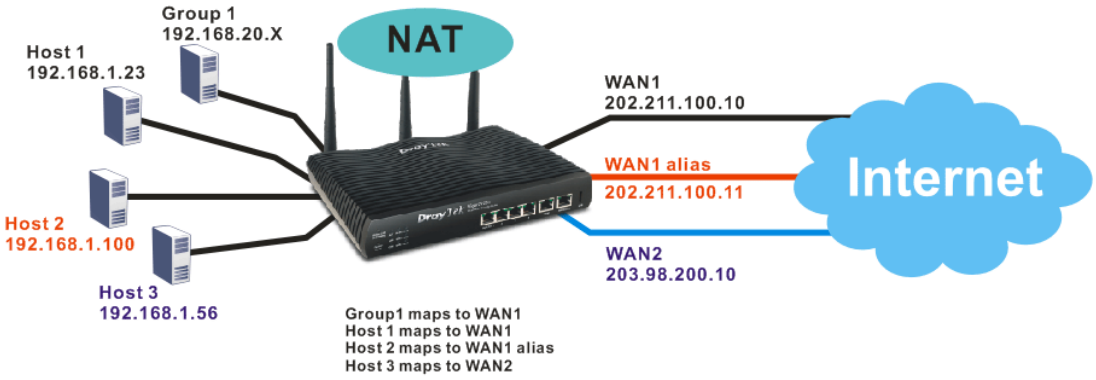

Suppose the WAN settings for a router are configured as follows:

WAN1: 202.211.100.10, WAN1 alias: 202.211.100.11
WAN2: 203.98.200.10

Without address mapping feature, when a NAT host with an IP say "192.168.1.10" sends a packet to the WAN side (or the Internet), the source address of the NAT host will be mapped into either 202.211.100.10 or 203.98.200.10 (which IP or mapping is decided by the internal load balancing algorithm).

With address mapping feature, you can manually configure any host mapping to any WAN interface to fit the request. In the above example, you can configure NAT Host1 to always map to 202.211.100.10 (WAN1); Host2 to always map to 202.211.100.11 (WAN1 alias); Host3 always map to 203.98.200.10 (WAN2) and Group 1 to always map to 202.211.100.10 (WAN1).

NAT >> Address Mapping

Address Mapping Setup | Set to Factory Default |

Index	Protocol	Public IP	Private IP	Mask	Status
1.	ALL	---		/32	x
2.	ALL	---		/32	x
3.	ALL	---		/32	x
4.	ALL	---		/32	x
5.	ALL	---		/32	x
6.	ALL	---		/32	x
7.	ALL	---		/32	x
8.	ALL	---		/32	x
9.	ALL	---		/32	x
10.	ALL	---		/32	x

Available settings are explained as follows:

Item	Description
Protocol	Display the protocol used for this address mapping.
Public IP	Display the public IP address selected for this entry, e.g., 172.16.3.102.
Private IP	Display the private IP set for this address mapping, e.g., 192.168.1.10.
Mask	Display the subnet mask selected for this address mapping.
Status	Display the status for the entry, enable or disable.

Click the index number link to open the configuration page.

NAT >> Address Mapping

Index No. 1

Enable

Protocol: ALL

WAN Interface: WAN1

WAN IP:

Private IP:

Subnet Mask: /32

OK Clear Cancel

Available settings are explained as follows:

Item	Description
Enable	Check to enable this entry.
Protocol	Specify the transport layer protocol. It could be **TCP**, **UDP**, or **ALL** for selection.

	
WAN Interface	Choose the WAN interface for such address mapping profile.
WAN IP	Select an IP address (the selections provided here are set in **IP Alias List** of **Network >>WAN** interface). Local host can use this IP to connect to Internet. If you want to choose any one of the Public IP settings, you must specify some IP addresses in the IP Alias List of the Static/DHCP Configuration page first. If you did not type in any IP address in the IP Alias List, the Public IP setting will be empty in this field. When you click **Apply**, a message will appear to inform you.
Private IP	Assign an IP address (e.g., 192.168.1.10) or a subnet to be compared with the Public IP address for incoming packets.
Subnet Mask	Select a value of subnet mask for private IP address.

After finishing all the settings here, please click **OK** to save the configuration.

3.3.5 Port Triggering

Port Triggering is a variation of open ports function.

The key difference between "open port" and "port triggering" is:

- Once the OK button is clicked and the configuration has taken effect, "open port" keeps the ports opened forever.
- Once the OK button is clicked and the configuration has taken effect, "port triggering" will only attempt to open the ports once the triggering conditions are met.
- The duration that these ports are opened depends on the type of protocol used. The "default" durations are shown below and these duration values can be modified via telnet commands.

  TCP: 86400 sec.

  UDP: 180 sec.

  IGMP: 10 sec.

  TCP WWW: 60 sec.

  TCP SYN: 60 sec.

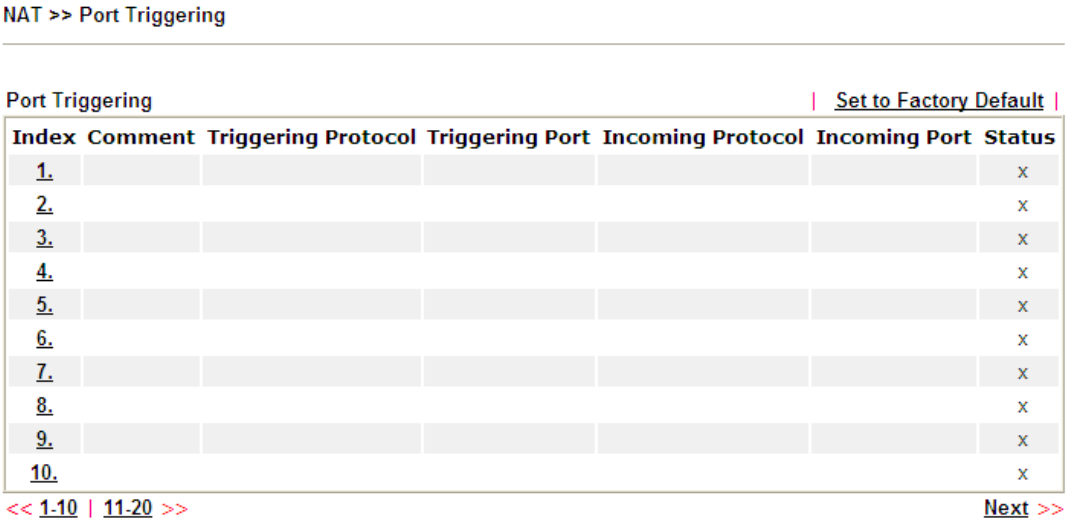

Available settings are explained as follows:

Item	Description
Comment	Display the text which memorizes the application of this rule.
Triggering Protocol	Display the protocol of the triggering packets.
Triggering Port	Display the port of the triggering packets.
Incoming Protocol	Display the protocol for the incoming data of such triggering profile.
Incoming Port	Display the port for the incoming data of such triggering profile.
Status	Display if the rule is active or de-active.

Click the index number link to open the configuration page.

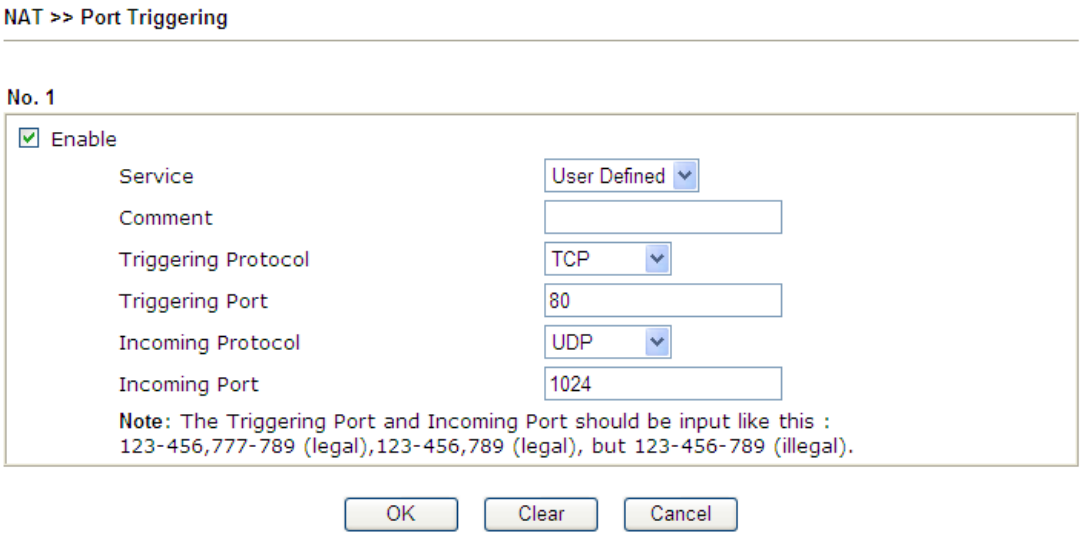

Available settings are explained as follows:

Item	Description
Enable	Check to enable this entry.
Service	Choose the **predefined** service to apply for such trigger profile. 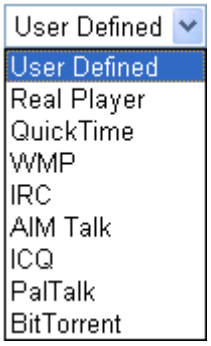
Comment	Type the text to memorize the application of this rule.
Triggering Protocol	Select the protocol (TCP, UDP or TCP/UDP) for such triggering profile.
Triggering Port	Type the port or port range for such triggering profile.
Incoming Protocol	When the triggering packets received, it is expected the incoming packets will use the selected protocol. Select the protocol (TCP, UDP or TCP/UDP) for the incoming data of such triggering profile.
Incoming Port	Type the port or port range for the incoming packets.

After finishing all the settings here, please click **OK** to save the configuration.

3.4 Firewall

3.4.1 Basics for Firewall

While the broadband users demand more bandwidth for multimedia, interactive applications, or distance learning, security has been always the most concerned. The firewall of the Vigor router helps to protect your local network against attack from unauthorized outsiders. It also restricts users in the local network from accessing the Internet. Furthermore, it can filter out specific packets that trigger the router to build an unwanted outgoing connection.

Firewall Facilities

The users on the LAN are provided with secured protection by the following firewall facilities:

- User-configurable IP filter (Call Filter/ Data Filter).
- Stateful Packet Inspection (SPI): tracks packets and denies unsolicited incoming data
- Selectable Denial of Service (DoS) /Distributed DoS (DDoS) attacks protection

IP Filters

Depending on whether there is an existing Internet connection, or in other words "the WAN link status is up or down", the IP filter architecture categorizes traffic into two: **Call Filter** and **Data Filter**.

- **Call Filter** - When there is no existing Internet connection, **Call Filter** is applied to all traffic, all of which should be outgoing. It will check packets according to the filter rules. If legal, the packet will pass. Then the router shall **"initiate a call"** to build the Internet connection and send the packet to Internet.
- **Data Filter** - When there is an existing Internet connection, **Data Filter** is applied to incoming and outgoing traffic. It will check packets according to the filter rules. If legal, the packet will pass the router.

The following illustrations are flow charts explaining how router will treat incoming traffic and outgoing traffic respectively.

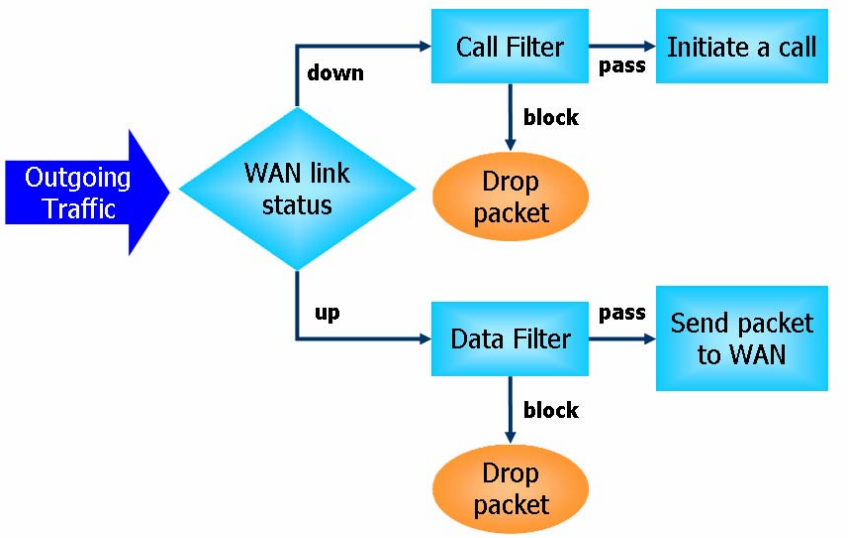

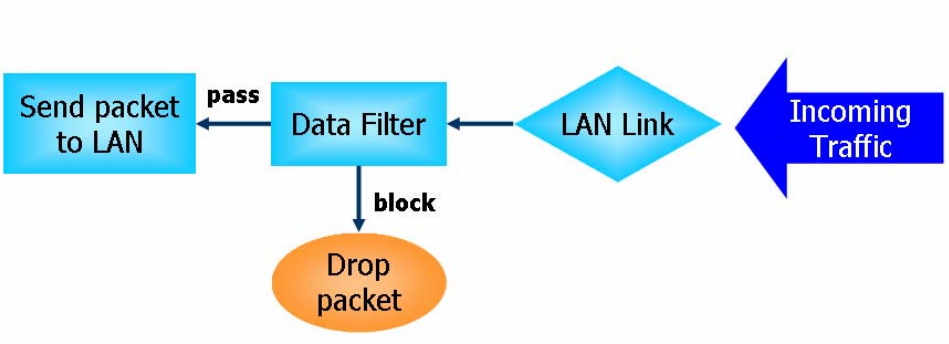

Stateful Packet Inspection (SPI)

Stateful inspection is a firewall architecture that works at the network layer. Unlike legacy static packet filtering, which examines a packet based on the information in its header, stateful inspection builds up a state machine to track each connection traversing all interfaces of the firewall and makes sure they are valid. The stateful firewall of Vigor router not just examine the header information also monitor the state of the connection.

Denial of Service (DoS) Defense

The **DoS Defense** functionality helps you to detect and mitigate the DoS attack. The attacks are usually categorized into two types, the flooding-type attacks and the vulnerability attacks. The flooding-type attacks will attempt to exhaust all your system's resource while the vulnerability attacks will try to paralyze the system by offending the vulnerabilities of the protocol or operation system.

The **DoS Defense** function enables the Vigor router to inspect every incoming packet based on the attack signature database. Any malicious packet that might duplicate itself to paralyze the host in the secure LAN will be strictly blocked and a Syslog message will be sent as warning, if you set up Syslog server.

Also the Vigor router monitors the traffic. Any abnormal traffic flow violating the pre-defined parameter, such as the number of thresholds, is identified as an attack and the Vigor router will activate its defense mechanism to mitigate in a real-time manner.

The below shows the attack types that DoS/DDoS defense function can detect:

1. SYN flood attack
2. UDP flood attack
3. ICMP flood attack
4. Port Scan attack
5. IP options
6. Land attack
7. Smurf attack
8. Trace route
9. SYN fragment
10. Fraggle attack
11. TCP flag scan
12. Tear drop attack
13. Ping of Death attack
14. ICMP fragment
15. Unknown protocol

Below shows the menu items for Firewall.

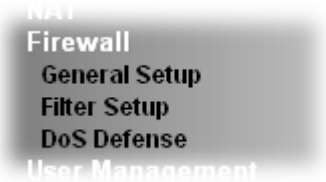

3.4.2 General Setup

General Setup allows you to adjust settings of IP Filter and common options. Here you can enable or disable the **Call Filter** or **Data Filter**. Under some circumstance, your filter set can be linked to work in a serial manner. So here you assign the **Start Filter Set** only. Also you can configure the **Log Flag** settings, **Apply IP filter to VPN incoming packets**, and **Accept incoming fragmented UDP packets**.

Click **Firewall** and click **General Setup** to open the general setup page.

General Setup Page

Such page allows you to enable / disable Call Filter and Data Filter, determine general rule for filtering the incoming and outgoing data.

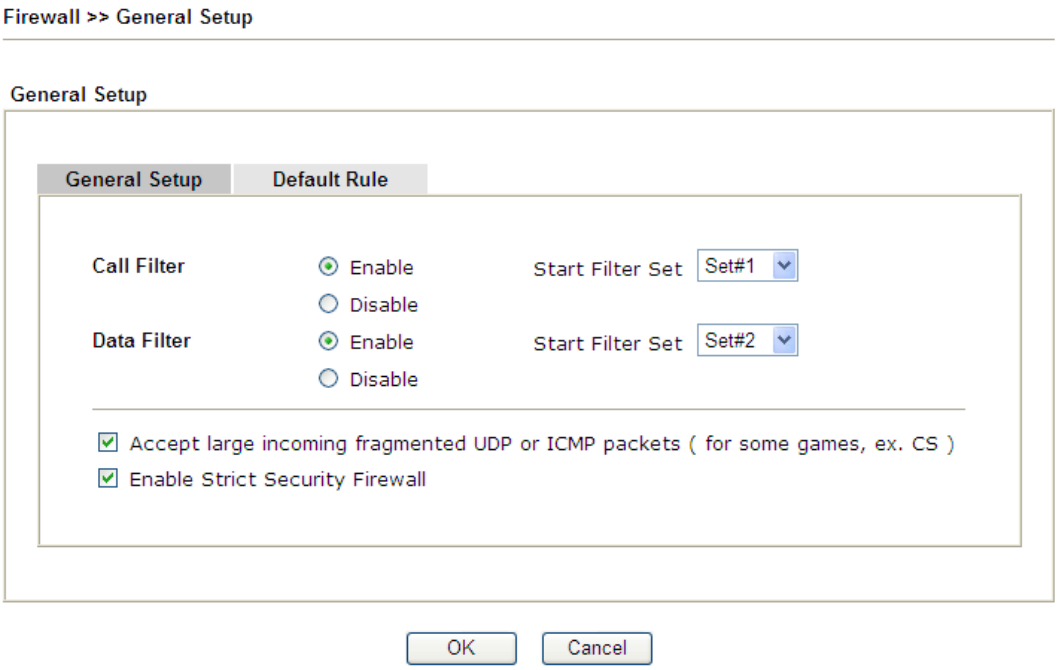

Available settings are explained as follows:

Item	Description
Call Filter	Check **Enable** to activate the Call Filter function. Assign a start filter set for the Call Filter.
Data Filter	Check **Enable** to activate the Data Filter function. Assign a start filter set for the Data Filter.
Accept large incoming…	Some on-line games (for example: Half Life) will use lots of fragmented UDP packets to transfer game data. Instinctively as a secure firewall, Vigor router will reject these fragmented packets to prevent attack unless you enable "**Accept large incoming fragmented UDP or ICMP Packets**". By checking this box, you can play these kinds of on-line games. If security concern is in higher priority, you cannot enable "**Accept large incoming fragmented UDP or ICMP Packets**".

Enable Strict Security Firewall	For the sake of security, the router will execute strict security checking for data transmission. Such feature is enabled in default. All the packets, while transmitting through Vigor router, will be filtered by firewall. If the firewall system (e.g., content filter server) does not make any response (pass or block) for these packets, then the router's firewall will block the packets directly.

Default Rule Page

Such page allows you to choose filtering profiles including QoS, Load-Balance policy, WCF, APP Enforcement, URL Content Filter, for data transmission via Vigor router.

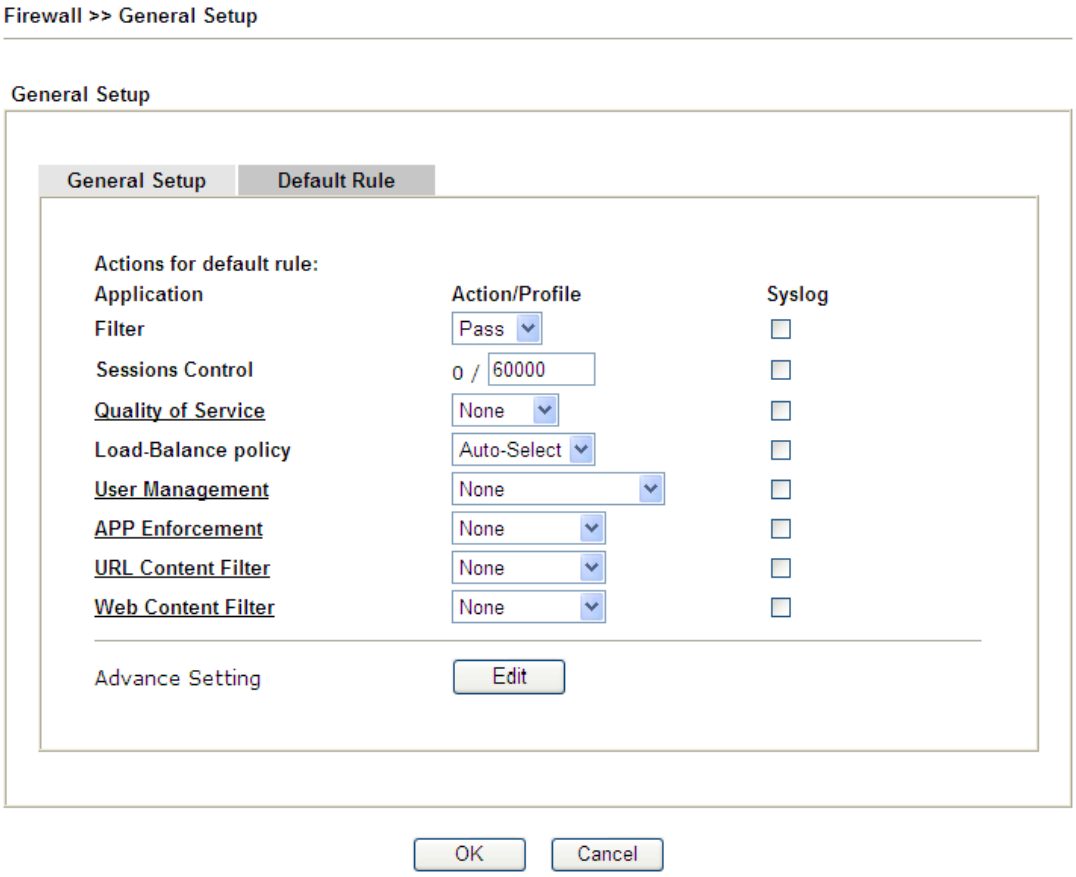

Available settings are explained as follows:

Item	Description
Filter	Select **Pass** or **Block** for the packets that do not match with the filter rules.
Sessions Control	The number typed here is the total sessions of the packets that do not match the filter rule configured in this page. The default setting is 60000.
Quality of Service	Choose one of the QoS rules to be applied as firewall rule. For detailed information of setting QoS, please refer to the related section later. 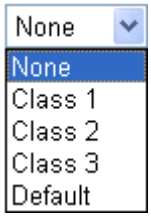
Load-Balance Policy	Choose the WAN interface for applying Load-Balance Policy. 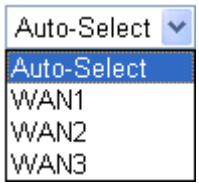
User Management	Such item is available only when **Rule-Based** is selected in User **Management>>General Setup**. The general firewall rule will be applied to the user/user group/all users specified here. 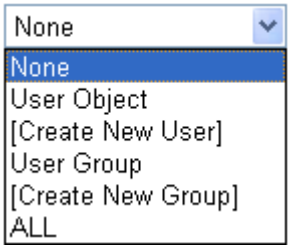 **Note:** When there is no user profile or group profile existed, **Create New User** or **Create New Group** item will appear for you to click to create a new one.

APP Enforcement	Select an **APP Enforcement** profile for global IM/P2P application blocking. If there is no profile for you to select, please choose **[Create New]** from the drop down list in this page to create a new profile. All the hosts in LAN must follow the standard configured in the **APP Enforcement** profile selected here. For detailed information, refer to the section of **APP Enforcement** profile setup. For troubleshooting needs, you can specify to record information for IM/P2P by checking the Log box. It will be sent to Syslog server. Please refer to section **Syslog/Mail Alert** for more detailed information.
URL Content Filter	Select one of the **URL Content Filter** profile settings (created in **CSM>> URL Content Filter**) for applying with this router. Please set at least one profile for choosing in **CSM>> URL Content Filter** web page first. Or choose **[Create New]** from the drop down list in this page to create a new profile. For troubleshooting needs, you can specify to record information for **URL Content Filter** by checking the Log box. It will be sent to Syslog server. Please refer to section **Syslog/Mail Alert** for more detailed information.
Web Content Filter	Select one of the **Web Content Filter** profile settings (created in **CSM>> Web Content Filter**) for applying with this router. Please set at least one profile for anti-virus in **CSM>> Web Content Filter** web page first. Or choose **[Create New]** from the drop down list in this page to create a new profile. For troubleshooting needs, you can specify to record information for **Web Content Filter** by checking the Log box. It will be sent to Syslog server. Please refer to section **Syslog/Mail Alert** for more detailed information.

Advance Setting	Click **Edit** to open the following window. However, it is **strongly recommended** to use the default settings here. 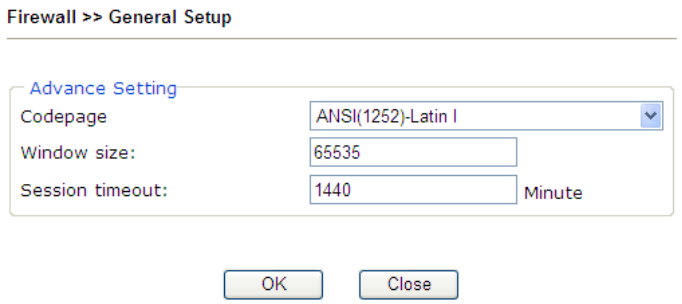 **Codepage** - This function is used to compare the characters among different languages. Choose correct codepage can help the system obtaining correct ASCII after decoding data from URL and enhance the correctness of URL Content Filter. The default value for this setting is ANSI 1252 Latin I. If you do not choose any codepage, no decoding job of URL will be processed. Please use the drop-down list to choose a codepage. If you do not have any idea of choosing suitable codepage, please open Syslog. From Codepage Information of Setup dialog, you will see the recommended codepage listed on the dialog box. 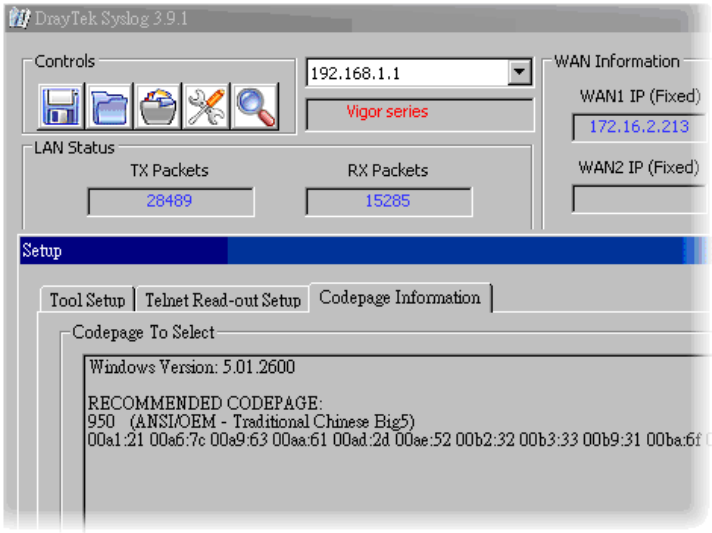 **Window size** – It determines the size of TCP protocol (0~65535). The more the value is, the better the performance will be. However, if the network is not stable, small value will be proper. **Session timeout** – Setting timeout for sessions can make the best utilization of network resources.

After finishing all the settings here, please click **OK** to save the configuration.

3.4.3 Filter Setup

Click **Firewall** and click **Filter Setup** to open the setup page.

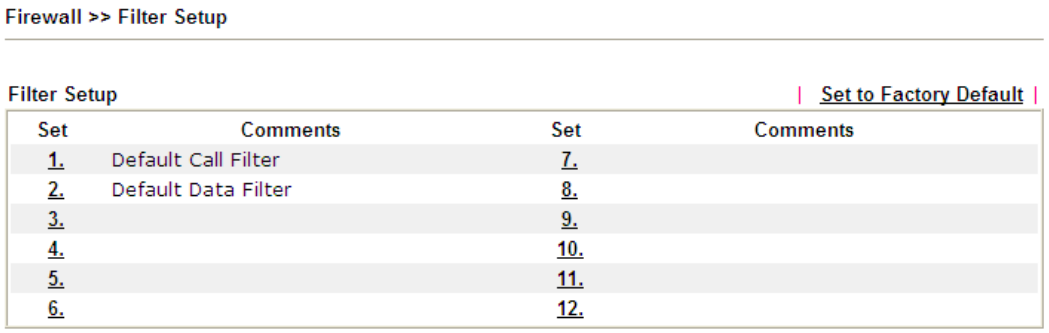

To edit or add a filter, click on the set number to edit the individual set. The following page will be shown. Each filter set contains up to 7 rules. Click on the rule number button to edit each rule. Check **Active** to enable the rule.

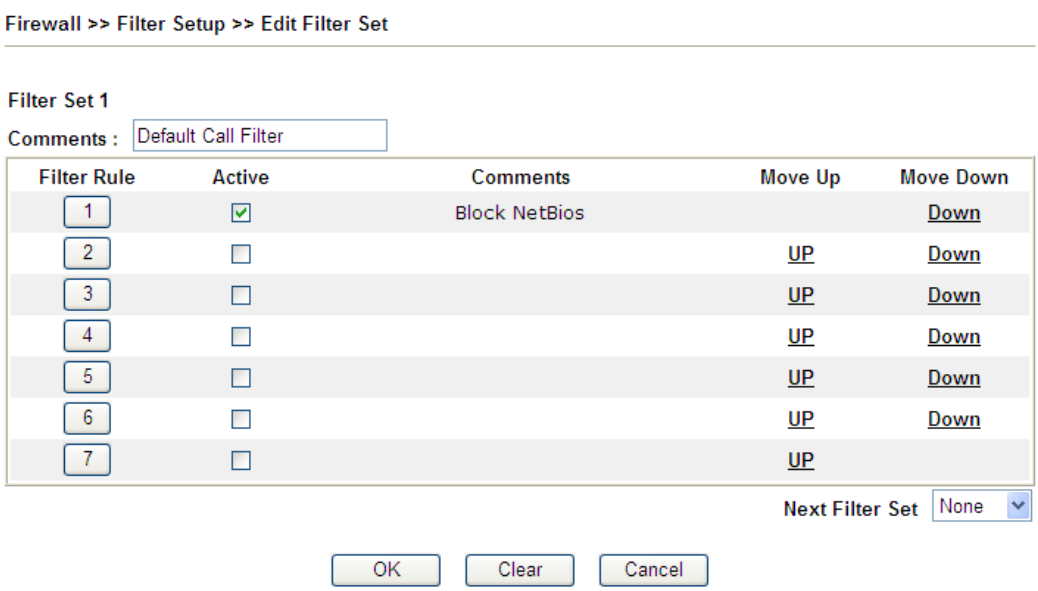

Available settings are explained as follows:

Item	Description
Filter Rule	Click a button numbered (1 ~ 7) to edit the filter rule. Click the button will open Edit Filter Rule web page. For the detailed information, refer to the following page.
Active	Enable or disable the filter rule.
Comment	Enter filter set comments/description. Maximum length is 23–character long.
Move Up/Down	Use **Up** or **Down** link to move the order of the filter rules.
Next Filter Set	Set the link to the next filter set to be executed after the current filter run. Do not make a loop with many filter sets.

To edit **Filter Rule**, click the **Filter Rule** index button to enter the **Filter Rule** setup page.

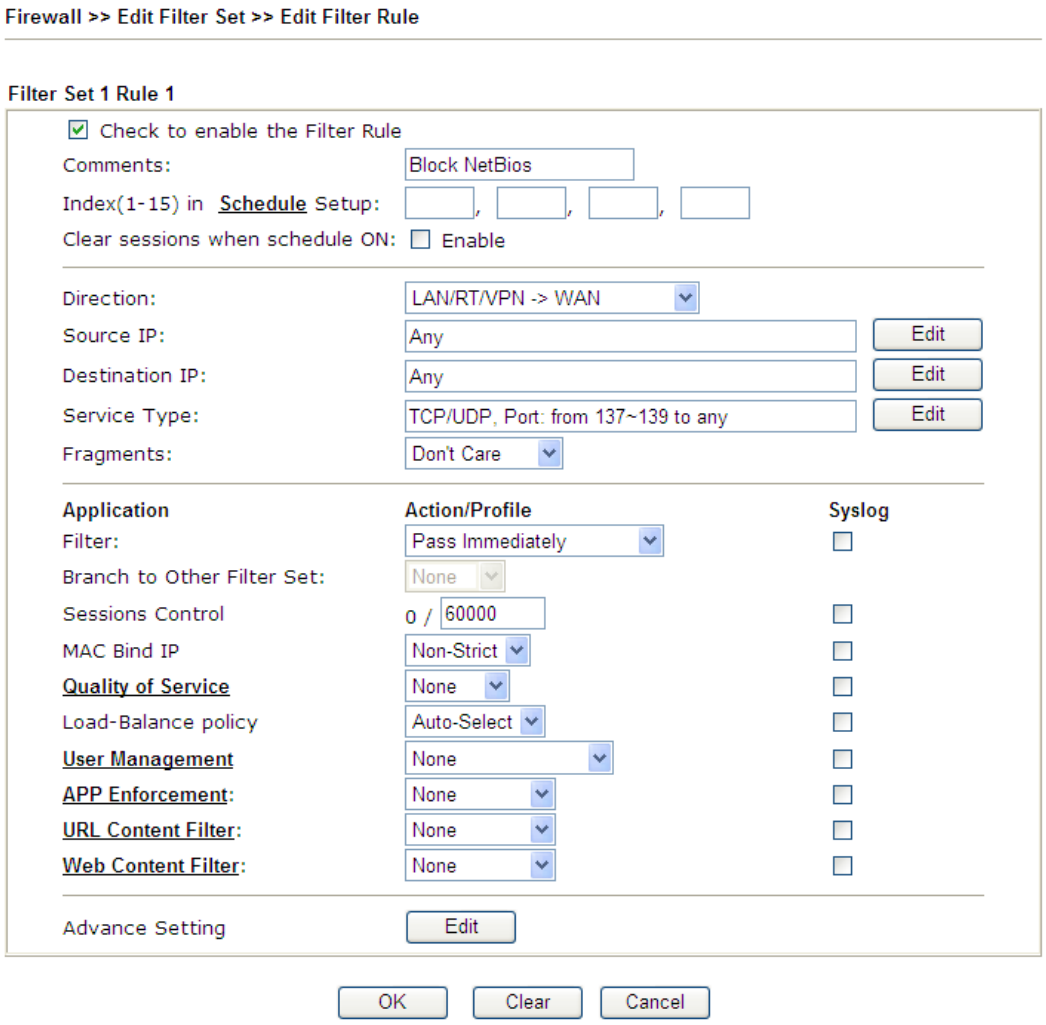

Available settings are explained as follows:

Item	Description
Check to enable the Filter Rule	Check this box to enable the filter rule.
Comments	Enter filter set comments/description. Maximum length is 14- character long.
Index(1-15)	Set PCs on LAN to work at certain time interval only. You may choose up to 4 schedules out of the 15 schedules pre-defined in **Applications >> Schedule** setup. The default setting of this field is blank and the function will always work.
Clear sessions when schedule ON	Check this box to clear the sessions when the above schedule profiles are applied.
Direction	Set the direction of packet flow. It is for **Data Filter** only. For the **Call Filter**, this setting is not available since **Call Filter** is only applied to outgoing traffic.

	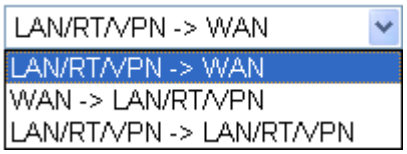 **Note:** RT means routing domain for 2nd subnet or other LAN.
Source/Destination IP	Click **Edit** to access into the following dialog to choose the source/destination IP or IP ranges. 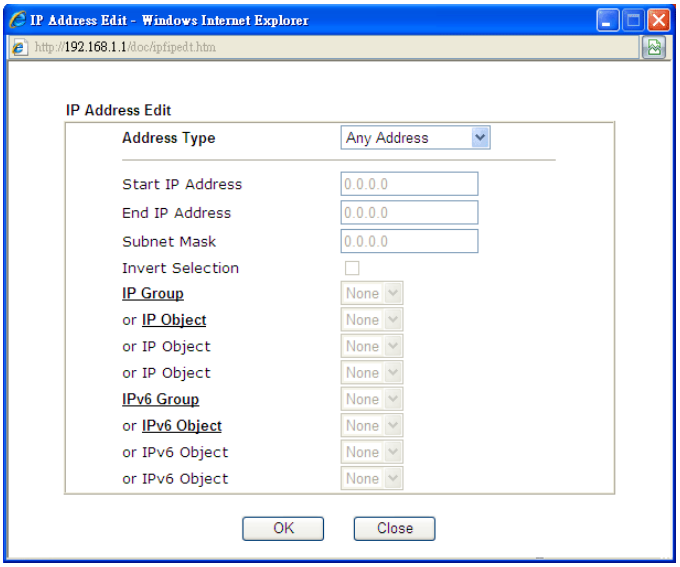 To set the IP address manually, please choose **Any Address/Single Address/Range Address/Subnet Address** as the Address Type and type them in this dialog. In addition, if you want to use the IP range from defined groups or objects, please choose **Group and Objects** as the Address Type. 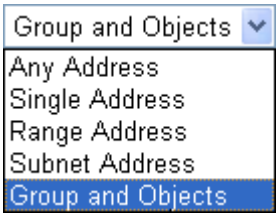 From the **IP Group** drop down list, choose the one that you want to apply. Or use the **IP Object** drop down list to choose the object that you want.
Service Type	Click **Edit** to access into the following dialog to choose a suitable service type.

	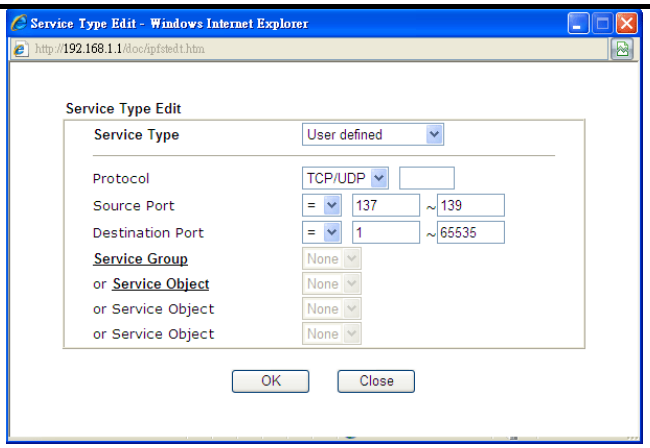 To set the service type manually, please choose **User defined** as the Service Type and type them in this dialog. In addition, if you want to use the service type from defined groups or objects, please choose **Group and Objects** as the Service Type. 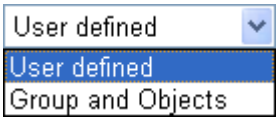 **Protocol -** Specify the protocol(s) which this filter rule will apply to. **Source/Destination Port –** ***(=)*** – when the first and last value are the same, it indicates one port; when the first and last values are different, it indicates a range for the port and available for this service type. ***(!=)*** – when the first and last value are the same, it indicates all the ports except the port defined here; when the first and last values are different, it indicates that all the ports except the range defined here are available for this service type. ***(>)*** – the port number greater than this value is available. ***(<)*** – the port number less than this value is available for this profile. **Service Group/Object** - Use the drop down list to choose the one that you want.
Fragments	Specify the action for fragmented packets. And it is used for **Data Filter** only. ***Don't care*** -No action will be taken towards fragmented packets. ***Unfragmented*** -Apply the rule to unfragmented packets. ***Fragmented*** - Apply the rule to fragmented packets. ***Too Short*** - Apply the rule only to packets that are too short to contain a complete header.
Filter	Specifies the action to be taken when packets match the rule. **Block Immediately** - Packets matching the rule will be dropped immediately. **Pass Immediately** - Packets matching the rule will be

	passed immediately. **Block If No Further Match -** A packet matching the rule, and that does not match further rules, will be dropped. **Pass If No Further Match -** A packet matching the rule, and that does not match further rules, will be passed through.
Branch to other Filter Set	If the packet matches the filter rule, the next filter rule will branch to the specified filter set. Select next filter rule to branch from the drop-down menu. Be aware that the router will apply the specified filter rule for ever and will not return to previous filter rule any more.
Sessions Control	The number typed here is the total sessions of the packets that do not match the filter rule configured in this page. The default setting is 60000.
MAC Bind IP	**Strict** – Make the MAC address and IP address settings configured in **IP Object** for **Source IP** and **Destination IP** be bound for applying such filter rule. **No-Strict -** no limitation.
Quality of Service	Choose one of the QoS rules to be applied as firewall rule. For detailed information of setting QoS, please refer to the related section later. 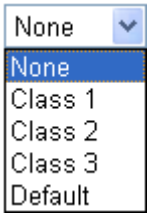
Load-Balance policy	Choose the WAN interface for applying Load-Balance Policy.
User Management	Such item is available only when **Rule-Based** is selected in User **Management>>General Setup**. The general firewall rule will be applied to the user/user group/all users specified here. 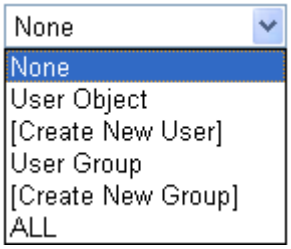 **Note:** When there is no user profile or group profile existed, **Create New User** or **Create New Group** item will appear for you to click to create a new one.
APP Enforcement	Select an **APP Enforcement** profile for global IM/P2P application blocking. If there is no profile for you to select, please choose **[Create New]** from the drop down list in this page to create a new profile. All the hosts in LAN must follow the standard configured in the **APP Enforcement** profile selected here. For detailed information, refer to the

	section of **APP Enforcement** profile setup. For troubleshooting needs, you can specify to record information for IM/P2P by checking the Log box. It will be sent to Syslog server. Please refer to section **Syslog/Mail Alert** for more detailed information.
URL Content Filter	Select one of the **URL Content Filter** profile settings (created in **CSM>> URL Content Filter**) for applying with this router. Please set at least one profile for choosing in **CSM>> URL Content Filter** web page first. Or choose **[Create New]** from the drop down list in this page to create a new profile. For troubleshooting needs, you can specify to record information for **URL Content Filter** by checking the Log box. It will be sent to Syslog server. Please refer to section **Syslog/Mail Alert** for more detailed information.
URL Content Filter	Select one of the **URL Content Filter** profile settings (created in **CSM>> URL Content Filter**) for applying with this router. Please set at least one profile for choosing in **CSM>> URL Content Filter** web page first. Or choose **[Create New]** from the drop down list in this page to create a new profile. For troubleshooting needs, you can specify to record information for **URL Content Filter** by checking the Log box. It will be sent to Syslog server. Please refer to section **Syslog/Mail Alert** for more detailed information.
Web Content Filter	Select one of the **Web Content Filter** profile settings (created in **CSM>> Web Content Filter**) for applying with this router. Please set at least one profile for anti-virus in **CSM>> Web Content Filter** web page first. Or choose **[Create New]** from the drop down list in this page to create a new profile. For troubleshooting needs, you can specify to record information for **Web Content Filter** by checking the Log box. It will be sent to Syslog server. Please refer to section **Syslog/Mail Alert** for more detailed information.
Advance Setting	Click **Edit** to open the following window. However, it is **strongly recommended** to use the default settings here. 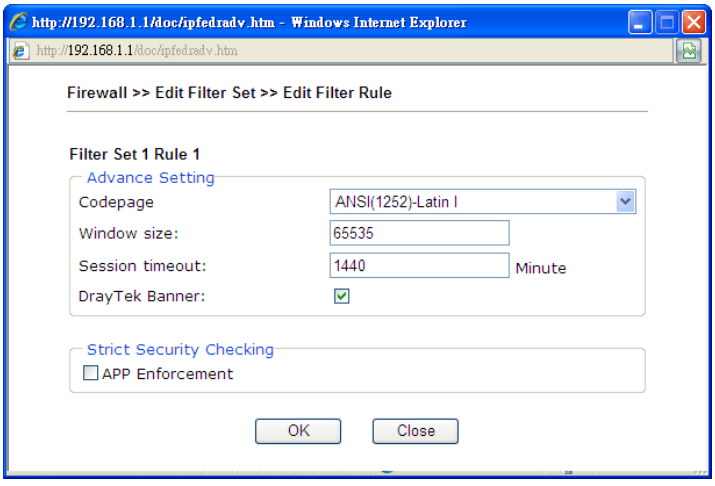 **Codepage** - This function is used to compare the characters among different languages. Choose correct codepage can help the system obtaining correct ASCII after decoding data from URL and enhance the correctness of URL Content

Filter. The default value for this setting is ANSI 1252 Latin I. If you do not choose any codepage, no decoding job of URL will be processed. Please use the drop-down list to choose a codepage.

If you do not have any idea of choosing suitable codepage, please open Syslog. From Codepage Information of Setup dialog, you will see the recommended codepage listed on the dialog box.

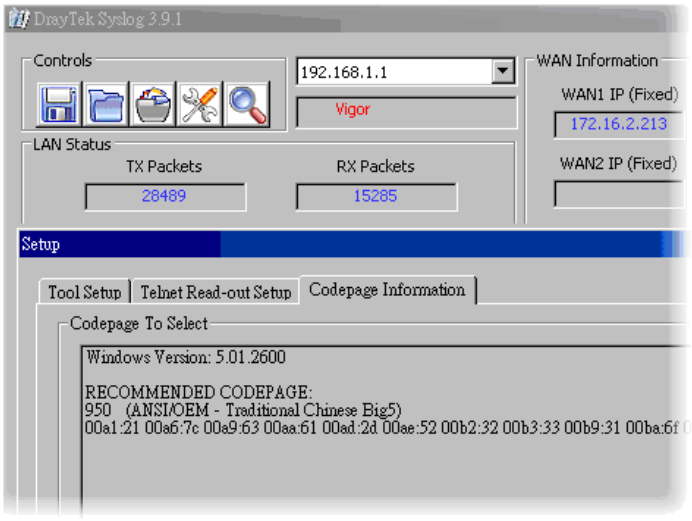

Window size – It determines the size of TCP protocol (0~65535). The more the value is, the better the performance will be. However, if the network is not stable, small value will be proper.

Session timeout–Setting timeout for sessions can make the best utilization of network resources. However, Queue timeout is configured for TCP protocol only; session timeout is configured for the data flow which matched with the firewall rule.

DrayTek Banner – Please uncheck this box and the following screen will not be shown for the unreachable web page. The default setting is Enabled.

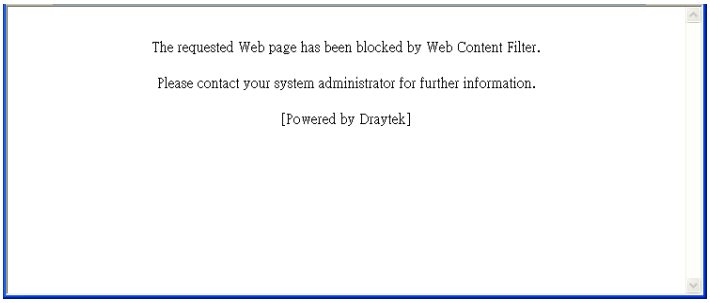
The requested Web page has been blocked by Web Content Filter.
Please contact your system administrator for further information.
[Powered by Draytek]

Strict Security Checking - All the packets, while transmitting through Vigor router, will be filtered by firewall settings configured by Vigor router. When the resource is inadequate, the packets will be blocked if Strict Security Checking is enabled. If Strict Security Checking is not enabled, then the packets will pass through the router.

Example

As stated before, all the traffic will be separated and arbitrated using on of two IP filters: call filter or data filter. You may preset 12 call filters and data filters in **Filter Setup** and even link them in a serial manner. Each filter set is composed by 7 filter rules, which can be further defined. After that, in **General Setup** you may specify one set for call filter and one set for data filter to execute first.

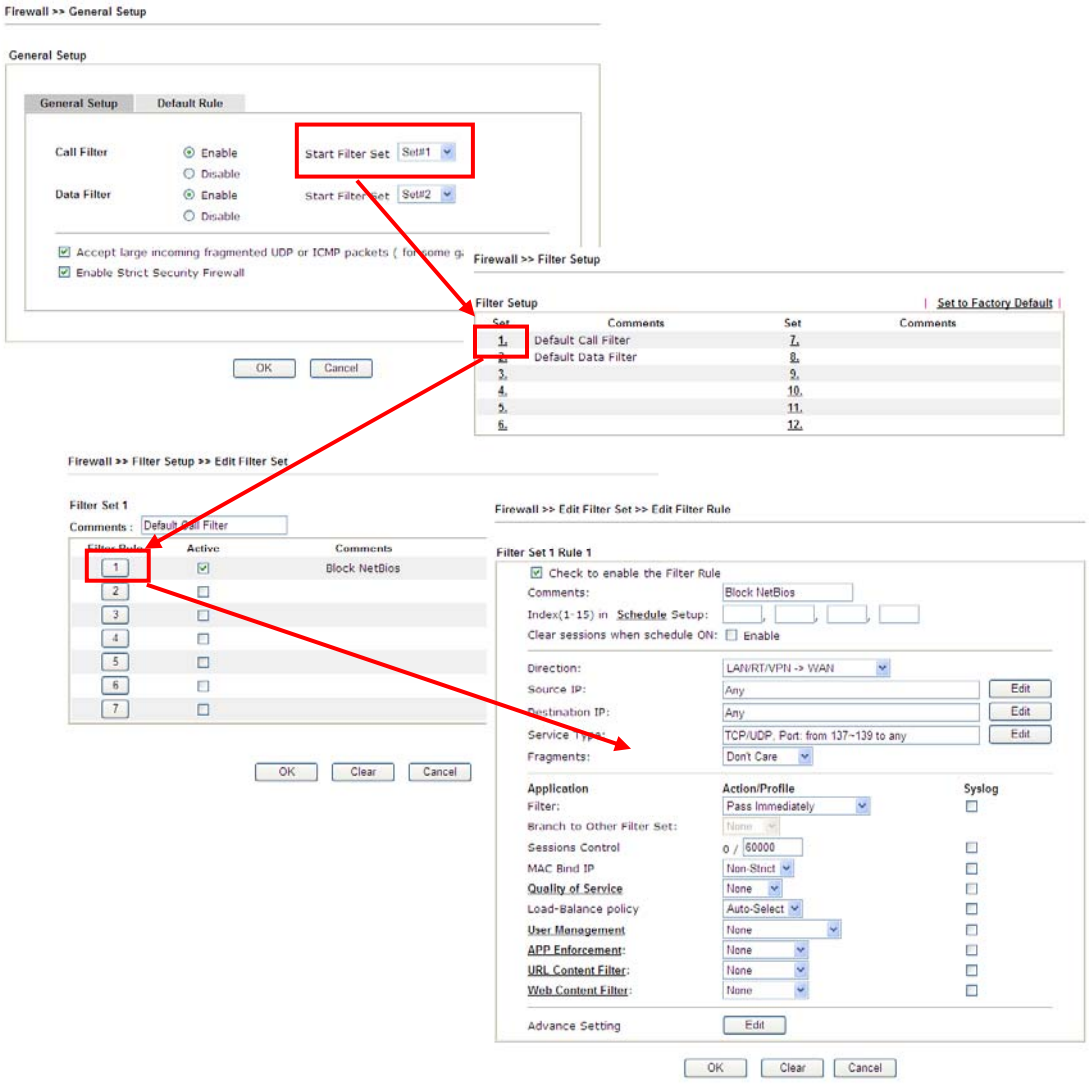

3.4.4 DoS Defense

As a sub-functionality of IP Filter/Firewall, there are 15 types of detect/ defense function in the **DoS Defense** setup. The DoS Defense functionality is disabled for default.

Click **Firewall** and click **DoS Defense** to open the setup page.

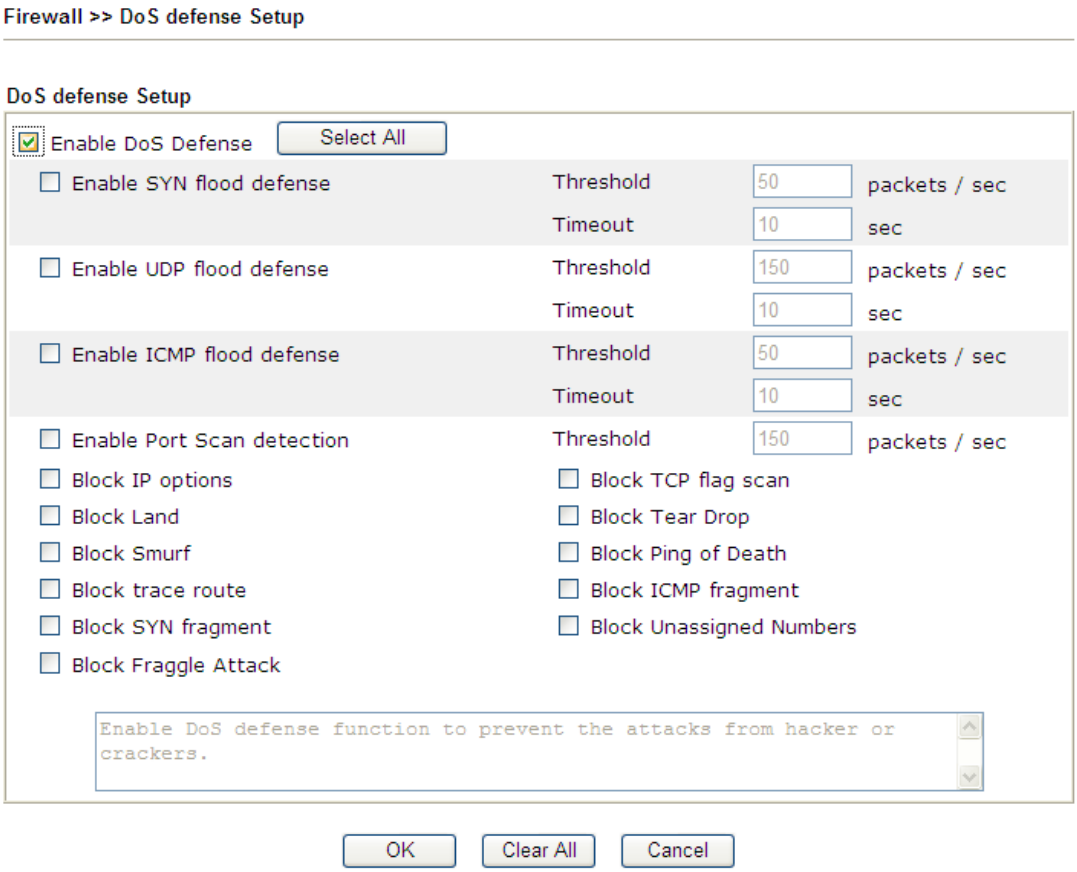

Available settings are explained as follows:

Item	Description
Enable Dos Defense	Check the box to activate the DoS Defense Functionality.
Select All	Click this button to select all the items listed below.
Enable SYN flood defense	Check the box to activate the SYN flood defense function. Once detecting the Threshold of the TCP SYN packets from the Internet has exceeded the defined value, the Vigor router will start to randomly discard the subsequent TCP SYN packets for a period defined in Timeout. The goal for this is prevent the TCP SYN packets' attempt to exhaust the limited-resource of Vigor router. By default, the threshold and timeout values are set to 50 packets per second and 10 seconds, respectively. That means, when 50 packets per second received, they will be regarded as "attack event" and the session will be paused for 10 seconds.
Enable UDP flood defense	Check the box to activate the UDP flood defense function. Once detecting the Threshold of the UDP packets from the Internet has exceeded the defined value, the Vigor router

	will start to randomly discard the subsequent UDP packets for a period defined in Timeout. The default setting for threshold and timeout are 150 packets per second and 10 seconds, respectively. That means, when 150 packets per second received, they will be regarded as “attack event” and the session will be paused for 10 seconds.
Enable ICMP flood defense	Check the box to activate the ICMP flood defense function. Similar to the UDP flood defense function, once if the Threshold of ICMP packets from Internet has exceeded the defined value, the router will discard the ICMP echo requests coming from the Internet. The default setting for threshold and timeout are 50 packets per second and 10 seconds, respectively. That means, when 50 packets per second received, they will be regarded as “attack event” and the session will be paused for 10 seconds.
Enable PortScan detection	Port Scan attacks the Vigor router by sending lots of packets to many ports in an attempt to find ignorant services would respond. Check the box to activate the Port Scan detection. Whenever detecting this malicious exploration behavior by monitoring the port-scanning Threshold rate, the Vigor router will send out a warning. By default, the Vigor router sets the threshold as 150 packets per second. That means, when 150 packets per second received, they will be regarded as “attack event”.
Block IP options	Check the box to activate the Block IP options function. The Vigor router will ignore any IP packets with IP option field in the datagram header. The reason for limitation is IP option appears to be a vulnerability of the security for the LAN because it will carry significant information, such as security, TCC (closed user group) parameters, a series of Internet addresses, routing messages...etc. An eavesdropper outside might learn the details of your private networks.
Block Land	Check the box to enforce the Vigor router to defense the Land attacks. The Land attack combines the SYN attack technology with IP spoofing. A Land attack occurs when an attacker sends spoofed SYN packets with the identical source and destination addresses, as well as the port number to victims.
Block Smurf	Check the box to activate the Block Smurf function. The Vigor router will ignore any broadcasting ICMP echo request.
Block trace router	Check the box to enforce the Vigor router not to forward any trace route packets.
Block SYN fragment	Check the box to activate the Block SYN fragment function. The Vigor router will drop any packets having SYN flag and more fragment bit set.
Block Fraggle Attack	Check the box to activate the Block fraggle Attack function.

	Any broadcast UDP packets received from the Internet is blocked. Activating the DoS/DDoS defense functionality might block some legal packets. For example, when you activate the fraggle attack defense, all broadcast UDP packets coming from the Internet are blocked. Therefore, the RIP packets from the Internet might be dropped.
Block TCP flag scan	Check the box to activate the Block TCP flag scan function. Any TCP packet with anomaly flag setting is dropped. Those scanning activities include *no flag scan, FIN without ACK scan, SYN FINscan, Xmas scan* and *full Xmas scan*.
Block Tear Drop	Check the box to activate the Block Tear Drop function. Many machines may crash when receiving ICMP datagrams (packets) that exceed the maximum length. To avoid this type of attack, the Vigor router is designed to be capable of discarding any fragmented ICMP packets with a length greater than 1024 octets.
Block Ping of Death	Check the box to activate the Block Ping of Death function. This attack involves the perpetrator sending overlapping packets to the target hosts so that those target hosts will hang once they re-construct the packets. The Vigor routers will block any packets realizing this attacking activity.
Block ICMP Fragment	Check the box to activate the Block ICMP fragment function. Any ICMP packets with more fragment bit set are dropped.
Block Unassigned Numbers	Check the box to activate the Block Unknown Protocol function. Individual IP packet has a protocol field in the datagram header to indicate the protocol type running over the upper layer. However, the protocol types greater than 100 are reserved and undefined at this time. Therefore, the router should have ability to detect and reject this kind of packets.
Warning Messages	We provide Syslog function for user to retrieve message from Vigor router. The user, as a Syslog Server, shall receive the report sending from Vigor router which is a Syslog Client. All the warning messages related to **DoS Defense** will be sent to user and user can review it through Syslog daemon. Look for the keyword **DoS** in the message, followed by a name to indicate what kind of attacks is detected.

System Maintenance >> SysLog / Mail Alert Setup

SysLog / Mail Alert Setup

SysLog Access Setup

- Enable
- Syslog Save to:
  - Syslog Server
  - USB Disk
- Router Name
- Server IP Address
- Destination Port: 514
- Mail Syslog: Enable
- Enable syslog message:
  - Firewall Log
  - User Access Log
  - WAN Log
  - Router/DSL information
- **AlertLog Setup**
  - Enable
  - AlertLog Port: 514

Mail Alert Setup

- Enable — Send a test e-mail
- SMTP Server
- SMTP Port: 25
- Mail To
- Return-Path
- Authentication
  - User Name
  - Password
- Enable E-Mail Alert:
  - DoS Attack
  - IM-P2P
  - VPN LOG

Note: 1. Mail Syslog cannot be activated unless USB Disk is ticked for "Syslog Save to".
2. Mail Syslog feature sends a Syslog file when its size reaches 1M Bytes.

OK Clear

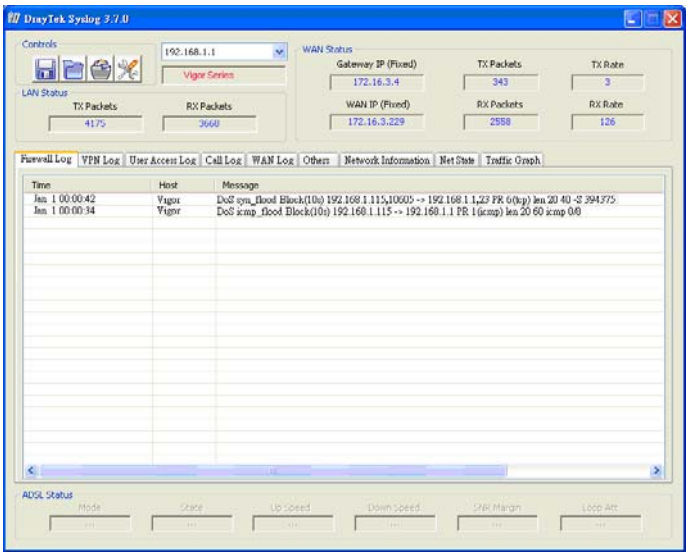

3.5 User Management

User Management is a security feature which disallows any IP traffic (except DHCP-related packets) from a particular host until that host has correctly supplied a valid username and password. Instead of managing with IP address/MAC address, User Management function manages hosts with user account. Network administrator can give different firewall policies or rules for different hosts with different User Management accounts. This is more flexible and convenient for network management. Not only offering the basic checking for Internet access, User Management also provides additional firewall rules, e.g. CSM checking for protecting hosts.

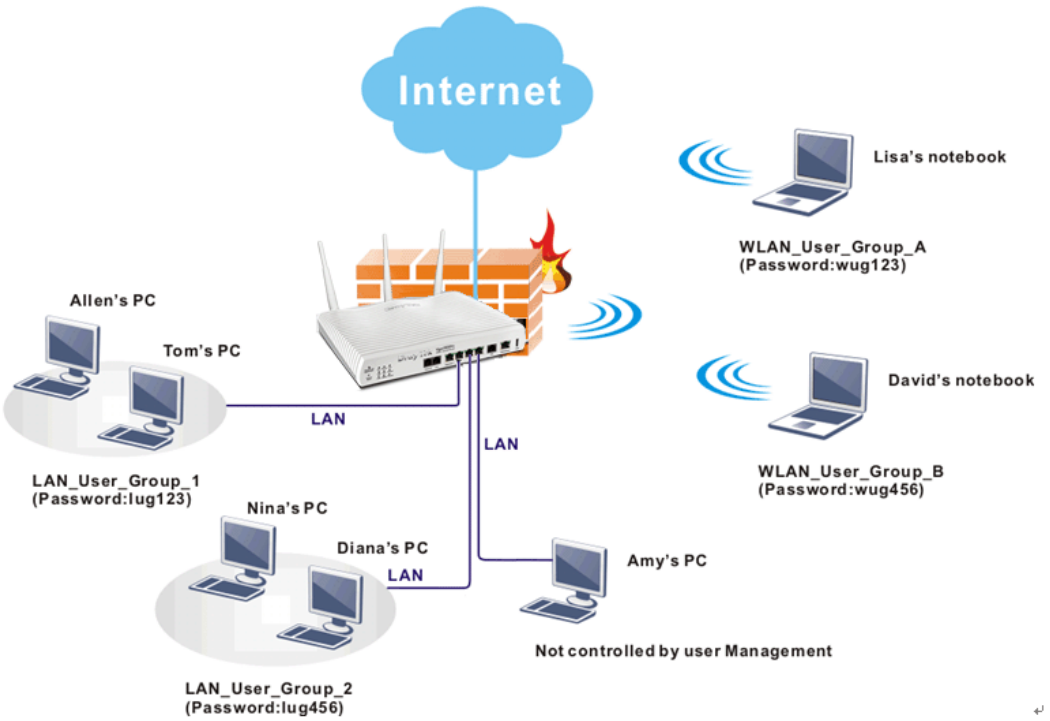

Note: Filter rules configured under Firewall usually are applied to the host (the one that the router installed) only. With user management, the rules can be applied to every user connected to the router with customized profiles.

Note: If **Transparency Mode** is selected in **Firewall>>General Setup**, User Management cannot be used any more. Please uncheck Transparency Mode first if you want to utilize user management to handle users in LAN, WAN or WLAN.

3.5.1 General Setup

General Setup can determine the standard (rule-based or user-based) for the users controlled by User Management. The mode (standard) selected here will influence the contents of the filter rule(s) applied to every user.

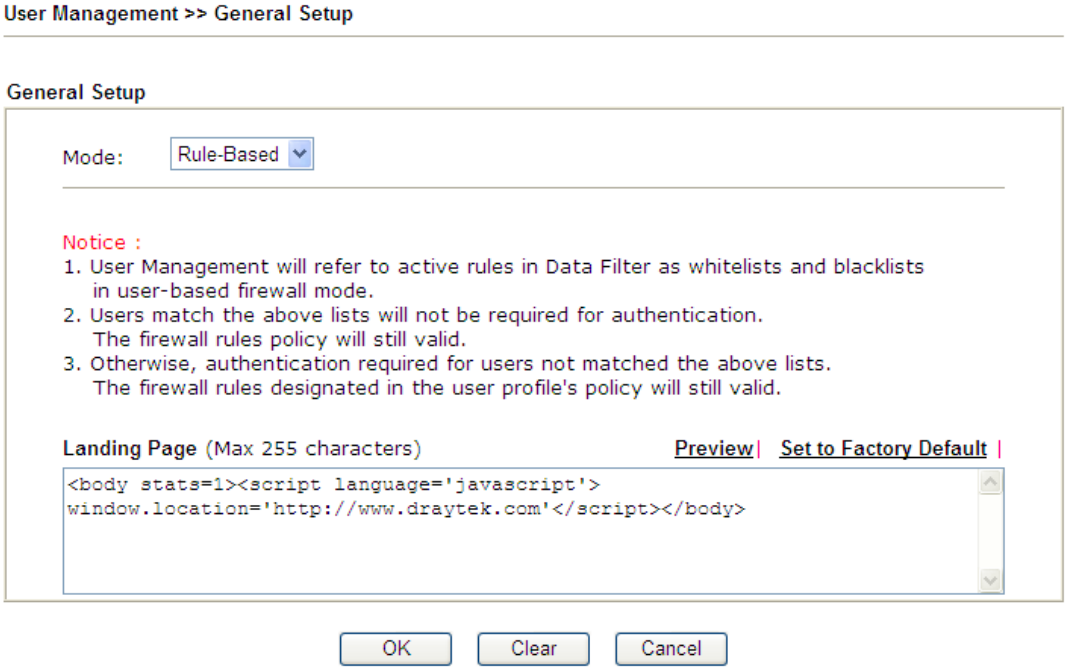
User Management >> General Setup
General Setup
Mode:
Rule-Based
Notice :
1. User Management will refer to active rules in Data Filter as whitelists and blacklists in user-based firewall mode.
2. Users match the above lists will not be required for authentication. The firewall rules policy will still valid.
3. Otherwise, authentication required for users not matched the above lists. The firewall rules designated in the user profile's policy will still valid.
Landing Page (Max 255 characters)
Preview | Set to Factory Default |
<body stats=1><script language='javascript'>
window.location='http://www.draytek.com'</script></body>
OK
Clear
Cancel

Available settings are explained as follows:

Item	Description
Mode	There are two modes offered here for you to choose. Each mode will bring different filtering effect to the users involved. **User-Based** - If you choose such mode, the router will apply the filter rules configured in **User Management>>User Profile** to the users. **Rule-Based** –If you choose such mode, the router will apply the filter rules configured in **Firewall>>General Setup** and **Filter Rule** to the users.
Landing Page	Type the information to be displayed on the first web page when the LAN user accessing into Internet via such router.

After finishing all the settings here, please click **OK** to save the configuration.

3.5.2 User Profile

This page allows you to set customized profiles (up to 200) which will be applied for users controlled under **User Management**. Simply open **User Management>>User Profile**.

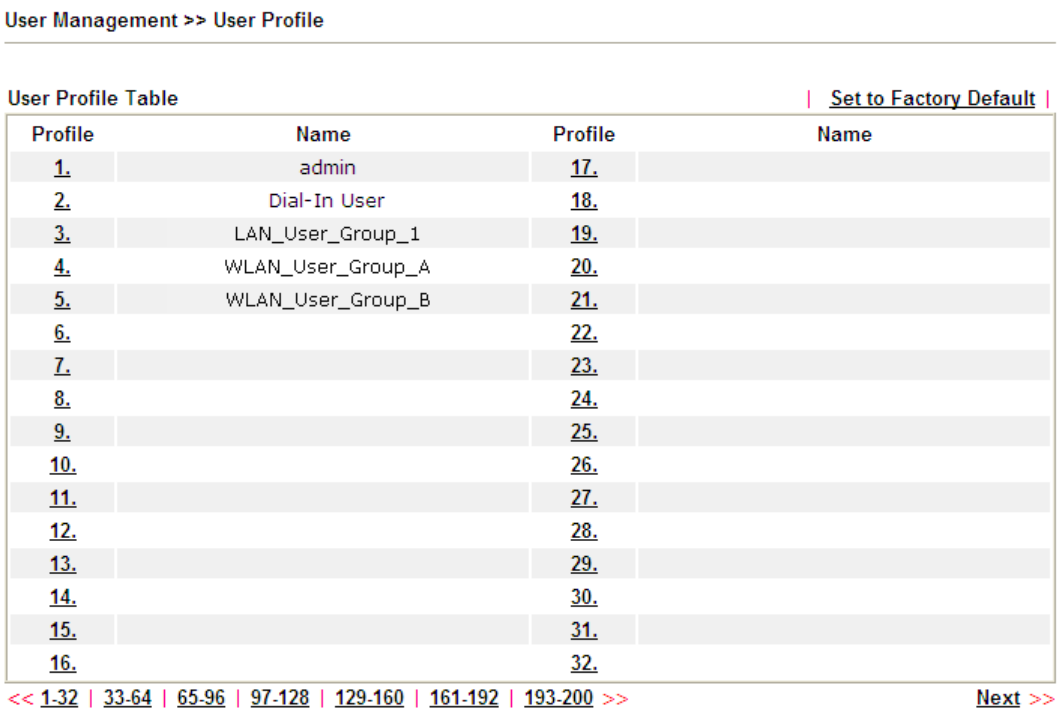

To set the user profile, please click any index number link to open the following page. Notice that profile 1 (**admin**) and profile 2 **(Dial-In User)** are factory default settings. Profile 2 is reserved for future use.

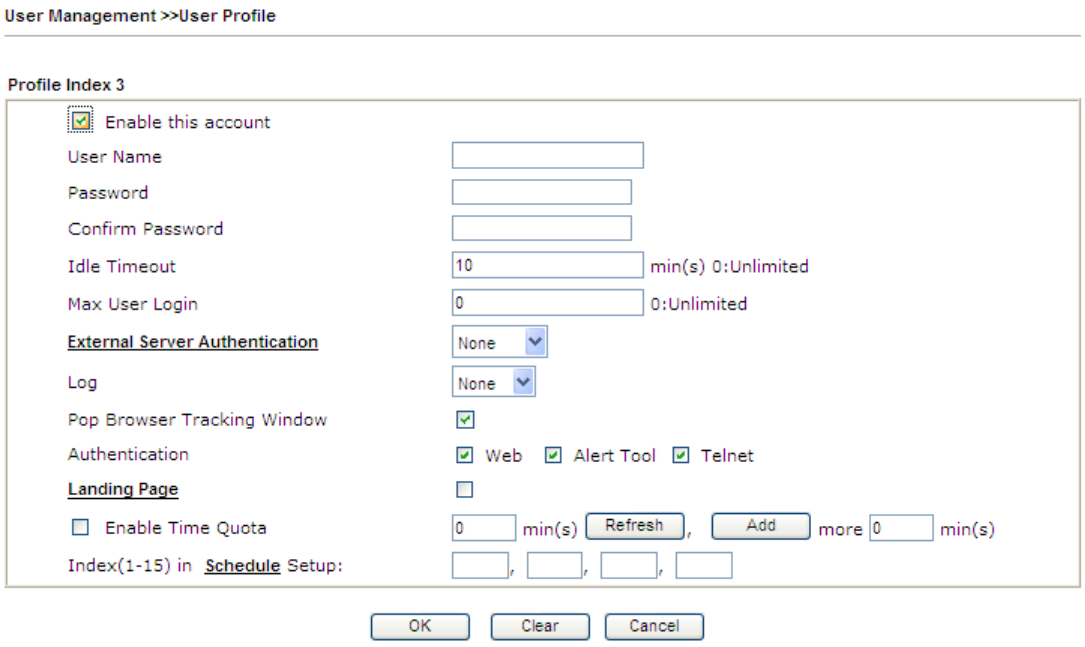

Available settings are explained as follows:

Item	Description
Enable this account	Check this box to enable such user profile.
User Name	Type a name for such user profile (e.g., *LAN_User_Group_1, WLAN_User_Group_A, WLAN_User_Group_B,* etc). When a user tries to access Internet through this router, an authentication step must be performed first. The user has to type the User Name specified here to pass the authentication. When the user passes the authentication, he/she can access Internet via this router. However the accessing operation will be restricted with the conditions configured in this user profile. The maximum length of the name you can set is 24 characters.
Password	Type a password for such profile (e.g., *lug123, wug123,wug456,* etc). When a user tries to access Internet through this router, an authentication step must be performed first. The user has to type the password specified here to pass the authentication. When the user passes the authentication, he/she can access Internet via this router with the limitation configured in this user profile. The maximum length of the password you can set is 24 characters.
Confirm Password	Type the password again for confirmation.
Idle Timeout	If the user is idle over the limitation of the timer, the **network connection will be stopped for such user.** By default, the Idle Timeout is set to 10 minutes.
Max User Login	Such profile can be used by many users. You can set the limitation for the number of users accessing Internet with the conditions of such profile. The default setting is 0 which means no limitation in the number of users.
Policy	It is available only when **User-Based** mode selected in **User Management>>General Setup**. 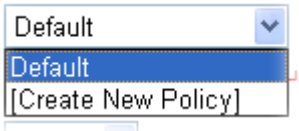 **Default** – If you choose such item, the filter rules pre-configured in **Firewall** can be adopted for such user profile. **Create New Policy** – If you choose such item, the following page will be popped up for you to define another filter rule as a new policy.

	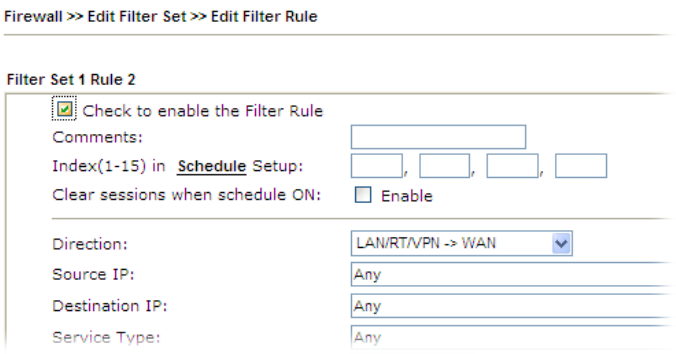 For the detailed configuration, simply refer to **Firewall>>Filter Rule**. The firewall filter rules that are not selected in **Firewall>>General>>Default rule** can be available for use in **User Management>>User Profile**.
External Service Authentication	The router will authenticate the dial-in user by itself or by external service such as LDAP server or Radius server. If LDAP or Radius is selected here, it is not necessary to configure the password setting above. 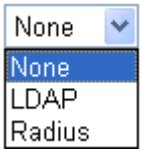
Log	Time of login/log out, block/unblock for the user(s) can be sent to and displayed in Syslog. Please choose any one of the log items to take down relational records for the user(s). 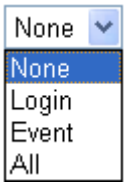
Pop Browser Tracking Window	If such function is enabled, a pop up window will be displayed on the screen with time remaining for connection if Idle Timeout is set. However, the system will update the time periodically to keep the connection always on. Thus, Idle Timeout will not interrupt the network connection.
Authentication	Any user (from LAN side or WLAN side) tries to connect to Internet via Vigor router must be authenticated by the router first. There are three ways offered by the router for the user to choose for authentication. **Web** – If it is selected, the use can type the URL of the router from any browser. Then, a login window will be popped up and ask the user to type the user name and password for authentication. If succeed, a **Welcome Message** (configured in **User Management >> General Setup)** will be displayed. After authentication, the destination URL (if requested by the user) will be guided automatically by the router. **Alert Tool** – If it is selected, the user can open Alert Tool and type the user name and password for authentication. A

	window with remaining time of connection for such user will be displayed. Next, the user can access Internet through any browser on Windows. Note that Alert Tool can be downloaded from DrayTek web site. **Telnet** – If it is selected, the user can use Telnet command to perform the authentication job.
Landing Page	When a user tries to access into the web user interface of Vigor router series with the user name and password specified in this profile, he/she will be lead into the web page configured in Landing Page field in **User Management>>General Setup**. Check this box to enable such function.
Enable Time Quota	Time quota means the total connection time allowed by the router for the user with such profile. Check the box to enable the function of time quota. The first box displays the remaining time of the network connection. The second box allows to type the number of time (unit is minute) which is available for the user (using such profile) to access Internet. **Refresh** – Click this button to recalculate the time quota. **Add** – Click this box to set the time quota for such profile.
Index (1-15) in Schedule Setup	You can type in four sets of time schedule for your request. All the schedules can be set previously in **Application >> Schedule** web page and you can use the number that you have set in that web page.

After finishing all the settings here, please click **OK** to save the configuration.

3.5.3 User Group

This page allows you to bind several user profiles into one group. These groups will be used in **Firewall>>General Setup** as part of filter rules.

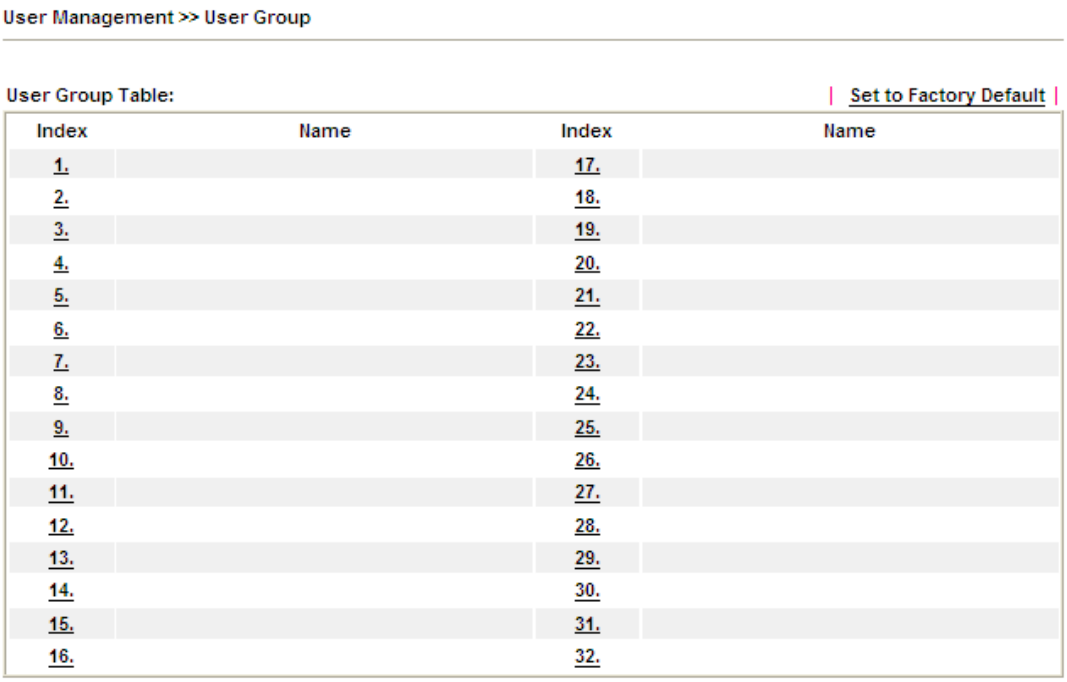

Please click any index number link to open the following page.

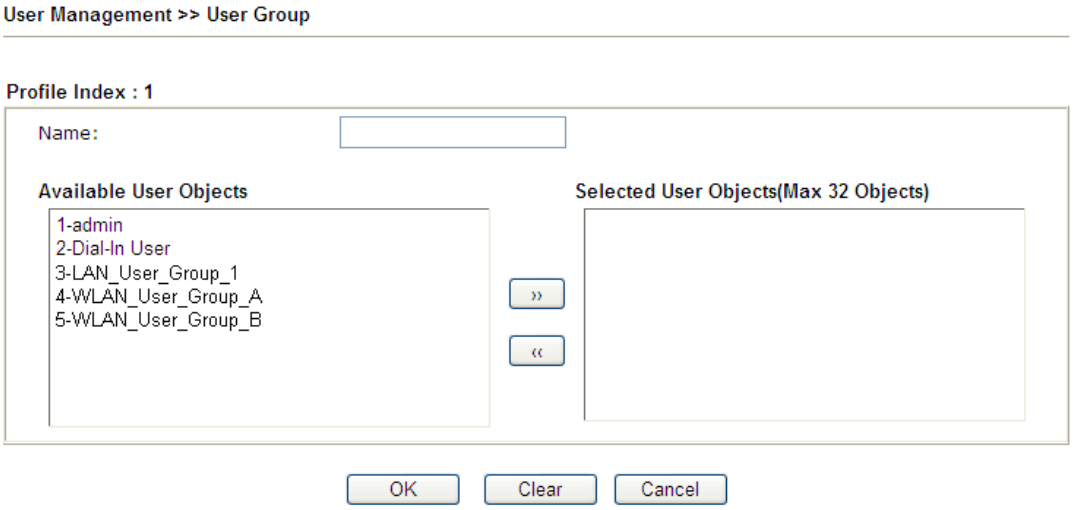

Available settings are explained as follows:

Item	Description
Name	Type a name for this user group.
Available User Objects	You can gather user profiles (objects) from **User Profile** page within one user group. All the available user objects that you have created will be shown in this box. Notice that user object, Admin and Dial-In User are factory settings. User defined profiles will be numbered with 3, 4, 5 and so on.
Selected Keyword Objects	Click » button to add the selected user objects in this box.

After finishing all the settings here, please click **OK** to save the configuration.

3.5.4 User Online Status

This page displays the user(s) connected to the router and refreshes the connection status in an interval of several seconds.

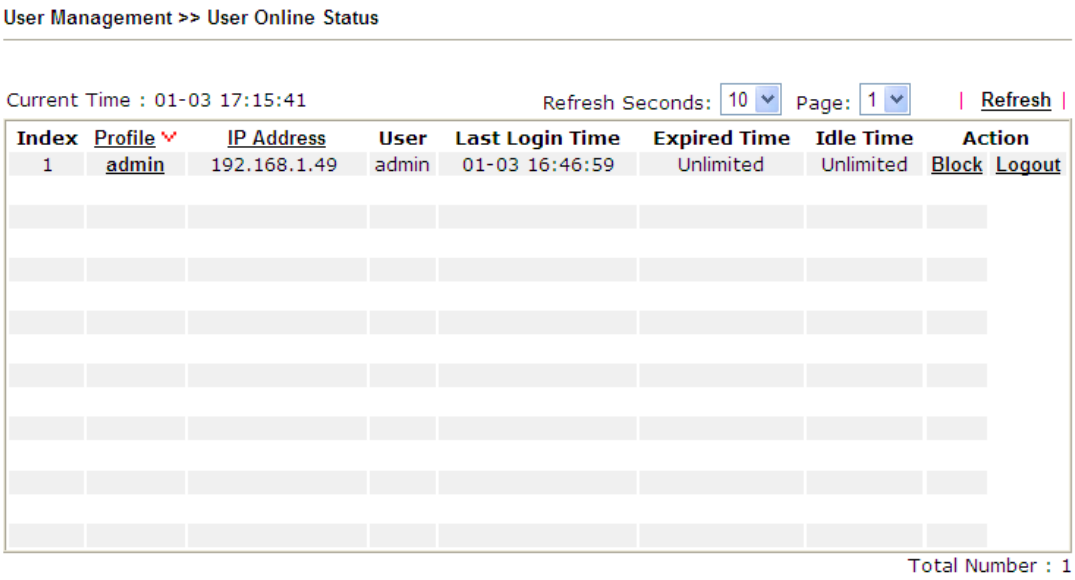

Available settings are explained as follows:

Item	Description
Refresh Seconds	Use the drop down list to choose the time interval of refreshing data flow that will be done by the system automatically. 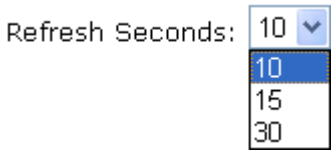
Refresh	Click this link to refresh this page manually.
Index	Display the number of the data flow.
Active User	Display the users which connect to Vigor router currently. You can click the link under the username to open the user profile setting page for that user.
IP Address	Display the IP address of the device.
Last Login Time	Display the login time that such user connects to the router last time.
Expired Time	Display the expired time of the network connection for the user.
Idle Time	Display the idle timeout setting for such profile.
Action	**Block** - can prevent specified user accessing into Internet. **Unblock** – the user will be blocked. **Logout** – the user will be logged out forcefully.

3.6 Objects Settings

For IPs in a range and service ports in a limited range usually will be applied in configuring router's settings, therefore we can define them with ***objects*** and bind them with ***groups*** for using conveniently. Later, we can select that object/group that can apply it. For example, all the IPs in the same department can be defined with an IP object (a range of IP address).

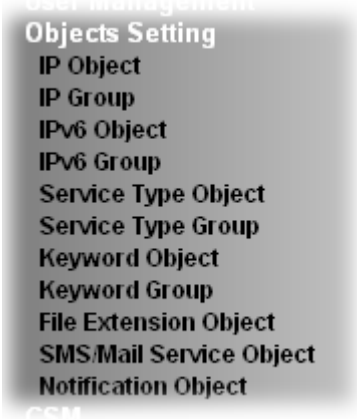

3.6.1 IP Object

You can set up to 192 sets of IP Objects with different conditions.

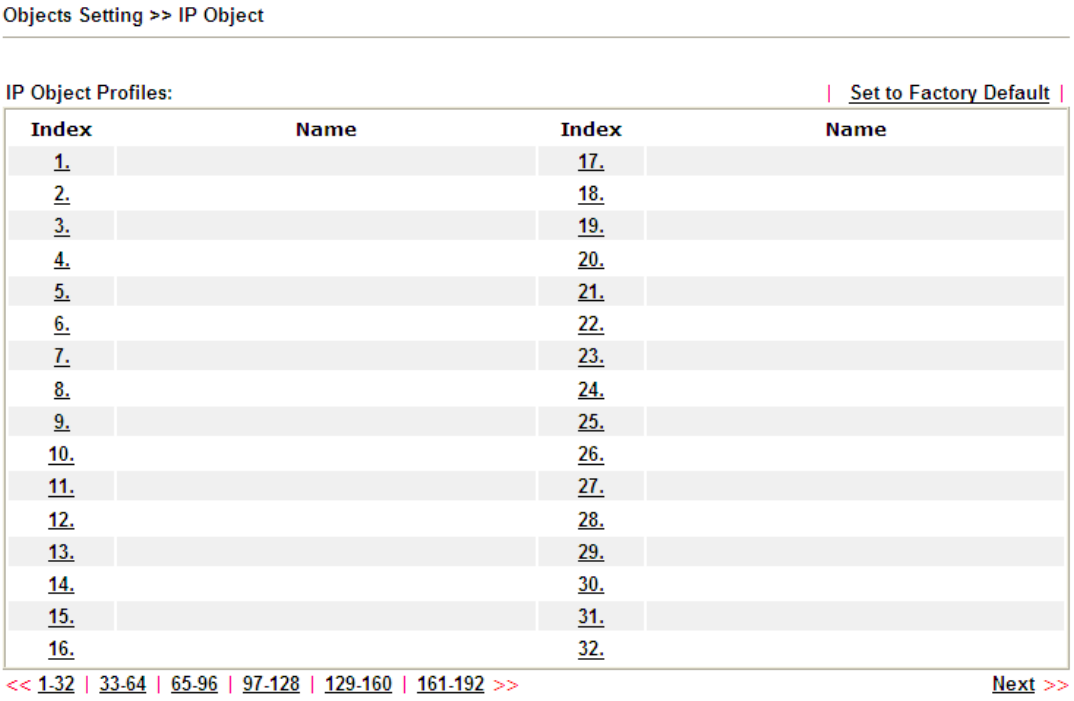

Available settings are explained as follows:

Item	Description
Set to Factory Default	Clear all profiles.
Index	Display the profile number that you can configure.
Name	Display the name of the object profile.

To set a new profile, please do the steps listed below:

1. Click the number (e.g., #1) under Index column for configuration in details.
2. The configuration page will be shown as follows:

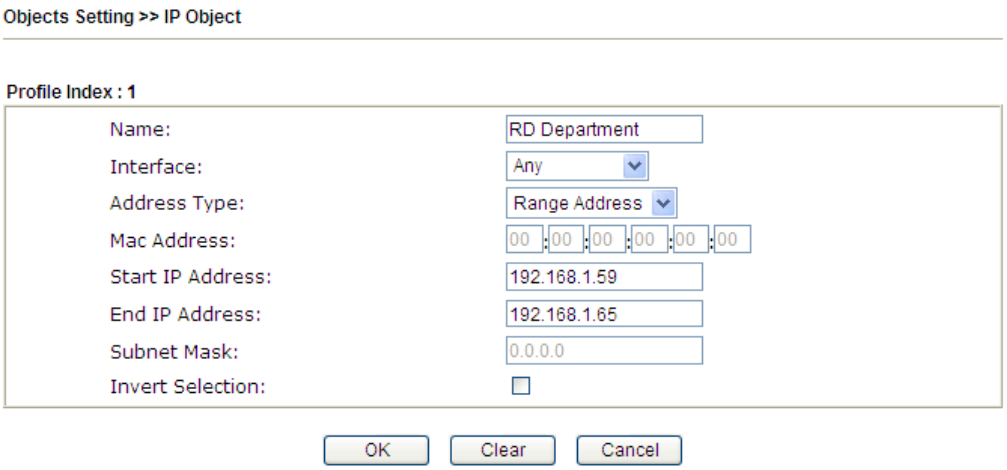

Available settings are explained as follows:

Item	Description
Name	Type a name for this profile. Maximum 15 characters are allowed.
Interface	Choose a proper interface. 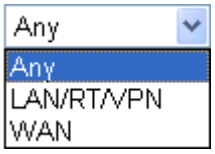 For example, the **Direction** setting in **Edit Filter Rule** will ask you specify IP or IP range for WAN or LAN or any IP address. If you choose LAN as the **Interface** here, and choose LAN as the direction setting in **Edit Filter Rule**, then all the IP addresses specified with LAN interface will be opened for you to choose in **Edit Filter Rule** page.
Address Type	Determine the address type for the IP address. Select **Single Address** if this object contains one IP address only. Select **Range Address** if this object contains several IPs within a range. Select **Subnet Address** if this object contains one subnet for IP address. Select **Any Address** if this object contains any IP address. Select **Mac Address** if this object contains Mac address. 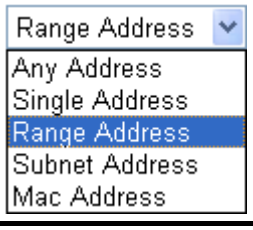

MAC Address	Type the MAC address of the network card which will be controlled.
Start IP Address	Type the start IP address for Single Address type.
End IP Address	Type the end IP address if the Range Address type is selected.
Subnet Mask	Type the subnet mask if the Subnet Address type is selected.
Invert Selection	If it is checked, all the IP addresses except the ones listed above will be applied later while it is chosen.

3. After finishing all the settings here, please click **OK** to save the configuration. Below is an example of IP objects settings.

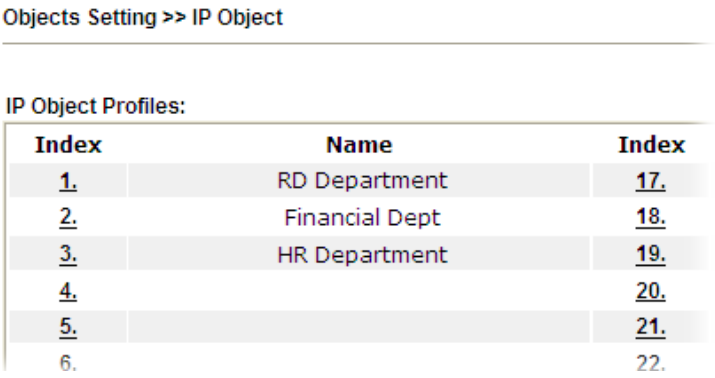

3.6.2 IP Group

This page allows you to bind several IP objects into one IP group.

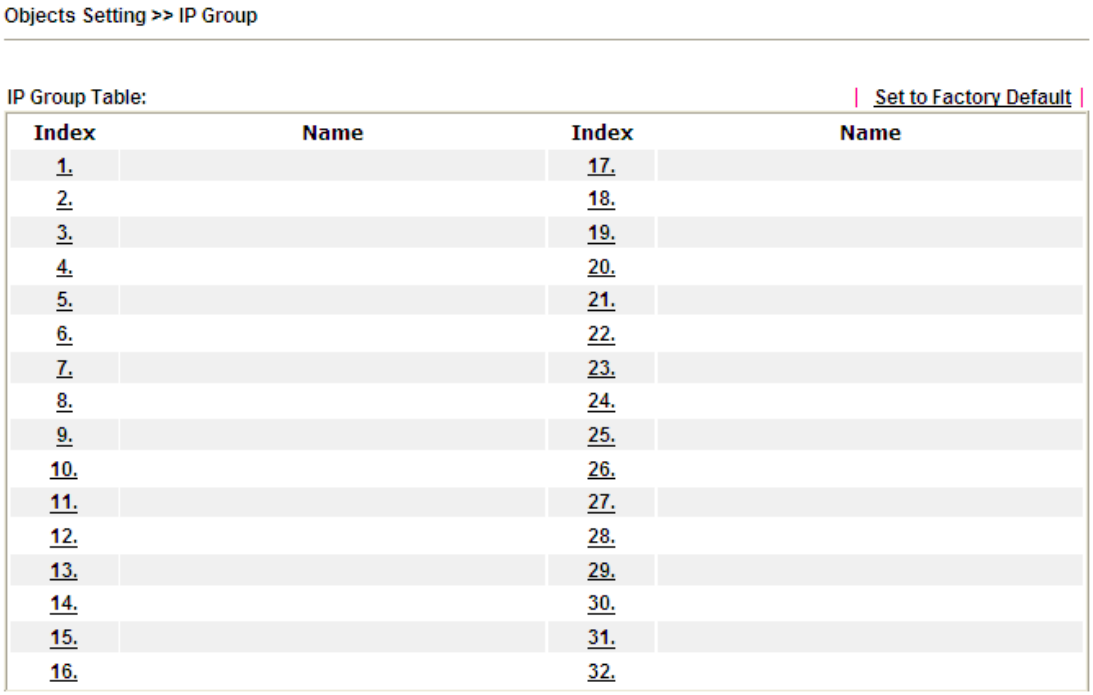

Available settings are explained as follows:

Item	Description
Set to Factory Default	Clear all profiles.
Index	Display the profile number that you can configure.
Name	Display the name of the group profile.

To set a new profile, please do the steps listed below:

1. Click the number (e.g., #1) under Index column for configuration in details.
2. The configuration page will be shown as follows:

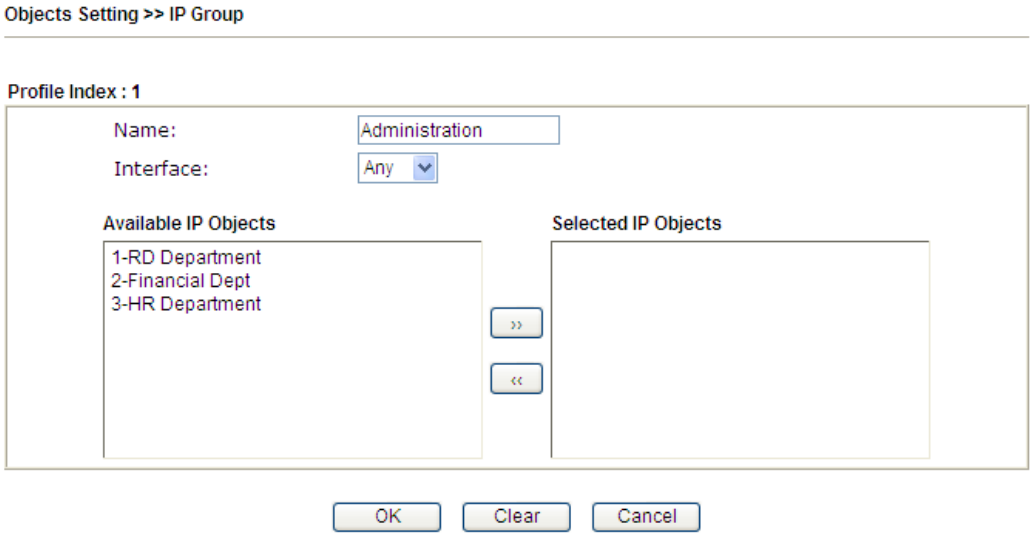

Available settings are explained as follows:

Item	Description
Name	Type a name for this profile. Maximum 15 characters are allowed.
Interface	Choose WAN, LAN or Any to display all the available IP objects with the specified interface.
Available IP Objects	All the available IP objects with the specified interface chosen above will be shown in this box.
Selected IP Objects	Click >> button to add the selected IP objects in this box.

3. After finishing all the settings here, please click **OK** to save the configuration.

3.6.3 IPv6 Object

You can set up to 64 sets of IPv6 Objects with different conditions.

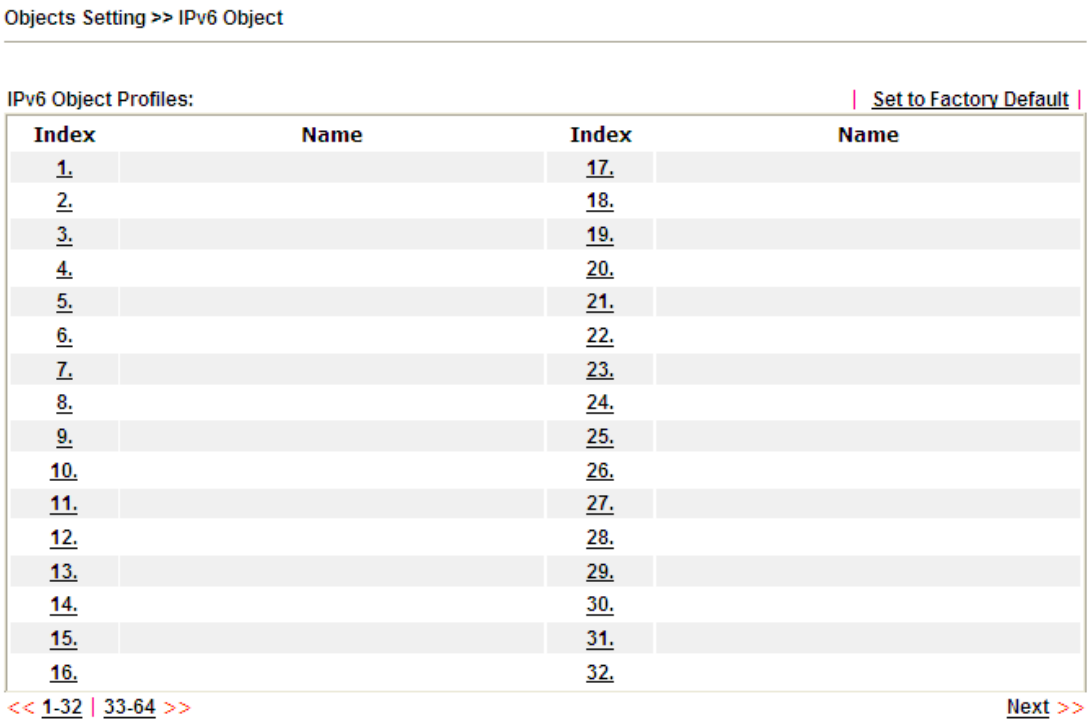

Available settings are explained as follows:

Item	Description
Set to Factory Default	Clear all profiles.
Index	Display the profile number that you can configure.
Name	Display the name of the object profile.

To set a new profile, please do the steps listed below:

1. Click the number (e.g., #1) under Index column for configuration in details.
2. The configuration page will be shown as follows:

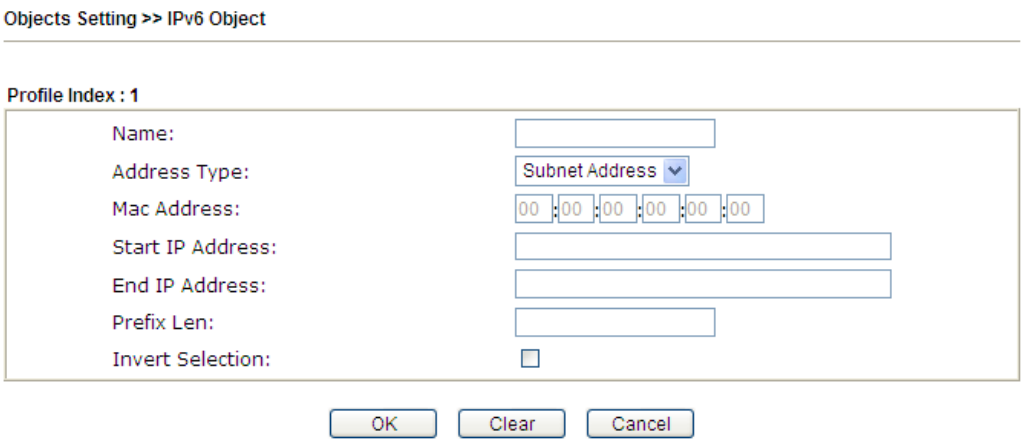

Available settings are explained as follows:

Item	Description
Name	Type a name for this profile. Maximum 15 characters are allowed.
Address Type	Determine the address type for the IPv6 address. Select **Single Address** if this object contains one IPv6 address only. Select **Range Address** if this object contains several IPv6s within a range. Select **Subnet Address** if this object contains one subnet for IPv6 address. Select **Any Address** if this object contains any IPv6 address. Select **Mac Address** if this object contains Mac address. 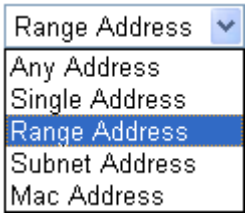
Mac Address	Type the MAC address of the network card which will be controlled.
Start IP Address	Type the start IP address for Single Address type.
End IP Address	Type the end IP address if the Range Address type is selected.
Prefix Len	Type the number (e.g., 64) for the prefix length of IPv6 address.
Invert Selection	If it is checked, all the IPv6 addresses except the ones listed above will be applied later while it is chosen.

3. After finishing all the settings, please click **OK** to save the configuration.

3.6.4 IPv6 Group

This page allows you to bind several IPv6 objects into one IPv6 group.

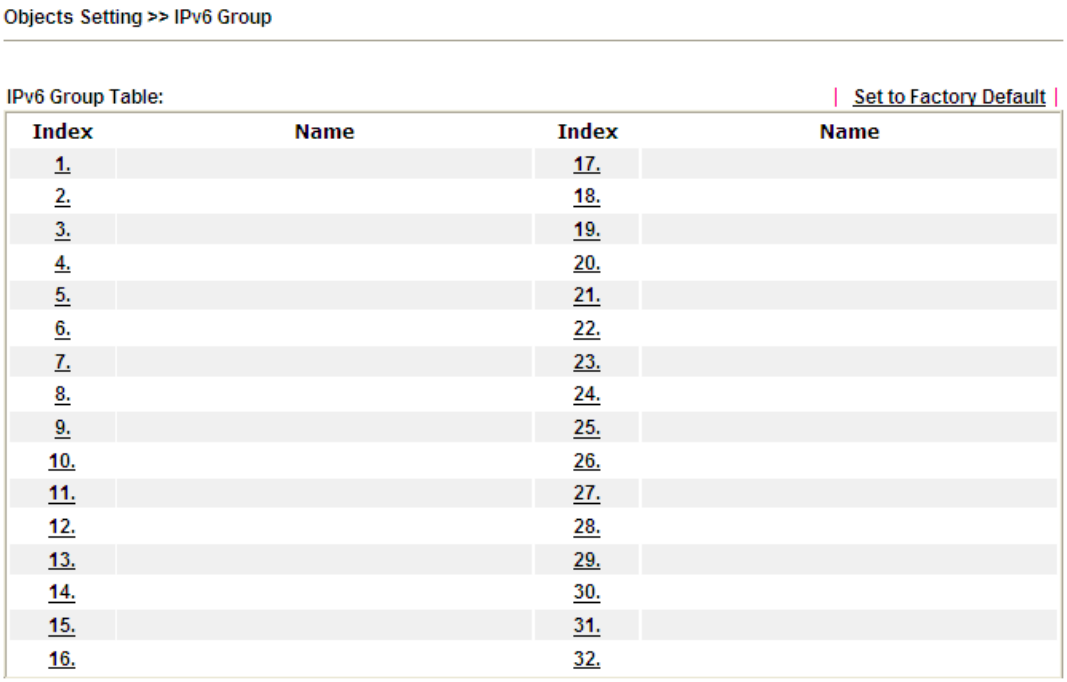

Available settings are explained as follows:

Item	Description
Set to Factory Default	Clear all profiles.
Index	Display the profile number that you can configure.
Name	Display the name of the group profile.

To set a new profile, please do the steps listed below:

1. Click the number (e.g., #1) under Index column for configuration in details.
2. The configuration page will be shown as follows:

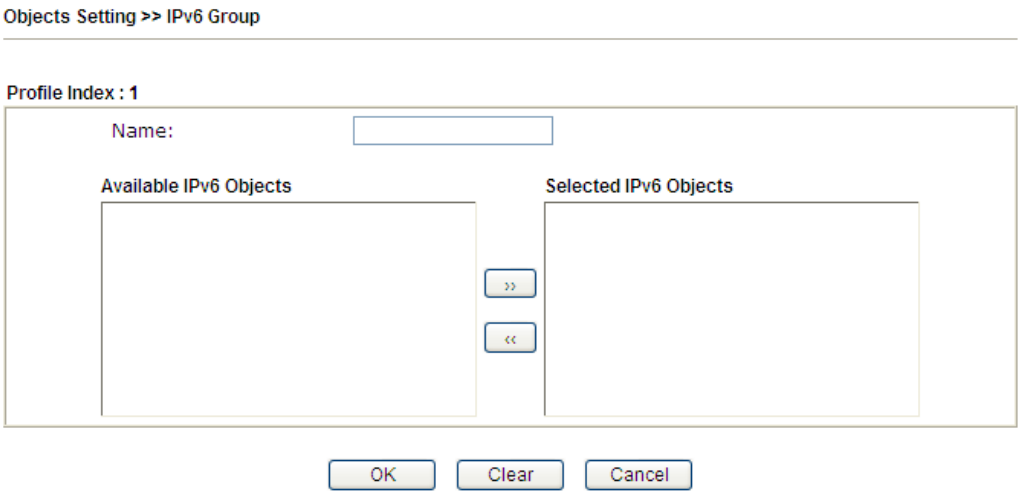

Available settings are explained as follows:

Item	Description
Name	Type a name for this profile. Maximum 15 characters are allowed.
Available IPv6 Objects	All the available IPv6 objects with the specified interface chosen above will be shown in this box.
Selected IPv6 Objects	Click >> button to add the selected IPv6 objects in this box.

3. After finishing all the settings, please click **OK** to save the configuration.

3.6.5 Service Type Object

You can set up to 96 sets of Service Type Objects with different conditions.

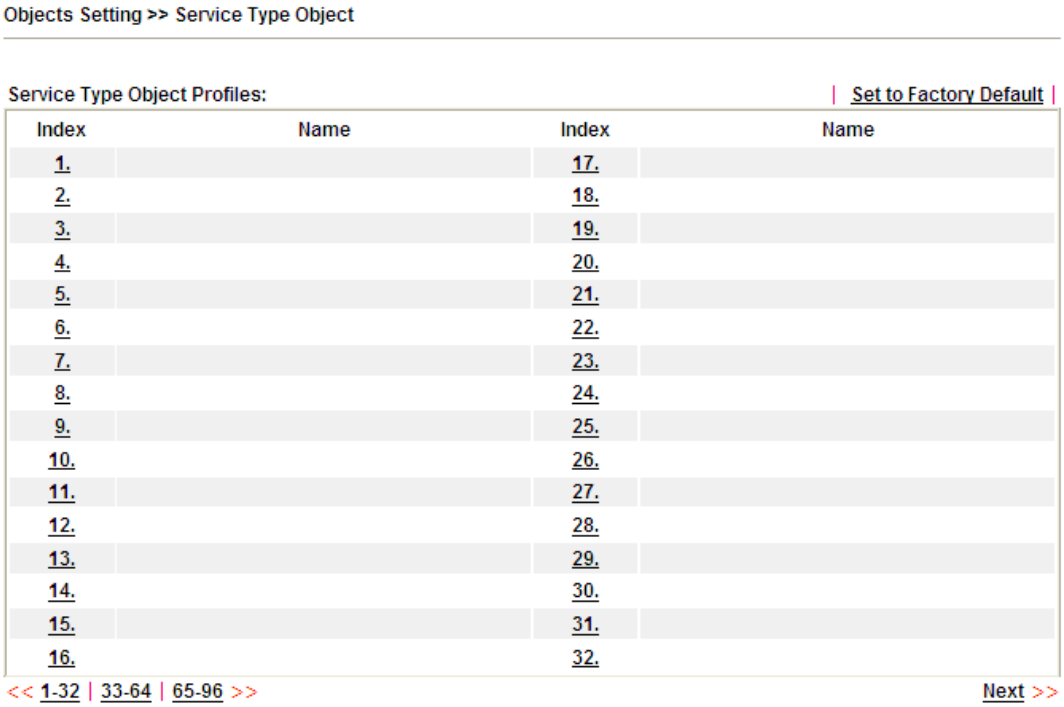

Available settings are explained as follows:

Item	Description
Set to Factory Default	Clear all profiles.
Index	Display the profile number that you can configure.
Name	Display the name of the object profile.

To set a new profile, please do the steps listed below:

1. Click the number (e.g., #1) under Index column for configuration in details.
2. The configuration page will be shown as follows:

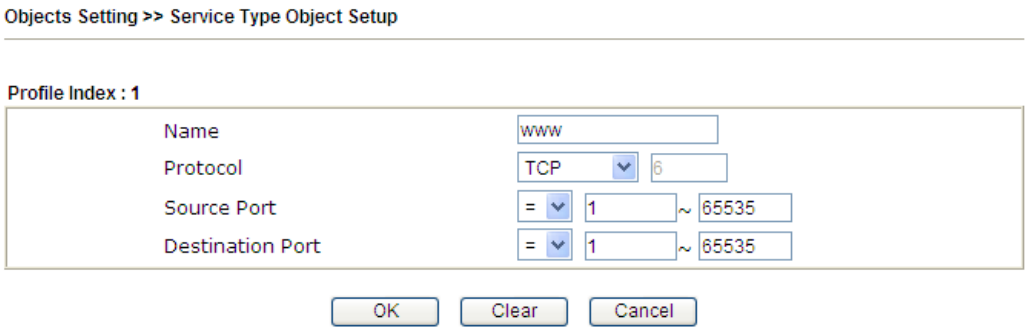

Available settings are explained as follows:

Item	Description
Name	Type a name for this profile. Maximum 15 characters are allowed.
Protocol	Specify the protocol(s) which this profile will apply to. TCP 6 Any ICMP IGMP TCP UDP TCP/UDP Other
Source/Destination Port	**Source Port** and the **Destination Port** column are available for TCP/UDP protocol. It can be ignored for other protocols. The filter rule will filter out any port number. ***(=)*** – when the first and last value are the same, it indicates one port; when the first and last values are different, it indicates a range for the port and available for this profile. ***(!=)*** – when the first and last value are the same, it indicates all the ports except the port defined here; when the first and last values are different, it indicates that all the ports except the range defined here are available for this service type. ***(>)*** – the port number greater than this value is available. ***(<)*** – the port number less than this value is available for this profile.

3. After finishing all the settings, please click **OK** to save the configuration.

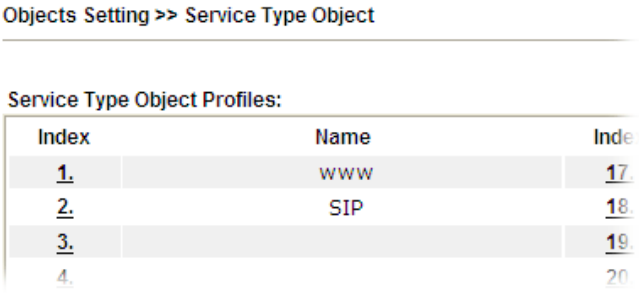

3.6.6 Service Type Group

This page allows you to bind several service types into one group.

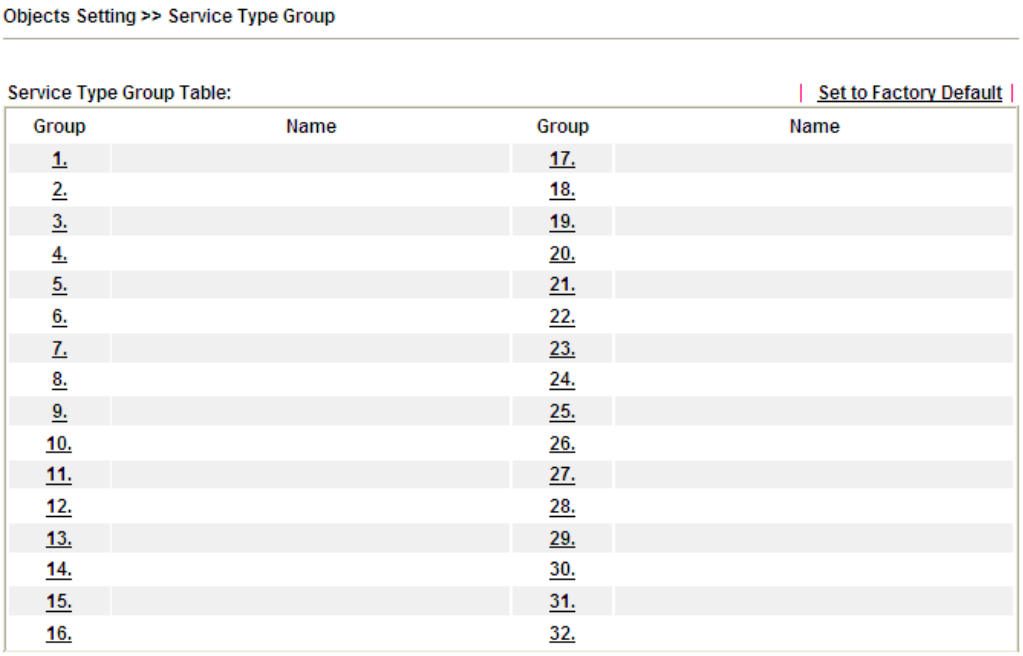

Available settings are explained as follows:

Item	Description
Set to Factory Default	Clear all profiles.
Index	Display the profile number that you can configure.
Name	Display the name of the group profile.

To set a new profile, please do the steps listed below:

1. Click the number (e.g., #1) under Group column for configuration in details.
2. The configuration page will be shown as follows:

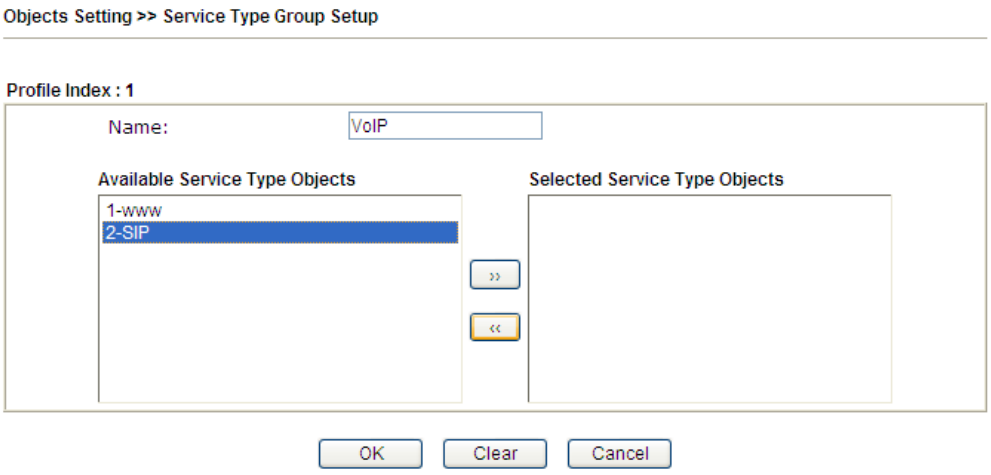

Available settings are explained as follows:

Item	Description
Name	Type a name for this profile. Maximum 15 characters are allowed.
Available Service Type Objects	All the available service objects that you have added on **Objects Setting>>Service Type Object** will be shown in this box.
Selected Service Type Objects	Click >> button to add the selected IP objects in this box.

3. After finishing all the settings, please click **OK** to save the configuration.

3.6.7 Keyword Object

You can set 200 keyword object profiles for choosing as black /white list in **CSM >>URL Web Content Filter Profile.**

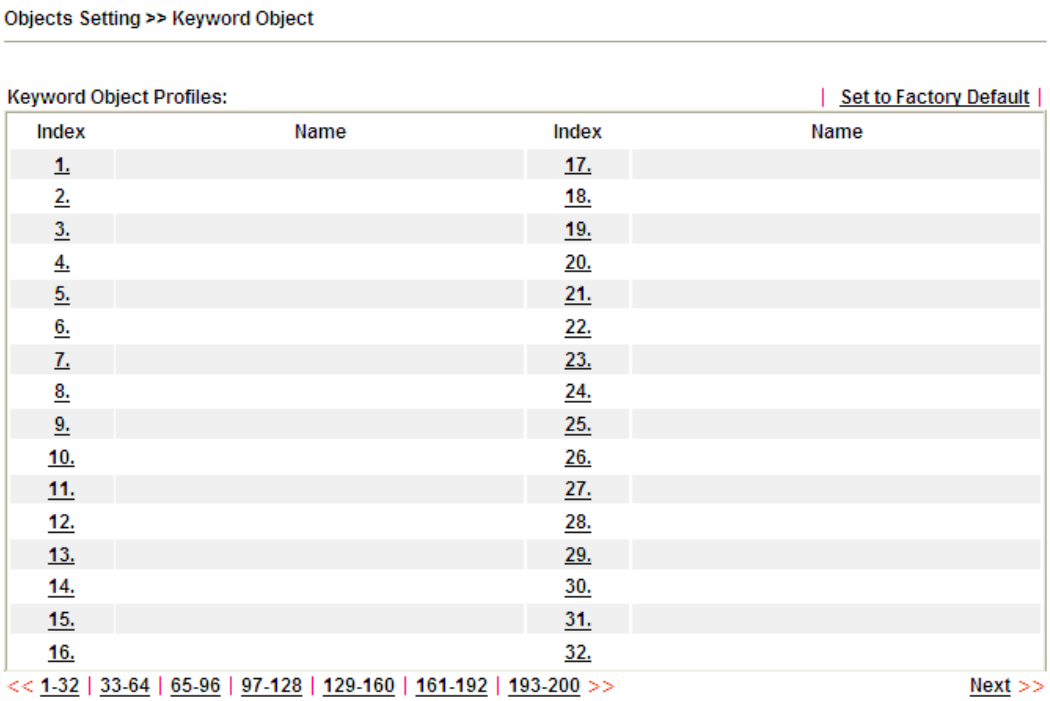

Available settings are explained as follows:

Item	Description
Set to Factory Default	Clear all profiles.
Index	Display the profile number that you can configure.
Name	Display the name of the object profile.

To set a new profile, please do the steps listed below:

1. Click the number (e.g., #1) under Index column for configuration in details.
2. The configuration page will be shown as follows:

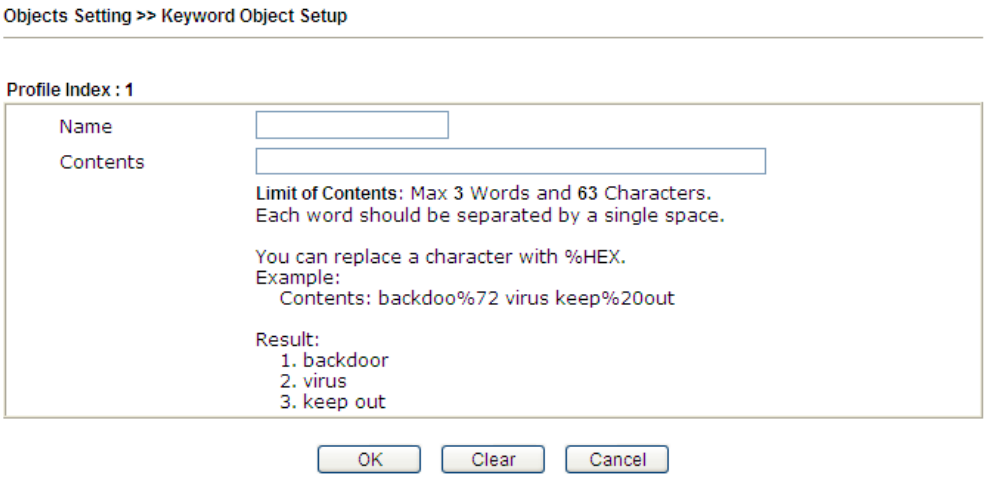

Available settings are explained as follows:

Item	Description
Name	Type a name for this profile, e.g., game. Maximum 15 characters are allowed.
Contents	Type the content for such profile. For example, type *gambling* as Contents. When you browse the webpage, the page with gambling information will be watched out and be passed/blocked based on the configuration on Firewall settings.

3. After finishing all the settings, please click **OK** to save the configuration.

3.6.8 Keyword Group

This page allows you to bind several keyword objects into one group. The keyword groups set here will be chosen as black /white list in **CSM >>URL /Web Content Filter Profile**.

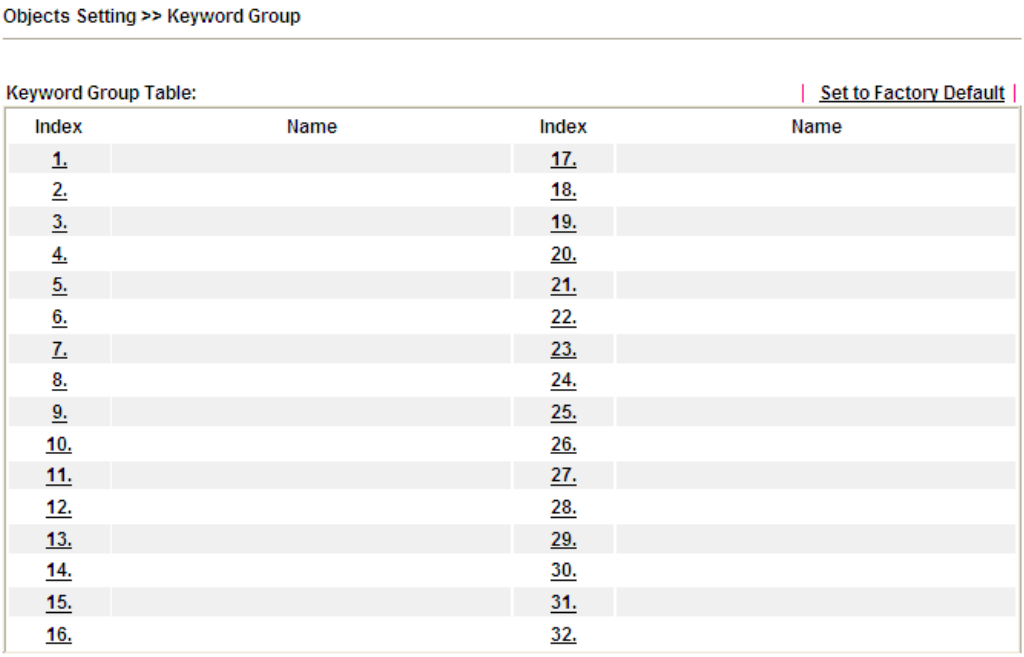

Available settings are explained as follows:

Item	Description
Set to Factory Default	Clear all profiles.
Index	Display the profile number that you can configure.
Name	Display the name of the group profile.

To set a new profile, please do the steps listed below:

1. Click the number (e.g., #1) under Index column for configuration in details.
2. The configuration page will be shown as follows:

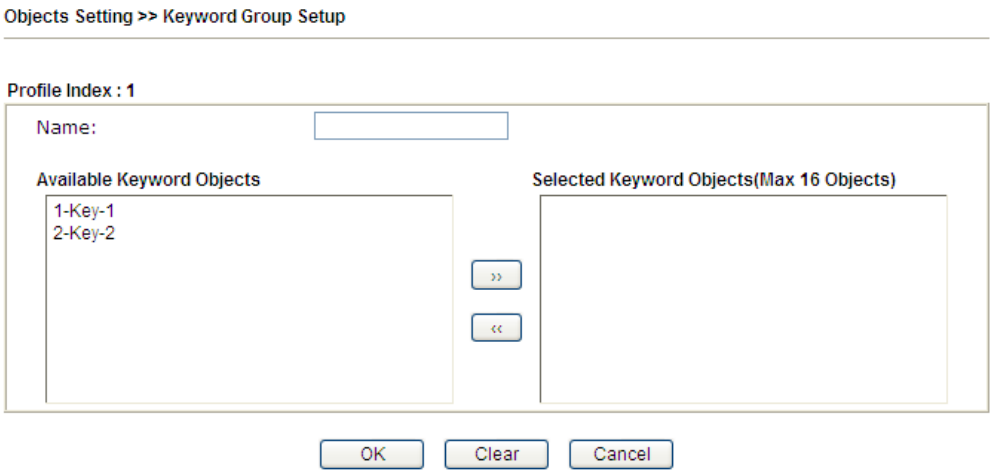

Available settings are explained as follows:

Item	Description
Name	Type a name for this group. Maximum 15 characters are allowed.
Available Keyword Objects	You can gather keyword objects from **Keyword Object** page within one keyword group. All the available Keyword objects that you have created will be shown in this box.
Selected Keyword Objects	Click » button to add the selected Keyword objects in this box.

3. After finishing all the settings, please click **OK** to save the configuration.

3.6.9 File Extension Object

This page allows you to set eight profiles which will be applied in **CSM>>URL Content Filter**. All the files with the extension names specified in these profiles will be processed according to the chosen action.

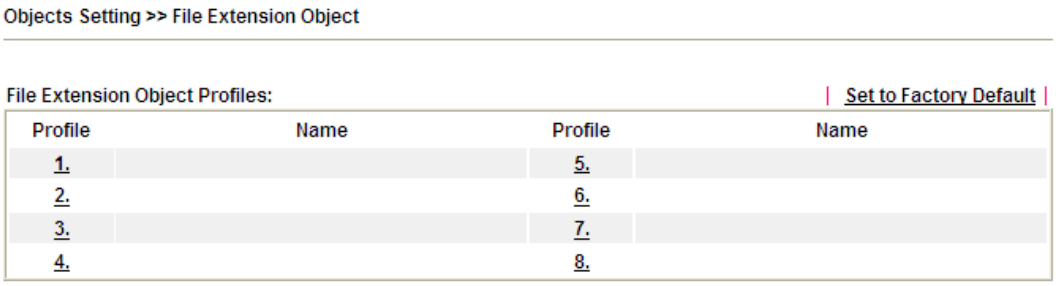

Available settings are explained as follows:

Item	Description
Set to Factory Default	Clear all profiles.
Index	Display the profile number that you can configure.
Name	Display the name of the object profile.

To set a new profile, please do the steps listed below:

1. Click the number (e.g., #1) under Profile column for configuration in details.
2. The configuration page will be shown as follows:

Available settings are explained as follows:

Item	Description
Profile Name	Type a name for this profile. The maximum length of the name you can set is 7 characters.

3. Type a name for such profile and check all the items of file extension that will be processed in the router. Finally, click **OK** to save this profile.

3.6.10 SMS/Mail Service Object

SMS Service Object

This page allows you to set ten profiles which will be applied in **Application>>SMS/Mail Alert Service**.

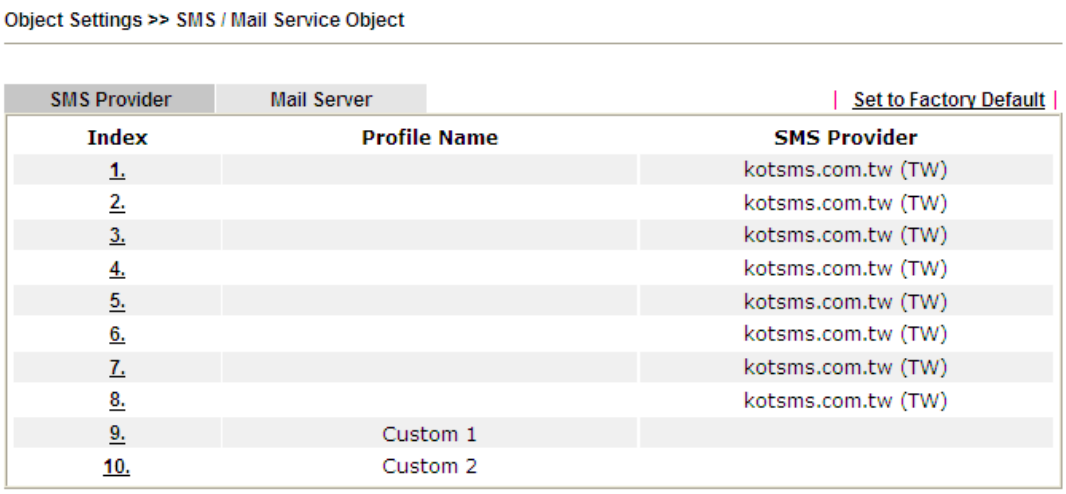

Each item is explained as follows:

Item	Description
Set to Factory Default	Clear all of the settings and return to factory default settings.
Index	Display the profile number that you can configure.
Profile	Display the name for such SMS profile.
SMS Provider	Display the service provider which offers SMS service.

To set a new profile, please do the steps listed below:

1. Click the **SMS Provider** tab, and click the number (e.g., #1) under Index column for configuration in details.

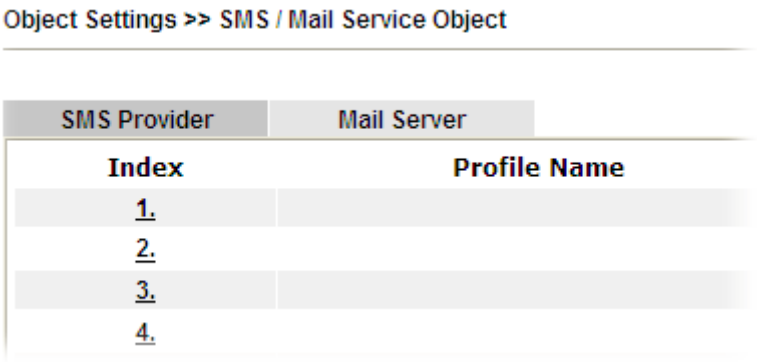

2. The configuration page will be shown as follows:

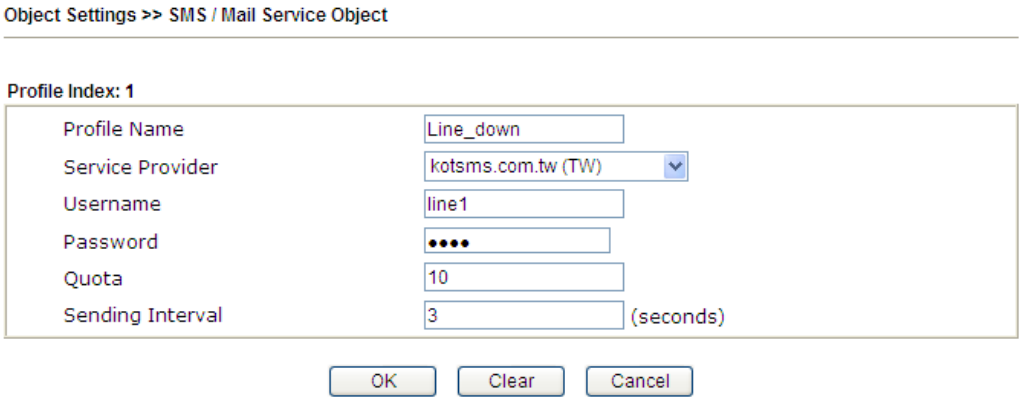

Available settings are explained as follows:

Item	Description
Profile Name	Type a name for such SMS profile. The maximum length of the name you can set is 31 characters.
Service Provider	Use the drop down list to specify the service provider which offers SMS service.
Username	Type a user name that the sender can use to register to selected SMS provider. The maximum length of the name you can set is 31 characters.
Password	Type a password that the sender can use to register to selected SMS provider. The maximum length of the password you can set is 31 characters.
Quota	Type the number of the credit that you purchase from the service provider chosen above. Note that one credit equals to one SMS text message on the standard route.
Sending Interval	To avoid quota being exhausted soon, type time interval for sending the SMS.

3. After finishing all the settings here, please click **OK** to save the configuration.

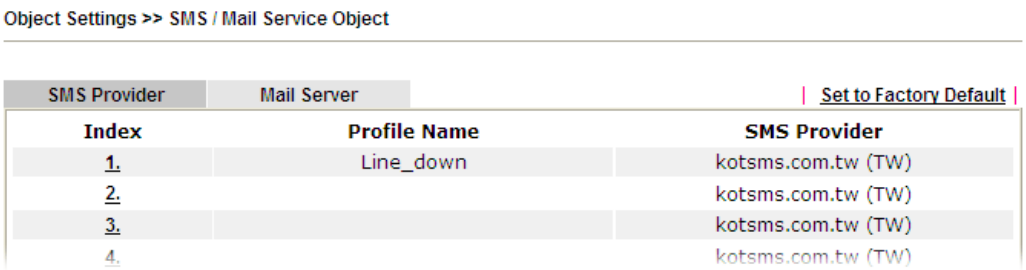

Customized SMS Service

Vigor router offers several SMS service provider to offer the SMS service. However, if your service provider cannot be found from the service provider list, simply use Index 9 and Index 10 to make customized SMS service. The profile name for Index 9 and Index 10 are fixed.

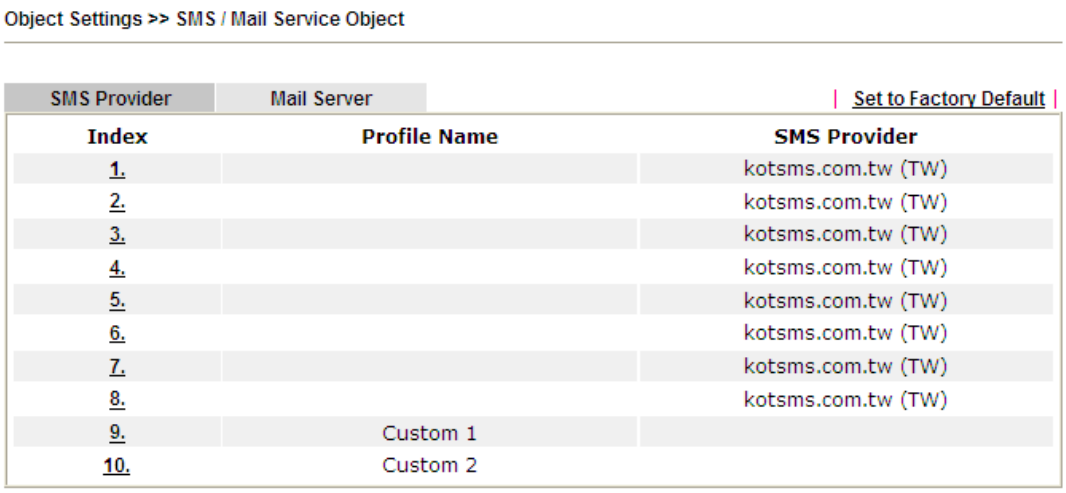

You can click the number (e.g., #9) under Index column for configuration in details.

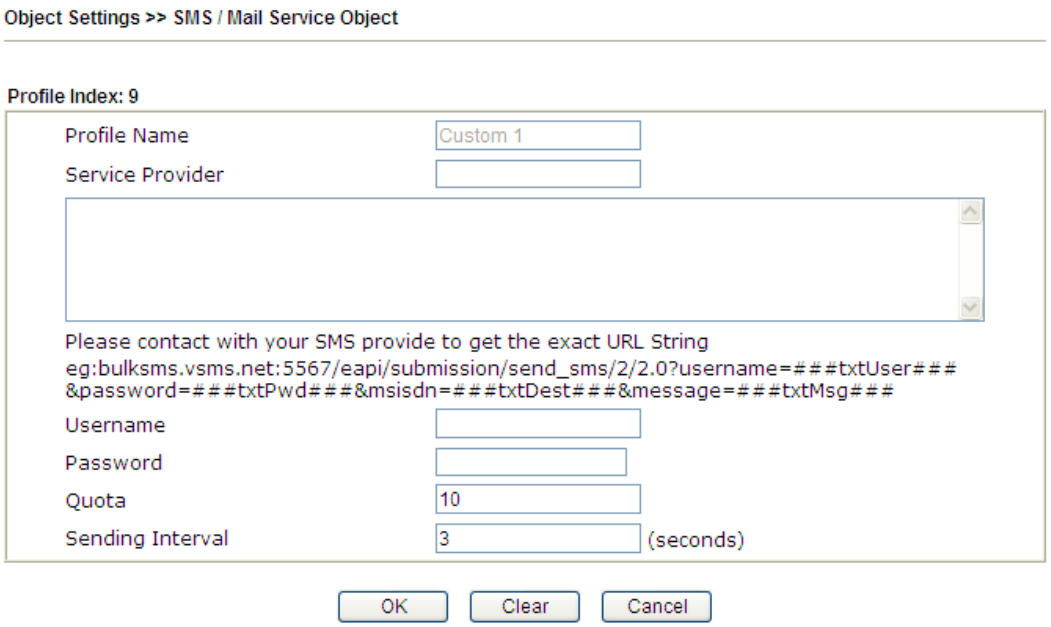

Available settings are explained as follows:

Item	Description
Profile Name	Display the name of this profile. It cannot be modified.
Service Provider	Type the website of the service provider. Type the URL string in the box under the filed of Service Provider. You have to contact your SMS provider to obtain the exact URL string.

Username	Type a user name that the sender can use to register to selected SMS provider. The maximum length of the name you can set is 31 characters.
Password	Type a password that the sender can use to register to selected SMS provider. The maximum length of the password you can set is 31 characters.
Quota	Type the total number of the messages that the router will send out.
Sending Interval	Type the shortest time interval for the system to send SMS.

After finishing all the settings here, please click **OK** to save the configuration.

Mail Service Object

This page allows you to set ten profiles which will be applied in **Application>>SMS/Mail Alert Service**.

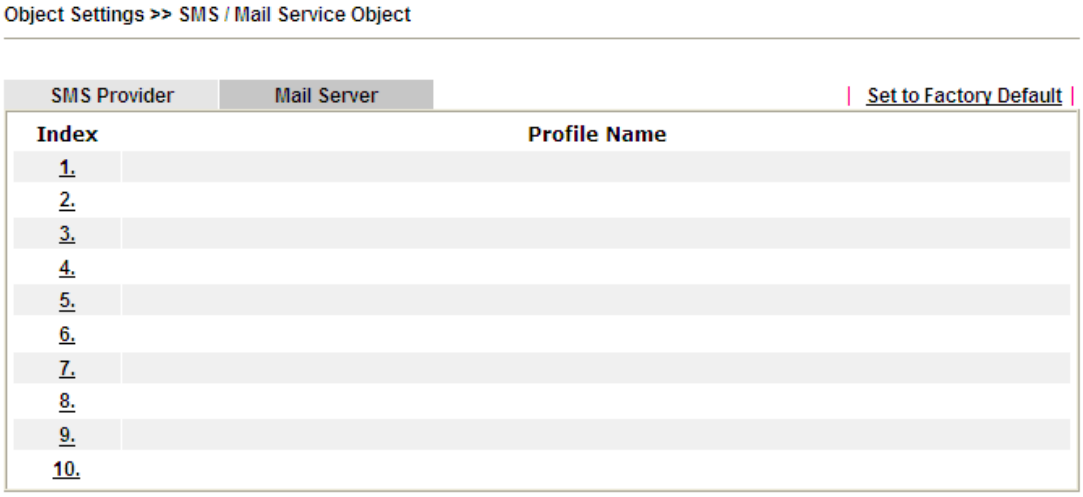

Each item is explained as follows:

Item	Description
Set to Factory Default	Clear all of the settings and return to factory default settings.
Index	Display the profile number that you can configure.
Profile	Display the name for such mail server profile.

To set a new profile, please do the steps listed below:

1. Click the **Mail Server** tab, and click the number (e.g., #1) under Index column for configuration in details.

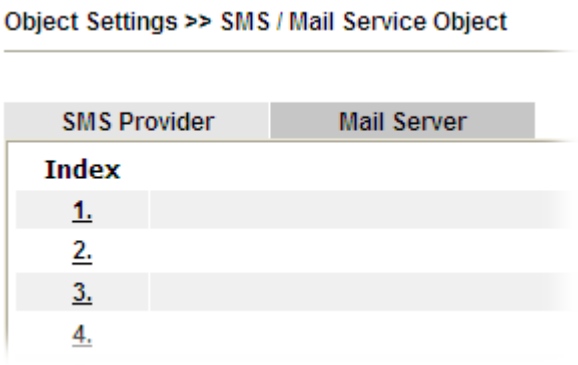

2. The configuration page will be shown as follows:

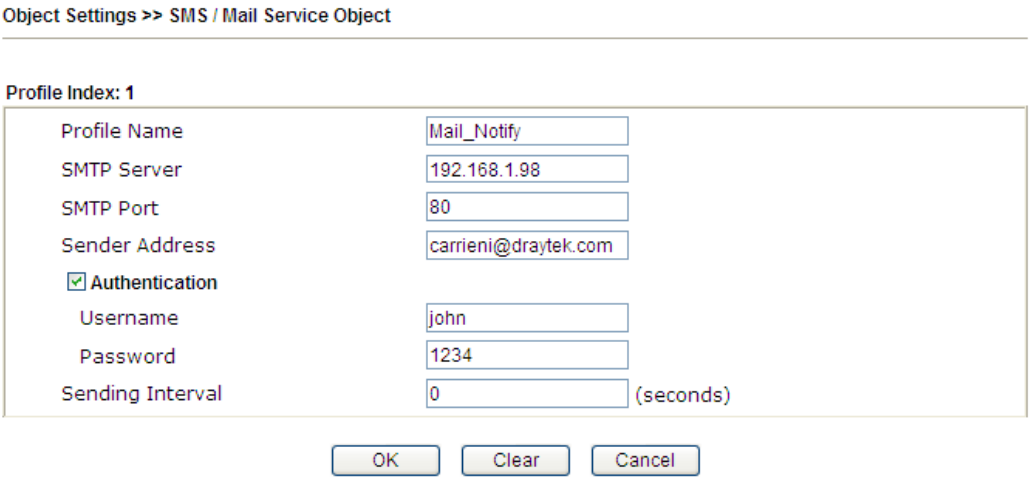

Available settings are explained as follows:

Item	Description
Profile Name	Type a name for such mail service profile. The maximum length of the name you can set is 31 characters.
SMTP Server	Type the IP address of the mail server. The maximum length of the name you can set is 63 characters.
SMTP Port	Type the port number for SMTP server.
Sender Address	Type the e-mail address of the sender.
Authentication	The mail server must be authenticated with the correct username and password to have the right of sending message out. Check the box to enable the function. **Username** – Type a name for authentication. The maximum length of the name you can set is 31 characters. **Password** – Type a password for authentication. The maximum length of the password you can set is 31 characters.
Sending Interval	Define the interval for the system to send the SMS out.

3. After finishing all the settings here, please click **OK** to save the configuration.

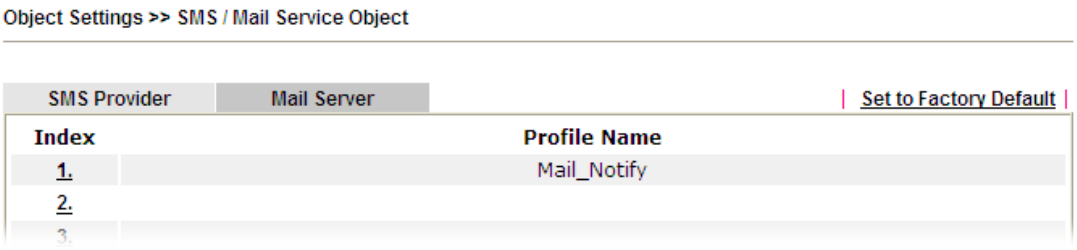

3.6.11 Notification Object

This page allows you to set ten profiles which will be applied in **Application>>SMS/Mail Alert Service**.

You can set an object with different monitoring situation.

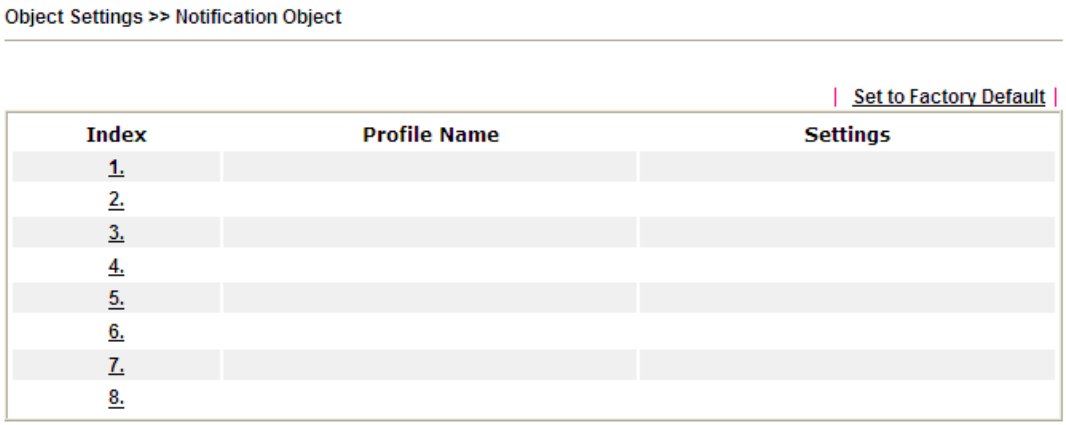

To set a new profile, please do the steps listed below:

1. Open **Object Setting>>Notification Object**, and click the number (e.g., #1) under Index column for configuration in details.

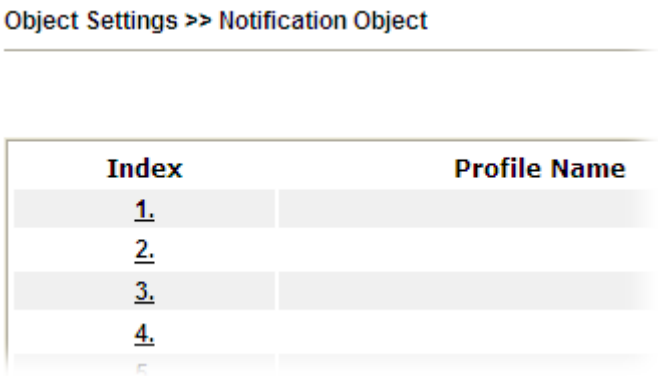

2. The configuration page will be shown as follows:

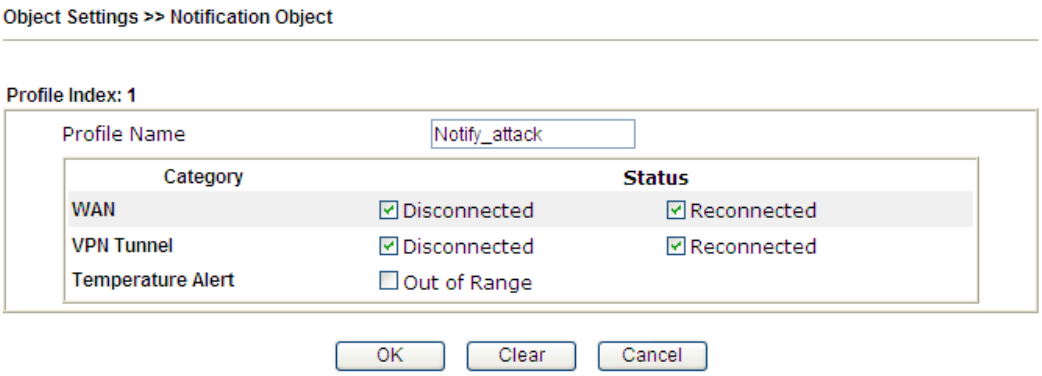

Available settings are explained as follows:

Item	Description
Profile Name	Type a name for such notification profile. The maximum length of the name you can set is 15 characters.
Category	Display the types that will be monitored.
Status	Display the status for the category. You can check the box you want to be monitored.

3. After finishing all the settings here, please click **OK** to save the configuration.

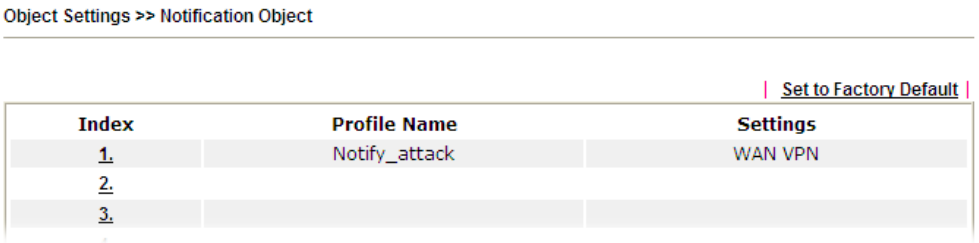

3.7 CSM Profile

Content Security Management (CSM)

CSM is an abbreviation of **Content Security Management** which is used to control IM/P2P usage, filter the web content and URL content to reach a goal of security management.

APP Enforcement Filter

As the popularity of all kinds of instant messenger application arises, communication cannot become much easier. Nevertheless, while some industry may leverage this as a great tool to connect with their customers, some industry may take reserve attitude in order to reduce employee misusage during office hour or prevent unknown security leak. It is similar situation for corporation towards peer-to-peer applications since file-sharing can be convenient but insecure at the same time. To address these needs, we provide CSM functionality.

URL Content Filter

To provide an appropriate cyberspace to users, Vigor router equips with **URL Content Filter** not only to limit illegal traffic from/to the inappropriate web sites but also prohibit other web feature where malicious code may conceal.

Once a user type in or click on an URL with objectionable keywords, URL keyword blocking facility will decline the HTTP request to that web page thus can limit user's access to the website. You may imagine **URL Content Filter** as a well-trained convenience-store clerk who won't sell adult magazines to teenagers. At office, **URL Content Filter** can also provide a job-related only environment hence to increase the employee work efficiency. How can URL Content Filter work better than traditional firewall in the field of filtering? Because it checks the URL strings or some of HTTP data hiding in the payload of TCP packets while legacy firewall inspects packets based on the fields of TCP/IP headers only.

On the other hand, Vigor router can prevent user from accidentally downloading malicious codes from web pages. It's very common that malicious codes conceal in the executable objects, such as ActiveX, Java Applet, compressed files, and other executable files. Once downloading these types of files from websites, you may risk bringing threat to your system. For example, an ActiveX control object is usually used for providing interactive web feature. If malicious code hides inside, it may occupy user's system.

Web Content Filter

We all know that the content on the Internet just like other types of media may be inappropriate sometimes. As a responsible parent or employer, you should protect those in your trust against the hazards. With Web filtering service of the Vigor router, you can protect your business from common primary threats, such as productivity, legal liability, network and security threats. For parents, you can protect your children from viewing adult websites or chat rooms.

Once you have activated your Web Filtering service in Vigor router and chosen the categories of website you wish to restrict, each URL address requested (e.g.www.bbc.co.uk) will be checked against our server database. This database is updated as frequent as daily by a global team of Internet researchers. The server will look up the URL and return a category to your router. Your Vigor router will then decide whether to allow access to this site according to the categories you have selected. Please note that this action will not introduce any delay in your Web surfing because each of multiple load balanced database servers can handle millions of requests for categorization.

Note: The priority of URL Content Filter is higher than Web Content Filter.

3.7.1 APP Enforcement Profile

You can define policy profiles for IM (Instant Messenger)/P2P (Peer to Peer)/Protocol/Misc application. This page allows you to set 32 profiles for different requirements. The APP Enforcement Profile will be applied in **Default Rule** of **Firewall>>General Setup** for filtering.

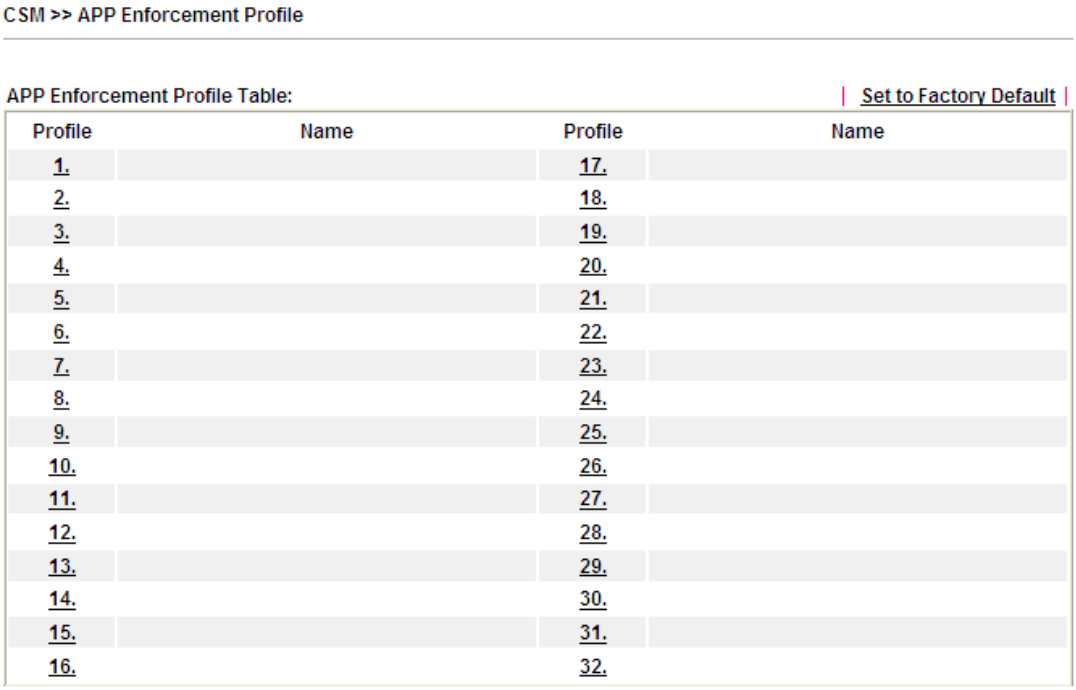

Available settings are explained as follows:

Item	Description
Set to Factory Default	Clear all profiles.
Profile	Display the number of the profile which allows you to click to set different policy.
Name	Display the name of the APP Enforcement Profile.

Click the number under Index column for settings in detail.

There are four tabs IM, P2P, Protocol and Misc displayed on this page. Each tab will bring out different items that you can choose to disallow people using.

Below shows the items which are categorized under **Protocol**.

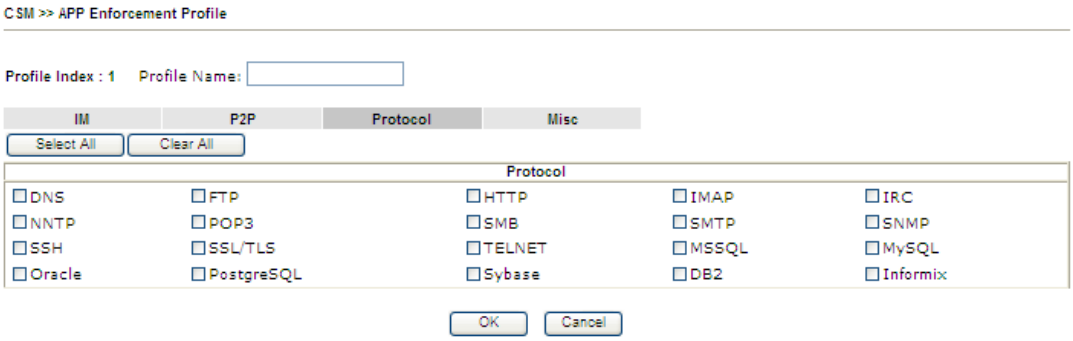

Available settings are explained as follows:

Item	Description
Profile Name	Type a name for the CSM profile. The maximum length of the name you can set is 15 characters.
Select All	Click it to choose all of the items in this page.
Clear All	Uncheck all the selected boxes.

The profiles configured here can be applied in the **Firewall>>General Setup** and **Firewall>>Filter Setup** pages as the standard for the host(s) to follow.

Below shows the items which are categorized under **IM**.

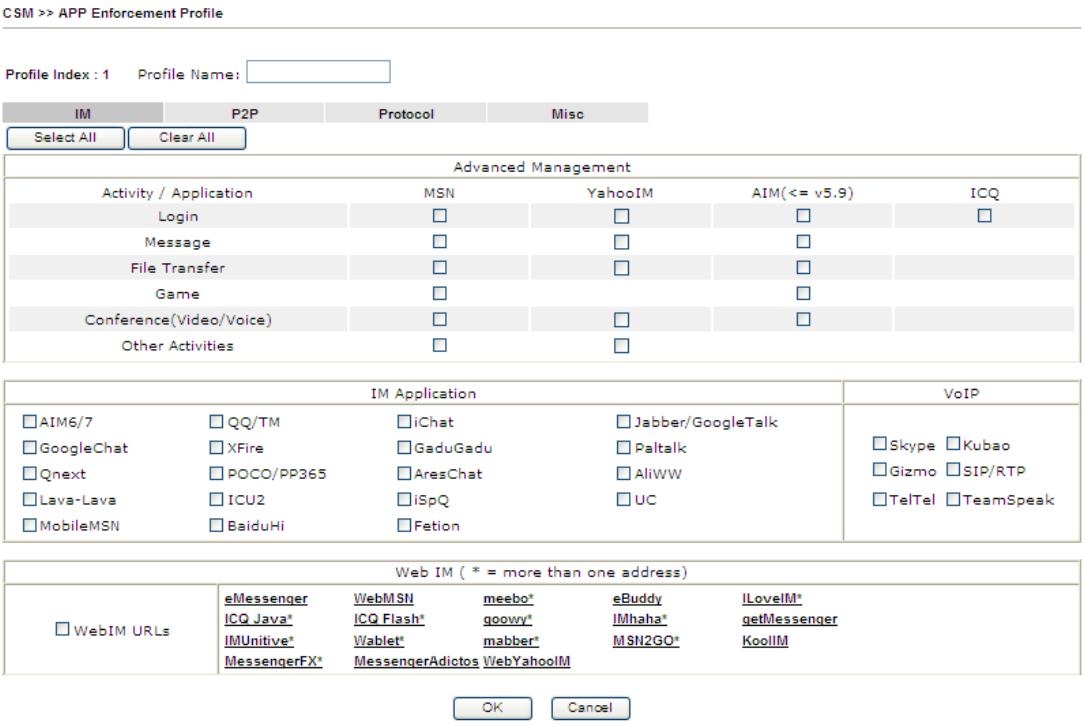

The items categorized under **P2P -----**

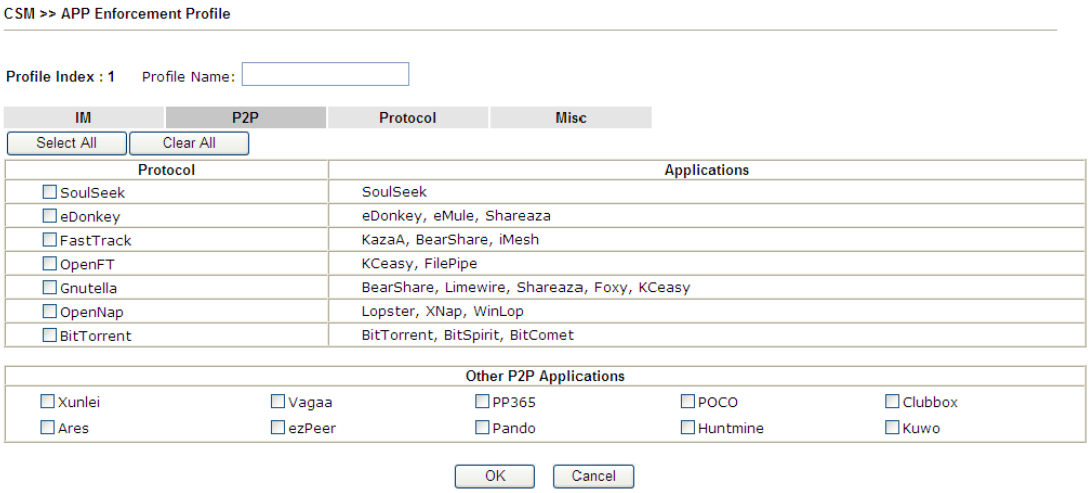

The items categorized under **Misc** -----

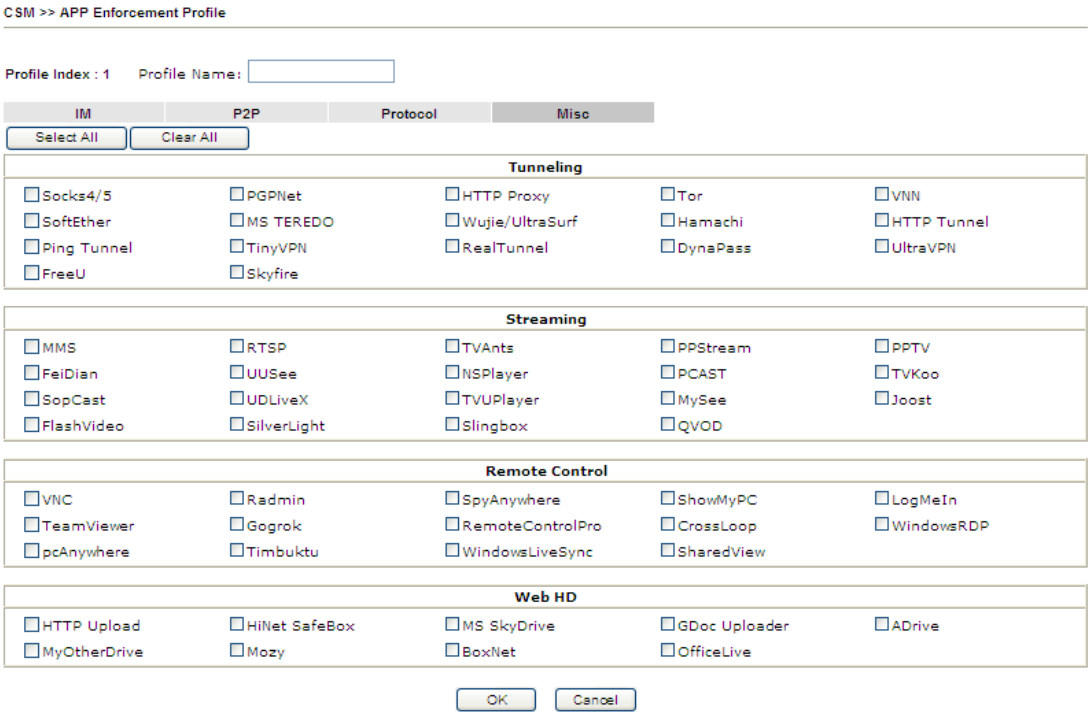

3.7.2 URL Content Filter Profile

To provide an appropriate cyberspace to users, Vigor router equips with **URL Content Filter** not only to limit illegal traffic from/to the inappropriate web sites but also prohibit other web feature where malicious code may conceal.

Once a user type in or click on an URL with objectionable keywords, URL keyword blocking facility will decline the HTTP request to that web page thus can limit user's access to the website. You may imagine **URL Content Filter** as a well-trained convenience-store clerk who won't sell adult magazines to teenagers. At office, **URL Content Filter** can also provide a job-related only environment hence to increase the employee work efficiency. How can URL Content Filter work better than traditional firewall in the field of filtering? Because it checks the URL strings or some of HTTP data hiding in the payload of TCP packets while legacy firewall inspects packets based on the fields of TCP/IP headers only.

On the other hand, Vigor router can prevent user from accidentally downloading malicious codes from web pages. It's very common that malicious codes conceal in the executable objects, such as ActiveX, Java Applet, compressed files, and other executable files. Once downloading these types of files from websites, you may risk bringing threat to your system. For example, an ActiveX control object is usually used for providing interactive web feature. If malicious code hides inside, it may occupy user's system.

For example, if you add key words such as "sex", Vigor router will limit web access to web sites or web pages such as "www.sex.com", "www.backdoor.net/images/sex/p_386.html". Or you may simply specify the full or partial URL such as "www.sex.com" or "sex.com".

Also the Vigor router will discard any request that tries to retrieve the malicious code.

Click **CSM** and click **URL Content Filter Profile** to open the profile setting page.

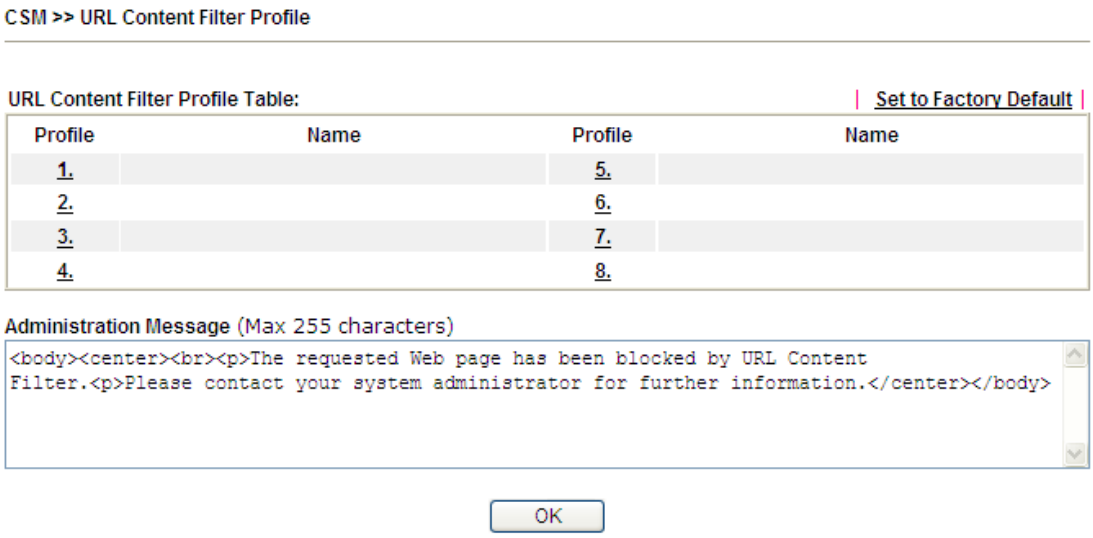

Each item is explained as follows:

Item	Description
Set to Factory Default	Clear all profiles.
Profile	Display the number of the profile which allows you to click to set different policy.
Name	Display the name of the URL Content Filter Profile.
Administration Message	You can type the message manually for your necessity.

You can set eight profiles as URL content filter. Simply click the index number under Profile to open the following web page.

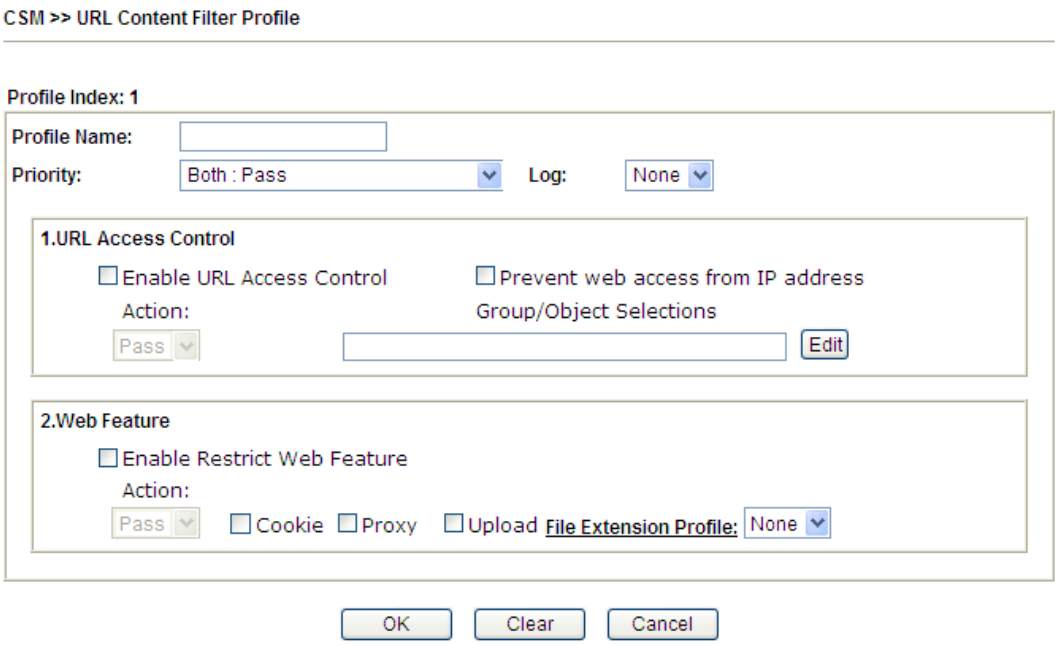

Available settings are explained as follows:

Item	Description
Profile Name	Type a name for the CSM profile. The maximum length of the name you can set is 15 characters.
Priority	It determines the action that this router will apply. **Both: Pass** – The router will let all the packages that match with the conditions specified in URL Access Control and Web Feature below passing through. When you choose this setting, both configuration set in this page for URL Access Control and Web Feature will be inactive. **Both:Block** –The router will block all the packages that match with the conditions specified in URL Access Control and Web Feature below. When you choose this setting, both configuration set in this page for URL Access Control and Web Feature will be inactive. **Either: URL Access Control First** – When all the packages matching with the conditions specified in URL Access Control and Web Feature below, such function can determine the priority for the actions executed. For this one, the router will process the packages with the conditions set below for URL first, then Web feature second. **Either: Web Feature First** –When all the packages matching with the conditions specified in URL Access Control and Web Feature below, such function can determine the priority for the actions executed. For this one, the router will process the packages with the conditions set below for web feature first, then URL second.

	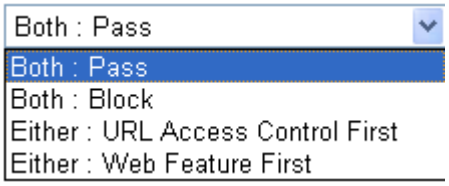
Log	**None** – There is no log file will be recorded for this profile. **Pass** – Only the log about Pass will be recorded in Syslog. **Block** – Only the log about Block will be recorded in Syslog. **All** – All the actions (Pass and Block) will be recorded in Syslog. 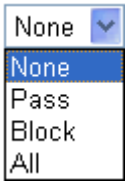
URL Access Control	**Enable URL Access Control** - Check the box to activate URL Access Control. Note that the priority for **URL Access Control** is higher than **Restrict Web Feature**. If the web content match the setting set in URL Access Control, the router will execute the action specified in this field and ignore the action specified under Restrict Web Feature. **Prevent web access from IP address** - Check the box to deny any web surfing activity using IP address, such as http://202.6.3.2. The reason for this is to prevent someone dodges the URL Access Control. You must clear your browser cache first so that the URL content filtering facility operates properly on a web page that you visited before. **Action** – This setting is available only when **Either : URL Access Control First** or **Either : Web Feature First** is selected. ***Pass*** - Allow accessing into the corresponding webpage with the keywords listed on the box below. ***Block*** **-** Restrict accessing into the corresponding webpage with the keywords listed on the box below. If the web pages do not match with the keyword set here, it will be processed with reverse action. **Group/Object Selections** – The Vigor router provides several frames for users to define keywords and each frame supports multiple keywords. The keyword could be a noun, a partial noun, or a complete URL string. Multiple keywords within a frame are separated by space, comma, or semicolon. In addition, the maximal length of each frame is 32-character long. After specifying keywords, the Vigor router will decline the connection request to the website whose URL string matched to any user-defined keyword. It

	should be noticed that the more simplified the blocking keyword list is, the more efficiently the Vigor router performs. 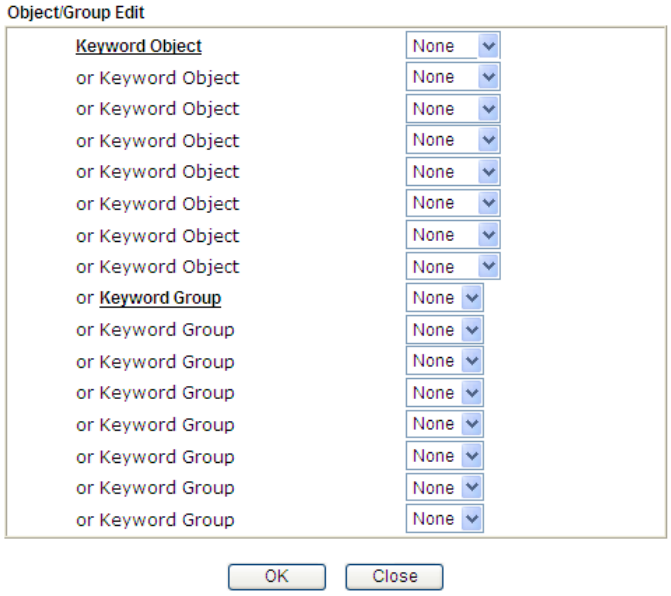
Web Feature	**Enable Restrict Web Feature -** Check this box to make the keyword being blocked or passed. **Action -** This setting is available only when **Either: URL Access Control First** or **Either: Web Feature Firs** is selected. **Pass** allows accessing into the corresponding webpage with the keywords listed on the box below. ***Pass* -** Allow accessing into the corresponding webpage with the keywords listed on the box below. ***Block* -** Restrict accessing into the corresponding webpage with the keywords listed on the box below. If the web pages do not match with the specified feature set here, it will be processed with reverse action. **Cookie** - Check the box to filter out the cookie transmission from inside to outside world to protect the local user's privacy. **Proxy** - Check the box to reject any proxy transmission. To control efficiently the limited-bandwidth usage, it will be of great value to provide the blocking mechanism that filters out the multimedia files downloading from web pages. **Upload** – Check the box to block the file upload by way of web page. **File Extension Profile –** Choose one of the profiles that you configured in **Object Setting>> File Extension Objects** previously for passing or blocking the file downloading.

	

After finishing all the settings, please click **OK** to save the configuration.

3.7.3 Web Content Filter Profile

There are three ways to activate WCF on vigor router, using **Service Activation Wizard**, by means of **CSM>>Web Content Filter Profile** or via **System Maintenance>>Activation**.

Service Activation Wizard allows you to use trial version or update the license of WCF directly without accessing into the server (***MyVigor***) located on http://myvigor.draytek.com.

However, if you use the **Web Content Filter Profile** page to activate WCF feature, it is necessary for you to access into the server (***MyVigor***) located on http://myvigor.draytek.com. Therefore, you need to register an account on http://myvigor.draytek.com for using corresponding service. Please refer to section of creating MyVigor account.

> **Note:** If you have used **Service Activation Wizard** to activate WCF service, you can skip this section.

WCF adopts the mechanism developed and offered by certain service provider (e.g., DrayTek). No matter activating WCF feature or getting a new license for web content filter, you have to click **Activate** to satisfy your request. Be aware that service provider matching with Vigor router currently offers a period of time for trial version for users to experiment. If you want to purchase a formal edition, simply contact with the channel partner or your dealer.

Click **CSM** and click **Web Content Filter Profile** to open the profile setting page. The default setting for Setup Query Server /Setup Test Server is **auto-selected**. You can choose another server for your necessity by clicking **Find more** to open http://myvigor.draytek.com for searching another qualified and suitable one.

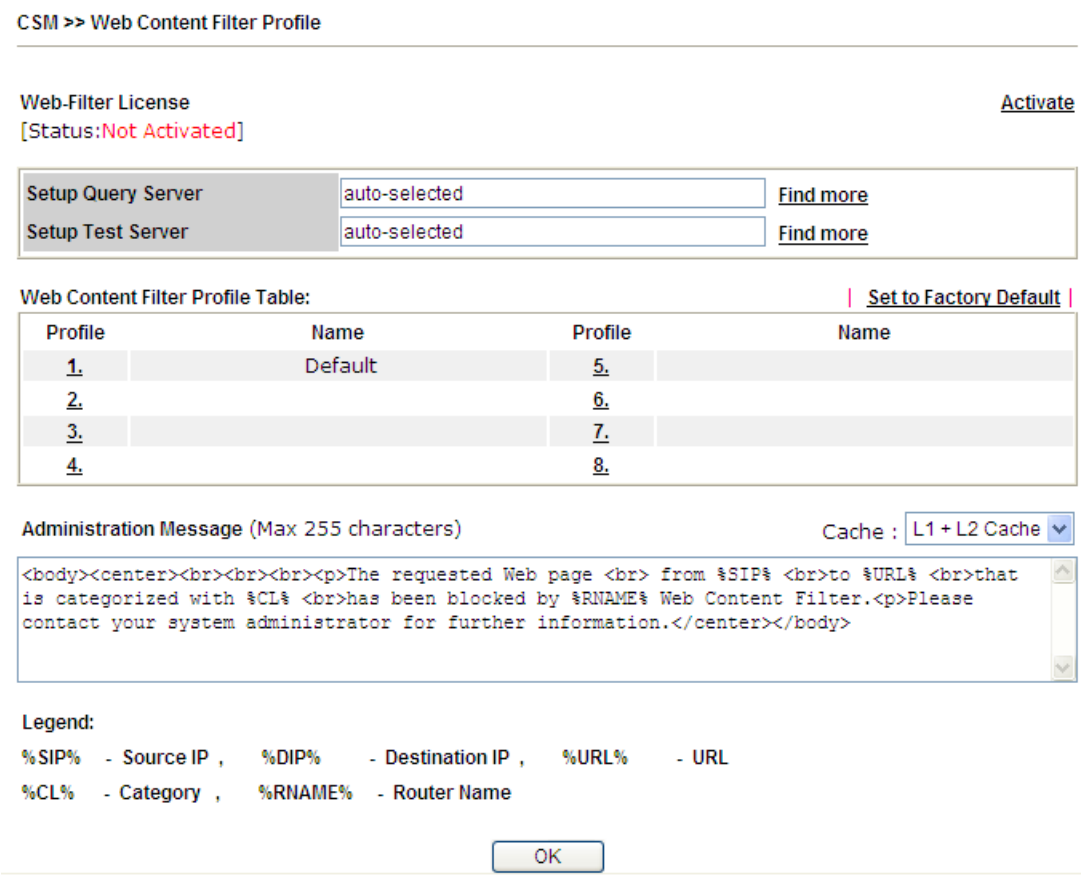

Available settings are explained as follows:

Item	Description
Activate	Click it to access into MyVigor for activating WCF service.
Setup Query Server	It is recommended for you to use the default setting, auto-selected. You need to specify a server for categorize searching when you type URL in browser based on the web content filter profile.
Setup Test Server	It is recommended for you to use the default setting, auto-selected.
Find more	Click it to open http://myvigor.draytek.com for searching another qualified and suitable server.
Test a site to verify whether it is categorized	Click this link to do the verification.
Set to Factory Default	Click this link to retrieve the factory settings.

Cache	**None** – the router will check the URL that the user wants to access via WCF precisely, however, the processing rate is normal. Such item can provide the most accurate URL matching. **L1** – the router will check the URL that the user wants to access via WCF. If the URL has been accessed previously, it will be stored for a short time (about 1 second) in the router to be accessed quickly if required. Such item can provide accurate URL matching with faster rate. **L2** – the router will check the URL that the user wants to access via WCF. If the data has been accessed previously, the IP addresses of source and destination IDs will be memorized for a short time (about 1 second) in the router. When the user tries to access the same destination ID, the router will check it by comparing the record stored. If it matches, the page will be retrieved quickly. Such item can provide URL matching with the fastest rate. **L1+L2 Cache** – the router will check the URL with fast processing rate combining the feature of L1 and L2.

Eight profiles are provided here as Web content filters. Simply click the index number under Profile to open the following web page. The items listed in Categories will be changed according to the different service providers. If you have and activate another web content filter license, the items will be changed simultaneously. All of the configuration made for web content filter will be deleted automatically. Therefore, please backup your data before you change the web content filter license.

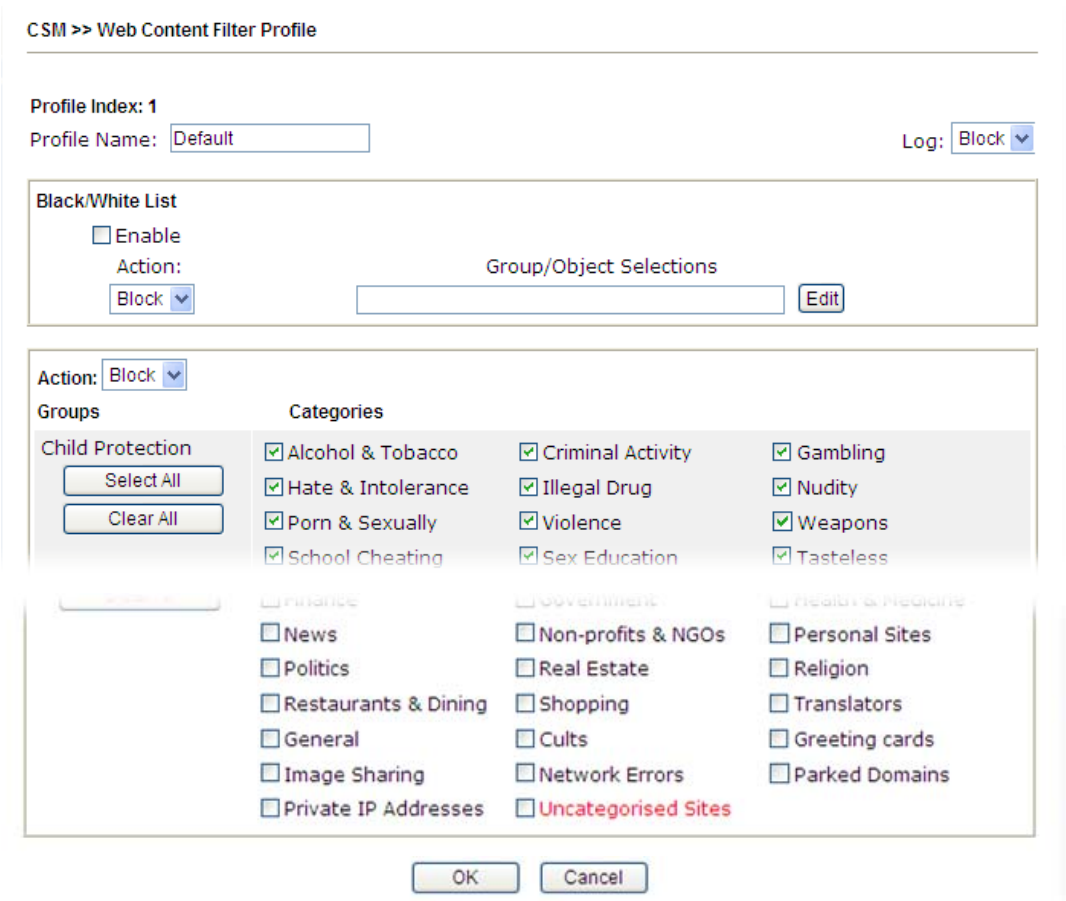

Available settings are explained as follows:

Item	Description
Profile Name	Type a name for the CSM profile. The maximum length of the name you can set is 15 characters.
Black/White List	**Enable –** Activate white/black list function for such profile. **Group/Object Selections –** Click **Edit** to choose the group or object profile as the content of white/black list. **Pass** - **allow** accessing into the corresponding webpage with the characters listed on **Group/Object Selections**. If the web pages do not match with the specified feature set here, they will be processed with the categories listed on the box below. **Block** - **restrict** accessing into the corresponding webpage with the characters listed on **Group/Object Selections**. If the web pages do not match with the specified feature set here, they will be processed with the categories listed on the box below.
Action	**Pass** - allow accessing into the corresponding webpage with the categories listed on the box below. **Block** - restrict accessing into the corresponding webpage with the categories listed on the box below. If the web pages do not match with the specified feature set here, it will be processed with reverse action.
Log	**None** – There is no log file will be recorded for this profile. **Pass** – Only the log about Pass will be recorded in Syslog. **Block** – Only the log about Block will be recorded in Syslog. **All** – All the actions (Pass and Block) will be recorded in Syslog. 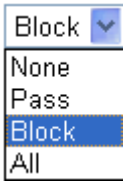

After finishing all the settings, please click **OK** to save the configuration.

3.8 Bandwidth Management

Below shows the menu items for Bandwidth Management.

3.8.1 Sessions Limit

A PC with private IP address can access to the Internet via NAT router. The router will generate the records of NAT sessions for such connection. The P2P (Peer to Peer) applications (e.g., BitTorrent) always need many sessions for procession and also they will occupy over resources which might result in important accesses impacted. To solve the problem, you can use limit session to limit the session procession for specified Hosts.

In the **Bandwidth Management** menu, click **Sessions Limit** to open the web page.

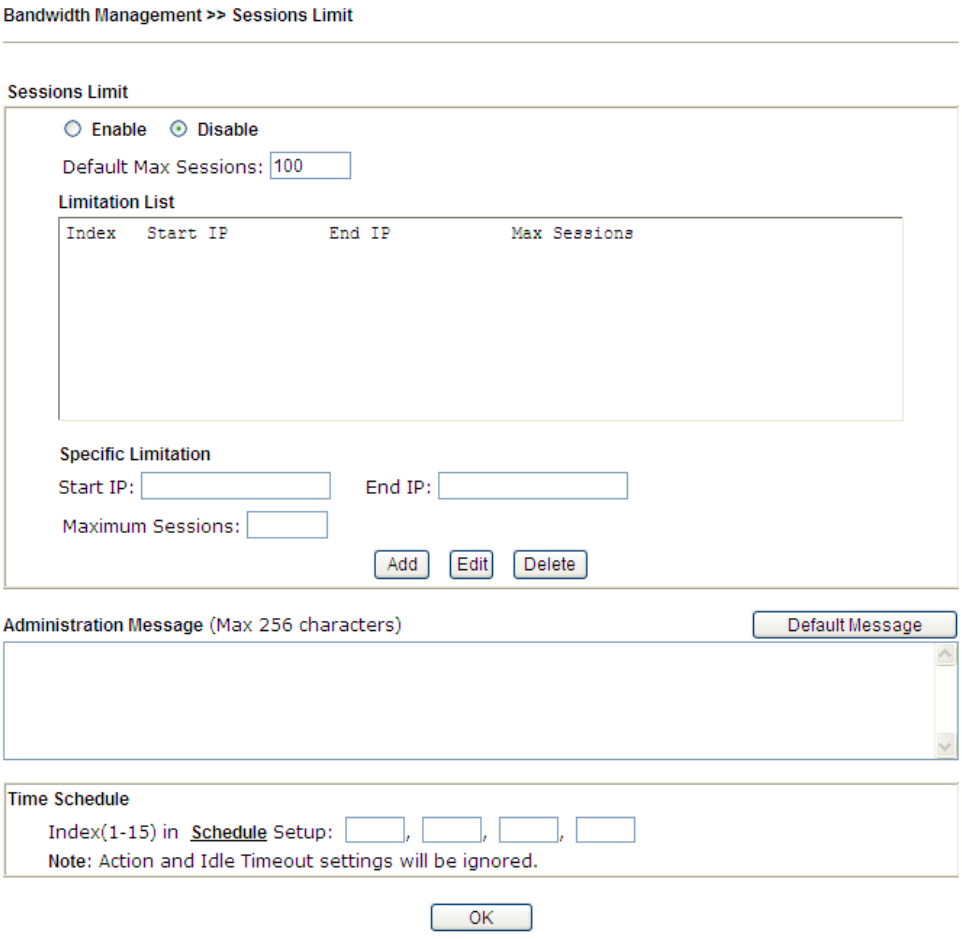

To activate the function of limit session, simply click **Enable** and set the default session limit.

Available settings are explained as follows:

Item	Description
Session Limit	**Enable** - Click this button to activate the function of limit session. **Disable** - Click this button to close the function of limit session.

	Default session limit - Defines the default session number used for each computer in LAN.
Limitation List	Displays a list of specific limitations that you set on this web page.
Specific Limitation	**Start IP-** Defines the start IP address for limit session. **End IP -** Defines the end IP address for limit session. **Maximum Sessions -** Defines the available session number for each host in the specific range of IP addresses. If you do not set the session number in this field, the system will use the default session limit for the specific limitation you set for each index. **Add -** Adds the specific session limitation onto the list above. **Edit -** Allows you to edit the settings for the selected limitation. **Delete -** Remove the selected settings existing on the limitation list.
Administration Message	Type the words which will be displayed when reaches the maximum number of Internet sessions permitted. **Default Message -** Click this button to apply the default message offered by the router.
Time Schedule	**Index (1-15) in Schedule Setup** - You can type in four sets of time schedule for your request. All the schedules can be set previously in **Application >> Schedule** web page and you can use the number that you have set in that web page.

After finishing all the settings, please click **OK** to save the configuration.

3.8.2 Bandwidth Limit

The downstream or upstream from FTP, HTTP or some P2P applications will occupy large of bandwidth and affect the applications for other programs. Please use Limit Bandwidth to make the bandwidth usage more efficient.

In the **Bandwidth Management** menu, click **Bandwidth Limit** to open the web page.

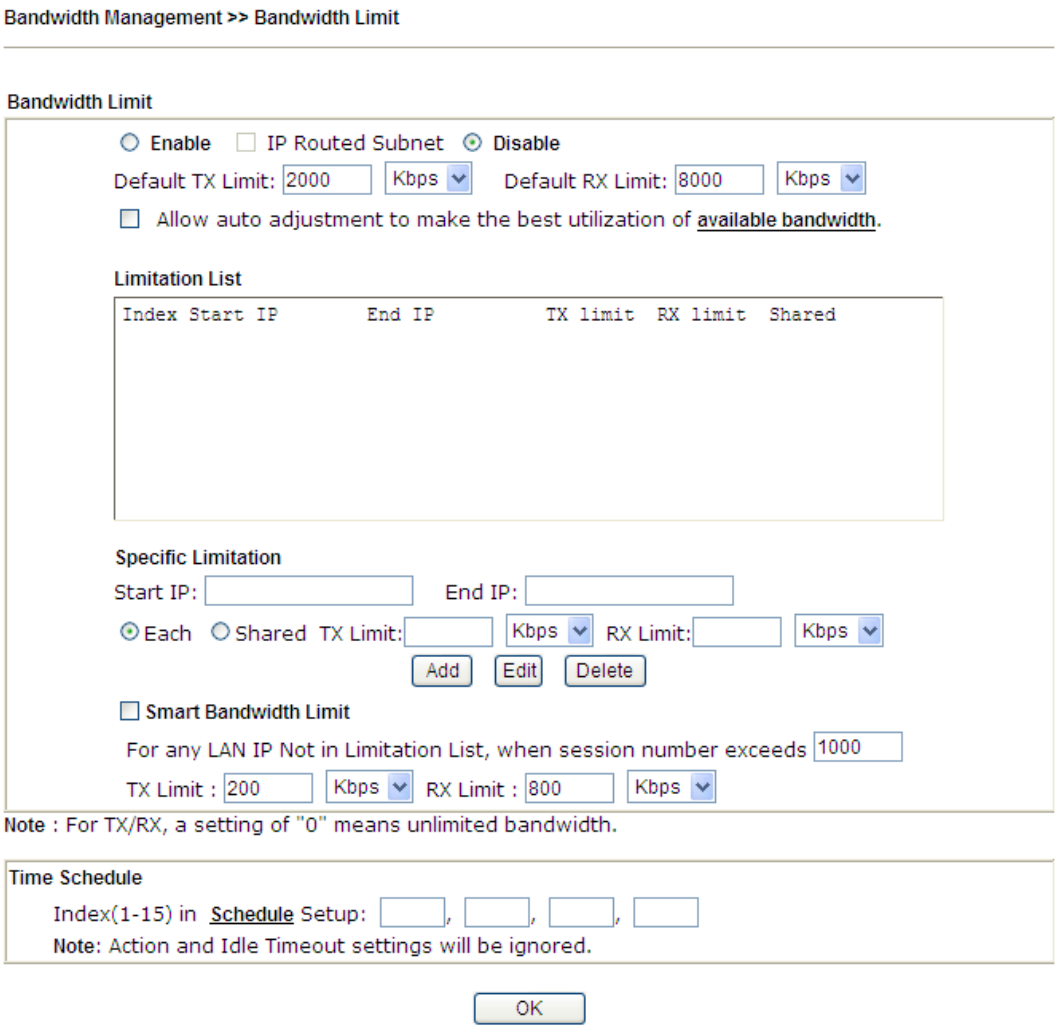
Bandwidth Management >> Bandwidth Limit
Bandwidth Limit
Enable
IP Routed Subnet
Disable
Default TX Limit: 2000 Kbps
Default RX Limit: 8000 Kbps
Allow auto adjustment to make the best utilization of available bandwidth.
Limitation List
Index Start IP End IP TX limit RX limit Shared
Specific Limitation
Start IP:
End IP:
Each
Shared
TX Limit: Kbps
RX Limit: Kbps
Add
Edit
Delete
Smart Bandwidth Limit
For any LAN IP Not in Limitation List, when session number exceeds 1000
TX Limit : 200 Kbps
RX Limit : 800 Kbps
Note : For TX/RX, a setting of "0" means unlimited bandwidth.
Time Schedule
Index(1-15) in Schedule Setup:
Note: Action and Idle Timeout settings will be ignored.
OK

To activate the function of limit bandwidth, simply click **Enable** and set the default upstream and downstream limit.

Available settings are explained as follows:

Item	Description
Bandwidth Limit	**Enable** - Click this button to activate the function of limit bandwidth. **IP Routed Subnet** – Check this box to apply the bandwidth limit to the second subnet specified in **LAN>>General Setup**. **Disable** - Click this button to close the function of limit bandwidth. **Default TX limit** - Define the default speed of the upstream for each computer in LAN. **Default RX limit** - Define the default speed of the

	downstream for each computer in LAN. **Allow auto adjustment**….- Check this box to make the best utilization of available bandwidth.
Limitation List	Display a list of specific limitations that you set on this web page.
Specific Limitation	**Start IP -** Define the start IP address for limit bandwidth. **End IP -** Define the end IP address for limit bandwidth. **Each /Shared -** Select **Each** to make each IP within the range of Start IP and End IP having the same speed defined in TX limit and RX limit fields; select **Shared** to make all the IPs within the range of Start IP and End IP share the speed defined in TX limit and RX limit fields. **TX limit -** Define the limitation for the speed of the upstream. If you do not set the limit in this field, the system will use the default speed for the specific limitation you set for each index. **RX limit -** Define the limitation for the speed of the downstream. If you do not set the limit in this field, the system will use the default speed for the specific limitation you set for each index. **Add -** Add the specific speed limitation onto the list above. **Edit -** Allow you to edit the settings for the selected limitation. **Delete -** Remove the selected settings existing on the limitation list.
Smart Bandwidth Limit	Check this box to have the bandwidth limit determined by the system automatically. **TX limit -** Define the limitation for the speed of the upstream. If you do not set the limit in this field, the system will use the default speed for the specific limitation you set for each index. **RX limit -** Define the limitation for the speed of the downstream. If you do not set the limit in this field, the system will use the default speed for the specific limitation you set for each index.
Time Schedule	**Index (1-15) in Schedule Setup -** You can type in four sets of time schedule for your request. All the schedules can be set previously in **Application >> Schedule** web page and you can use the number that you have set in that web page.

3.8.3 Quality of Service

Deploying QoS (Quality of Service) management to guarantee that all applications receive the service levels required and sufficient bandwidth to meet performance expectations is indeed one important aspect of modern enterprise network.

One reason for QoS is that numerous TCP-based applications tend to continually increase their transmission rate and consume all available bandwidth, which is called TCP slow start. If other applications are not protected by QoS, it will detract much from their performance in the overcrowded network. This is especially essential to those are low tolerant of loss, delay or jitter (delay variation).

Another reason is due to congestions at network intersections where speeds of interconnected circuits mismatch or traffic aggregates, packets will queue up and traffic can be throttled back to a lower speed. If there's no defined priority to specify which packets should be discarded (or in another term "dropped") from an overflowing queue, packets of sensitive applications mentioned above might be the ones to drop off. How this will affect application performance?

There are two components within Primary configuration of QoS deployment:

- Classification: Identifying low-latency or crucial applications and marking them for high-priority service level enforcement throughout the network.
- Scheduling: Based on classification of service level to assign packets to queues and associated service types

The basic QoS implementation in Vigor routers is to classify and schedule packets based on the service type information in the IP header. For instance, to ensure the connection with the headquarter, a teleworker may enforce an index of QoS Control to reserve bandwidth for HTTPS connection while using lots of application at the same time.

One more larger-scale implementation of QoS network is to apply DSCP (Differentiated Service Code Point) and IP Precedence disciplines at Layer 3. Compared with legacy IP Precedence that uses Type of Service (ToS) field in the IP header to define 8 service classes, DSCP is a successor creating 64 classes possible with backward IP Precedence compatibility. In a QoS-enabled network, or Differentiated Service (DiffServ or DS) framework, a DS domain owner should sign a Service License Agreement (SLA) with other DS domain owners to define the service level provided toward traffic from different domains. Then each DS node in these domains will perform the priority treatment. This is called per-hop-behavior (PHB). The definition of PHB includes Expedited Forwarding (EF), Assured Forwarding (AF), and Best Effort (BE). AF defines the four classes of delivery (or forwarding) classes and three levels of drop precedence in each class.

Vigor routers as edge routers of DS domain shall check the marked DSCP value in the IP header of bypassing traffic, thus to allocate certain amount of resource execute appropriate policing, classification or scheduling. The core routers in the backbone will do the same checking before executing treatments in order to ensure service-level consistency throughout the whole QoS-enabled network.

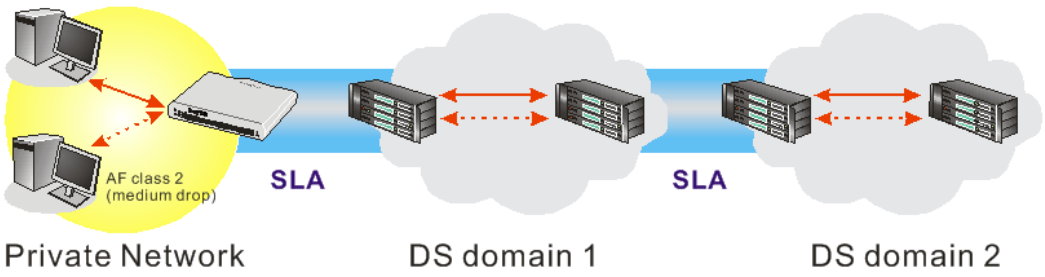

However, each node may take different attitude toward packets with high priority marking since it may bind with the business deal of SLA among different DS domain owners. It's not easy to achieve deterministic and consistent high-priority QoS traffic throughout the whole network with merely Vigor router's effort.

In the **Bandwidth Management** menu, click **Quality of Service** to open the web page.

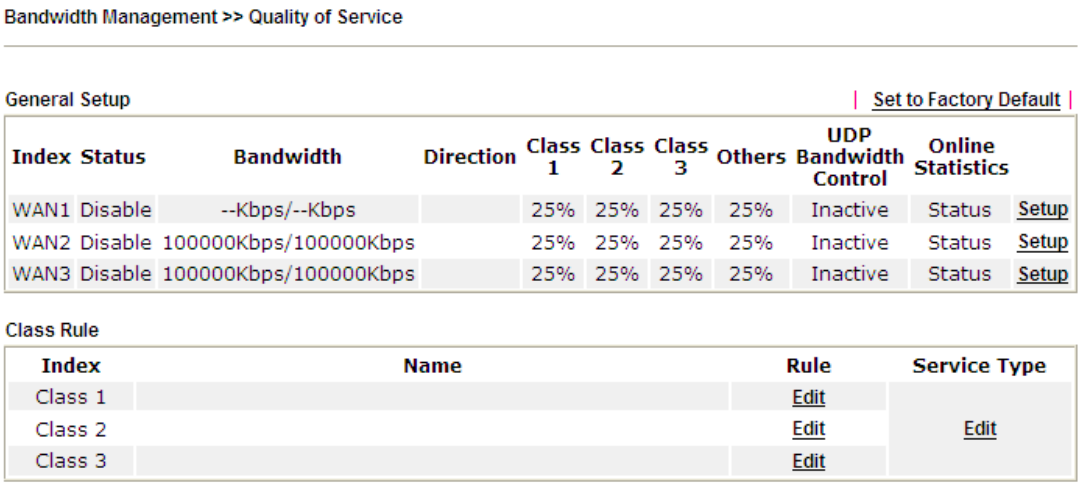
Bandwidth Management >> Quality of Service
General Setup
Set to Factory Default
Index Status Bandwidth Direction Class 1 Class 2 Class 3 Others UDP Bandwidth Control Online Statistics
WAN1 Disable --Kbps/--Kbps 25% 25% 25% 25% Inactive Status Setup
WAN2 Disable 100000Kbps/100000Kbps 25% 25% 25% 25% Inactive Status Setup
WAN3 Disable 100000Kbps/100000Kbps 25% 25% 25% 25% Inactive Status Setup
Class Rule
Index Name Rule Service Type
Class 1 Edit
Class 2 Edit Edit
Class 3 Edit

Available settings are explained as follows:

Item	Description
General Setup	**Index** – Display the WAN interface number that you can edit. **Status** – Display if the WAN interface is available for such function or not. **Bandwidth** – Display the inbound and outbound bandwidth setting for the WAN interface. **Direction** – Display which direction that such function will influence. **Class 1/Class2/Class 3/Others** – Display the bandwidth percentage for each class. **UDP Bandwidth Control** – Display the UDP bandwidth control is enabled or not. **Online Statistics** – Display an online statistics for quality of service for your reference **Setup** – Allow to configure general QoS setting for WAN interface.
Class Rule	**Index** – Display the class number that you can edit. **Name** – Display the name of the class. **Rule** – Allow to configure detailed settings for the selected Class. **Service Type** – Allow to configure detailed settings for the service type.
Enable the First Priority for VoIP SIP/RTP	When this feature is enabled, the VoIP SIP/UDP packets will be sent with highest priority. **SIP UDP Port** – Set a port number used for SIP.

This page displays the QoS settings result of the WAN interface. Click the **Setup** link to access into next page for the general setup of WAN interface. As to class rule, simply click the **Edit** link to access into next for configuration.

You can configure general setup for the WAN interface, edit the Class Rule, and edit the Service Type for the Class Rule for your request.

Online Statistics

Display an online statistics for quality of service for your reference. This feature is available only when the Quality of Service for WAN interface is enabled.

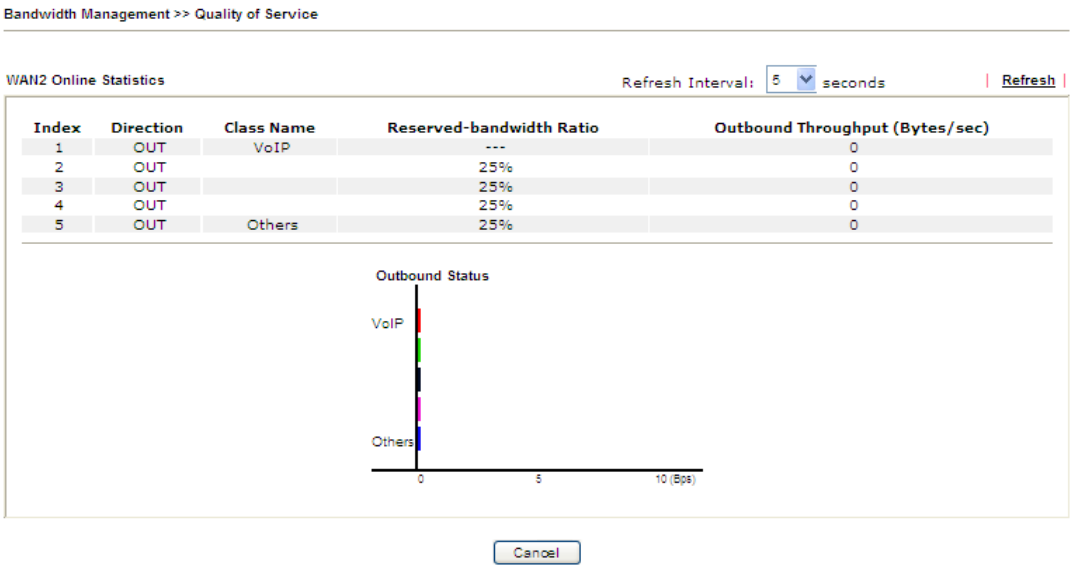

General Setup for WAN Interface

When you click **Setup**, you can configure the bandwidth ratio for QoS of the WAN interface. There are four queues allowed for QoS control. The first three (Class 1 to Class 3) class rules can be adjusted for your necessity. Yet, the last one is reserved for the packets which are not suitable for the user-defined class rules.

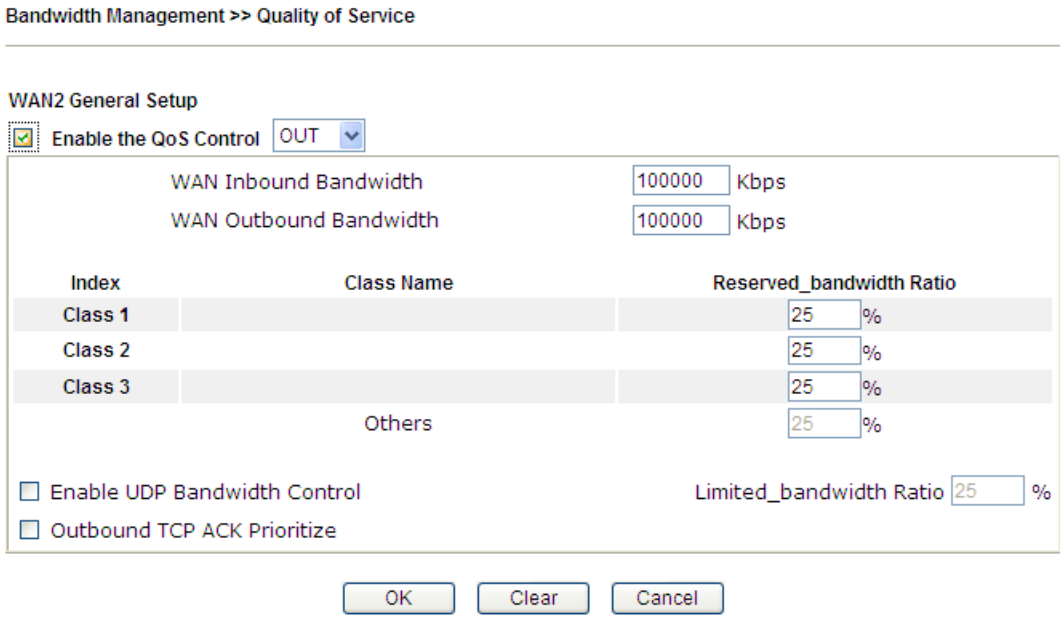

Available settings are explained as follows:

Item	Description
Enable the QoS Control	The factory default for this setting is checked. Please also define which traffic the QoS Control settings will apply to. **IN-** apply to incoming traffic only. **OUT-**apply to outgoing traffic only. **BOTH-** apply to both incoming and outgoing traffic. Check this box and click **OK**, then click **Setup** link again. You will see the **Online Statistics** link appearing on this page.
WAN Inbound Bandwidth	It allows you to set the connecting rate of data input for WAN2/WAN3. For example, if your ADSL supports 1M of downstream and 256K upstream, please set 1000kbps for this box. The default value is 10000kbps.
WAN Outbound Bandwidth	It allows you to set the connecting rate of data output for WAN2/WAN3. For example, if your ADSL supports 1M of downstream and 256K upstream, please set 256kbps for this box. The default value is 10000kbps.
Reserved Bandwidth Ratio	It is reserved for the group index in the form of ratio of **reserved bandwidth to upstream speed** and **reserved bandwidth to downstream speed**.
Enable UDP Bandwidth Control	Check this and set the limited bandwidth ratio on the right field. This is a protection of TCP application traffic since UDP application traffic such as streaming video will exhaust lots of bandwidth.
Outbound TCP ACK Prioritize	The difference in bandwidth between download and upload are great in ADSL2+ environment. For the download speed might be impacted by the uploading TCP ACK, you can check this box to push ACK of upload faster to speed the network traffic.
Limited_bandwidth Ratio	The ratio typed here is reserved for limited bandwidth of UDP application.

Note: The rate of outbound/inbound must be smaller than the real bandwidth to ensure correct calculation of QoS. It is suggested to set the bandwidth value for inbound/outbound as 80% - 85% of physical network speed provided by ISP to maximize the QoS performance.

Edit the Class Rule for QoS

1. The first three (Class 1 to Class 3) class rules can be adjusted for your necessity. To add, edit or delete the class rule, please click the **Edit** link of that one.

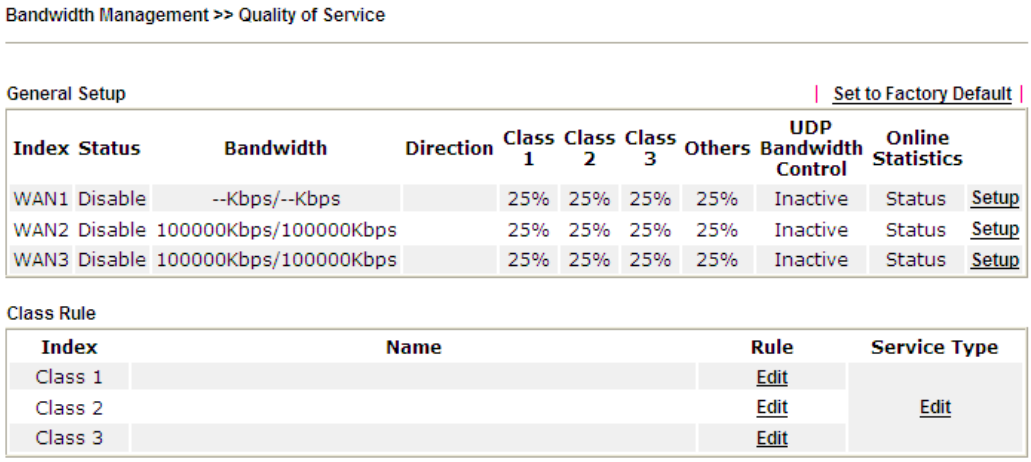
Bandwidth Management >> Quality of Service
General Setup
Set to Factory Default
Index Status Bandwidth Direction Class 1 Class 2 Class 3 Others UDP Bandwidth Control Online Statistics
WAN1 Disable --Kbps/--Kbps 25% 25% 25% 25% Inactive Status Setup
WAN2 Disable 100000Kbps/100000Kbps 25% 25% 25% 25% Inactive Status Setup
WAN3 Disable 100000Kbps/100000Kbps 25% 25% 25% 25% Inactive Status Setup
Class Rule
Index Name Rule Service Type
Class 1 Edit
Class 2 Edit Edit
Class 3 Edit

2. After you click the **Edit** link, you will see the following page. Now you can define the name for that Class. In this case, “Test” is used as the name of Class Index #1.

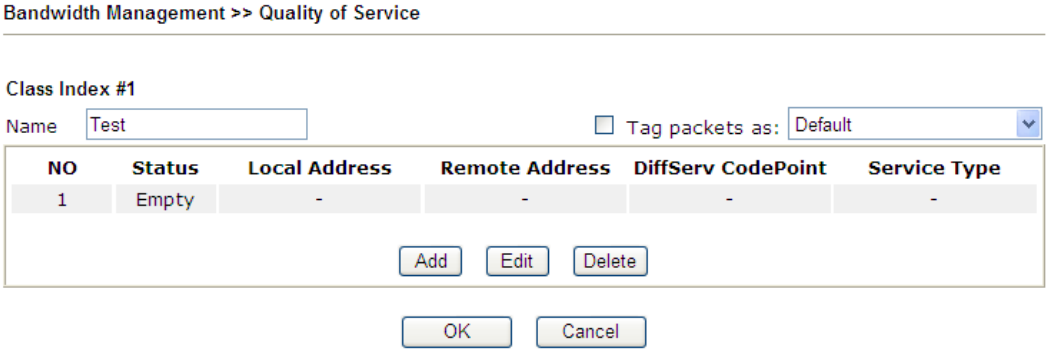
Bandwidth Management >> Quality of Service
Class Index #1
Name Test
Tag packets as: Default
NO Status Local Address Remote Address DiffServ CodePoint Service Type
1 Empty - - - -
Add Edit Delete
OK Cancel

3. For adding a new rule, click **Add** to open the following page.

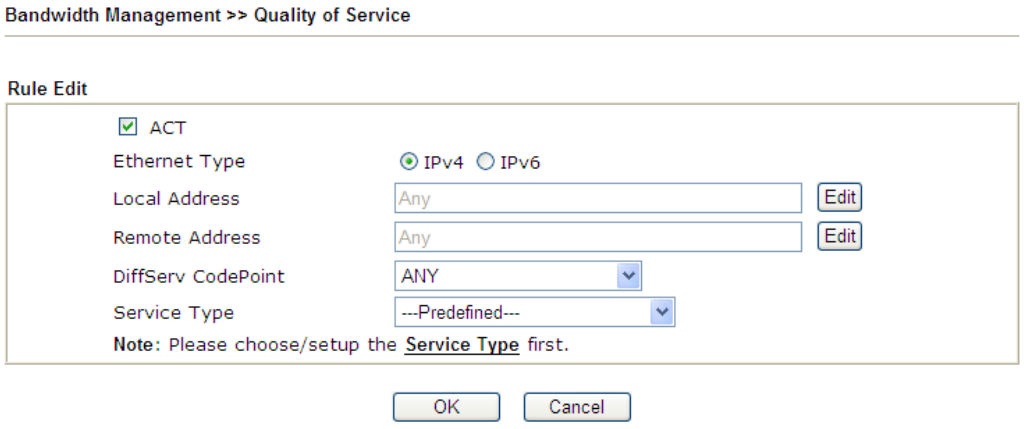

Available settings are explained as follows:

Item	Description
ACT	Check this box to invoke these settings.
Ethernet Type	Please specify which protocol (IPv4 or IPv6) will be used for this rule.
Local Address	Click the **Edit** button to set the local IP address (on LAN) for the rule.
Remote Address	Click the **Edit** button to set the remote IP address (on LAN/WAN) for the rule. 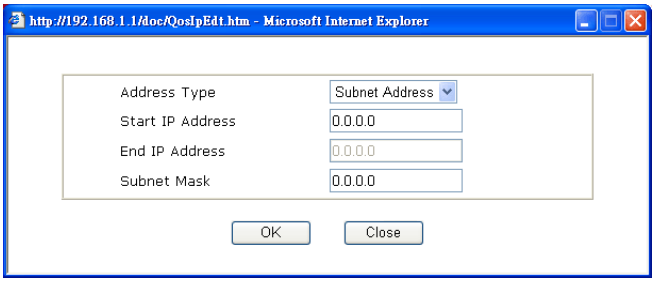 **Address Type –** Determine the address type for the source address. For **Single Address**, you have to fill in Start IP address. For **Range Address**, you have to fill in Start IP address and End IP address. For **Subnet Address**, you have to fill in Start IP address and Subnet Mask.
DiffServ CodePoint	All the packets of data will be divided with different levels and will be processed according to the level type by the system. Please assign one of the levels of the data for processing with QoS control.
Service Type	It determines the service type of the data for processing with QoS control. It can also be edited. You can choose the predefined service type from the Service Type drop down list. Those types are predefined in factory. Simply choose the one that you want for using by current QoS.

4. After finishing all the settings here, please click **OK** to save the configuration.

By the way, you can set up to 20 rules for one Class. If you want to edit an existed rule, please select the radio button of that one and click **Edit** to open the rule edit page for modification.

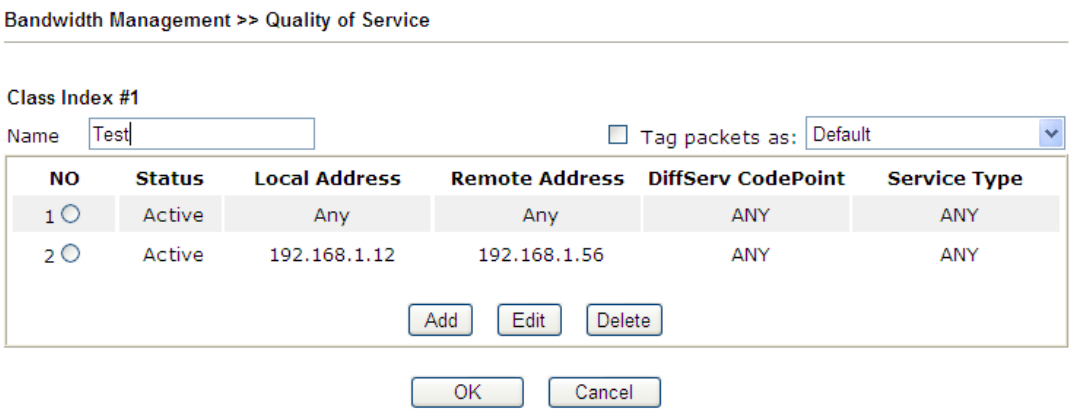

Edit the Service Type for Class Rule

1. To add a new service type, edit or delete an existed service type, please click the Edit link under Service Type field.

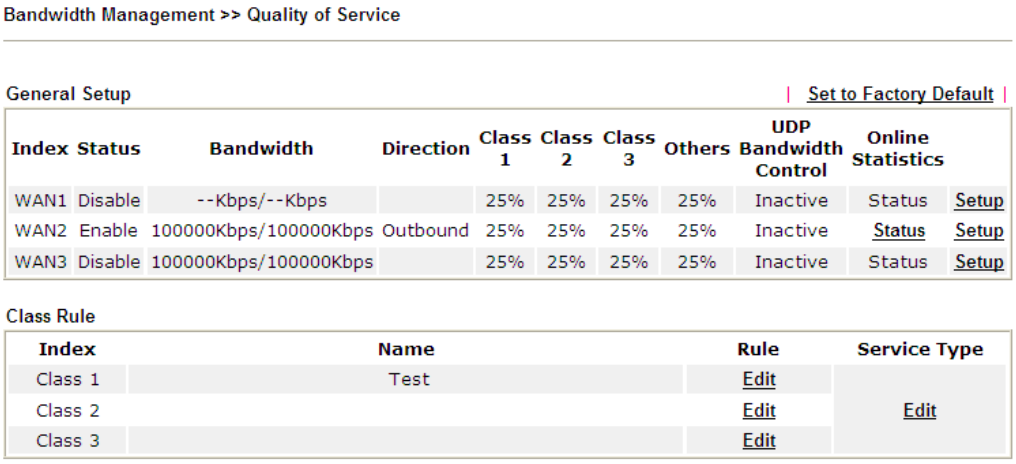

2. After you click the **Edit** link, you will see the following page.

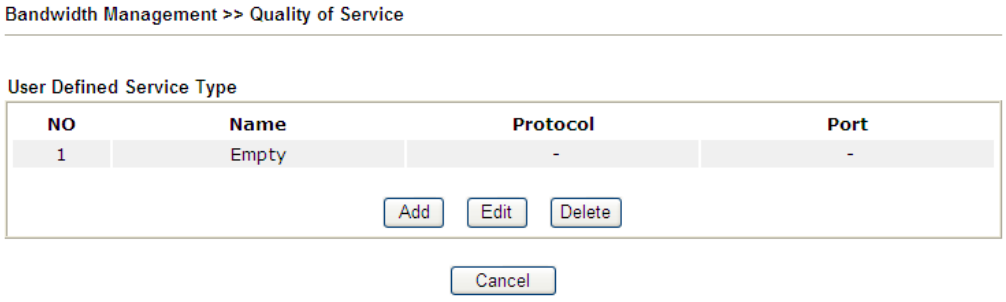

3. For adding a new service type, click **Add** to open the following page.

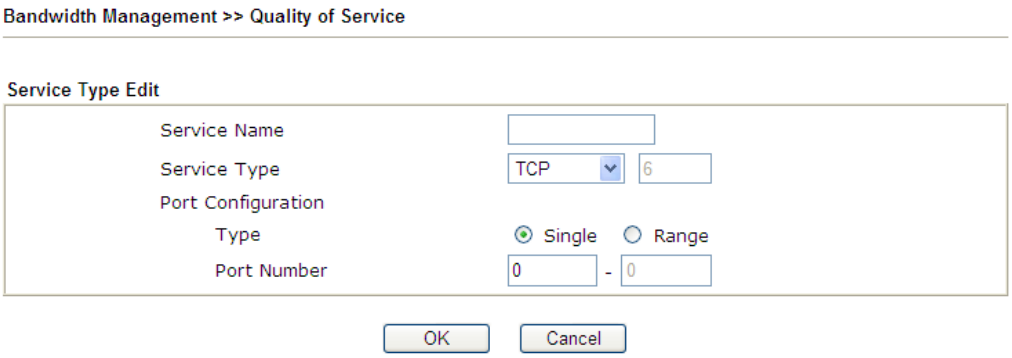

Available settings are explained as follows:

Item	Description
Service Name	Type in a new service for your request. The maximum length of the name you can set is 11 characters.
Service Type	Choose the type (TCP, UDP or TCP/UDP or other) for the new service.
Port Configuration	**Type** - Click **Single** or **Range** as the **Type**. If you select Range, you have to type in the starting port number and the end porting number on the boxes below. **Port Number** – Type in the starting port number and the end porting number here if you choose Range as the type.

5. After finishing all the settings here, please click **OK** to save the configuration.

By the way, you can set up to 10 service types. If you want to edit/delete an existed service type, please select the radio button of that one and click **Edit/Edit** for modification.

3.9 Applications

Below shows the menu items for Applications.

3.9.1 Dynamic DNS

The ISP often provides you with a dynamic IP address when you connect to the Internet via your ISP. It means that the public IP address assigned to your router changes each time you access the Internet. The Dynamic DNS feature lets you assign a domain name to a dynamic WAN IP address. It allows the router to update its online WAN IP address mappings on the specified Dynamic DNS server. Once the router is online, you will be able to use the registered domain name to access the router or internal virtual servers from the Internet. It is particularly helpful if you host a web server, FTP server, or other server behind the router.

Before you use the Dynamic DNS feature, you have to apply for free DDNS service to the DDNS service providers. The router provides up to three accounts from three different DDNS service providers. Basically, Vigor routers are compatible with the DDNS services supplied by most popular DDNS service providers such as **www.dyndns.org, www.no-ip.com, www.dtdns.com, www.changeip.com, www.dynamic- nameserver.com.** You should visit their websites to register your own domain name for the router.

Enable the Function and Add a Dynamic DNS Account

1. Assume you have a registered domain name from the DDNS provider, say *hostname.dyndns.org*, and an account with username: *test* and password: *test*.
2. In the DDNS setup menu, check **Enable Dynamic DNS Setup**.

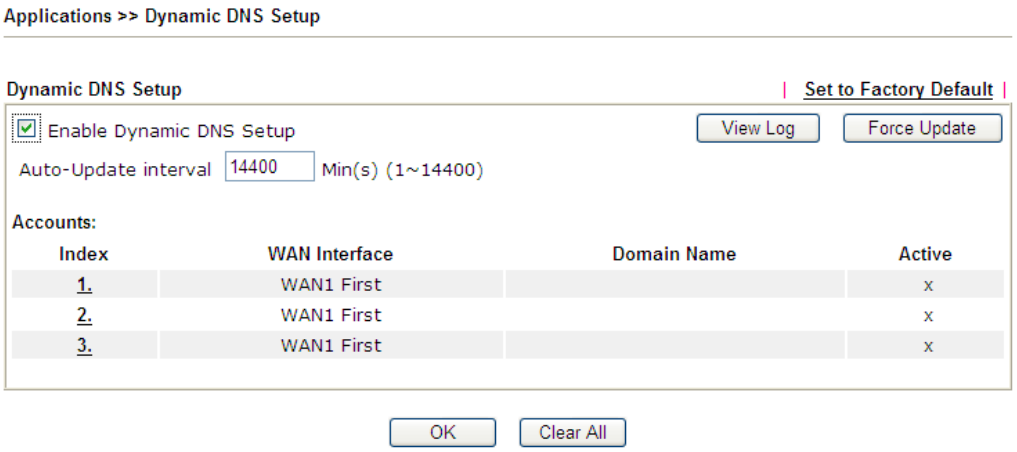

Available settings are explained as follows:

Item	Description
Enable Dynamic DNS Setup	Check this box to enable DDNS function.
Set to Factory Default	Clear all profiles and recover to factory settings.
View Log	Display DDNS log status.
Force Update	Force the router updates its information to DDNS server.
Auto-Update interval	Set the time for the router to perform auto update for DDNS service.
Index	Click the number below Index to access into the setting page of DDNS setup to set account(s).
WAN Interface	Display the WAN interface used.
Domain Name	Display the domain name that you set on the setting page of DDNS setup.
Active	Display if this account is active or inactive.

3. Select Index number 1 to add an account for the router. Check **Enable Dynamic DNS Account**, and choose correct Service Provider: dyndns.org, type the registered hostname: *hostname* and domain name suffix: dyndns.org in the **Domain Name** block. The following two blocks should be typed your account Login Name: *test* and Password: *test*.

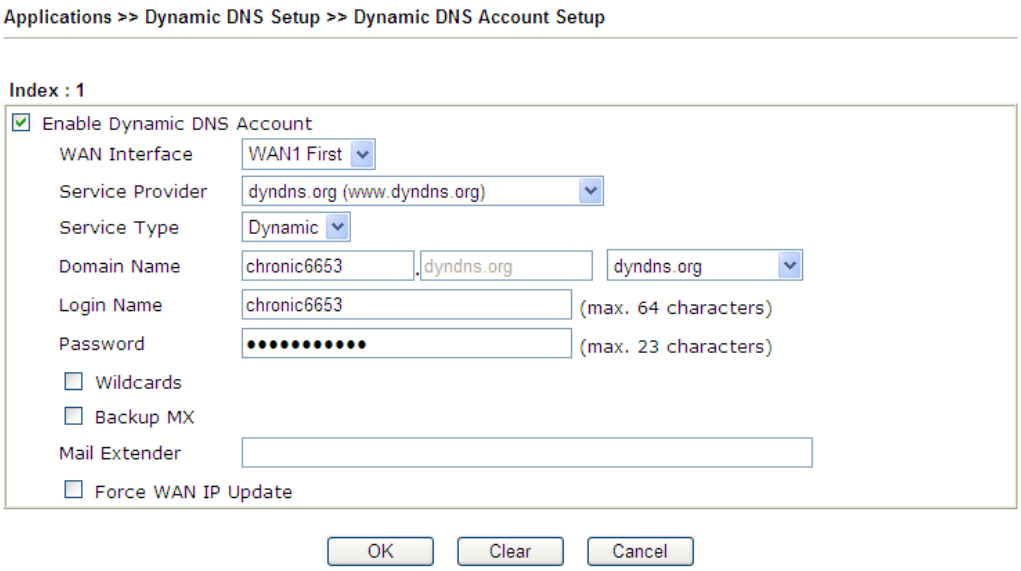

Available settings are explained as follows:

Item	Description
Enable Dynamic DNS Account	Check this box to enable the current account. If you did check the box, you will see a check mark appeared on the Active column of the previous web page in step 2).
WAN Interface	**WAN1/WAN2/WAN3 First** - While connecting, the router will use WAN1/WAN2/WAN3 as the first channel for such account. If WAN1/WAN2/WAN3 fails, the router will use another WAN interface instead. **WAN1/WAN2/WAN3 Only** - While connecting, the router will use WAN1/WAN2/WAN3 as the only channel for such account. 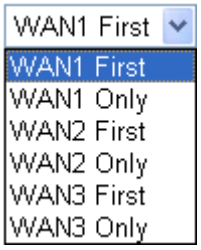
Service Provider	Select the service provider for the DDNS account.
Service Type	Select a service type (Dynamic, Custom or Static). If you choose Custom, you can modify the domain that is chosen in the Domain Name field.
Domain Name	Type in one domain name that you applied previously. Use the drop down list to choose the desired domain.
Login Name	Type in the login name that you set for applying domain.
Password	Type in the password that you set for applying domain.
Wildcard and Backup MX	The Wildcard and Backup MX (Mail Exchange) features are not supported for all Dynamic DNS providers. You could get more detailed information from their websites.

Mail Extender	If the mail server is defined with another name, please type the name in this area. Such mail server will be used as backup mail exchange.
Force WAN IP Update	When the IP address of the WAN interface in Vigor router is private IP, the system will detect the Public IP used by the router in front of Vigor router and use that Public IP to update DDNS server forcefully.

4. Click **OK** button to activate the settings. You will see your setting has been saved.

Disable the Function and Clear all Dynamic DNS Accounts

In the DDNS setup menu, uncheck **Enable Dynamic DNS Setup**, and push **Clear All** button to disable the function and clear all accounts from the router.

Delete a Dynamic DNS Account

In the DDNS setup menu, click the **Index** number you want to delete and then push **Clear All** button to delete the account.

3.9.2 Schedule

The Vigor router has a built-in real time clock which can update itself manually or automatically by means of Network Time Protocols (NTP). As a result, you can not only schedule the router to dialup to the Internet at a specified time, but also restrict Internet access to certain hours so that users can connect to the Internet only during certain hours, say, business hours. The schedule is also applicable to other functions.

You have to set your time before set schedule. In **System Maintenance>> Time and Date** menu, press **Inquire Time** button to set the Vigor router's clock to current time of your PC. The clock will reset once if you power down or reset the router. There is another way to set up time. You can inquiry an NTP server (a time server) on the Internet to synchronize the router's clock. This method can only be applied when the WAN connection has been built up.

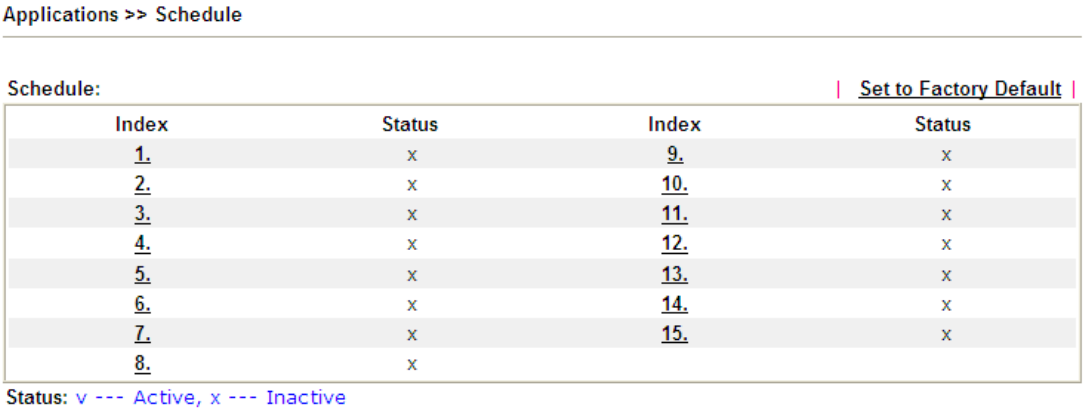

Available settings are explained as follows:

Item	Description
Set to Factory Default	Clear all profiles and recover to factory settings.
Index	Click the number below Index to access into the setting page of schedule.
Status	Display if this schedule setting is active or inactive.

You can set up to 15 schedules. Then you can apply them to your **Internet Access** or **VPN and Remote Access >> LAN-to-LAN** settings.

To add a schedule:

1. Click any index, say Index No. 1.
2. The detailed settings of the call schedule with index 1 are shown below.

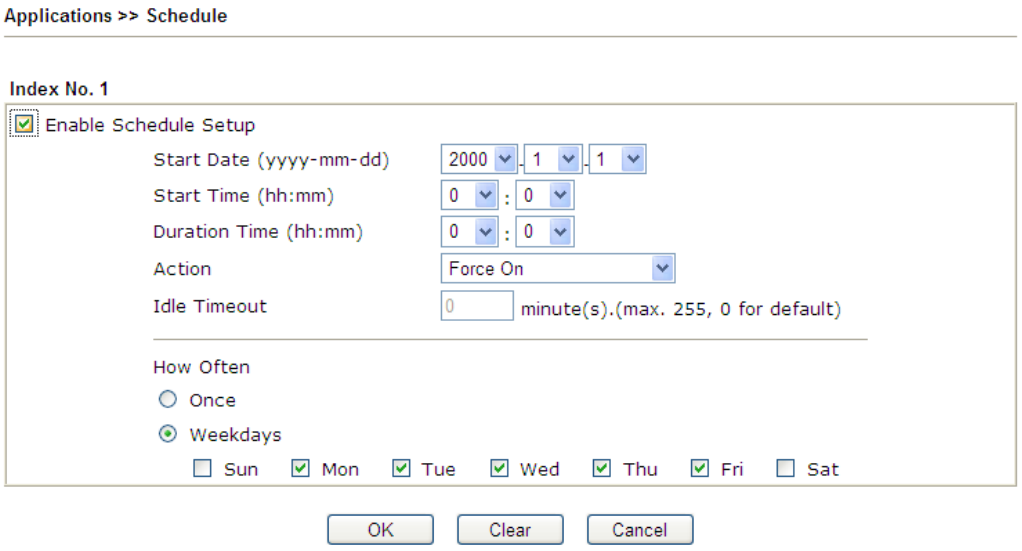

Available settings are explained as follows:

Item	Description
Enable Schedule Setup	Check to enable the schedule.
Start Date (yyyy-mm-dd)	Specify the starting date of the schedule.
Start Time (hh:mm)	Specify the starting time of the schedule.
Duration Time (hh:mm)	Specify the duration (or period) for the schedule.
Action	Specify which action Call Schedule should apply during the period of the schedule. **Force On** -Force the connection to be always on. **Force Down** -Force the connection to be always down. **Enable Dial-On-Demand** -Specify the connection to be dial-on-demand and the value of idle timeout should be specified in **Idle Timeout** field. **Disable Dial-On-Demand** -Specify the connection to be up when it has traffic on the line. Once there is no traffic over idle timeout, the connection will be down and never up again during the schedule.
Idle Timeout	Specify the duration (or period) for the schedule. **How often** -Specify how often the schedule will be applied **Once** -The schedule will be applied just once **Weekdays** -Specify which days in one week should perform the schedule.

3. Click **OK** button to save the settings.

Example

Suppose you want to control the PPPoE Internet access connection to be always on (Force On) from 9:00 to 18:00 for whole week. Other time the Internet access connection should be disconnected (Force Down).

Office Hour:

(Force On)

Mon - Sun **9:00 am** **to** **6:00 pm**

1. Make sure the PPPoE connection and **Time Setup** is working properly.
2. Configure the PPPoE always on from 9:00 to 18:00 for whole week.
3. Configure the **Force Down** from 18:00 to next day 9:00 for whole week.
4. Assign these two profiles to the PPPoE Internet access profile. Now, the PPPoE Internet connection will follow the schedule order to perform **Force On** or **Force Down** action according to the time plan that has been pre-defined in the schedule profiles.

3.9.3 RADIUS

Remote Authentication Dial-In User Service (RADIUS) is a security authentication client/server protocol that supports authentication, authorization and accounting, which is widely used by Internet service providers. It is the most common method of authenticating and authorizing dial-up and tunneled network users.

The built-in RADIUS client feature enables the router to assist the remote dial-in user or a wireless station and the RADIUS server in performing mutual authentication. It enables centralized remote access authentication for network management.

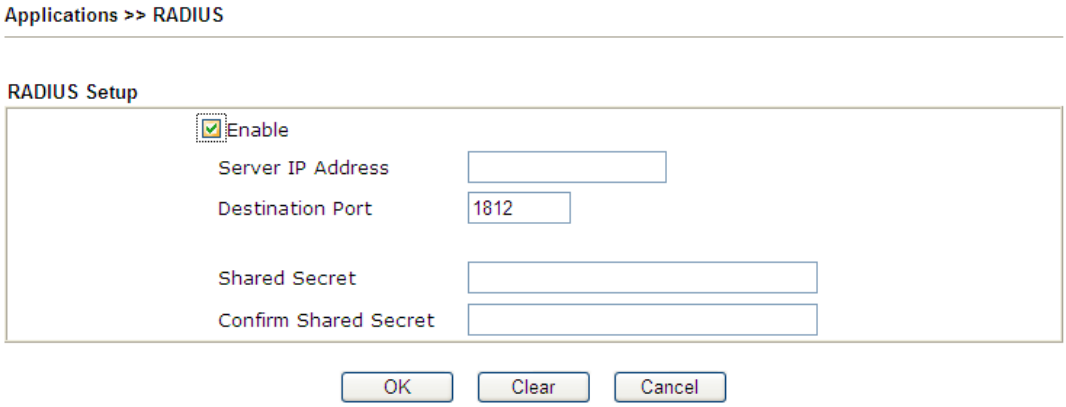

Available settings are explained as follows:

Item	Description
Enable	Check to enable RADIUS client feature.
Server IP Address	Enter the IP address of RADIUS server

Destination Port	The UDP port number that the RADIUS server is using. The default value is 1812, based on RFC 2138.
Shared Secret	The RADIUS server and client share a secret that is used to authenticate the messages sent between them. Both sides must be configured to use the same shared secret. The maximum length of the shared secret you can set is 36 characters.
Confirm Shared Secret	Re-type the Shared Secret for confirmation.

After finished the above settings, click **OK** button to save the settings.

3.9.4 LDAP /Active Directory Setup

Lightweight Directory Access Protocol (LDAP) is a communication protocol for using in TCP/IP network. It defines the methods to access distributing directory server by clients, work on directory and share the information in the directory by clients. The LDAP standard is established by the work team of Internet Engineering Task Force (IETF).

As the name described, LDAP is designed as an effect way to access directory service without the complexity of other directory service protocols. For LDAP is defined to perform , inquire and modify the information within the directory, and acquire the data in the directory securely, therefore users can apply LDAP to search or list the directory object, inquire or manage the active directory.

General Setup

This page allows you to enable the function and specify general settings for LDAP server.

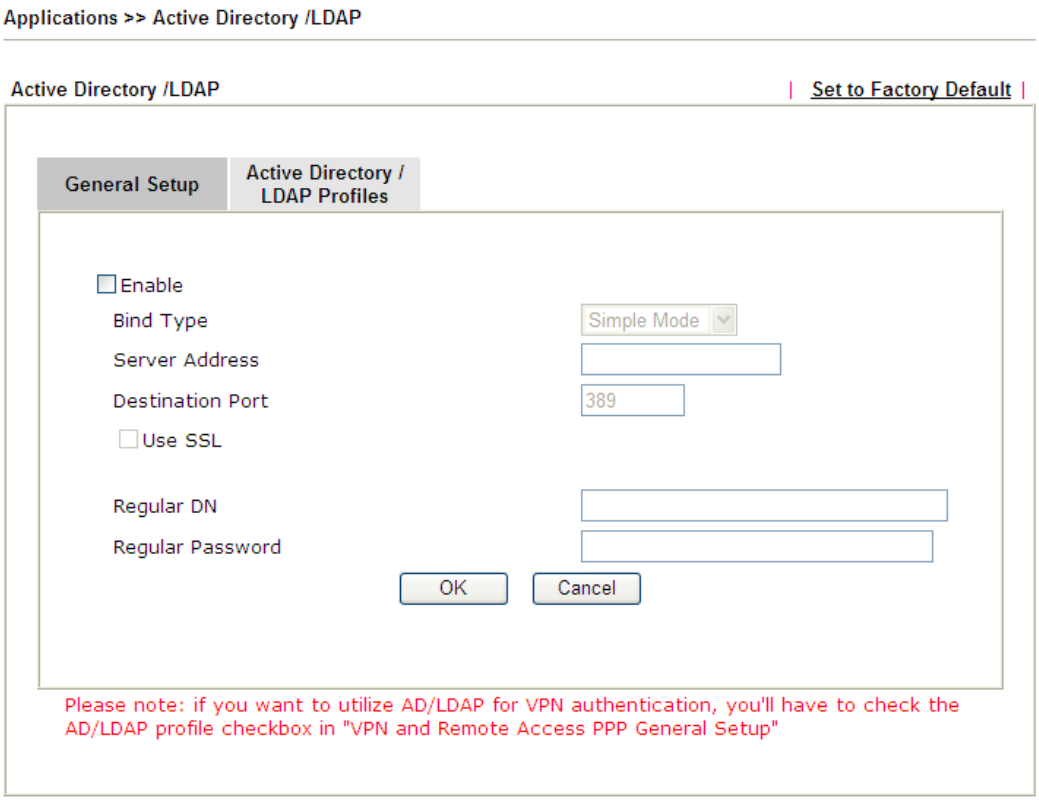

Available settings are explained as follows:

Item	Description
Enable	Check to enable such function.
Bind Type	There are three types of bind type supported. 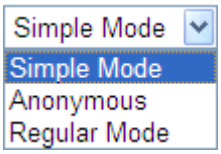 **Simple Mode** – Just simply do the bind authentication without any search action. **Anonymous** – Perform a search action first with Anonymous account then do the bind authentication. **Regular Mode**– Mostly it is the same with anonymous mode. The different is that, the server will firstly check if you have the search authority. For the regular mode, you'll need to type in the **Regular DN** and **Regular Password**.
Server IP Address	Enter the IP address of LDAP server.
Destination Port	Type a port number as the destination port for LDAP server.
Use SSL	Check the box to use the port number specified for SSL.
Regular DN	Type this setting if **Regular Mode** is selected as **Bind Type.**
Regular Password	Specify a password if **Regular Mode** is selected as **Bind Type.**

After finished the above settings, click **OK** button to save the settings.

Profiles

You can configure eight AD/LDAP profiles. These profiles would be used with User Management for different purposes in management.

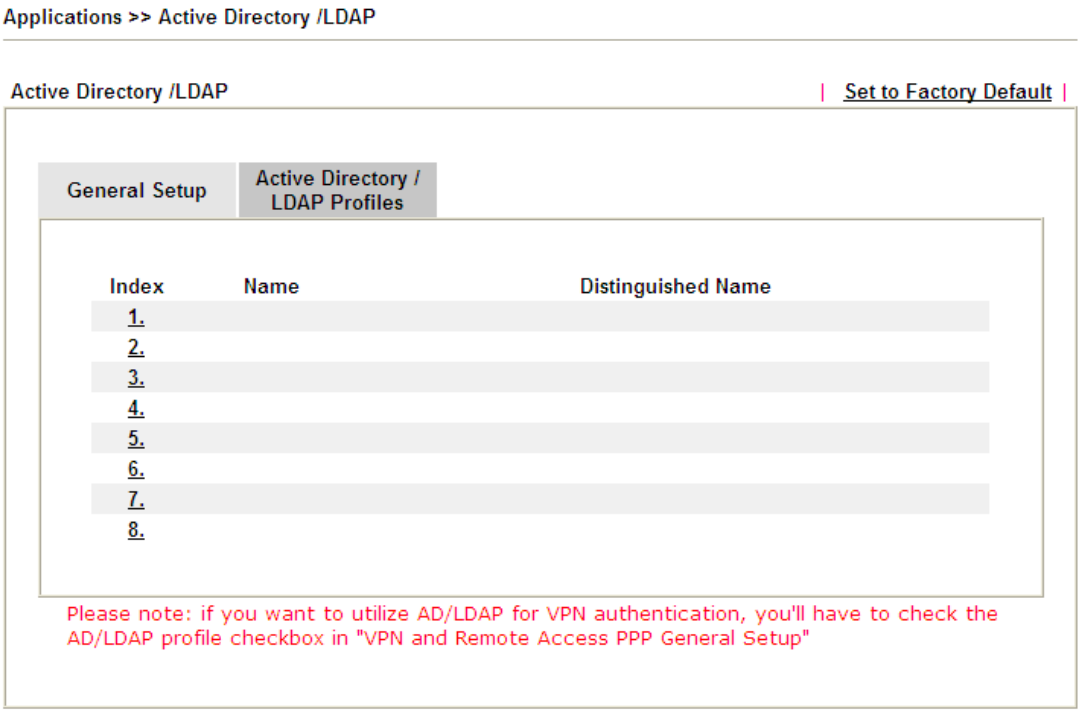

Click any index number link to open the following page.

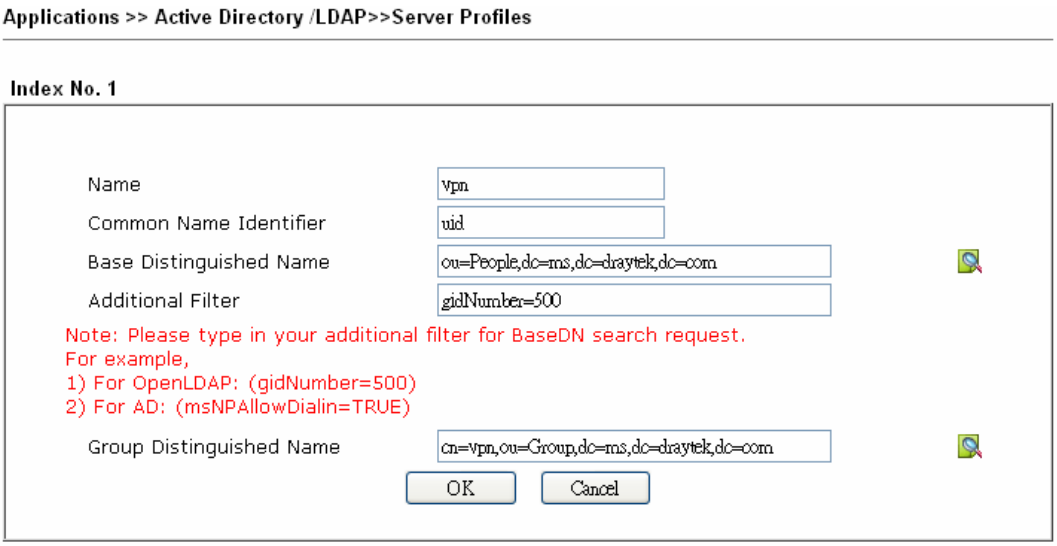

Available settings are explained as follows:

Item	Description
Name	Type a name for such profile. The length of the use name is limited to 19 characters.
Common Name Identifier	Type or edit the common name identifier for the LDAP server. The common name identifier for most LDAP server is “cn”.

Base Distinguished Name / Group Distinguished Name	Type or edit the distinguished name used to look up entries on the LDAP server. Sometimes, you may forget the Distinguished Name since it's too long. Then you may click the button to list all the account information on the AD/LDAP Server to assist you finish the setup.
Additional Filter	This is an optional setting.

After finished the above settings, click **OK** to save and exit this page. A new profile has been created.

For detailed information about LDAP application, refer to **section 4.7 How to Implement the AD/LDAP Authentication for User Management?**

3.9.5 UPnP

The **UPnP** (Universal Plug and Play) protocol is supported to bring to network connected devices the ease of installation and configuration which is already available for directly connected PC peripherals with the existing Windows 'Plug and Play' system. For NAT routers, the major feature of UPnP on the router is “NAT Traversal”. This enables applications inside the firewall to automatically open the ports that they need to pass through a router. It is more reliable than requiring a router to work out by itself which ports need to be opened. Further, the user does not have to manually set up port mappings or a DMZ. **UPnP is available on Windows XP** and the router provide the associated support for MSN Messenger to allow full use of the voice, video and messaging features.

Applications >> UPnP
UPnP
Enable UPnP Service
Enable Connection control Service
Enable Connection Status Service
Note: If you intend running UPnP service inside your LAN, you should check the appropriate service above to allow control, as well as the appropriate UPnP settings.
OK
Clear
Cancel

Available settings are explained as follows:

Item	Description
Enable UPNP Service	Accordingly, you can enable either the **Connection Control Service** or **Connection Status Service**.

After setting **Enable UPNP Service** setting, an icon of **IP Broadband Connection on Router** on Windows XP/Network Connections will appear. The connection status and control status will be able to be activated. The NAT Traversal of UPnP enables the multimedia features of your applications to operate. This has to manually set up port mappings or use other similar methods. The screenshots below show examples of this facility.

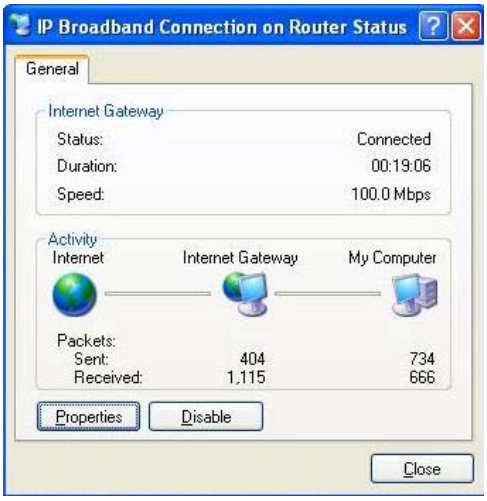

The UPnP facility on the router enables UPnP aware applications such as MSN Messenger to discover what are behind a NAT router. The application will also learn the external IP address and configure port mappings on the router. Subsequently, such a facility forwards packets from the external ports of the router to the internal ports used by the application.

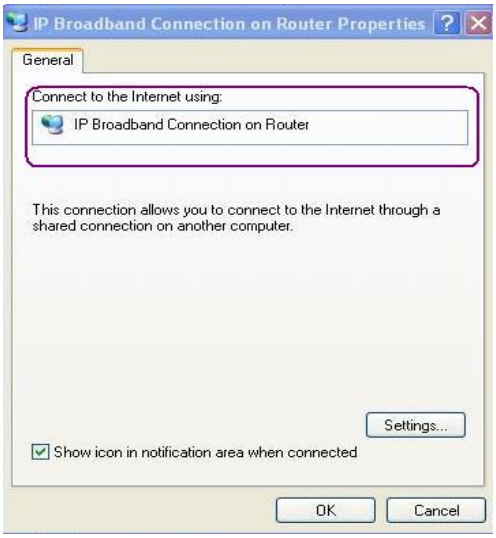
IP Broadband Connection on Router Properties
General
Connect to the Internet using:
IP Broadband Connection on Router
This connection allows you to connect to the Internet through a shared connection on another computer.
Settings...
Show icon in notification area when connected
OK
Cancel

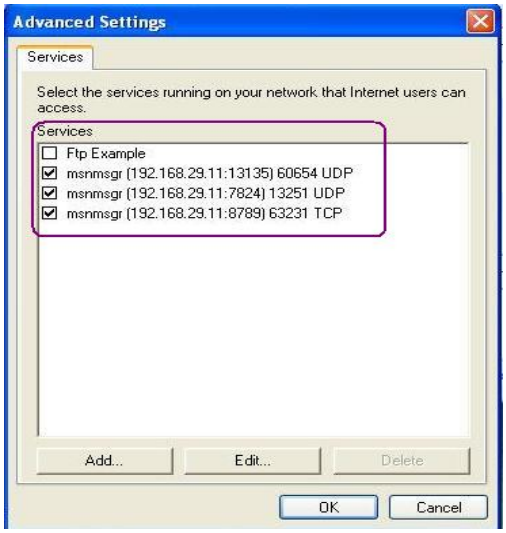

The reminder as regards concern about Firewall and UPnP

Can't work with Firewall Software

Enabling firewall applications on your PC may cause the UPnP function not working properly. This is because these applications will block the accessing ability of some network ports.

Security Considerations

Activating the UPnP function on your network may incur some security threats. You should consider carefully these risks before activating the UPnP function.

- Some Microsoft operating systems have found out the UPnP weaknesses and hence you need to ensure that you have applied the latest service packs and patches.
- Non-privileged users can control some router functions, including removing and adding port mappings.

The UPnP function dynamically adds port mappings on behalf of some UPnP-aware applications. When the applications terminate abnormally, these mappings may not be removed.

3.9.6 IGMP

IGMP is the abbreviation of *Internet Group Management Protocol*. It is a communication protocol which is mainly used for managing the membership of Internet Protocol multicast groups.

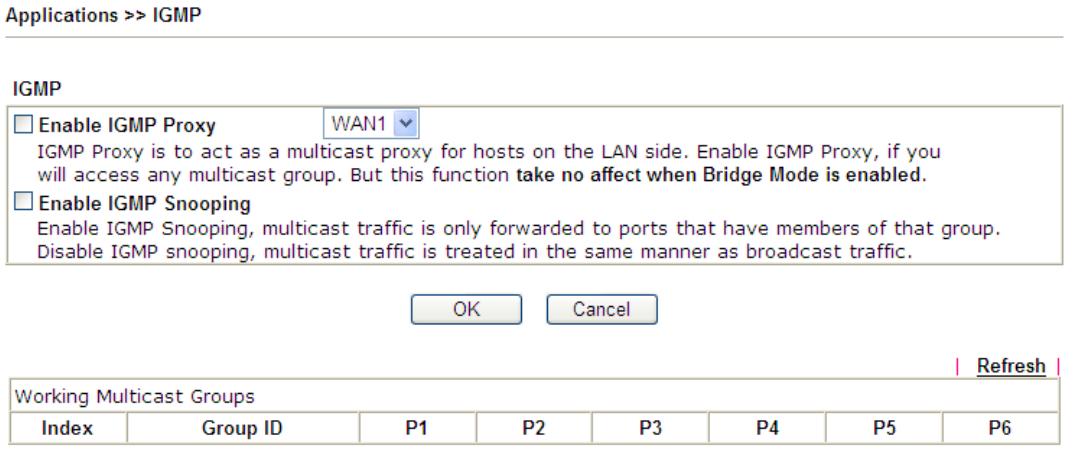
Applications >> IGMP
IGMP
Enable IGMP Proxy
WAN1
IGMP Proxy is to act as a multicast proxy for hosts on the LAN side. Enable IGMP Proxy, if you will access any multicast group. But this function take no affect when Bridge Mode is enabled.
Enable IGMP Snooping
Enable IGMP Snooping, multicast traffic is only forwarded to ports that have members of that group. Disable IGMP snooping, multicast traffic is treated in the same manner as broadcast traffic.
OK
Cancel
Refresh
Working Multicast Groups
Index
Group ID
P1
P2
P3
P4
P5
P6

Available settings are explained as follows:

Item	Description
Enable IGMP Proxy	Check this box to enable this function. The application of multicast will be executed through WAN port. In addition, such function is available in NAT mode. 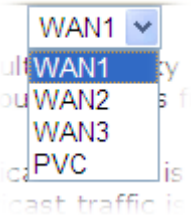
Enable IGMP Snooping	Check this box to enable this function. Multicast traffic will be forwarded to ports that have members of that group. Disabling IGMP snooping will make multicast traffic treated in the same manner as broadcast traffic.
Refresh	Click this link to renew the working multicast group status.
Group ID	This field displays the ID port for the multicast group. The available range for IGMP starts from 224.0.0.0 to 239.255.255.254.
P1 to P6	It indicates the LAN port used for the multicast group.

After finishing all the settings here, please click **OK** to save the configuration.

3.9.7 Wake on LAN

A PC client on LAN can be woken up by the router it connects. When a user wants to wake up a specified PC through the router, he/she must type correct MAC address of the specified PC on this web page of **Wake on LAN** (WOL) of this router.

In addition, such PC must have installed a network card supporting WOL function. By the way, WOL function must be set as “Enable” on the BIOS setting.

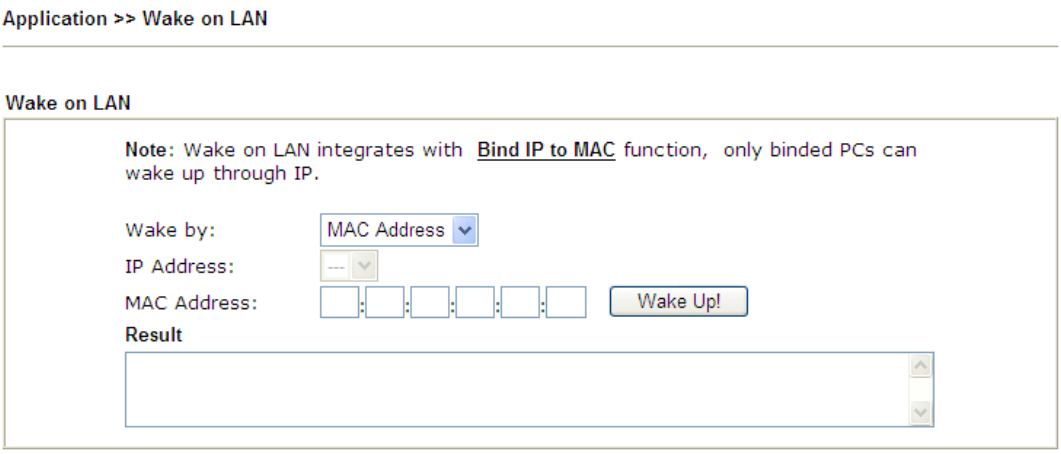
Application >> Wake on LAN
Wake on LAN
Note: Wake on LAN integrates with Bind IP to MAC function, only binded PCs can wake up through IP.
Wake by:
MAC Address
IP Address:
MAC Address:
Wake Up!
Result

Available settings are explained as follows:

Item	Description
Wake by	Two types provide for you to wake up the binded IP. If you choose Wake by MAC Address, you have to type the correct MAC address of the host in MAC Address boxes. If you choose Wake by IP Address, you have to choose the correct IP address. 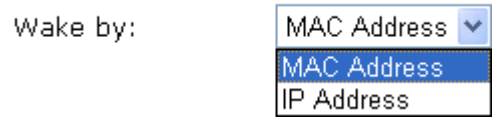
IP Address	The IP addresses that have been configured in **Firewall>>Bind IP to MAC** will be shown in this drop down list. Choose the IP address from the drop down list that you want to wake up.
MAC Address	Type any one of the MAC address of the bound PCs.
Wake Up	Click this button to wake up the selected IP. See the following figure. The result will be shown on the box.

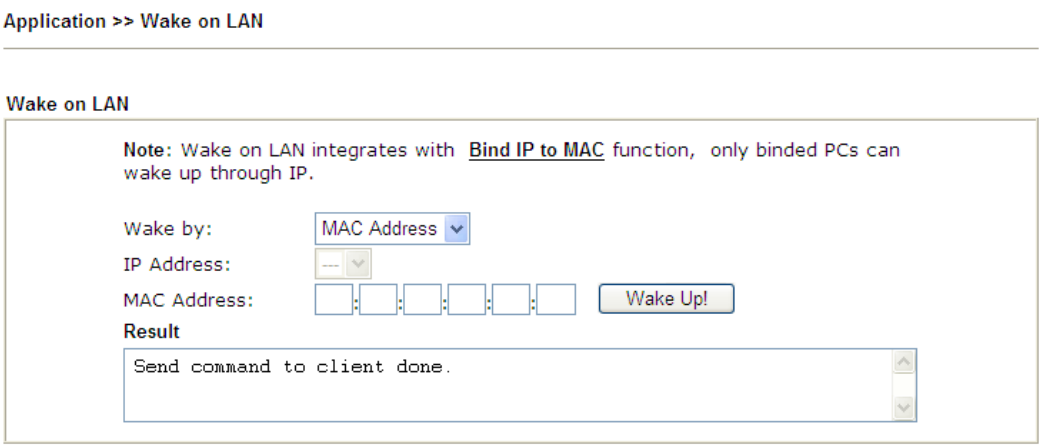
Application >> Wake on LAN
Wake on LAN
Note: Wake on LAN integrates with Bind IP to MAC function, only binded PCs can wake up through IP.
Wake by:
MAC Address
IP Address:
MAC Address:
Wake Up!
Result
Send command to client done.

3.9.8 SMS / Mail Alert Service

The function of SMS (Short Message Service)/Mail Alert is that Vigor router sends a message to user's mobile or e-mail box through specified service provider to assist the user knowing the real-time abnormal situations.

Vigor router allows you to set up to **10** SMS profiles which will be sent out according to different conditions.

SMS Provider

This page allows you to specify SMS provider, who will get the SMS, what the content is and when the SMS will be sent.

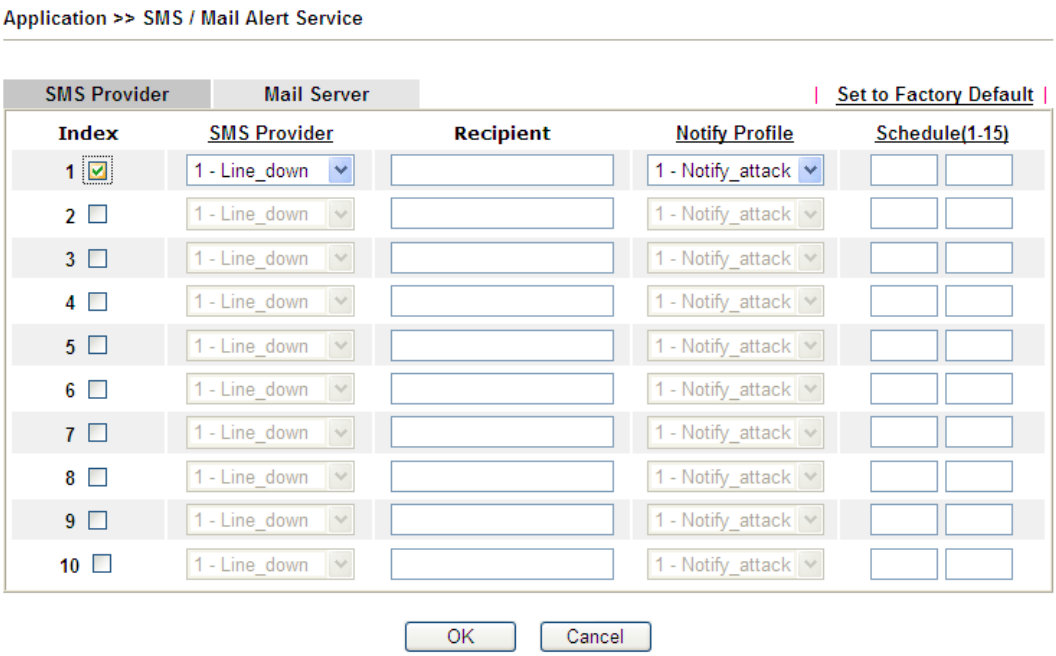

Available settings are explained as follows:

Item	Description
Index	Check the box to enable such profile.
SMS Provider	Use the drop down list to choose SMS service provider. You can click **SMS Provider** link to define the SMS server.

Recipient	Type the name of the one who will receive the SMS.
Notify	Use the drop down list to choose a message profile. The recipient will get the content stated in the message profile. You can click the **Notify Profile** link to define the content of the SMS.
Schedule	Type the schedule number that the SMS will be sent out. You can click the **Schedule(1-15)** link to define the schedule.

After finishing all the settings here, please click **OK** to save the configuration.

Mail Server

This page allows you to specify Mail Server profile, who will get the notification e-mail, what the content is and when the message will be sent.

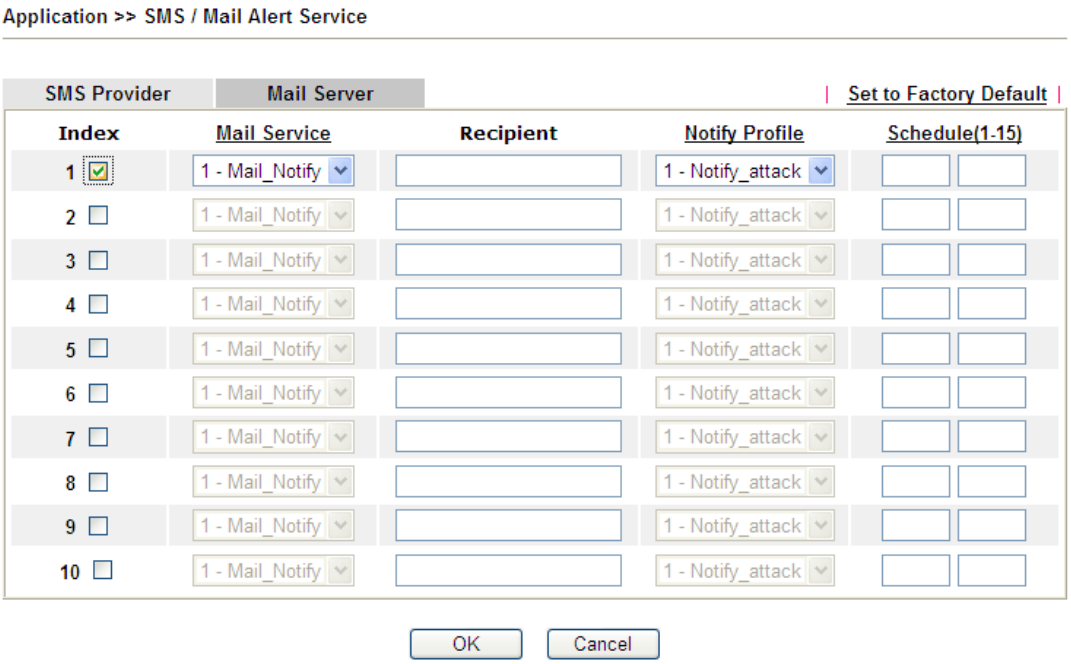

Available settings are explained as follows:

Item	Description
Index	Check the box to enable such profile.
Mail Service	Use the drop down list to choose mail service provider. You can click **Mail Service** link to define the mail server.
Recipient	Type the e-mail address of the one who will receive the notification message.
Notify	Use the drop down list to choose a message profile. The recipient will get the content stated in the message profile. You can click the **Notify Profile** link to define the content of the mail message.

Schedule	Type the schedule number that the notification will be sent out. You can click the **Schedule(1-15)** link to define the schedule.

After finishing all the settings here, please click **OK** to save the configuration.

3.10 VPN and Remote Access

A Virtual Private Network (VPN) is the extension of a private network that encompasses links across shared or public networks like the Internet. In short, by VPN technology, you can send data between two computers across a shared or public network in a manner that emulates the properties of a point-to-point private link.

Below shows the menu items for VPN and Remote Access.

3.10.1 VPN Client Wizard

Such wizard is used to configure VPN settings for VPN client. Such wizard will guide to set the LAN-to-LAN profile for VPN dial out connection (from server to client) step by step.

1. Open **VPN and Remote Access>>VPN Client Wizard**. The following page will appear.

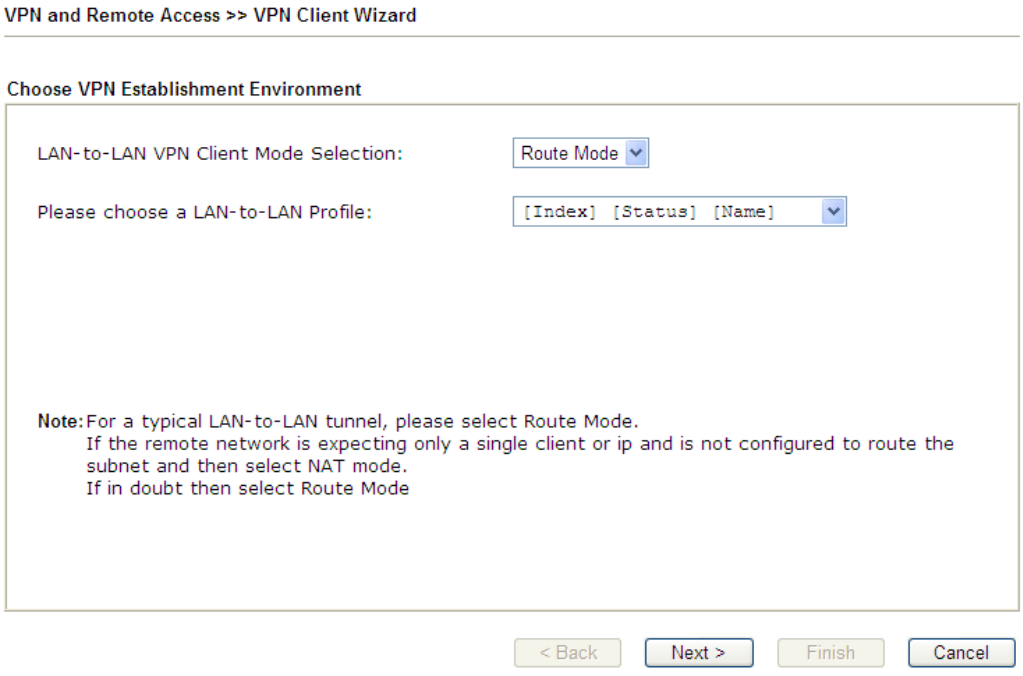
VPN and Remote Access >> VPN Client Wizard
Choose VPN Establishment Environment
LAN-to-LAN VPN Client Mode Selection:
Route Mode
Please choose a LAN-to-LAN Profile:
[Index] [Status] [Name]
Note: For a typical LAN-to-LAN tunnel, please select Route Mode.
If the remote network is expecting only a single client or ip and is not configured to route the subnet and then select NAT mode.
If in doubt then select Route Mode
< Back
Next >
Finish
Cancel

Available settings are explained as follows:

Item	Description
LAN-to-LAN Client Mode Selection	Choose the client mode. **Route Mode/NAT Mode** – If the remote network only allows you to dial in with single IP, please choose this mode, otherwise please choose Route Mode. 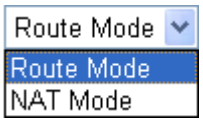
Please choose a LAN-to-LAN Profile	There are 32 VPN profiles for users to set. 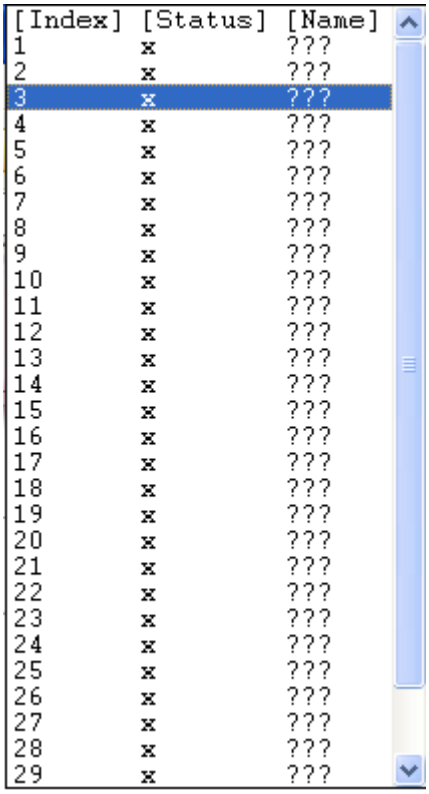

2. When you finish the mode and profile selection, please click **Next** to open the following page.

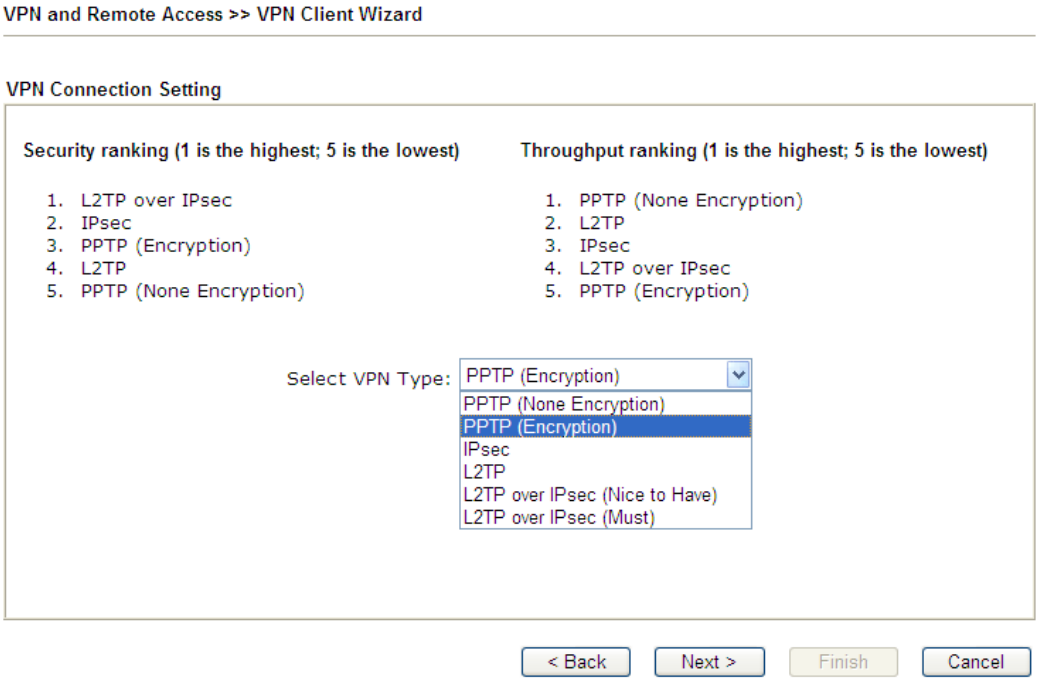

In this page, you have to select suitable VPN type for the VPN client profile. There are six types provided here. Different type will lead to different configuration page. After making the choices for the client profile, please click **Next**. You will see different configurations based on the selection(s) you made.

Note: The following descriptions for VPN Type are based on the **Route Mode** specified in **LAN-to-LAN Client Mode Selection.**

- When you choose **PPTP (None Encryption)** or **PPTP (Encryption)**, you will see the following graphic:

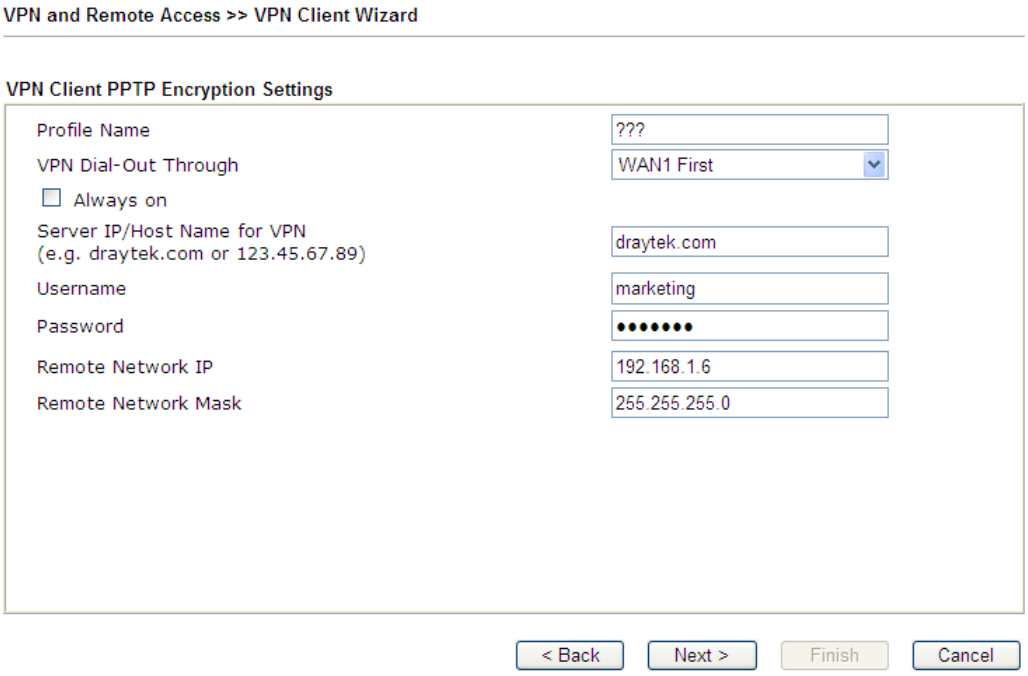

- When you choose **IPSec**, you will see the following graphic:

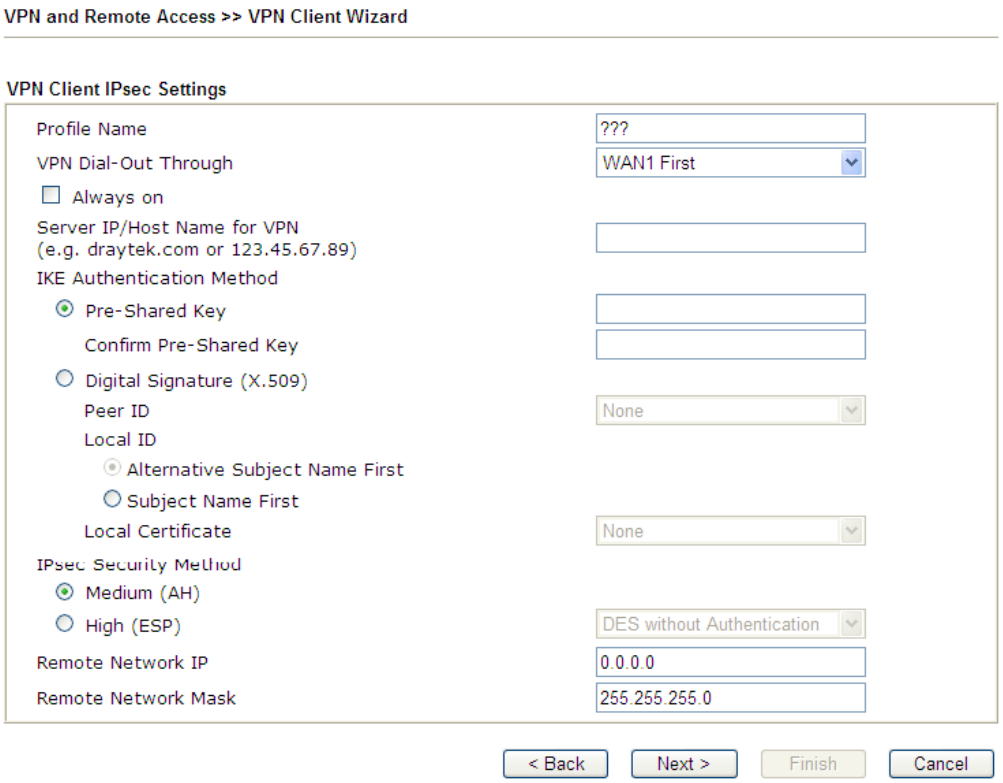

- When you choose **L2TP**, you will see the following graphic:

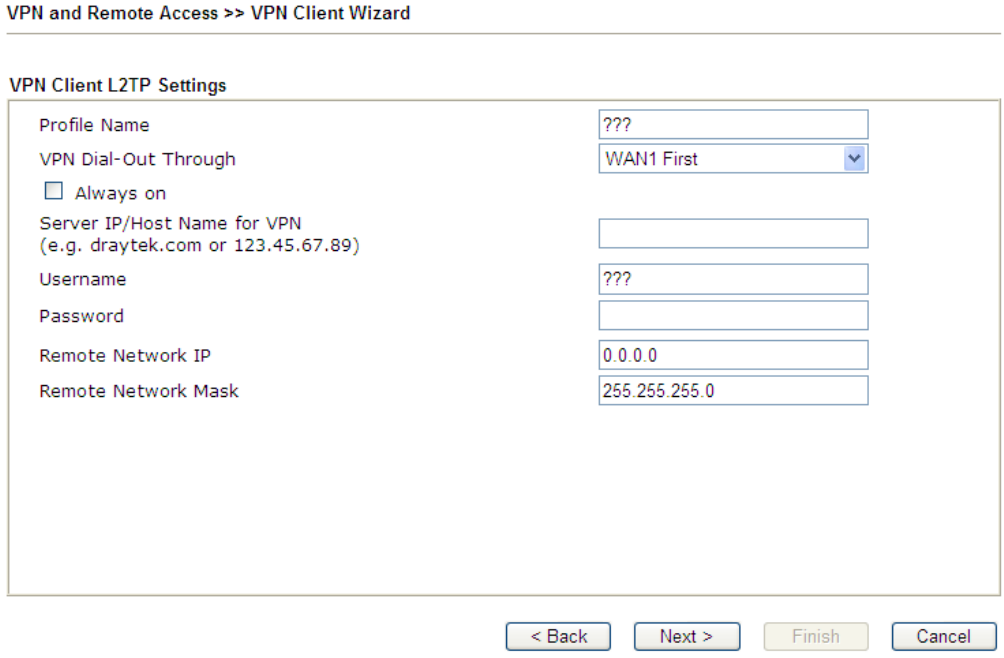

- When you choose **L2TP over IPSec (Nice to Have)** or **L2TP over IPSec (Must),** you will see the following graphic:

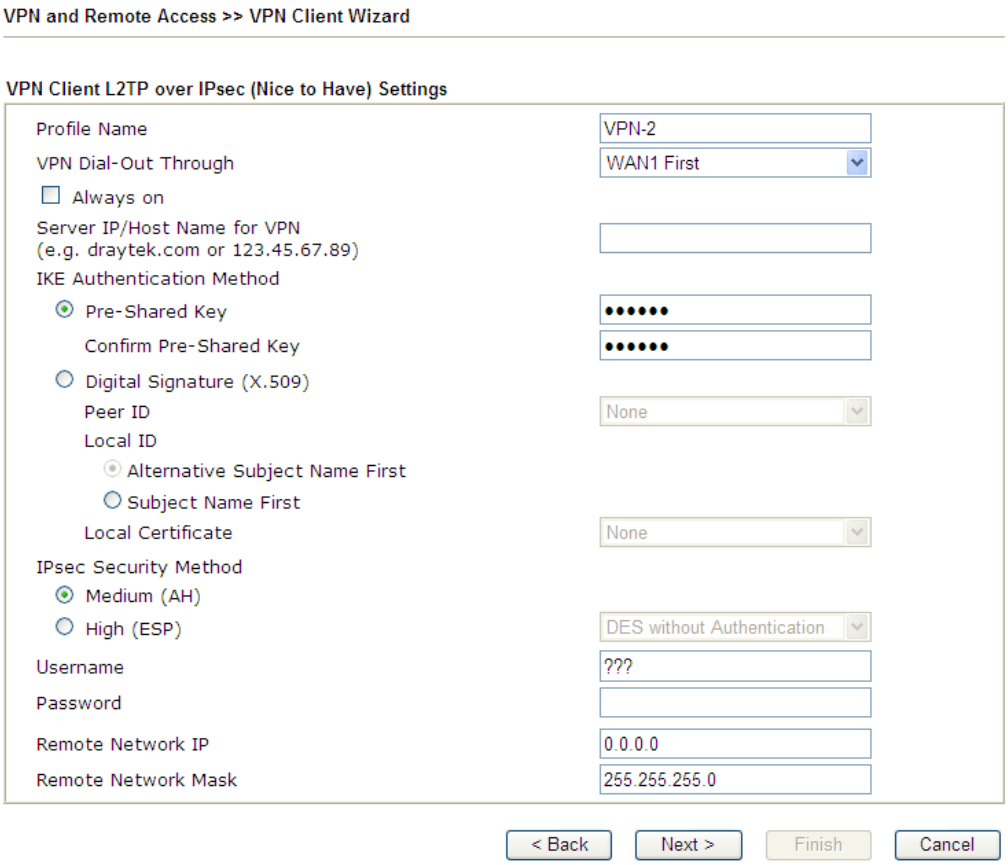

Available settings are explained as follows:

Item	Description
Profile Name	Type a name for such profile. The length of the file is limited to 10 characters.
VPN Dial-Out Through	Use the drop down menu to choose a proper WAN interface for this profile. This setting is useful for dial-out only. 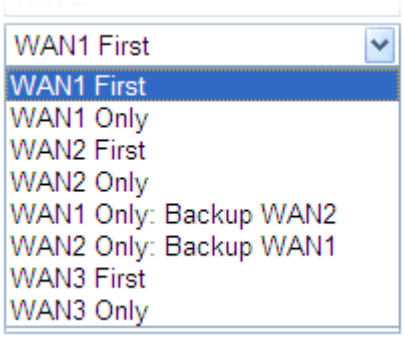 **WAN1 First/ WAN2 First/ WAN3 First** - While connecting, the router will use WAN1/WAN2/WAN3 as the first channel for VPN connection. If WAN1/WAN2/WAN3 fails, the router will use another WAN interface instead. **WAN1 Only /WAN2 Only/WAN 3 Only**- While connecting, the router will use WAN1/WAN2/WAN3 as

	the only channel for VPN connection. **WAN1 Only: Backup WAN2/WAN2 Only: Backup WAN1** - While connecting, the router will use WAN1/WAN2 as the only channel for VPN connection. If WAN1/WAN2 fails, the router will use backup WAN2/backup WAN1 interface instead.
Always On	Check to enable router always keep VPN connection.
Pre-Shared Key	**IKE Authentication Method** usually applies to those are remote dial-in user or node (LAN to LAN) which uses dynamic IP address and IPSec-related VPN connections such as L2TP over IPSec and IPSec tunnel. **Pre-Shared Key-** Specify a key for IKE authentication. **Confirm Pre-Shared Key-**Confirm the pre-shared key.
Digital Signature (X.509)	Click **Digital Signature** to invoke this function. Use the drop down list to choose one of the certificates for using. You have to configure one certificate at least previously in **Certificate Management >> Local Certificate.** Otherwise, the setting you choose here will not be effective. **Peer ID** – Choose the peer ID selection from the drop down list. **Local ID** – Choose **Alternative Subject Name First** or **Subject Name First**.
IPSec Security Method	**Medium** - Authentication Header (AH) means data will be authenticated, but not be encrypted. By default, this option is active. **High** - Encapsulating Security Payload (ESP) means payload (data) will be encrypted and authenticated. You may select encryption algorithm from Data Encryption Standard (DES), Triple DES (3DES), and AES.
User Name	This field is used to authenticate for connection when you select PPTP or L2TP with or without IPSec policy above. The length of the use name is limited to 11 characters.
Password	This field is used to authenticate for connection when you select PPTP or L2TP with or without IPSec policy above. The length of the password is limited to 11 characters.
Remote Network IP	Please type one LAN IP address (according to the real location of the remote host) for building VPN connection.
Remote Network Mask	Please type the network mask (according to the real location of the remote host) for building VPN connection.

3. After finishing the configuration, please click **Next.** The confirmation page will be shown as follows. If there is no problem, you can click one of the radio buttons listed on the page and click **Finish** to execute the next action.

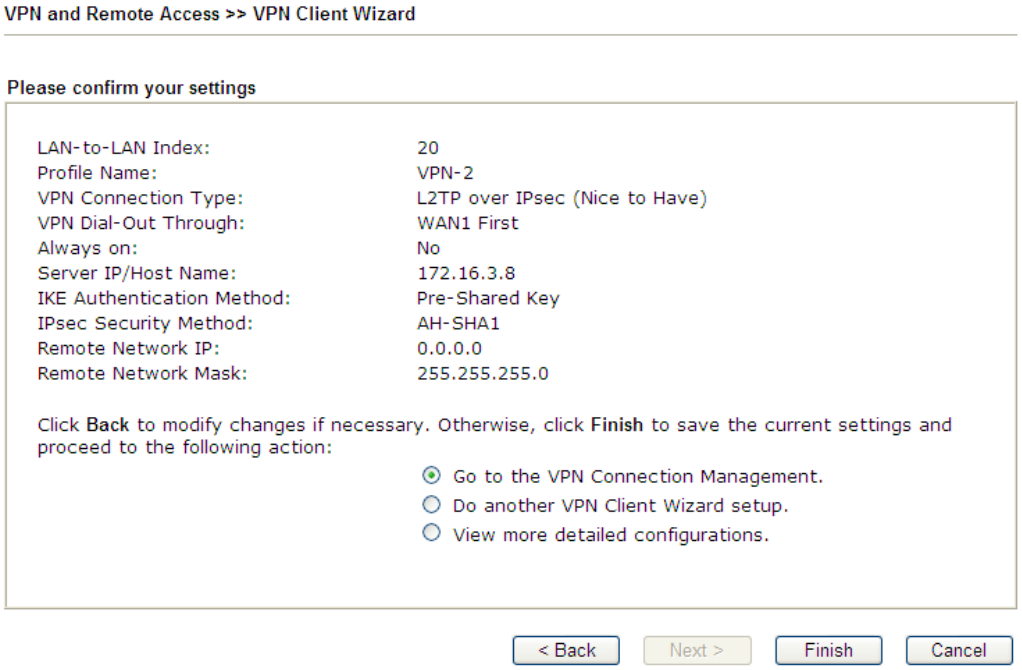
VPN and Remote Access >> VPN Client Wizard
Please confirm your settings
LAN-to-LAN Index: 20
Profile Name: VPN-2
VPN Connection Type: L2TP over IPsec (Nice to Have)
VPN Dial-Out Through: WAN1 First
Always on: No
Server IP/Host Name: 172.16.3.8
IKE Authentication Method: Pre-Shared Key
IPsec Security Method: AH-SHA1
Remote Network IP: 0.0.0.0
Remote Network Mask: 255.255.255.0
Click Back to modify changes if necessary. Otherwise, click Finish to save the current settings and proceed to the following action:
Go to the VPN Connection Management.
Do another VPN Client Wizard setup.
View more detailed configurations.
< Back
Next >
Finish
Cancel

Available settings are explained as follows:

Item	Description
Go to the VPN Connection Management	Click this radio button to access **VPN and Remote Access>>Connection Management** for viewing VPN Connection status.
Do another VPN Server Wizard Setup	Click this radio button to set another profile of VPN Server through VPN Server Wizard.
View more detailed configuration	Click this radio button to access **VPN and Remote Access>>LAN to LAN** for viewing detailed configuration.

3.10.2 VPN Server Wizard

Such wizard is used to configure VPN settings for VPN server. Such wizard will guide to set the LAN-to-LAN profile for VPN dial in connection (from client to server) step by step.

1. Open **VPN and Remote Access>>VPN Server Wizard**. The following page will appear.

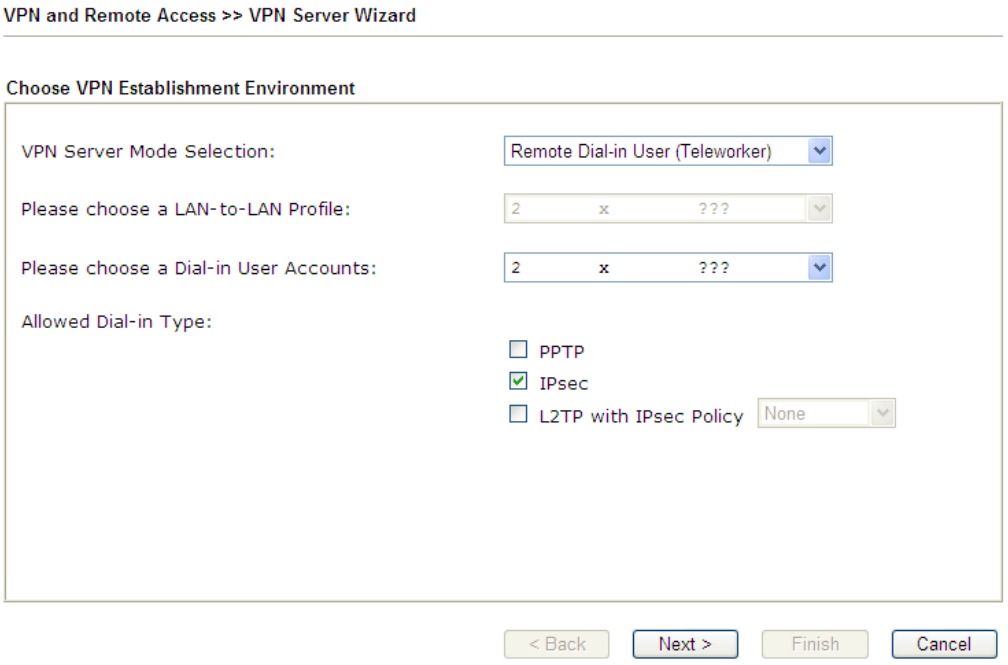

Available settings are explained as follows:

Item	Description
VPN Server Mode Selection	Choose the direction for the VPN server. **Site to Site VPN** – To set a LAN-to-LAN profile automatically, please choose Site to Site VPN. **Remote Dial-in User** –You can manage remote access by maintaining a table of remote user profile, so that users can be authenticated to dial-in via VPN connection. Site to Site VPN (LAN-to-LAN) Site to Site VPN (LAN-to-LAN) Remote Dial-in User (Teleworker)
Please choose a LAN-to-LAN Profile	This item is available when you choose **Site to Site VPN** (LAN-to-LAN) as VPN server mode. There are 32 VPN profiles for users to set.

	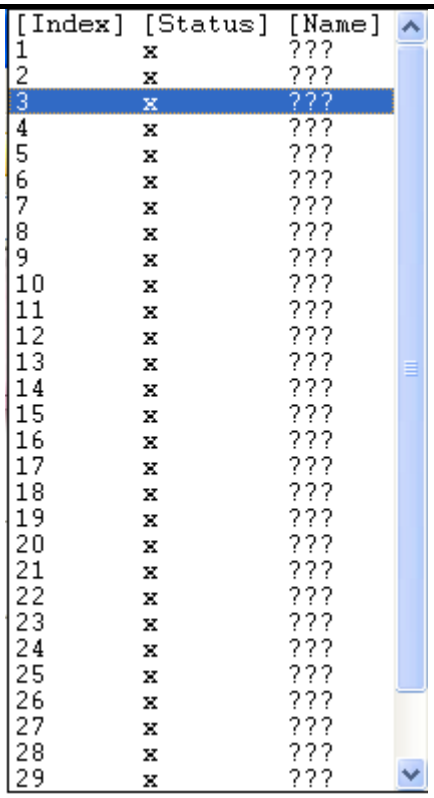
Please choose a Dial-in User Accounts	This item is available when you choose Remote Dial-in User (Teleworker) as VPN server mode. There are 32 VPN tunnels for users to set.
Allowed Dial-in Type	This item is available after you choose any one of dial-in user account profiles. Next, you have to select suitable dial-in type for the VPN server profile. There are several types provided here (similar to VPN Client Wizard). 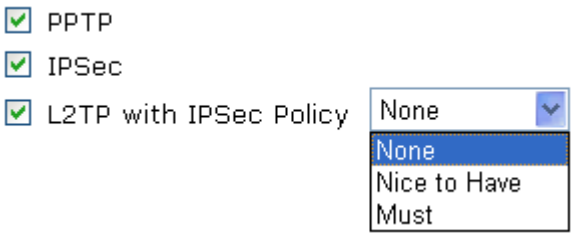 Different Dial-in Type will lead to different configuration page. In addition, adjustable items for each dial-in type will be changed according to the VPN Server Mode (**Site to Site VPN** and **Remote Dial-in User**) selected.

2. After making the choices for the server profile, please click **Next**. You will see different configurations based on the selection you made.

   Here we take the examples of choosing **Remote-Dial-in User** as the **VPN Server Mode**.

- When you check **PPTP**, you will see the following graphic:

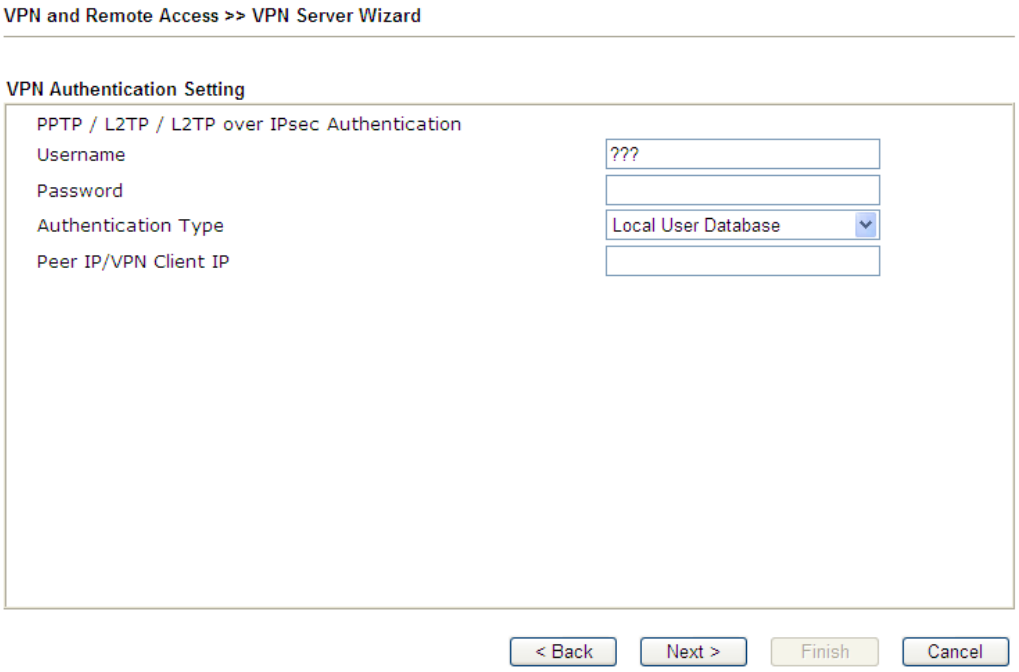

- When you check **PPTP & IPSec & L2TP** (three types) or **PPTP&IPSec** (two types) or **L2TP with Policy (Nice to Have/Must)**, you will see the following graphic:

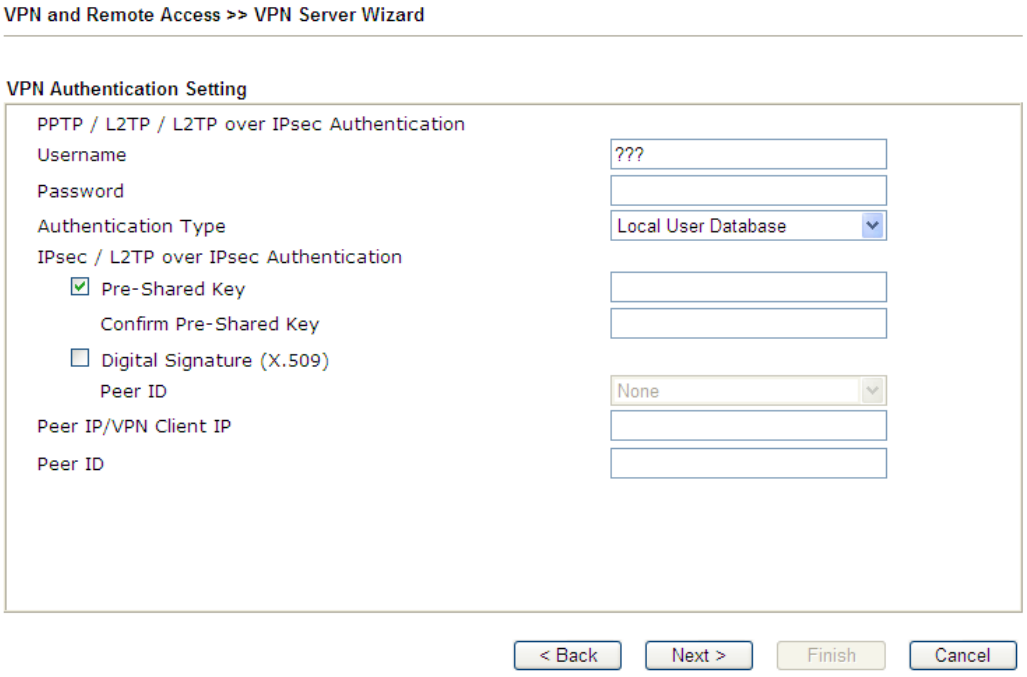

- When you check **IPSec**, you will see the following graphic:

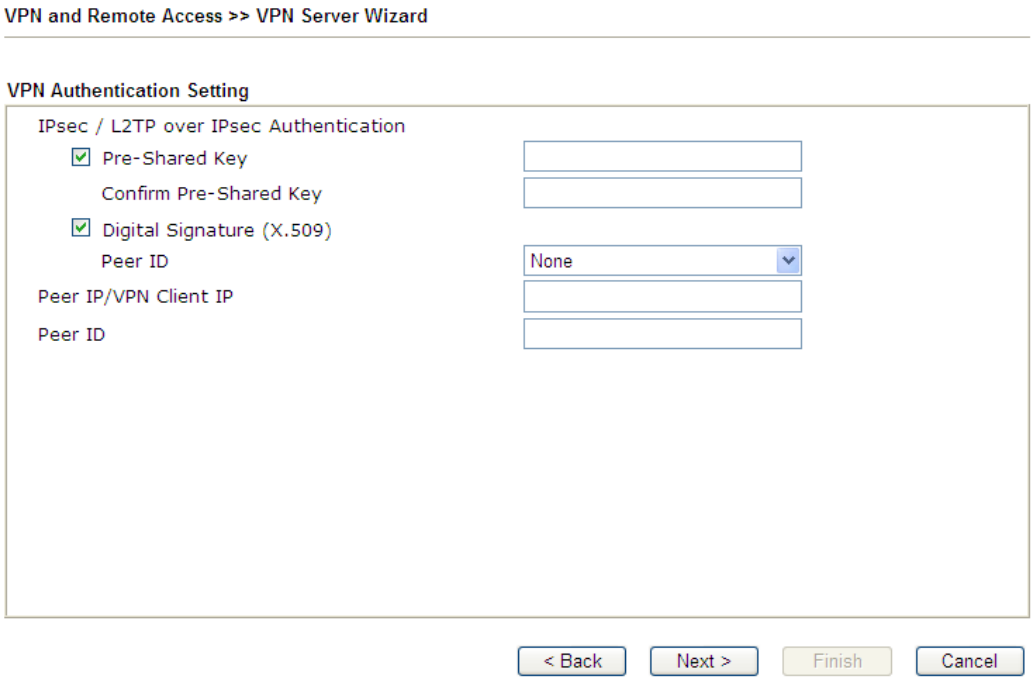

Available settings are explained as follows:

Item	Description
Profile Name	Type a name for such profile. The length of the file is limited to 10 characters.
User Name	This field is used to authenticate for connection when you select PPTP or L2TP with or without IPSec policy above. The length of the name is limited to 11 characters.
Password	This field is used to authenticate for connection when you select PPTP or L2TP with or without IPSec policy above. The length of the name is limited to 11 characters.
Pre-Shared Key	For IPSec/L2TP IPSec authentication, you have to type a pre-shared key. The length of the name is limited to 64 characters.
Confirm Pre-Shared Key	Type the pre-shared key again for confirmation.
Digital Signature (X.509)	Check the box of Digital Signature to invoke this function. Use the drop down list to choose one of the certificates for using. You have to configure one certificate at least previously in **Certificate Management >> Local Certificate.** Otherwise, the setting you choose here will not be effective.
Peer IP/VPN Client IP	Type the WAN IP address or VPN client IP address for the remote client.
Peer ID	Type the ID name for the remote client. The length of the name is limited to 47 characters.

Remote Network IP	Please type one LAN IP address (according to the real location of the remote host) for building VPN connection.
Remote Network Mask	Please type the network mask (according to the real location of the remote host) for building VPN connection.

3. After finishing the configuration, please click **Next.** The confirmation page will be shown as follows. If there is no problem, you can click one of the radio buttons listed on the page and click **Finish** to execute the next action.

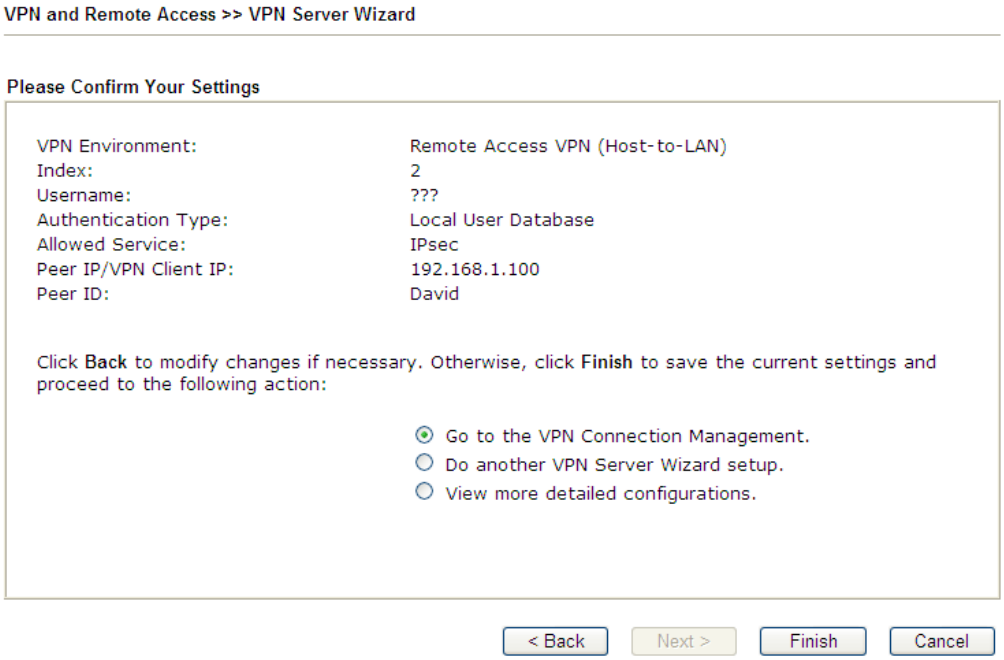
VPN and Remote Access >> VPN Server Wizard
Please Confirm Your Settings
VPN Environment: Remote Access VPN (Host-to-LAN)
Index: 2
Username: ???
Authentication Type: Local User Database
Allowed Service: IPsec
Peer IP/VPN Client IP: 192.168.1.100
Peer ID: David
Click Back to modify changes if necessary. Otherwise, click Finish to save the current settings and proceed to the following action:
Go to the VPN Connection Management.
Do another VPN Server Wizard setup.
View more detailed configurations.
< Back
Next >
Finish
Cancel

Available settings are explained as follows:

Item	Description
Go to the VPN Connection Management	Click this radio button to access **VPN and Remote Access>>Connection Management** for viewing VPN Connection status.
Do another VPN Server Wizard Setup	Click this radio button to set another profile of VPN Server through VPN Server Wizard.
View more detailed configuration	Click this radio button to access **VPN and Remote Access>>LAN to LAN** for viewing detailed configuration.

3.10.3 Remote Access Control

Enable the necessary VPN service as you need. If you intend to run a VPN server inside your LAN, you should disable the VPN service of Vigor Router to allow VPN tunnel pass through, as well as the appropriate NAT settings, such as DMZ or open port.

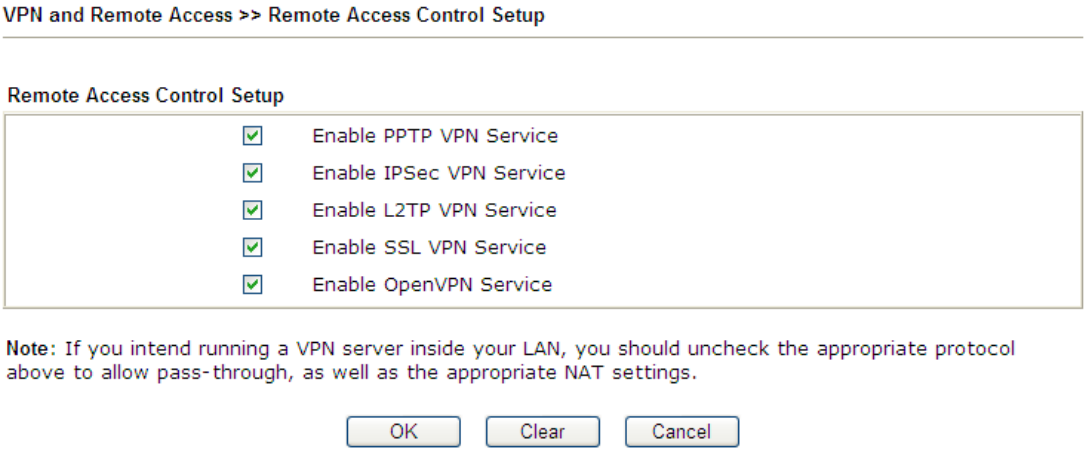
VPN and Remote Access >> Remote Access Control Setup
Remote Access Control Setup
Enable PPTP VPN Service
Enable IPSec VPN Service
Enable L2TP VPN Service
Enable SSL VPN Service
Enable OpenVPN Service
Note: If you intend running a VPN server inside your LAN, you should uncheck the appropriate protocol above to allow pass-through, as well as the appropriate NAT settings.
OK
Clear
Cancel

After finishing all the settings here, please click **OK** to save the configuration.

3.10.4 PPP General Setup

This submenu only applies to PPP-related VPN connections, such as PPTP, L2TP, L2TP over IPSec.

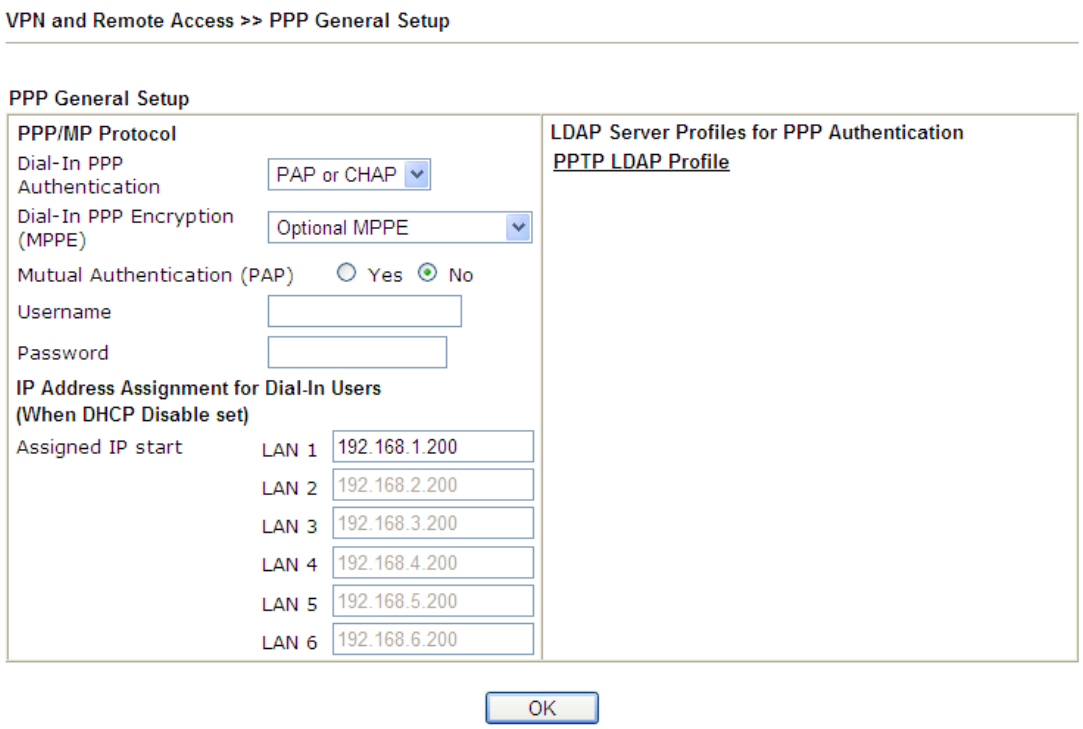

Available settings are explained as follows:

Item	Description
Dial-In PPP Authentication	**PAP Only** - elect this option to force the router to authenticate dial-in users with the PAP protocol.

	PAP or CHAP - Selecting this option means the router will attempt to authenticate dial-in users with the CHAP protocol first. If the dial-in user does not support this protocol, it will fall back to use the PAP protocol for authentication.
Dial-In PPP Encryption (MPPE)	**Optional MPPE** - This option represents that the MPPE encryption method will be optionally employed in the router for the remote dial-in user. If the remote dial-in user does not support the MPPE encryption algorithm, the router will transmit "no MPPE encrypted packets". Otherwise, the MPPE encryption scheme will be used to encrypt the data. 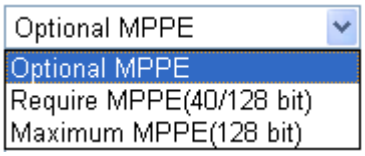 **Require MPPE (40/128bits)** - Selecting this option will force the router to encrypt packets by using the MPPE encryption algorithm. In addition, the remote dial-in user will use 40-bit to perform encryption prior to using 128-bit for encryption. In other words, if 128-bit MPPE encryption method is not available, then 40-bit encryption scheme will be applied to encrypt the data. **Maximum MPPE** - This option indicates that the router will use the MPPE encryption scheme with maximum bits (128-bit) to encrypt the data.
Mutual Authentication (PAP)	The Mutual Authentication function is mainly used to communicate with other routers or clients who need bi-directional authentication in order to provide stronger security, for example, Cisco routers. So you should enable this function when your peer router requires mutual authentication. You should further specify the **User Name** and **Password** of the mutual authentication peer. The length of the name/password is limited to 23/19 characters.
Assigned IP Start	Enter a start IP address for the dial-in PPP connection. You should choose an IP address from the local private network. For example, if the local private network is 192.168.1.0/255.255.255.0, you could choose 192.168.1.200 as the Start IP Address. You can configure up to four start IP addresses for LAN1 ~ LAN6.
LDAP Server Profiles for PPP Authentication	Configured LDAP profiles will be listed under such item. Simply check the one you want to enable the PPP authentication by LDAP server profiles. However, if there is no profile listed, simply click the link of **PPTP LDAP Profile** to create/add some new LDAP profiles you want. For detailed information about LDAP application, refer to section **4.7 How to Implement the AD/LDAP Authentication for User Management?**

3.10.5 IPSec General Setup

In **IPSec General Setup,** there are two major parts of configuration.

There are two phases of IPSec.

- Phase 1: negotiation of IKE parameters including encryption, hash, Diffie-Hellman parameter values, and lifetime to protect the following IKE exchange, authentication of both peers using either a Pre-Shared Key or Digital Signature (x.509). The peer that starts the negotiation proposes all its policies to the remote peer and then remote peer tries to find a highest-priority match with its policies. Eventually to set up a secure tunnel for IKE Phase 2.
- Phase 2: negotiation IPSec security methods including Authentication Header (AH) or Encapsulating Security Payload (ESP) for the following IKE exchange and mutual examination of the secure tunnel establishment.

There are two encapsulation methods used in IPSec, **Transport** and **Tunnel**. The **Transport** mode will add the AH/ESP payload and use original IP header to encapsulate the data payload only. It can just apply to local packet, e.g., L2TP over IPSec. The **Tunnel** mode will not only add the AH/ESP payload but also use a new IP header (Tunneled IP header) to encapsulate the whole original IP packet.

Authentication Header (AH) provides data authentication and integrity for IP packets passed between VPN peers. This is achieved by a keyed one-way hash function to the packet to create a message digest. This digest will be put in the AH and transmitted along with packets. On the receiving side, the peer will perform the same one-way hash on the packet and compare the value with the one in the AH it receives.

Encapsulating Security Payload (ESP) is a security protocol that provides data confidentiality and protection with optional authentication and replay detection service.

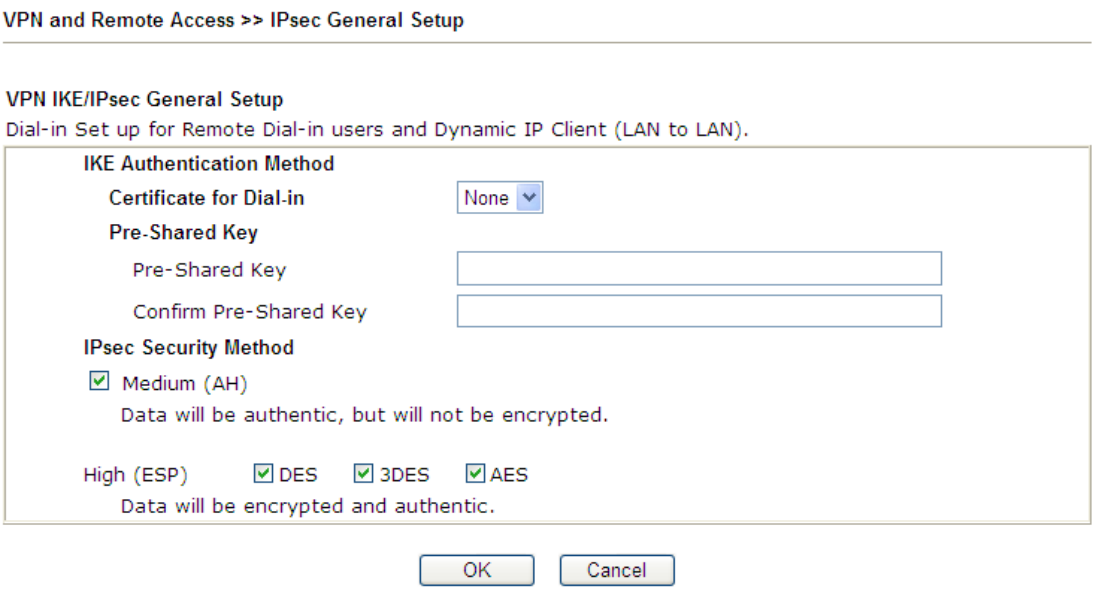

Available settings are explained as follows:

Item	Description
IKE Authentication Method	This usually applies to those are remote dial-in user or node (LAN-to-LAN) which uses dynamic IP address and IPSec-related VPN connections such as L2TP over IPSec

	and IPSec tunnel. There are two methods offered by Vigor router for you to authenticate the incoming data coming from remote dial-in user, **Certificate (X.509)** and **Pre-Shared Key**. **Certificate for Dial-in** –Choose one of the local certificates from the drop down list. **Pre-Shared Key-** Specify a key for IKE authentication. **Confirm Pre-Shared Key-** Retype the characters to confirm the pre-shared key. **Note**: Any packets from the remote dial-in user which does not match the rule defined in **VPN and Remote Access>>Remote Dial-In User** will be applied with the method specified here.
IPSec Security Method	**Medium** - Authentication Header (AH) means data will be authenticated, but not be encrypted. By default, this option is active. **High (ESP)** - Encapsulating Security Payload (ESP) means payload (data) will be encrypted and authenticated. You may select encryption algorithm from Data Encryption Standard (DES), Triple DES (3DES), and AES.

After finishing all the settings here, please click **OK** to save the configuration.

3.10.6 IPSec Peer Identity

To use digital certificate for peer authentication in either LAN-to-LAN connection or Remote User Dial-In connection, here you may edit a table of peer certificate for selection. As shown below, the router provides **32** entries of digital certificates for peer dial-in users.

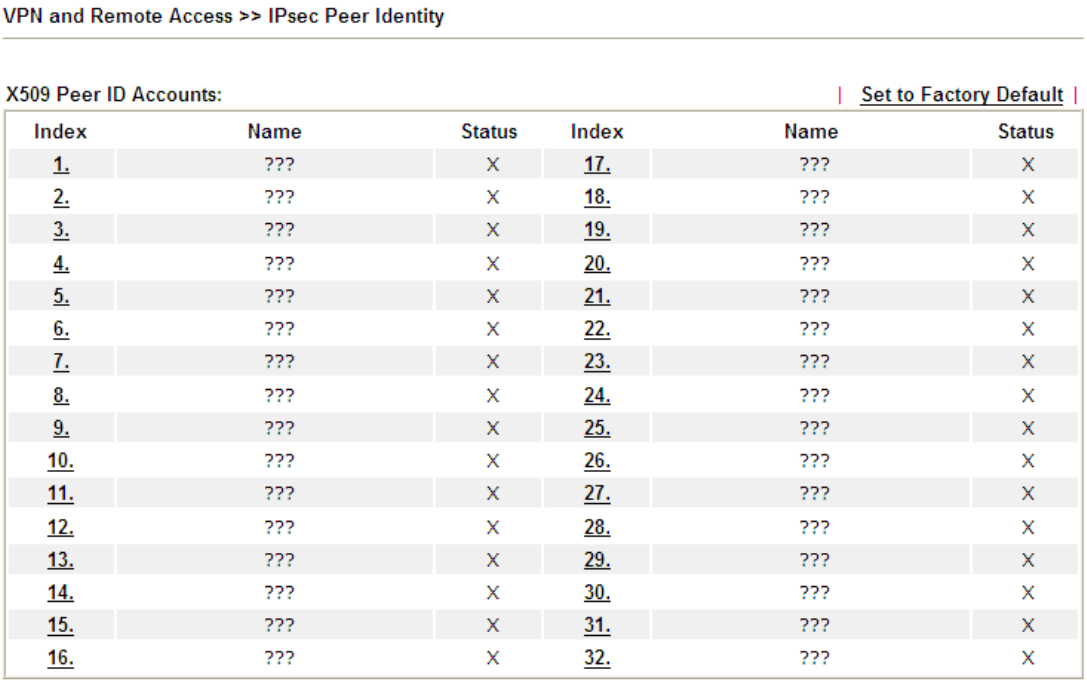

Index	Name	Status	Index	Name	Status
1.	???	X	17.	???	X
2.	???	X	18.	???	X
3.	???	X	19.	???	X
4.	???	X	20.	???	X
5.	???	X	21.	???	X
6.	???	X	22.	???	X
7.	???	X	23.	???	X
8.	???	X	24.	???	X
9.	???	X	25.	???	X
10.	???	X	26.	???	X
11.	???	X	27.	???	X
12.	???	X	28.	???	X
13.	???	X	29.	???	X
14.	???	X	30.	???	X
15.	???	X	31.	???	X
16.	???	X	32.	???	X

Available settings are explained as follows:

Item	Description
Set to Factory Default	Click it to clear all indexes.
Index	Click the number below Index to access into the setting page of IPSec Peer Identity.
Name	Display the profile name of that index.

Click each index to edit one peer digital certificate. There are three security levels of digital signature authentication: Fill each necessary field to authenticate the remote peer. The following explanation will guide you to fill all the necessary fields.

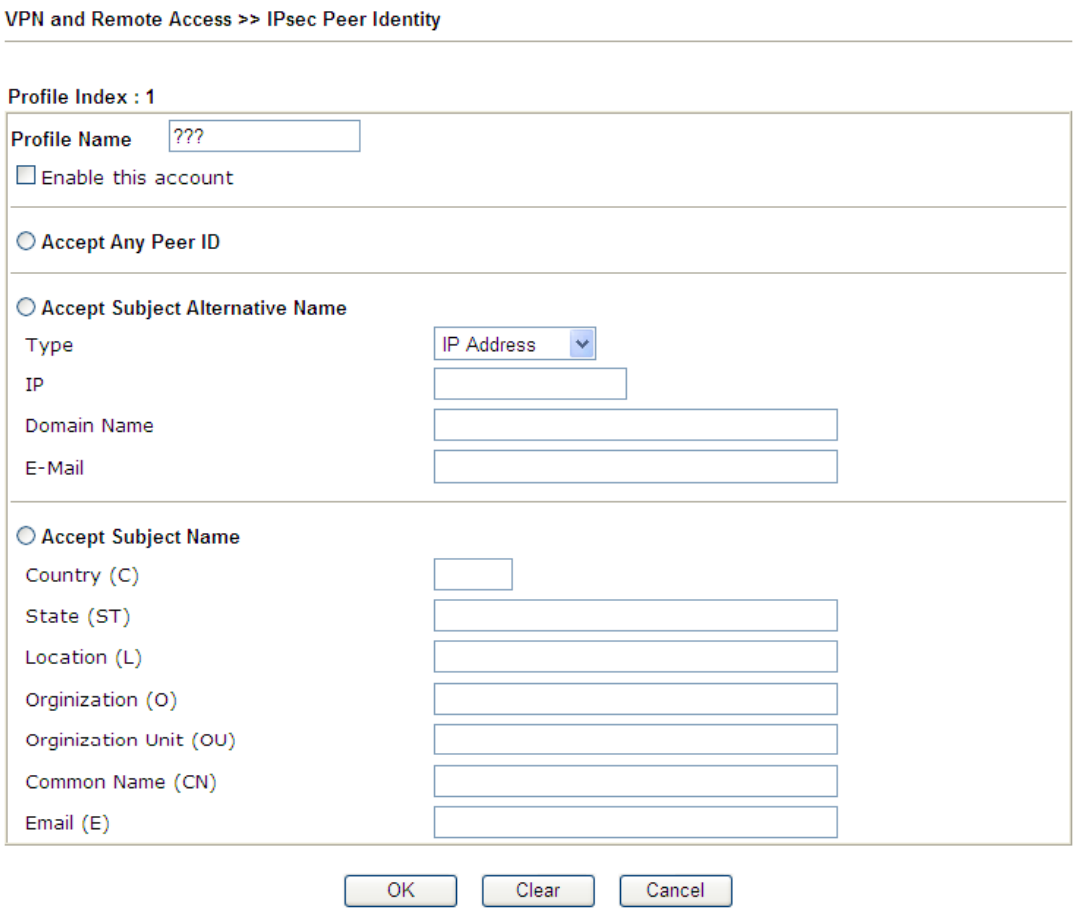

Available settings are explained as follows:

Item	Description
Profile Name	Type the name of the profile. The maximum length of the name you can set is 32 characters.
Enable this account	Check it to enable such account profile.
Accept Any Peer ID	Click to accept any peer regardless of its identity.
Accept Subject Alternative Name	Click to check one specific field of digital signature to accept the peer with matching value. The field can be **IP Address, Domain,** or **E-mail Address**. The box under the Type will appear according to the type you select and ask you to fill in corresponding setting.
Accept Subject Name	Click to check the specific fields of digital signature to accept the peer with matching value. The field includes **Country (C), State (ST), Location (L), Organization (O), Organization Unit (OU), Common Name (CN),** and **Email (E)**.

After finishing all the settings here, please click **OK** to save the configuration.

3.10.7 OpenVPN General Setup

OpenVPN is a comprehensive SSL VPN software that combines OpenVPN server functions, enterprise management mechanism, simplified OpenVPN Connect User Interface and OpenVPN Client software package. It can work on Windows, Linux OS, and Macintosh operating system.

OpenVPN Access Server offers a wide range of configurations for remote access to private cloud network resources and/or internal network.

Note: Vigor2860 will support up to 10 simultaneous dial-in OpenVPN tunnels.

In general, there are two advantages of OpenVPN:

- OpenVPN can be operated on different systems such as Windows, Linux, and MacOS.
- Based on the standard protocol of SSL encryption, OpenVPN can provide you with a scalable client/server mode, permitting multi-clients to connect to a single OpenVPN Server process over a single TCP or UDP port.

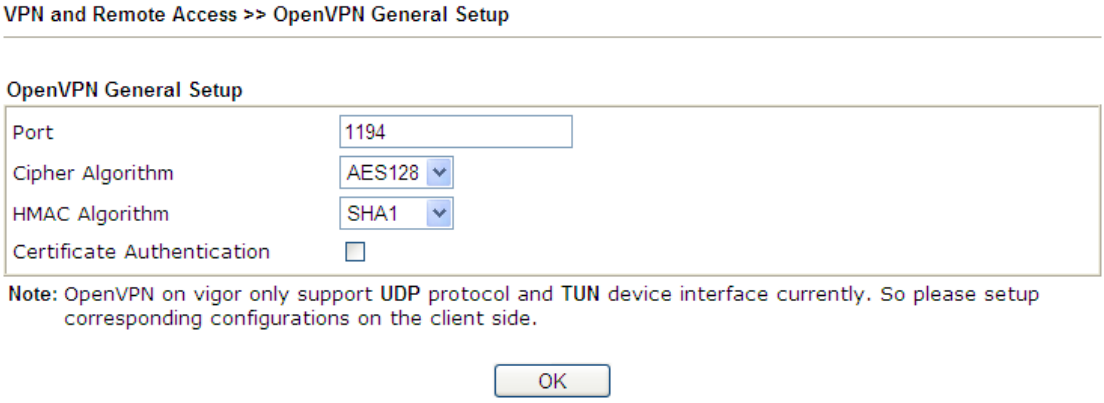
VPN and Remote Access >> OpenVPN General Setup
OpenVPN General Setup
Port
1194
Cipher Algorithm
AES128
HMAC Algorithm
SHA1
Certificate Authentication
Note: OpenVPN on vigor only support UDP protocol and TUN device interface currently. So please setup corresponding configurations on the client side.
OK

Available settings are explained as follows:

Item	Description
Port	Usually, the default UDP port number for OpenVPN is 1194.
Cipher Algorithm	Two encryptions are supported, AES128 and AES256. 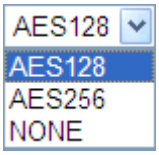
HMAC Algorithm	The HMAC algorithm only supports SHA1/SHA256. 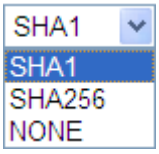
Certificate Authentication	If certificate authentication is required for OpenVPN, simply check the box to apply the trusted CA certificate and local certificate for OpenVPN tunnel. Certificate authentication can offer more secure VPN tunnel between the client and the router.

After finishing all the settings here, please click **OK** to save the configuration.

3.10.8 Remote Dial-in User

You can manage remote access by maintaining a table of remote user profile, so that users can be authenticated to dial-in via VPN connection. You may set parameters including specified connection peer ID, connection type (VPN connection - including PPTP, IPSec Tunnel, and L2TP by itself or over IPSec) and corresponding security methods, etc.

The router provides **32** access accounts for dial-in users. Besides, you can extend the user accounts to the RADIUS server through the built-in RADIUS client function. The following figure shows the summary table.

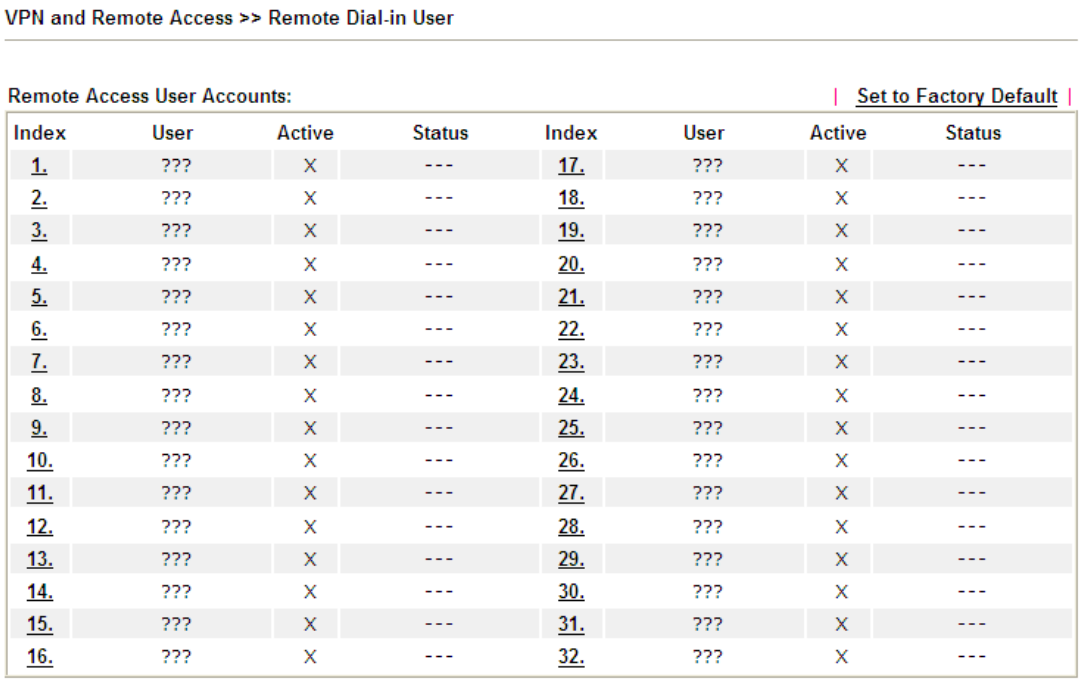

Index	User	Active	Status	Index	User	Active	Status
1.	???	X	---	17.	???	X	---
2.	???	X	---	18.	???	X	---
3.	???	X	---	19.	???	X	---
4.	???	X	---	20.	???	X	---
5.	???	X	---	21.	???	X	---
6.	???	X	---	22.	???	X	---
7.	???	X	---	23.	???	X	---
8.	???	X	---	24.	???	X	---
9.	???	X	---	25.	???	X	---
10.	???	X	---	26.	???	X	---
11.	???	X	---	27.	???	X	---
12.	???	X	---	28.	???	X	---
13.	???	X	---	29.	???	X	---
14.	???	X	---	30.	???	X	---
15.	???	X	---	31.	???	X	---
16.	???	X	---	32.	???	X	---

Available settings are explained as follows:

Item	Description
Set to Factory Default	Click to clear all indexes.
Index	Click the number below Index to access into the setting page of Remote Dial-in User.
User	Display the username for the specific dial-in user of the LAN-to-LAN profile. The symbol **???** represents that the profile is empty.
Status	Display the access state of the specific dial-in user. The symbol V and X represent the specific dial-in user to be active and inactive, respectively.

Click each index to edit one remote user profile. **Each Dial-In Type requires you to fill the different corresponding fields on the right.** If the fields gray out, it means you may leave it untouched. The following explanation will guide you to fill all the necessary fields.

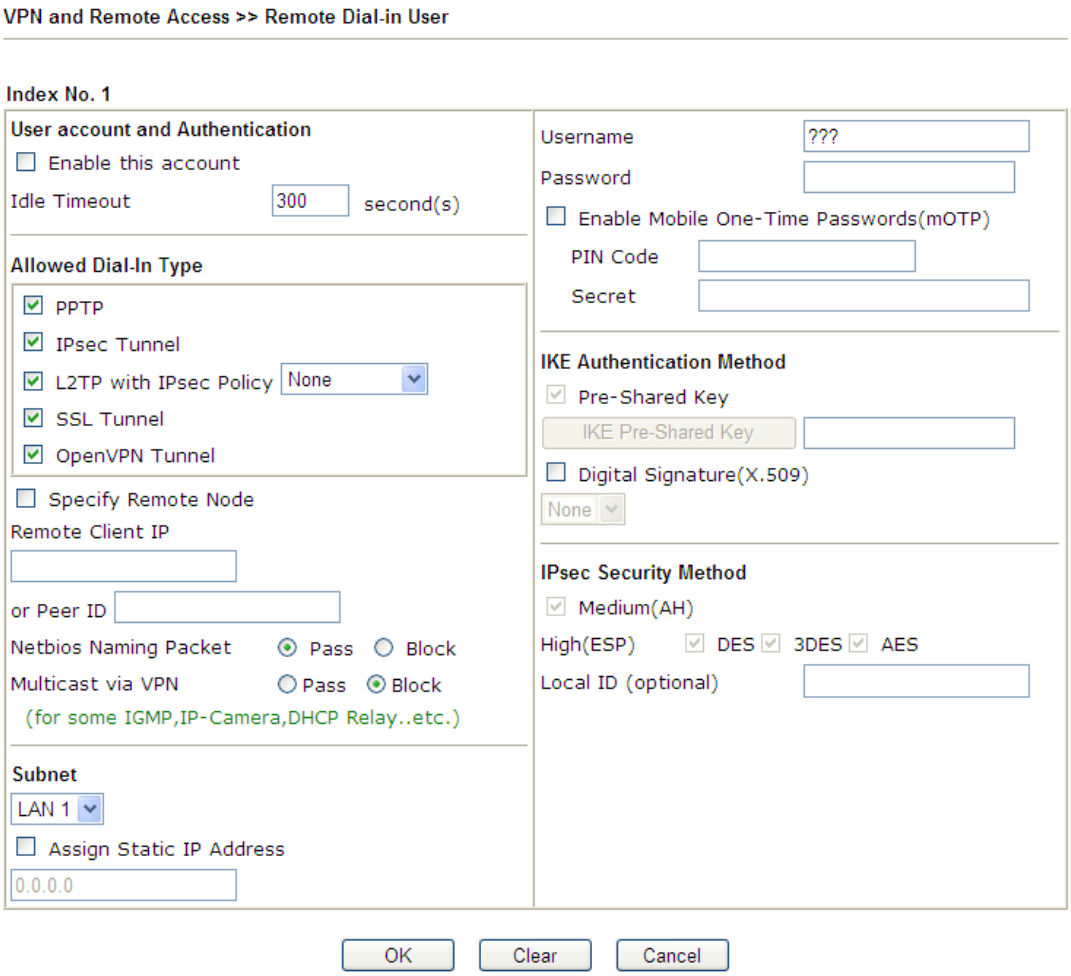

Available settings are explained as follows:

Item	Description
User account and Authentication	**Enable this account** - Check the box to enable this function. **Idle Timeout**- If the dial-in user is idle over the limitation of the timer, the router will drop this connection. By default, the Idle Timeout is set to 300 seconds.
Allowed Dial-In Type	**PPTP** - Allow the remote dial-in user to make a PPTP VPN connection through the Internet. You should set the User Name and Password of remote dial-in user below. **IPSec Tunnel** - Allow the remote dial-in user to make an IPSec VPN connection through Internet. **L2TP with IPSec Policy** - Allow the remote dial-in user to make a L2TP VPN connection through the Internet. You can select to use L2TP alone or with IPSec. Select from below: ● **None** - Do not apply the IPSec policy. Accordingly, the VPN connection employed the L2TP without IPSec policy can be viewed as one pure L2TP connection. ● **Nice to Have** - Apply the IPSec policy first, if it is applicable during negotiation. Otherwise, the dial-in

	VPN connection becomes one pure L2TP connection. ● **Must** -Specify the IPSec policy to be definitely applied on the L2TP connection. **SSL Tunnel –** Allow the remote dial-in user to make an SSL VPN connection through Internet. **OpenVPN Tunnel -** Allow the remote dial-in user to make an OpenVPN connection through Internet. **Specify Remote Node -**You can specify the IP address of the remote dial-in user, ISDN number or peer ID (used in IKE aggressive mode). Uncheck the checkbox means the connection type you select above will apply the authentication methods and security methods in the **general settings**. **Netbios Naming Packet -** ● **Pass** – Click it to have an inquiry for data transmission between the hosts located on both sides of VPN Tunnel while connecting. ● **Block** – When there is conflict occurred between the hosts on both sides of VPN Tunnel in connecting, such function can block data transmission of Netbios Naming Packet inside the tunnel. **Multicast via VPN** - Some programs might send multicast packets via VPN connection. ● **Pass** – Click this button to let multicast packets pass through the router. ● **Block** – This is default setting. Click this button to let multicast packets be blocked by the router. **User Name** - This field is applicable when you select PPTP or L2TP with or without IPSec policy above. The length of the name is limited to 23 characters. **Password** - This field is applicable when you select PPTP or L2TP with or without IPSec policy above. The length of the password is limited to 19 characters. **Enable Mobile One-Time Passwords (mOTP) -** Check this box to make the authentication with mOTP function. **PIN Code** – Type the code for authentication (e.g, 1234). **Secret** – Use the 32 digit-secret number generated by mOTP in the mobile phone (e.g., e759bb6f0e94c7ab4fe6).
Subnet	Chose one of the subnet selections for such VPN profile. **Assign Static IP Address –** Please type a static IP address for the subnet you specified.
IKE Authentication Method	This group of fields is applicable for IPSec Tunnels and L2TP with IPSec Policy when you specify the IP address of the remote node. The only exception is Digital Signature (X.509) can be set when you select IPSec tunnel either with or without specify the IP address of the remote node. **Pre-Shared Key -** Check the box of Pre-Shared Key to

	invoke this function and type in the required characters (1-63) as the pre-shared key. **Digital Signature (X.509) –** Check the box of Digital Signature to invoke this function and Select one predefined Profiles set in the **VPN and Remote Access >>IPSec Peer Identity.**
IPSec Security Method	This group of fields is a must for IPSec Tunnels and L2TP with IPSec Policy when you specify the remote node. Check the Medium, DES, 3DES or AES box as the security method. **Medium-Authentication Header (AH)** means data will be authenticated, but not be encrypted. By default, this option is invoked. You can uncheck it to disable it. **High-Encapsulating Security Payload (ESP)** means payload (data) will be encrypted and authenticated. You may select encryption algorithm from Data Encryption Standard (DES), Triple DES (3DES), and AES. **Local ID (Optional)**- Specify a local ID to be used for Dial-in setting in the LAN-to-LAN Profile setup. This item is optional and can be used only in IKE aggressive mode.

After finishing all the settings here, please click **OK** to save the configuration.

3.10.9 LAN to LAN

Here you can manage LAN-to-LAN connections by maintaining a table of connection profiles. You may set parameters including specified connection direction (dial-in or dial-out), connection peer ID, connection type (VPN connection - including PPTP, IPSec Tunnel, and L2TP by itself or over IPSec) and corresponding security methods, etc.

The router supports up to 32 VPN tunnels simultaneously. The following figure shows the summary table.

The following figure shows the summary table according to the item (All/Trunk) selected for **View**.

VPN and Remote Access >> LAN to LAN

LAN-to-LAN Profiles: | Set to Factory Default |

View: (•) All ( ) Trunk

Index	Name	Active	Status	Index	Name	Active	Status
1.	???	X	---	17.	???	X	---
2.	???	X	---	18.	???	X	---
3.	???	X	---	19.	???	X	---
4.	???	X	---	20.	VPN-2	V	offline
5.	???	X	---	21.	???	X	---
6.	???	X	---	22.	???	V	offline
7.	???	X	---	23.	???	X	---
8.	???	X	---	24.	???	X	---
9.	???	X	---	25.	???	X	---
10.	???	X	---	26.	???	X	---
11.	???	X	---	27.	???	X	---
12.	???	X	---	28.	???	X	---
13.	???	X	---	29.	???	X	---
14.	???	X	---	30.	???	X	---
15.	???	X	---	31.	???	X	---
16.	???	X	---	32.	???	X	---

[XXXXXX:This Dial-out profile has already joined for VPN Load Balance Mechanism]
[XXXXXX:This Dial-out profile has already joined for VPN Backup Mechanism]
[XXXXXX:This Dial-out profile does not join for VPN TRUNK]

The following shows profiles joined into VPN Load Balance and VPN Backup mechanism.

VPN and Remote Access >> LAN to LAN

LAN-to-LAN Profiles:

View: ( ) All (•) Trunk

Name	Activate	Members	Status
Loadbalan1	v	VPN-2	Offline
		Connection	Offline

[XXXXXX:This Dial-out profile has already joined for VPN Load Balance Mechanism]
[XXXXXX:This Dial-out profile has already joined for VPN Backup Mechanism]

If there is no profile joined yet, this page will be shown as follows:

VPN and Remote Access >> LAN to LAN

LAN-to-LAN Profiles:

View: ( ) All (•) Trunk

Name	Activate	Members	Status

[XXXXXX:This Dial-out profile has already joined for VPN Load Balance Mechanism]
[XXXXXX:This Dial-out profile has already joined for VPN Backup Mechanism]

Available settings are explained as follows:

Item	Description
View	**All –** Click it to display the LAN to LAN profiles. **Trunk –** Click it to display the Trunk profiles.

Set to Factory Default	Click to clear all indexes.
Name	Indicate the name of the LAN-to-LAN profile. The symbol **???** represents that the profile is empty.
Active	V – means the profile has been enabled. X – mans the profile has not been enabled.
Status	Indicate the status of individual profiles. The symbol V and X represent the profile to be active and inactive, respectively.

To edit each profile:

1. Click each index to edit each profile and you will get the following page. Each LAN-to-LAN profile includes 4 subgroups. If the fields gray out, it means you may leave it untouched. The following explanations will guide you to fill all the necessary fields.

   For the web page is too long, we divide the page into several sections for explanation.

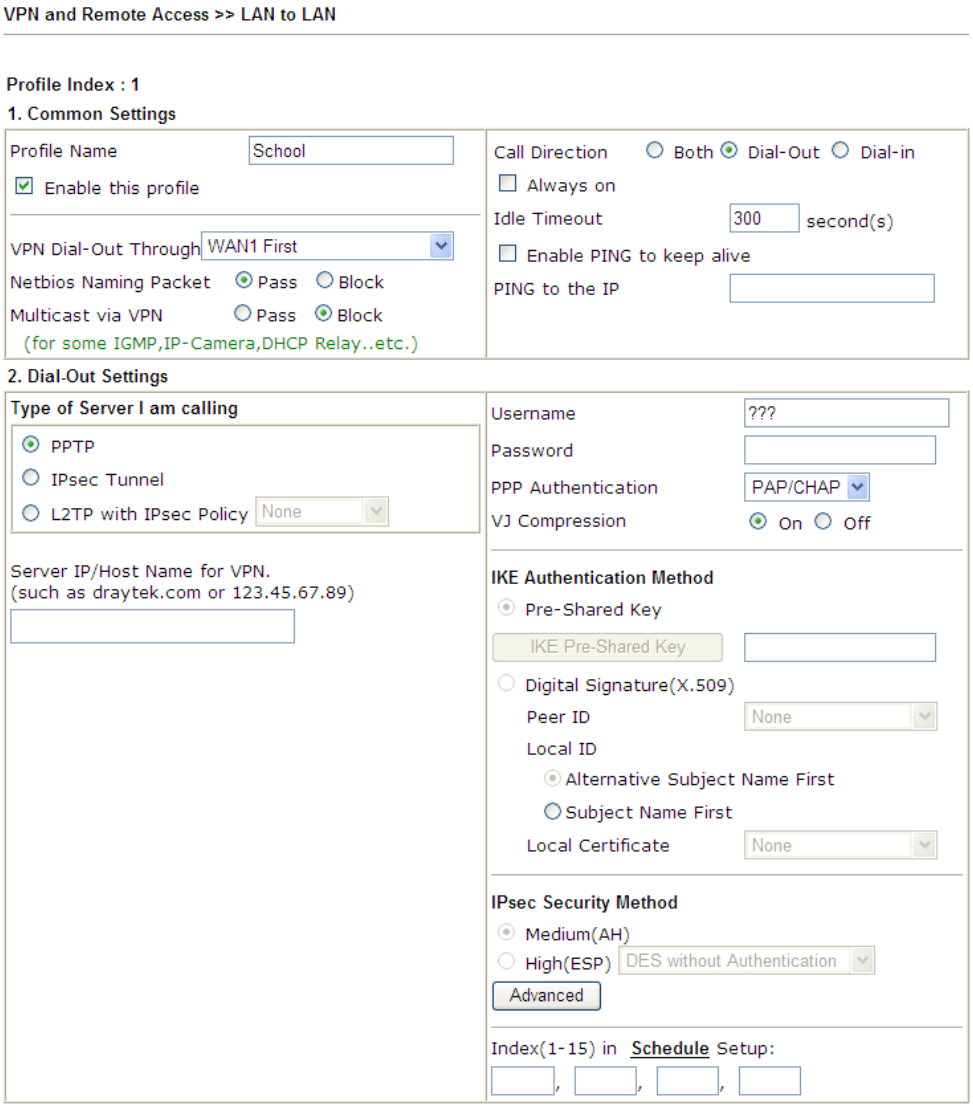

Available settings are explained as follows:

Item	Description
Common Settings	**Profile Name –** Specify a name for the profile of the LAN-to-LAN connection. **Enable this profile -** Check here to activate this profile. **VPN Dial-Out Through -** Use the drop down menu to choose a proper WAN interface for this profile. This setting is useful for dial-out only. 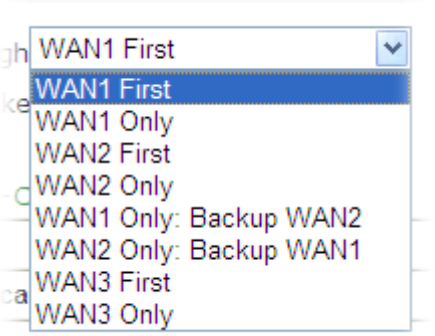 ● **WAN1 First/ WAN2 First/ WAN3 First** - While connecting, the router will use WAN1/WAN2/WAN3 as the first channel for VPN connection. If WAN1/WAN2/WAN3 fails, the router will use another WAN interface instead. **WAN1 Only /WAN2 Only/WAN 3 Only**- While connecting, the router will use WAN1/WAN2/WAN3 as the only channel for VPN connection. **WAN1 Only: Backup WAN2/WAN2 Only: Backup WAN1** - While connecting, the router will use WAN1/WAN2 as the only channel for VPN connection. If WAN1/WAN2 fails, the router will use backup WAN2/backup WAN1 interface instead. **Netbios Naming Packet** ● **Pass** – click it to have an inquiry for data transmission between the hosts located on both sides of VPN Tunnel while connecting. ● **Block** – When there is conflict occurred between the hosts on both sides of VPN Tunnel in connecting, such function can block data transmission of Netbios Naming Packet inside the tunnel. **Multicast via VPN -** Some programs might send multicast packets via VPN connection. ● **Pass** – Click this button to let multicast packets pass through the router. ● **Block** – This is default setting. Click this button to let multicast packets be blocked by the router. **Call Direction -** Specify the allowed call direction of this LAN-to-LAN profile. ● **Both**:-initiator/responder ● **Dial-Out**- initiator only

	● **Dial-In-** responder only. **Always On**-Check to enable router always keep VPN connection. **Idle Timeout:** The default value is 300 seconds. If the connection has been idled over the value, the router will drop the connection. **Enable PING to keep alive -** This function is to help the router to determine the status of IPSec VPN connection, especially useful in the case of abnormal VPN IPSec tunnel disruption. For details, please refer to the note below. Check to enable the transmission of PING packets to a specified IP address. **Enable PING to keep alive** is used to handle abnormal IPSec VPN connection disruption. It will help to provide the state of a VPN connection for router's judgment of redial. Normally, if any one of VPN peers wants to disconnect the connection, it should follow a serial of packet exchange procedure to inform each other. However, if the remote peer disconnect without notice, Vigor router will by no where to know this situation. To resolve this dilemma, by continuously sending PING packets to the remote host, the Vigor router can know the true existence of this VPN connection and react accordingly. This is independent of DPD (dead peer detection). **PING to the IP -** Enter the IP address of the remote host that located at the other-end of the VPN tunnel.
Dial-Out Settings	**Type of Server I am calling - PPTP** - Build a PPTP VPN connection to the server through the Internet. You should set the identity like User Name and Password below for the authentication of remote server. **IPSec Tunnel** - Build an IPSec VPN connection to the server through Internet. **L2TP with IPSec Policy -** Build a L2TP VPN connection through the Internet. You can select to use L2TP alone or with IPSec. Select from below: ● **None:** Do not apply the IPSec policy. Accordingly, the VPN connection employed the L2TP without IPSec policy can be viewed as one pure L2TP connection. ● **Nice to Have:** Apply the IPSec policy first, if it is applicable during negotiation. Otherwise, the dial-out VPN connection becomes one pure L2TP connection. **Must:** Specify the IPSec policy to be definitely applied on the L2TP connection. **User Name -** This field is applicable when you select, PPTP or L2TP with or without IPSec policy above. The length of the name is limited to 49 characters. **Password -** This field is applicable when you select PPTP or L2TP with or without IPSec policy above. The length of the password is limited to 15 characters. **PPP Authentication -** This field is applicable when you

	select, PPTP or L2TP with or without IPSec policy above. PAP/CHAP is the most common selection due to wild compatibility. **VJ compression -** This field is applicable when you select PPTP or L2TP with or without IPSec policy above. VJ Compression is used for TCP/IP protocol header compression. Normally set to **Yes** to improve bandwidth utilization. **IKE Authentication Method -** This group of fields is applicable for IPSec Tunnels and L2TP with IPSec Policy. ● **Pre-Shared Key -** Input 1-63 characters as pre-shared key. ● **Digital Signature (X.509)** - Select one predefined Profiles set in the **VPN and Remote Access >>IPSec Peer Identity**. **Peer ID -** Select one of the predefined Profiles set in **VPN and Remote Access >>IPSec Peer Identity.** **Local ID –** Specify a local ID **(Alternative Subject Name First** or **Subject Name First)** to be used for Dial-in setting in the LAN-to-LAN Profile setup. This item is optional and can be used only in IKE aggressive mode. ● **Local Certificate –** Select one of the profiles set in **Certificate Management>>Local Certificate**. **IPSec Security Method -** This group of fields is a must for IPSec Tunnels and L2TP with IPSec Policy. ● **Medium AH (Authentication Header)** means data will be authenticated, but not be encrypted. By default, this option is active. ● **High (ESP-Encapsulating Security Payload)-** means payload (data) will be encrypted and authenticated. Select from below: ● **DES without Authentication** -Use DES encryption algorithm and not apply any authentication scheme. ● **DES with Authentication**-Use DES encryption algorithm and apply MD5 or SHA-1 authentication algorithm. ● **3DES without Authentication**-Use triple DES encryption algorithm and not apply any authentication scheme. ● **3DES with Authentication**-Use triple DES encryption algorithm and apply MD5 or SHA-1 authentication algorithm. ● **AES without Authentication**-Use AES encryption algorithm and not apply any authentication scheme. ● **AES with Authentication**-Use AES encryption algorithm and apply MD5 or SHA-1 authentication algorithm. **Advanced -** Specify mode, proposal and key life of each IKE phase, Gateway, etc.

The window of advance setup is shown as below:

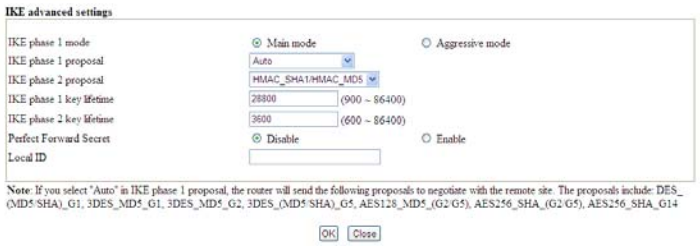

IKE phase 1 mode -Select from **Main** mode and **Aggressive** mode. The ultimate outcome is to exchange security proposals to create a protected secure channel. **Main** mode is more secure than **Aggressive** mode since more exchanges are done in a secure channel to set up the IPSec session. However, the **Aggressive** mode is faster. The default value in Vigor router is Main mode.

- **IKE phase 1 proposal-**To propose the local available authentication schemes and encryption algorithms to the VPN peers, and get its feedback to find a match. Two combinations are available for Aggressive mode and nine for **Main** mode. We suggest you select the combination that covers the most schemes.
- **IKE phase 2 proposal-**To propose the local available algorithms to the VPN peers, and get its feedback to find a match. Three combinations are available for both modes. We suggest you select the combination that covers the most algorithms.
- **IKE phase 1 key lifetime-**For security reason, the lifetime of key should be defined. The default value is 28800 seconds. You may specify a value in between 900 and 86400 seconds.
- **IKE phase 2 key lifetime-**For security reason, the lifetime of key should be defined. The default value is 3600 seconds. You may specify a value in between 600 and 86400 seconds.
- **Perfect Forward Secret (PFS)-**The IKE Phase 1 key will be reused to avoid the computation complexity in phase 2. The default value is inactive this function.

  Local ID-In **Aggressive** mode, Local ID is on behalf of the IP address while identity authenticating with remote VPN server. The length of the ID is limited to 47 characters.

Index(1-15) - Set the wireless LAN to work at certain time interval only. You may choose up to 4 schedules out of the 15 schedules pre-defined in **Applications >> Schedule** setup. The default setting of this field is blank and the function will always work.

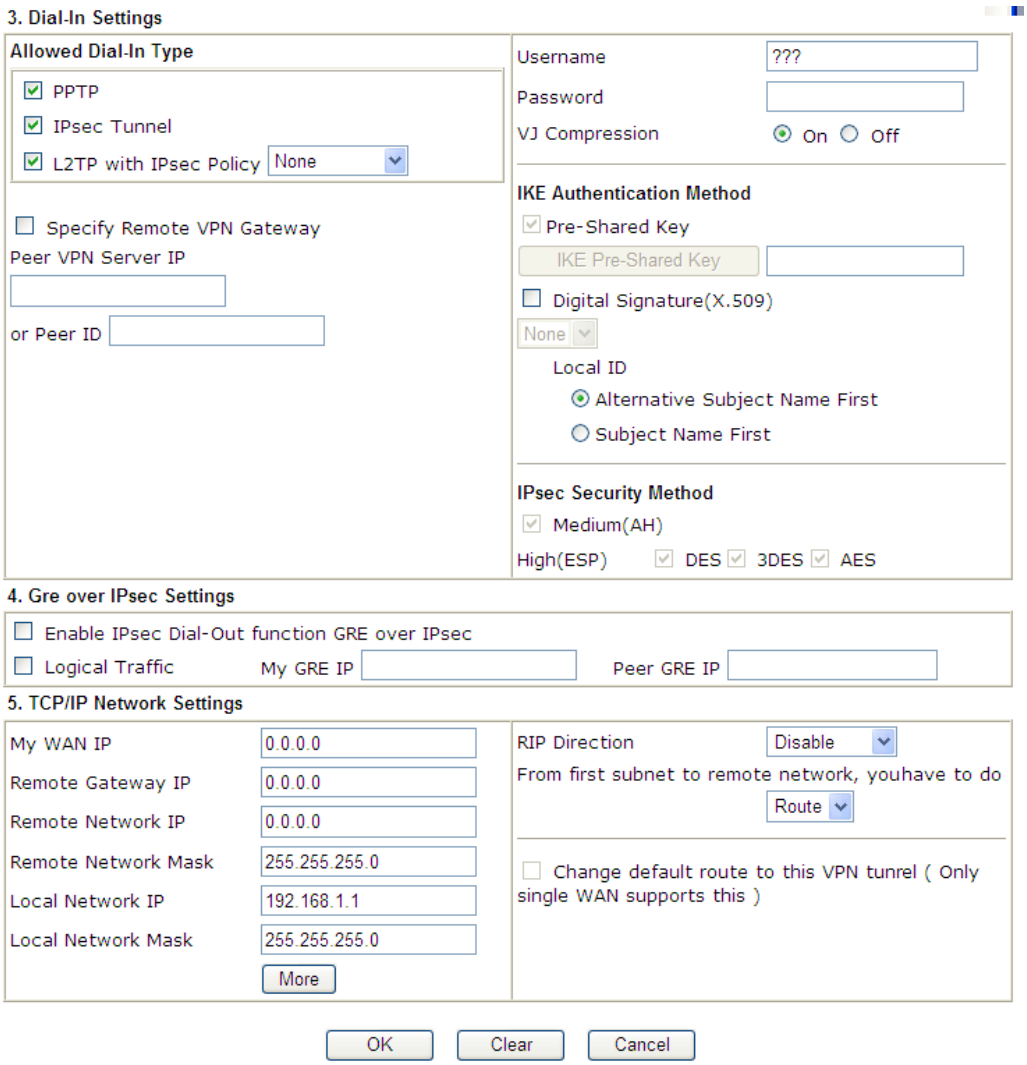

Available settings are explained as follows:

Item	Description
Dial-In Settings	**Allowed Dial-In Type -** Determine the dial-in connection with different types. ● **PPTP -** Allow the remote dial-in user to make a PPTP VPN connection through the Internet. You should set the User Name and Password of remote dial-in user below. ● **IPSec Tunnel-** Allow the remote dial-in user to trigger an IPSec VPN connection through Internet. ● **L2TP with IPSec Policy -** Allow the remote dial-in user to make a L2TP VPN connection through the Internet. You can select to use L2TP alone or with IPSec. Select from below: ■ **None -** Do not apply the IPSec policy. Accordingly, the VPN connection employed the L2TP without IPSec policy can be viewed as one pure L2TP connection. ■ **Nice to Have -** Apply the IPSec policy first, if it is applicable during negotiation. Otherwise, the

dial-in VPN connection becomes one pure L2TP connection.

- **Must -** Specify the IPSec policy to be definitely applied on the L2TP connection.

Specify Remote VPN Gateway - You can specify the IP address of the remote dial-in user or peer ID (should be the same with the ID setting in dial-in type) by checking the box. Also, you should further specify the corresponding security methods on the right side.

If you uncheck the checkbox**,** the connection type you select above will apply the authentication methods and security methods in the general settings.

User Name - This field is applicable when you select PPTP or L2TP with or without IPSec policy above. The length of the name is limited to 11 characters.

Password - This field is applicable when you select PPTP or L2TP with or without IPSec policy above. The length of the password is limited to 11 characters.

VJ Compression - VJ Compression is used for TCP/IP protocol header compression. This field is applicable when you select PPTP or L2TP with or without IPSec policy above.

IKE Authentication Method - This group of fields is applicable for IPSec Tunnels and L2TP with IPSec Policy when you specify the IP address of the remote node. The only exception is Digital Signature (X.509) can be set when you select IPSec tunnel either with or without specify the IP address of the remote node.

- **Pre-Shared Key -** Check the box of Pre-Shared Key to invoke this function and type in the required characters (1-63) as the pre-shared key.
- **Digital Signature (X.509) –**Check the box of Digital Signature to invoke this function and select one predefined Profiles set in the **VPN and Remote Access >>IPSec Peer Identity**.
  - **Local ID** – Specify which one will be inspected first.
  - **Alternative Subject Name First** – The alternative subject name (configured in **Certificate Management>>Local Certificate**) will be inspected first.
  - **Subject Name First** – The subject name (configured in **Certificate Management>>Local Certificate**) will be inspected first.

IPSec Security Method - This group of fields is a must for IPSec Tunnels and L2TP with IPSec Policy when you specify the remote node.

- **Medium-** Authentication Header (AH) means data will be authenticated, but not be encrypted. By default, this option is active.

	● **High-** Encapsulating Security Payload (ESP) means payload (data) will be encrypted and authenticated. You may select encryption algorithm from Data Encryption Standard (DES), Triple DES (3DES), and AES.
Gre over IPSec Settings	**Enable IPSec Dial-Out function GRE over IPSec**: Check this box to verify data and transmit data in encryption with GRE over IPSec packet after configuring IPSec Dial-Out setting. Both ends must match for each other by setting same virtual IP address for communication. **Logical Traffic**: Such technique comes from RFC2890. Define logical traffic for data transmission between both sides of VPN tunnel by using the characteristic of GRE. Even hacker can decipher IPSec encryption, he/she still cannot ask LAN site to do data transmission with any information. Such function can ensure the data transmitted on VPN tunnel is really sent out from both sides. This is an optional function. However, if one side wants to use it, the peer must enable it, too. **My GRE IP**: Type the virtual IP for router itself for verified by peer. **Peer GRE IP**: Type the virtual IP of peer host for verified by router.
TCP/IP Network Settings	**My WAN IP –**This field is only applicable when you select PPTP or L2TP with or without IPSec policy above. The default value is 0.0.0.0, which means the Vigor router will get a PPP IP address from the remote router during the IPCP negotiation phase. If the PPP IP address is fixed by remote side, specify the fixed IP address here. Do not change the default value if you do not select PPTP or L2TP. **Remote Gateway IP -** This field is only applicable when you select PPTP or L2TP with or without IPSec policy above. The default value is 0.0.0.0, which means the Vigor router will get a remote Gateway PPP IP address from the remote router during the IPCP negotiation phase. If the PPP IP address is fixed by remote side, specify the fixed IP address here. Do not change the default value if you do not select PPTP or L2TP. **Remote Network IP/ Remote Network Mask -** Add a static route to direct all traffic destined to this Remote Network IP Address/Remote Network Mask through the VPN connection. For IPSec, this is the destination clients IDs of phase 2 quick mode. **Local Network IP / Local Network Mask -** Display the local network IP and mask for TCP / IP configuration. You can modify the settings if required. **More -** Add a static route to direct all traffic destined to more Remote Network IP Addresses/ Remote Network Mask through the VPN connection. This is usually used when you find there are several subnets behind the remote VPN router.

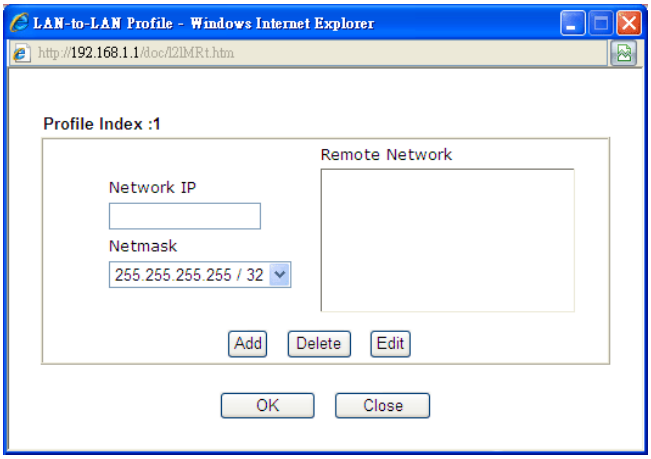

RIP Direction - The option specifies the direction of RIP (Routing Information Protocol) packets. You can enable/disable one of direction here. Herein, we provide four options: TX/RX Both, TX Only, RX Only, and Disable.

From first subnet to remote network, you have to do - If the remote network only allows you to dial in with single IP, please choose **NAT**, otherwise choose **Route**.

Change default route to this VPN tunnel - Check this box to change the default route with this VPN tunnel.

2. After finishing all the settings here, please click **OK** to save the configuration.

3.10.10 VPN TRUNK Management

VPN trunk includes four features - VPN Backup, VPN load balance, GRE over IPSec, and Binding tunnel policy.

Features of VPN TRUNK – VPN Backup Mechanism

VPN TRUNK Management is a backup mechanism which can set multiple VPN tunnels as backup tunnel. It can assure the network connection not to be cut off due to network environment blocked by any reason.

- VPN TRUNK-VPN Backup mechanism can judge abnormal situation for the environment of VPN server and correct it to complete the backup of VPN Tunnel in real-time.
- VPN TRUNK-VPN Backup mechanism is compliant with all WAN modes (single/multi)
- Dial-out connection types contain IPSec, PPTP, L2TP, L2TP over IPSec and ISDN (depends on hardware specification)
- The web page is simple to understand and easy to configure
- Filly compliant with VPN Server LAN Sit Single/Multi Network
- Mail Alert support, please refer to **System Maintenance >> SysLog / Mail Alert** for detailed configuration
- Syslog support, please refer to **System Maintenance >> SysLog / Mail Alert** for detailed configuration
- Specific ERD (Environment Recovery Detection) mechanism which can be operated by using Telnet command

VPN TRUNK-VPN Backup mechanism profile will be activated when initial connection of single VPN tunnel is off-line. Before setting VPN TRUNK -VPN Backup mechanism backup profile, please configure at least two sets of LAN-to-LAN profiles (with fully configured dial-out settings) first, otherwise you will not have selections for grouping Member1 and Member2.

Features of VPN TRUNK – VPN Load Balance Mechanism

VPN Load Balance Mechanism can set multiple VPN tunnels for using as traffic load balance tunnel. It can assist users to do effective load sharing for multiple VPN tunnels according to real line bandwidth. Moreover, it offers three types of algorithms for load balancing and binding tunnel policy mechanism to let the administrator manage the network more flexibly.

- Three types of load sharing algorithm offered, Round Robin, Weighted Round Robin and Fastest
- Binding Tunnel Policy mechanism allows users to encrypt the data in transmission or specified service function in transmission and define specified VPN Tunnel for having effective bandwidth management
- Dial-out connection types contain IPSec, PPTP, L2TP, L2TP over IPSec and GRE over IPSec
- The web page is simple to understand and easy to configure
- The TCP Session transmitted by using VPN TRUNK-VPN Load Balance mechanism will not be lost due to one of VPN Tunnels disconnected. Users do not need to reconnect with setting TCP/UDP Service Port again. The VPN Load Balance function can keep the transmission for internal data on tunnel stably

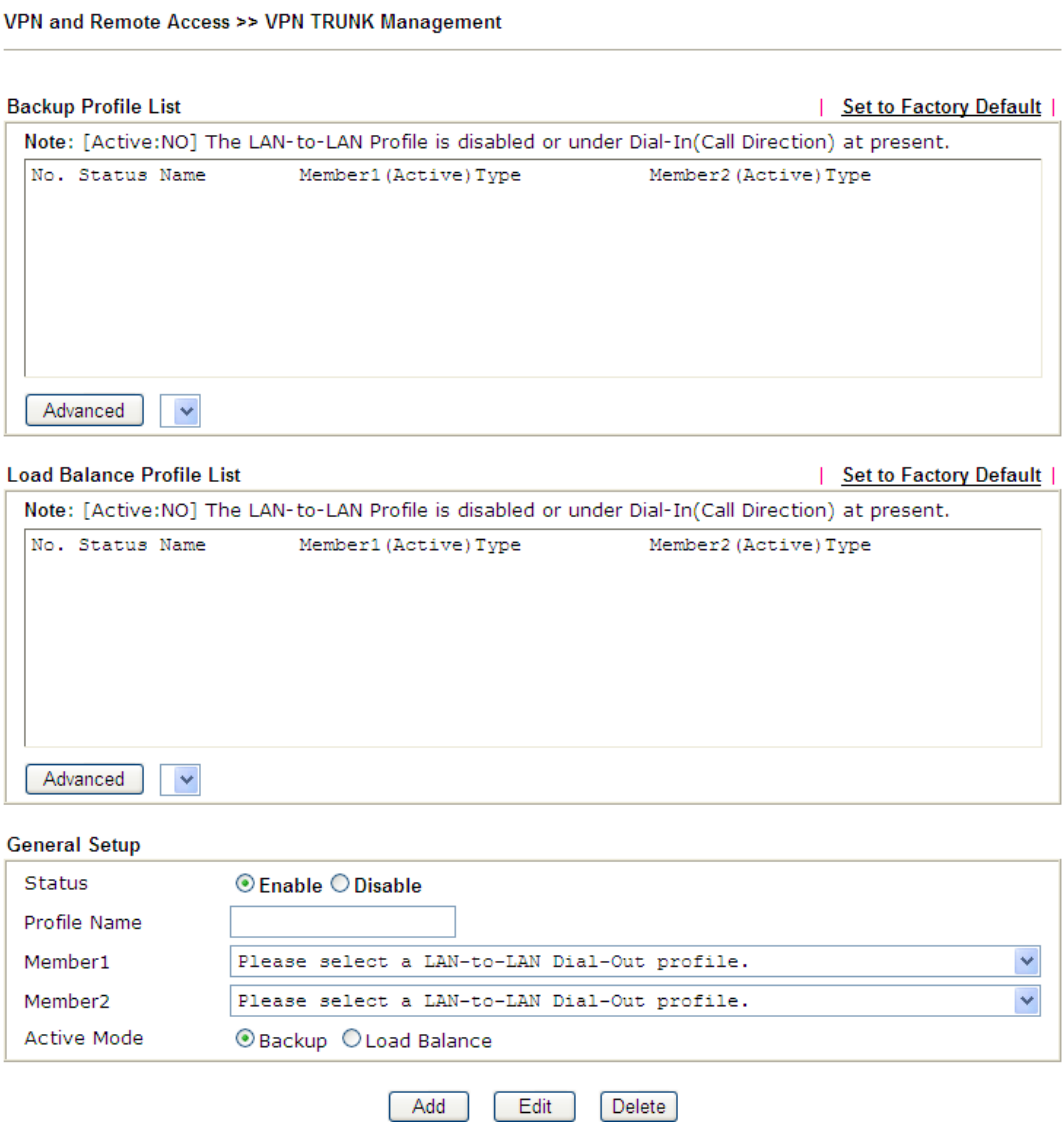

Available settings are explained as follows:

Item	Description
Backup Profile List	**Set to Factory Default -** Click to clear all VPN TRUNK-VPN Backup mechanism profile. **No –** The order of VPN TRUNK-VPN Backup mechanism profile. **Status** - "v" means such profile is enabled; "x" means such profile is disabled. **Name** - Display the name of VPN TRUNK-VPN Backup mechanism profile. **Member1** - Display the dial-out profile selected from the Member1 drop down list below. **Active** - "Yes" means normal condition. "No" means the state might be disabled or that profile currently is set with Dial-in mode (for call direction) in LAN-to-LAN. **Type** - Display the connection type for that profile, such as IPSec, PPTP, L2TP, L2TP over IPSec (NICE), L2TP over IPSec(MUST) and so on.

	Member2 - Display the dial-out profile selected from the Member2 drop down list below. **Advanced** – This button is available only when LAN to LAN profile (or more) is created. 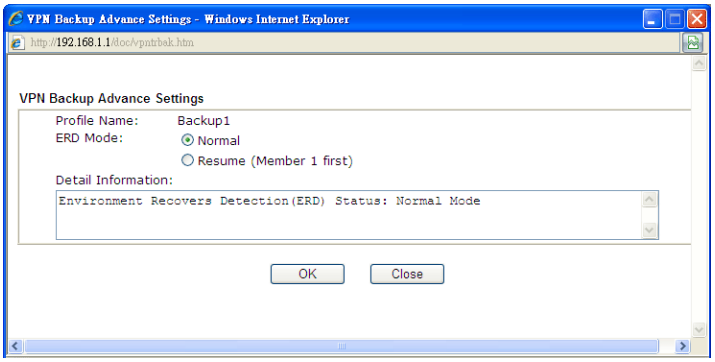 Detailed information for this dialog, see later section - **Advanced Load Balance and Backup**.
Load Balance Profile List	**Set to Factory Default -** Click to clear all VPN TRUNK-VPN Load Balance mechanism profile. **No** - The order of VPN TRUNK-VPN Load Balance mechanism profile. **Status** - "v" means such profile is enabled; "x" means such profile is disabled. **Name -** Display the name of VPN TRUNK-VPN Load Balance mechanism profile. **Member1 -** Display the dial-out profile selected from the Member1 drop down list below. **Active -** "Yes" means normal condition. "No" means the state might be disabled or that profile currently is set with Dial-in mode (for call direction) in LAN-to-LAN. **Type -** Display the connection type for that profile, such as IPSec, PPTP, L2TP, L2TP over IPSec (NICE), L2TP over IPSec(MUST) and so on. **Member2 -** Display the dial-out profile selected from the Member2 drop down list below. **Advanced** – This button is only available when there is one or more profiles created in this page.

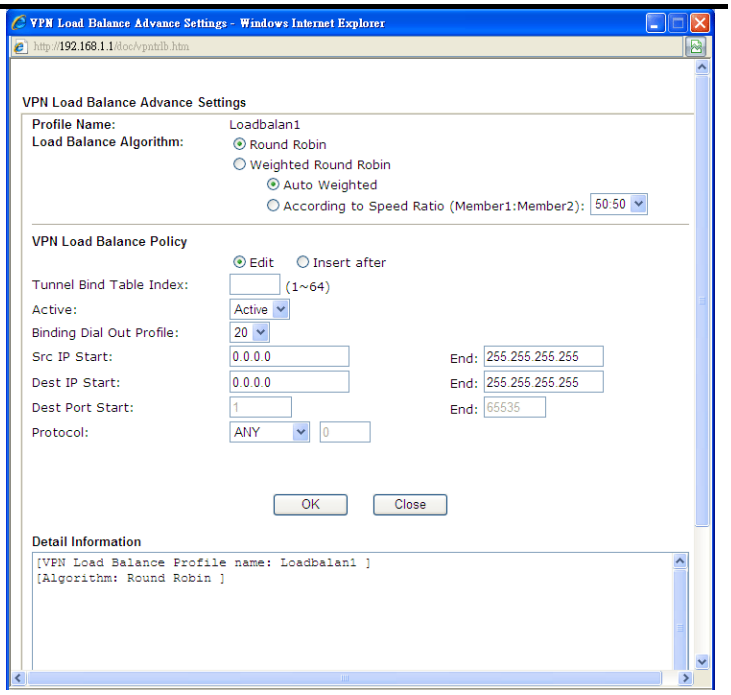

Detailed information for this dialog, see later section - **Advanced Load Balance and Backup**.

General Setup

Status- After choosing one of the profile listed above, please click **Enable** to activate this profile. If you click **Disable**, the selected or current used VPN TRUNK-Backup/Load Balance mechanism profile will not have any effect for VPN tunnel.

Profile Name- Type a name for VPN TRUNK profile. Each profile can group two VPN connections set in LAN-to-LAN. The saved VPN profiles in LAN-to-LAN will be shown on Member1 and Member2 fields. The length of the name is limited to 11 characters.

Member 1/Member2 - Display the selection for LAN-to-LAN dial-out profiles (configured in **VPN and Remote Access >> LAN-to-LAN**) for you to choose for grouping under certain VPN TRUNK-VPN Backup/Load Balance mechanism profile.

- **No** - Index number of LAN-to-LAN dial-out profile.
- **Name** - Profile name of LAN-to-LAN dial-out profile.
- **Connection Type** - Connection type of LAN-to-LAN dial-out profile.
- **VPN ServerIP (Private Network)** - VPN Server IP of LAN-to-LAN dial-out profiles.

Active Mode - Display available mode for you to choose. Choose **Backup** or **Load Balance** for your router.

Add - Add and save new profile to the backup profile list. The corresponding members (LAN-to-LAN profiles) grouped in such new VPN TRUNK – VPN Backup mechanism profile will be locked. The profiles in LAN-to-LAN will be displayed in red. VPN TRUNK – VPN Load Balance mechanism profile will be locked. The

	profiles in LAN-to-LAN will be displayed in blue. **Edit** - Click this button to save the changes to the **Status** (Enable or Disable), profile name, member1 or member2. **Delete** - Click this button to delete the selected VPN TRUNK profile. The corresponding members (LAN-to-LAN profiles) grouped in the deleted VPN TRUNK profile will be released and that profiles in LAN-to-LAN will be displayed in black.

Time for activating VPN TRUNK – VPN Backup mechanism profile

VPN TRUNK – VPN Backup mechanism will be activated automatically after the initial connection of single VPN Tunnel off-line. The content in Member1/2 within VPN TRUNK – VPN Backup mechanism backup profile is similar to dial-out profile configured in LAN-to-LAN web page. VPN TRUNK – VPN Backup mechanism backup profile will process and handle everything unless it is off-line once it is activated.

Time for activating VPN TRUNK – VPN Load Balance mechanism profile

After finishing the connection for one tunnel, the other tunnel will dial out automatically within two seconds. Therefore, you can choose any one of members under VPN Load Balance for dialing out.

Time for activating VPN TRUNK –Dial-out when VPN Load Balance Disconnected

For there is one Tunnel created and connected successfully, to keep the load balance effect between two tunnels, auto-dial will be executed within two seconds.

To close two tunnels of load balance after connecting, please click **Disable** for **Status** in **General Setup** field.

How can you set a VPN TRUNK-VPN Backup/Load Balance mechanism profile?

1. First of all, go to **VPN and Remote Access>>LAN-to-LAN**. Set two or more LAN-to-LAN profiles first that will be used for Member1 and Member2. If you do not set enough LAN-to-LAN profiles, you cannot operate VPN TRUNK – VPN Backup /Load Balance mechanism profile management well.
2. Access into **VPN and Remote Access>>VPN TRUNK Management**.
3. Set one group of VPN TRUNK – VPN Backup/Load Balance mechanism backup profile by choosing **Enable** radio button; type a name for such profile (e.g., 071023); choose one of the LAN-to-LAN profiles from Member1 drop down list; choose one of the LAN-to-LAN profiles from Member2 drop down list; and click **Add** at last.

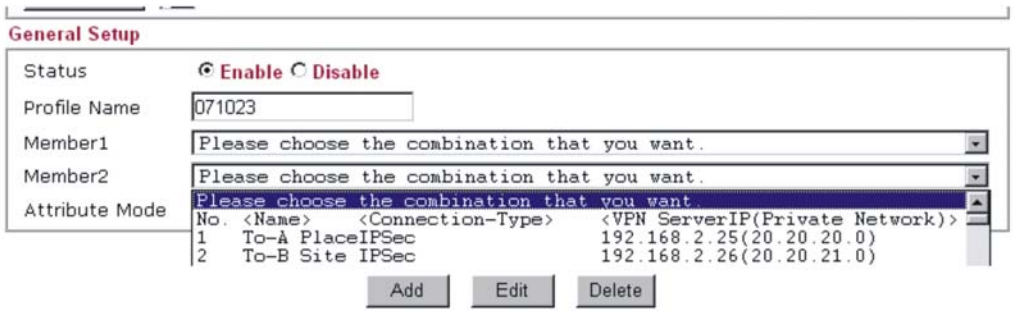

4. Take a look for LAN-to-LAN profiles. Index 1 is chosen as Member1; index 2 is chosen as Member2. For such reason, LAN-to-LAN profiles of 1 and 2 will be expressed in red to indicate that they are fixed. If you delete the VPN TRUNK – VPN Backup/Load Balance mechanism profile, the selected LAN-to-LAN profiles will be released and expressed in black.

LAN-to-LAN Profiles:
View: All Trunk
Index Name Active Status
1. To-A Place V offline
2. To-B Site V offline
3. To-C Place V offline
4. To-D Site V offline

How can you set a GRE over IPSec profile?

1. Please go to LAN to LAN to set a profile with IPSec.
2. If the router will be used as the VPN Server (i.e., with virtual address 192.168.50.200). Please type 192.168.50.200 in the field of My GRE IP. Type IP address (192.168.50.100) of the client in the field of Peer GRE IP. See the following graphic for an example.

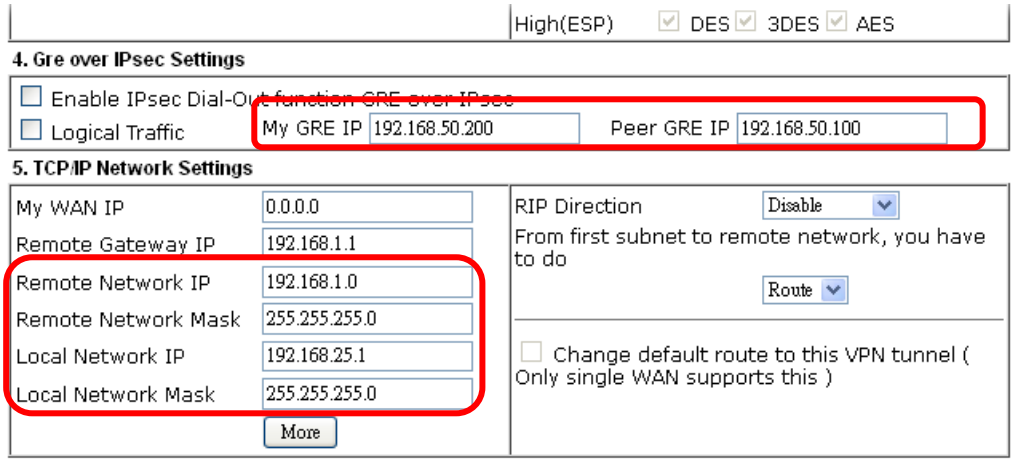
High(ESP) DES 3DES AES
4. Gre over IPsec Settings
Enable IPsec Dial-Out function GRE over IPsec
Logical Traffic
My GRE IP 192.168.50.200
Peer GRE IP 192.168.50.100
5. TCP/IP Network Settings
My WAN IP 0.0.0.0
Remote Gateway IP 192.168.1.1
Remote Network IP 192.168.1.0
Remote Network Mask 255.255.255.0
Local Network IP 192.168.25.1
Local Network Mask 255.255.255.0
More
RIP Direction Disable
From first subnet to remote network, you have to do
Route
Change default route to this VPN tunnel (Only single WAN supports this)

3. Later, on peer side (as VPN Client): please type 192.168.50.100 in the field of My GRE IP and type IP address of the server (192.168.50.200) in the field of Peer GRE IP.

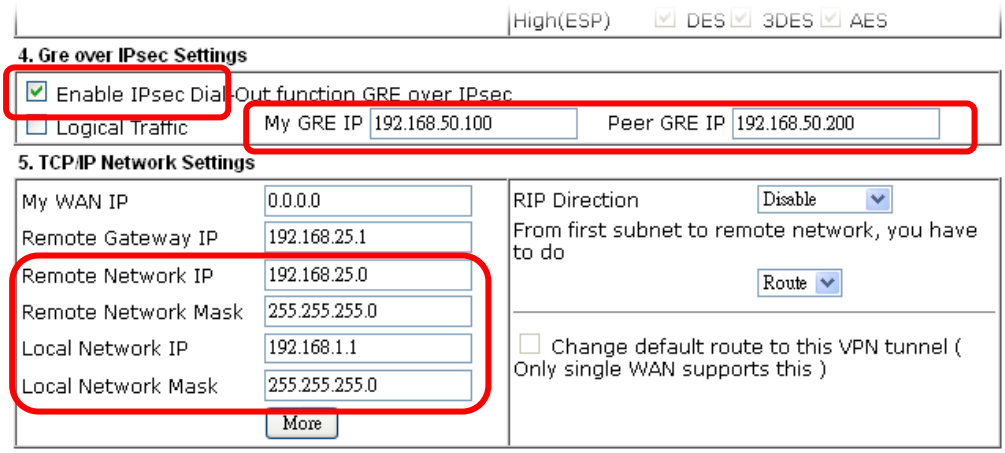
High(ESP) DES 3DES AES
4. Gre over IPsec Settings
Enable IPsec Dial-Out function GRE over IPsec
Logical Traffic
My GRE IP 192.168.50.100
Peer GRE IP 192.168.50.200
5. TCP/IP Network Settings
My WAN IP 0.0.0.0
Remote Gateway IP 192.168.25.1
Remote Network IP 192.168.25.0
Remote Network Mask 255.255.255.0
Local Network IP 192.168.1.1
Local Network Mask 255.255.255.0
More
RIP Direction Disable
From first subnet to remote network, you have to do
Route
Change default route to this VPN tunnel (Only single WAN supports this)

Advanced Load Balance and Backup

After setting profiles for load balance, you can choose any one of them and click Advance for more detailed configuration. The windows for advanced load balance and backup are different. Refer to the following explanation:

Advanced Load Balance

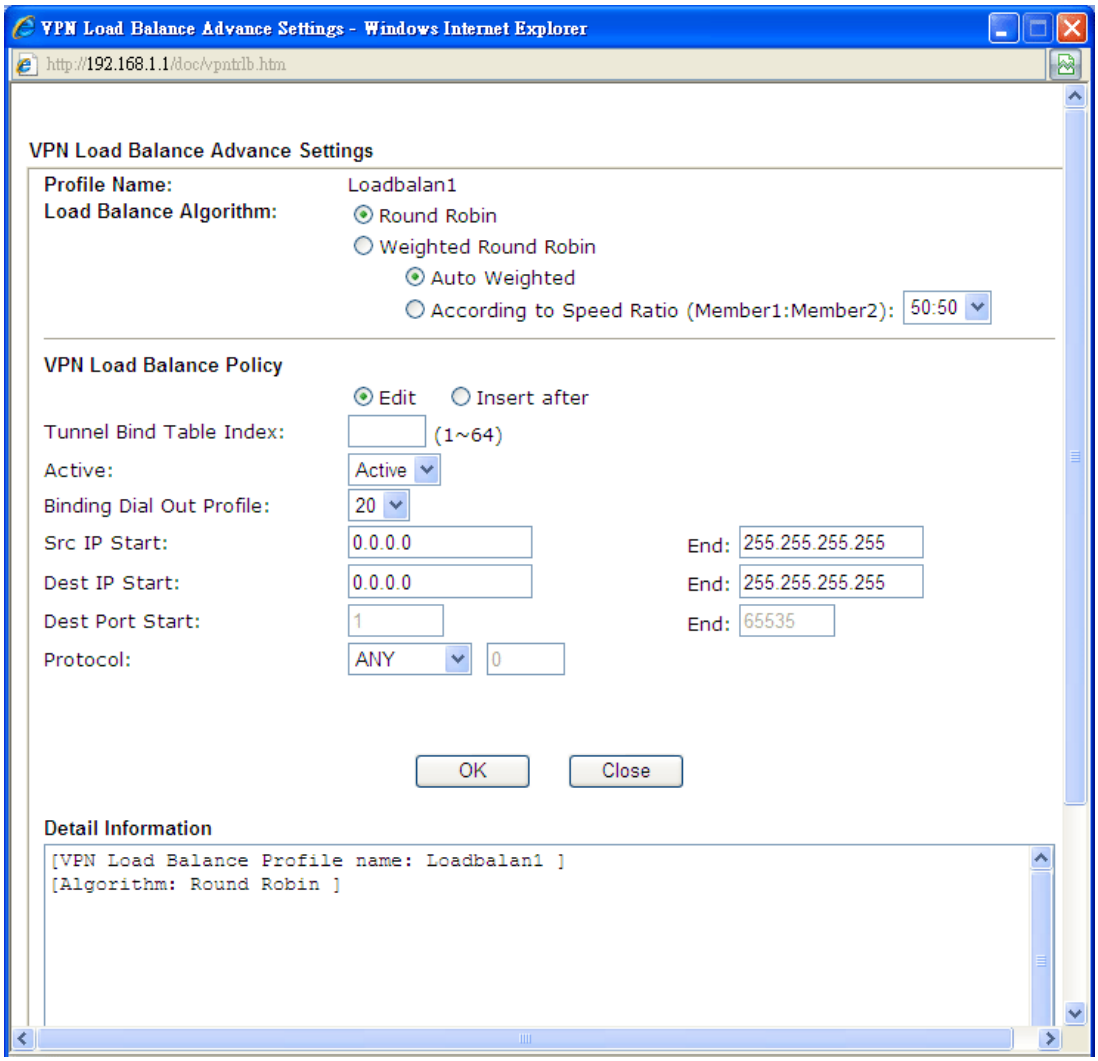

Available settings are explained as follows:

Item	Description
Profile Name	List the load balance profile name.
Load Balance Algorithm	**Round Robin** – Based on packet base, both tunnels will send the packet alternatively. Such method can reach the balance of packet transmission with fixed rate. **Weighted Round Robin** –Such method can reach the balance of packet transmission with flexible rate. It can be divided into Auto Weighted and According to Speed Ratio. **Auto Weighted** can detect the device speed (10Mbps/100Mbps) and switch with fixed value ratio (3:7) for packet transmission. If the transmission rate for packets on both sides of the tunnels is the same, the value of Auto Weighted should be 5.5. **According to Speed Ratio** allows

	user to adjust suitable rate manually. There are 100 groups of rate ratio for Member1:Member2 (range from 1:99 to 99:1).
VPN Load Balance Policy	Below shows the algorithm for Load Balance. **Edit** – Click this radio button for assign a blank table for configuring Binding Tunnel. **Insert after** – Click this radio button to adding a new binding tunnel table. **Tunnel Bind Table Index**- 128 Binding tunnel tables are provided by this device. Specify the number of the tunnel for such Load Balance profile. **Active** – In-active/Delete can delete this binding tunnel table. Active can activate this binding tunnel table. **Binding Dial Out Index** – Specify connection type for transmission by choosing the index (LAN to LAN Profile Index) for such binding tunnel table. **Scr IP Start /End**– Specify source IP addresses as starting point and ending point. **Dest IP Start/End** – Specify destination IP addresses as starting point and ending point. **Dest Port Start /End**– Specify destination service port as starting point and ending point. **Protocol** – **Any** means when the source IP, destination IP, destination port and fragment conditions match with the settings specified here, such binding tunnel table can be established for TCP Service Port/UDP Service Port/ICMP/IGMP specified here. **TCP** means when the source IP, destination IP, destination port and fragment conditions match with the settings specified here and TCP Service Port also fits the number here, such binding tunnel table can be established. **UDP** means when the source IP, destination IP, destination port and fragment conditions match with the settings specified here and UDP Service Port also fits the number here, such binding tunnel table can be established. **TCP/UPD** means when the source IP, destination IP, destination port and fragment conditions match with the settings specified here and TCP/UDP Service Port also fits the number here, such binding tunnel table can be established. **ICMP** means when the source IP, destination IP, destination port and fragment conditions match with the settings specified here and ICMP Service Port also fits the number here, such binding tunnel table can be established. IGMP means when the source IP, destination IP, destination port and fragment conditions match with the settings specified here and IGMP Service Port also fits the number here, such binding tunnel table can be established. **Other** means when the source IP, destination IP, destination port and fragment conditions match with the settings specified here with different TCP Service Port/UDP Service Port/ICMP/IGMP, such binding tunnel table can be established.

Detail Information	This field will display detailed information for Binding Tunnel Policy. Below shows a successful binding tunnel policy for load balance: 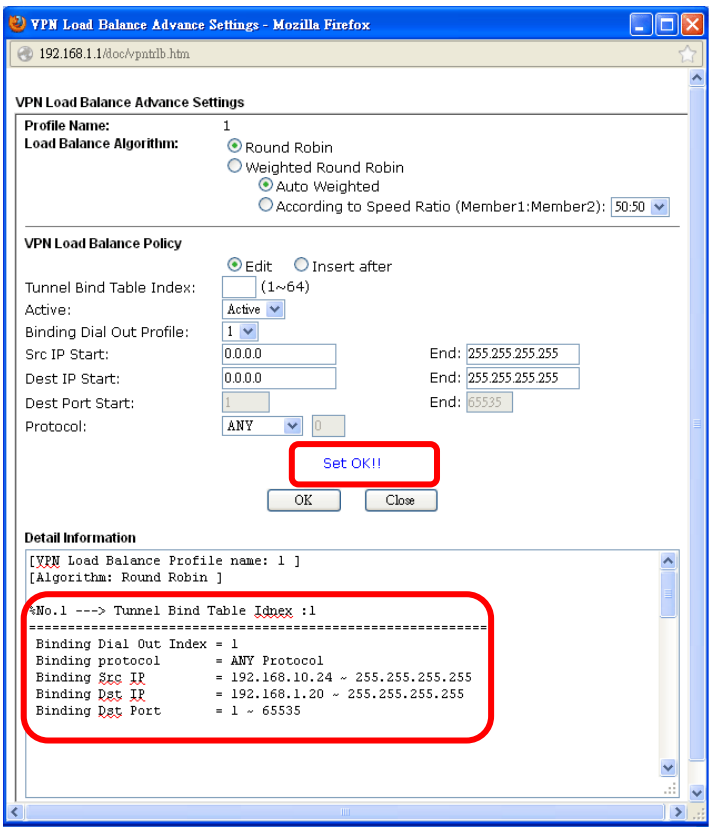 **Note : To configure a successful binding tunnel, you have to:** Type Binding Src IP range (Start and End) and Binding Des IP range (Start and End). Choose TCP/UDP, IGMP/ICMP or Other as Binding Protocol.

Detailed Settings for Advanced Backup

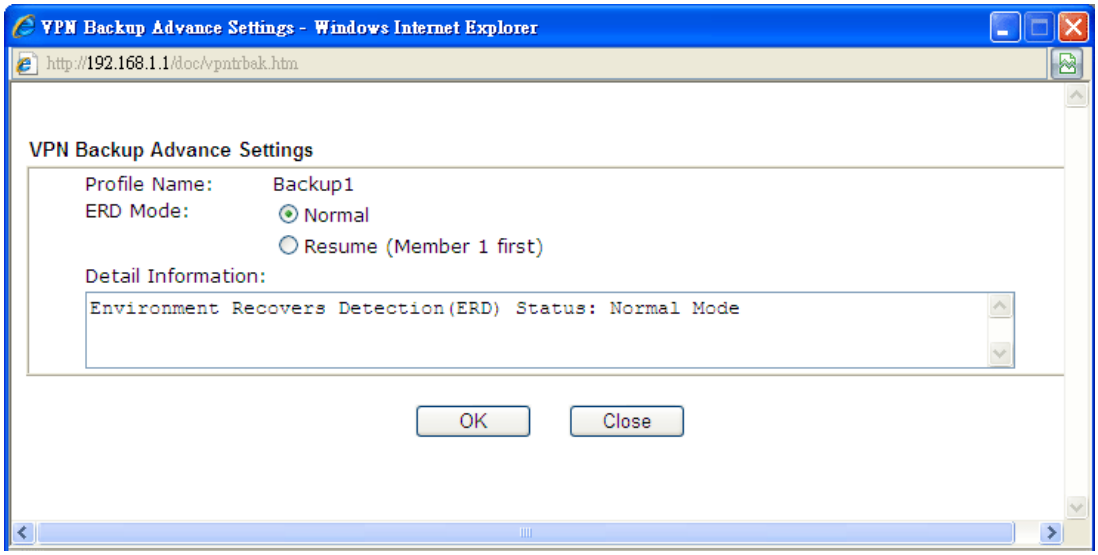

Available settings are explained as follows:

Item	Description
Profile Name	List the backup profile name.
ERD Mode	ERD means “Environment Recovers Detection”. **Normal** – choose this mode to make all dial-out VPN TRUNK backup profiles being activated alternatively. **Resume** – when VPN connection breaks down or disconnects, Member 1 will be the top priority for the system to do VPN connection.
Detail Information	This field will display detailed information for Environment Recovers Detection.

3.10.11 Connection Management

You can find the summary table of all VPN connections. You may disconnect any VPN connection by clicking **Drop** button. You may also aggressively Dial-out by using Dial-out Tool and clicking **Dial** button.

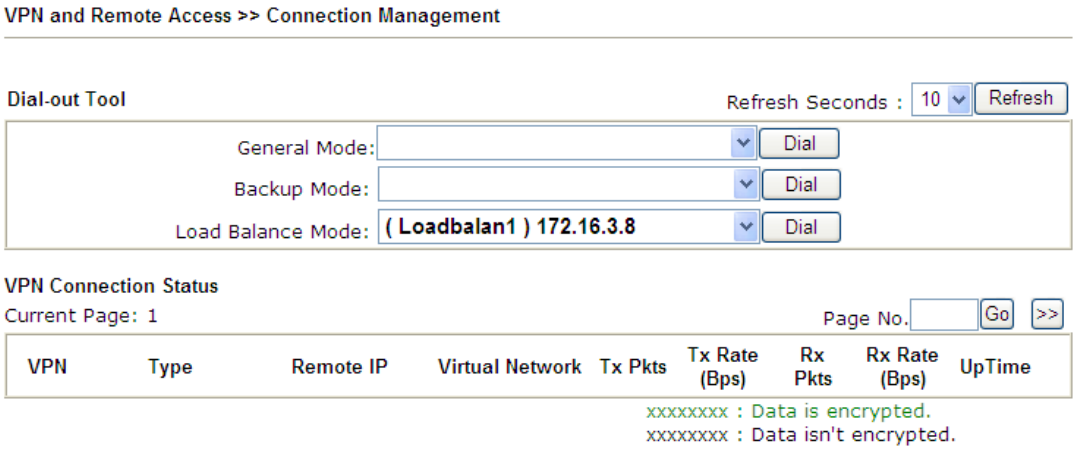
VPN and Remote Access >> Connection Management
Dial-out Tool
Refresh Seconds : 10 Refresh
General Mode: Dial
Backup Mode: Dial
Load Balance Mode: (Loadbalan1) 172.16.3.8 Dial
VPN Connection Status
Current Page: 1
Page No. Go >>
VPN Type Remote IP Virtual Network Tx Pkts Tx Rate (Bps) Rx Pkts Rx Rate (Bps) UpTime
xxxxxxxx : Data is encrypted.
xxxxxxxx : Data isn't encrypted.

Available settings are explained as follows:

Item	Description
Dial-out Tool	**General Mode -** This filed displays the profile configured in LAN-to-LAN (with Index number and VPN Server IP address). The VPN connection built by General Mode does not support VPN backup function. 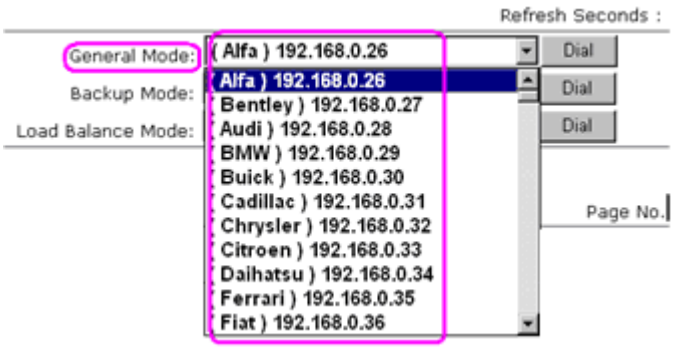 **Backup Mode -** This filed displays the profile name saved in VPN TRUNK Management (with Index number and

	VPN Server IP address). The VPN connection built by Backup Mode supports VPN backup function. 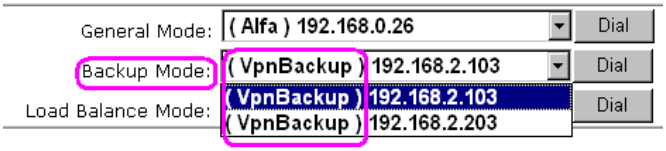 **Dial** - Click this button to execute dial out function. **Refresh Seconds** - Choose the time for refresh the dial information among 5, 10, and 30. **Refresh** - Click this button to refresh the whole connection status.

3.11 Certificate Management

A digital certificate works as an electronic ID, which is issued by a certification authority (CA). It contains information such as your name, a serial number, expiration dates etc., and the digital signature of the certificate-issuing authority so that a recipient can verify that the certificate is real. Here Vigor router support digital certificates conforming to standard X.509.

Any entity wants to utilize digital certificates should first request a certificate issued by a CA server. It should also retrieve certificates of other trusted CA servers so it can authenticate the peer with certificates issued by those trusted CA servers.

Here you can manage generate and manage the local digital certificates, and set trusted CA certificates. Remember to adjust the time of Vigor router before using the certificate so that you can get the correct valid period of certificate.

Below shows the menu items for Certificate Management.

3.11.1 Local Certificate

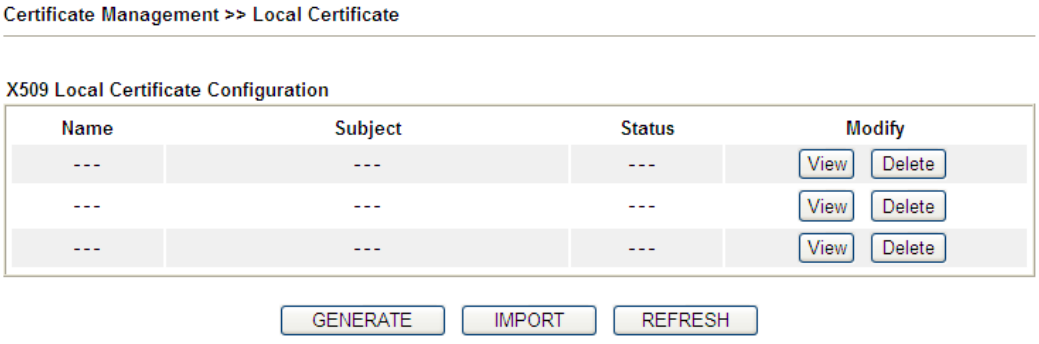

Available settings are explained as follows:

Item	Description
Generate	Click this button to open **Generate Certificate Request** window.

	Type in all the information that the window requests. Then click **Generate** again.
Import	Click this button to import a saved file as the certification information.
Refresh	Click this button to refresh the information listed below.
View	Click this button to view the detailed settings for certificate request.
Delete	Click this button to delete selected name with certification information.

GENERATE

Click this button to open **Generate Certificate Signing Request** window. Type in all the information that the window request such as certifcate name (used for identifying different certificate), subject alternative name type and relational settings for subject name. Then click **GENERATE** again.

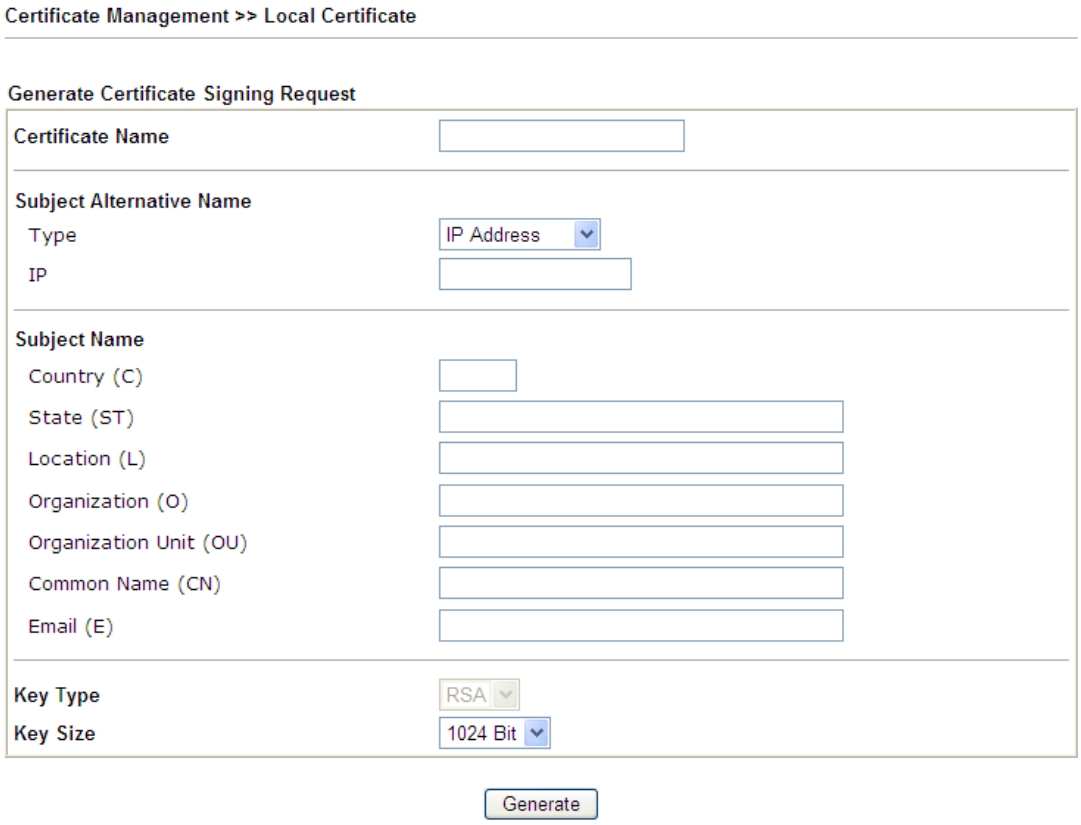

Note: Please be noted that “Common Name” must be configured with rotuer’s WAN IP or domain name.

After clicking **GENERATE**, the generated information will be displayed on the window below:

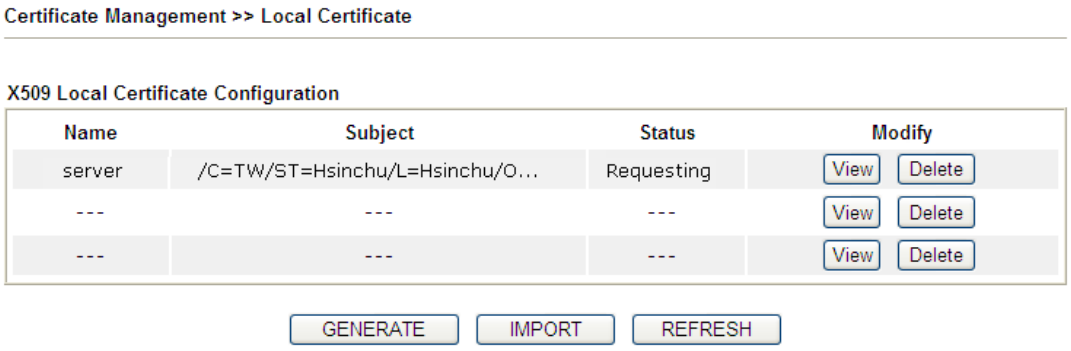

IMPORT

Vigor router allows you to generate a certificate request and submit it the CA server, then import it as "Local Certificate". If you have already gotten a certificate from a third party, you may import it directly. The supported types are PKCS12 Certificate and Certificate with a private key.

Click this button to import a saved file as the certification information. There are three types of local certificate supported by Vigor router.

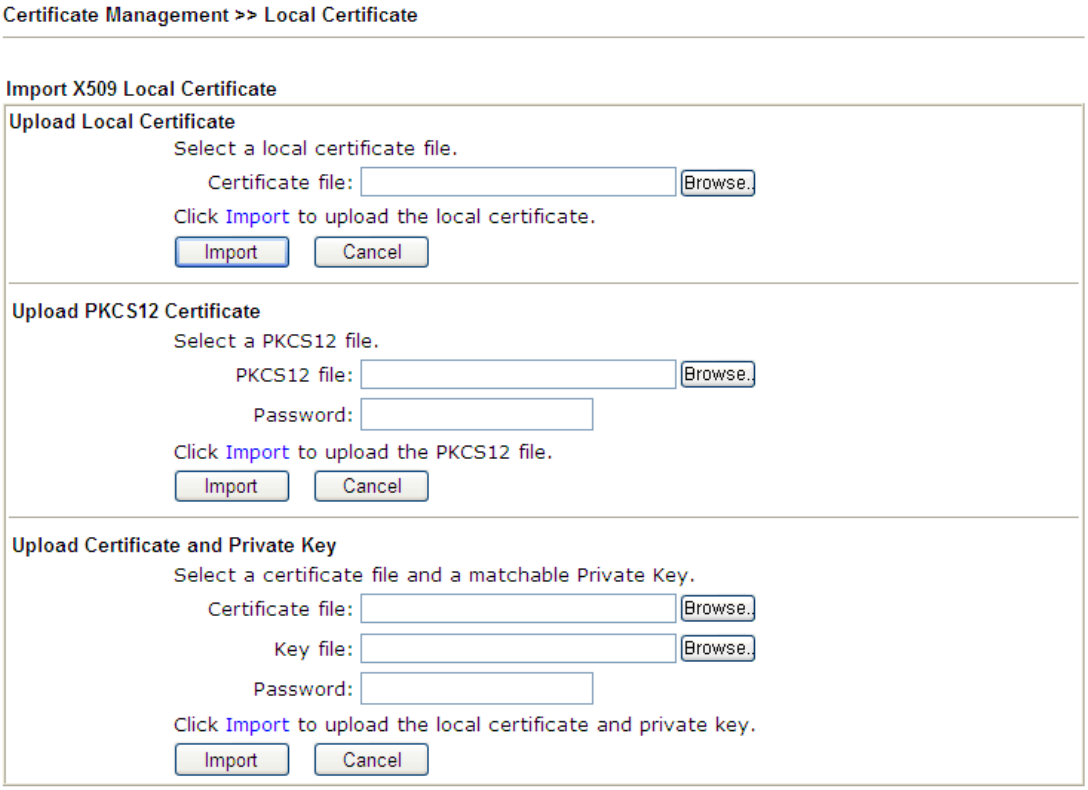

Available settings are explained as follows:

Item	Description
Upload Local Certificate	It allows users to import the certificate which is generated by vigor router and signed by CA server. If you have done well in certificate generation, the Status of the certificate will be shown as "**OK**".

	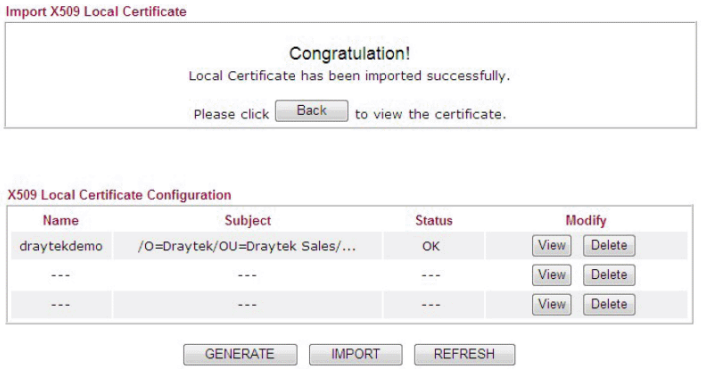
Upload PKCS12 Certificate	It allows users to import the certificate whose extensions are usually .pfx or .p12. And these certificates usually need passwords. **Note:** PKCS12 is a standard for storing private keys and certificates securely. It is used in (among other things) Netscape and Microsoft Internet Explorer with their import and export options.
Upload Certificate and Private Key	It is useful when users have separated certificates and private keys. And the password is needed if the private key is encrypted.

REFRESH

Click this button to refresh the information listed below.

View

Click this button to view the detailed settings for certificate request.

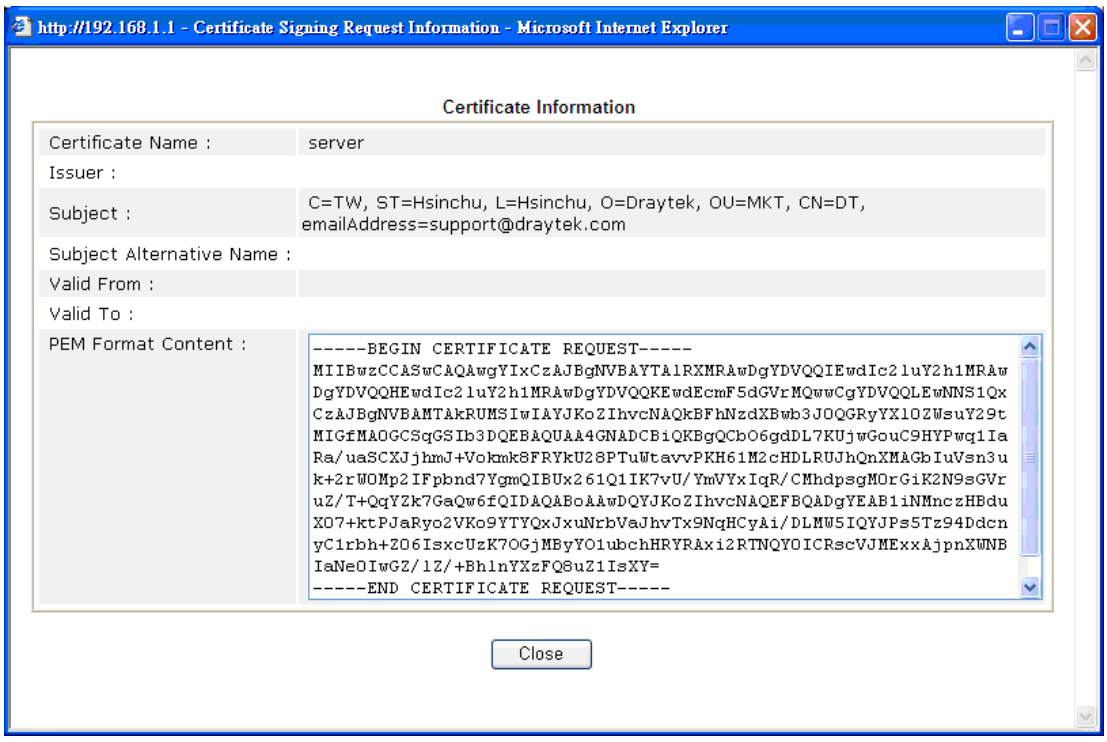

Note: You have to copy the certificate request information from above window. Next, access your CA server and enter the page of certificate request, copy the information into

it and submit a request. A new certificate will be issued to you by the CA server. You can save it.

Delete

Click this button to remove the selected certificate.

3.11.2 Trusted CA Certificate

Trusted CA certificate lists three sets of trusted CA certificate.

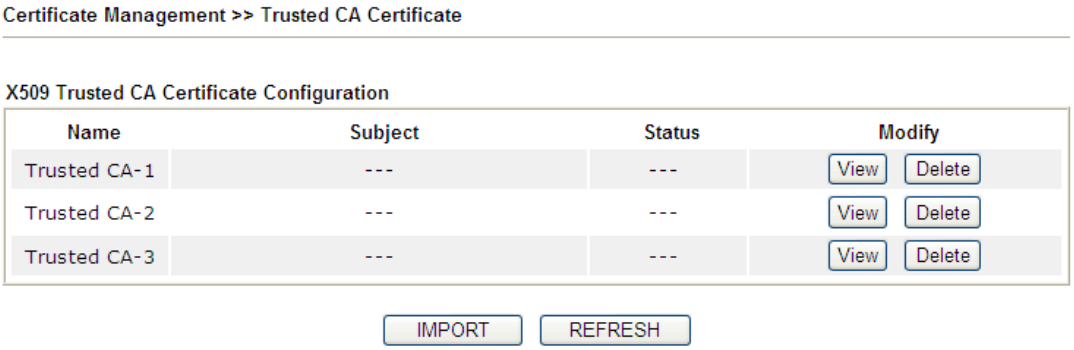

To import a pre-saved trusted CA certificate, please click **IMPORT** to open the following window. Use **Browse…** to find out the saved text file. Then click **Import**. The one you imported will be listed on the Trusted CA Certificate window. Then click **Import** to use the pre-saved file.

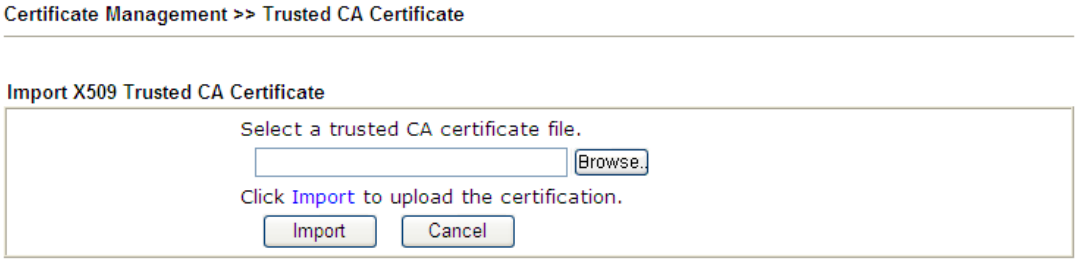

For viewing each trusted CA certificate, click **View** to open the certificate detail information window. If you want to delete a CA certificate, choose the one and click **Delete** to remove all the certificate information.

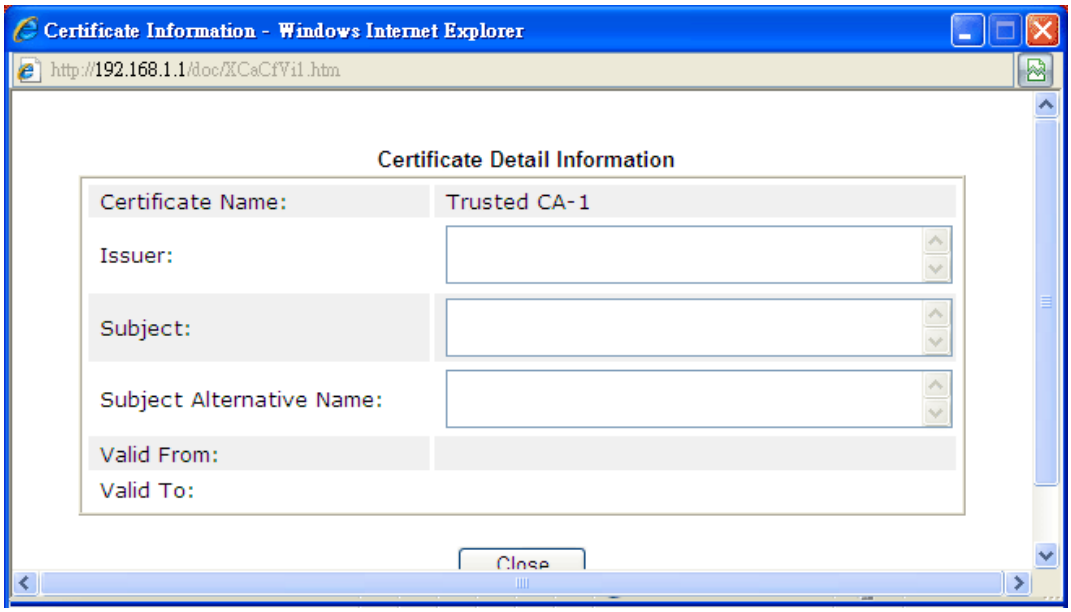

3.11.3 Certificate Backup

Local certificate and Trusted CA certificate for this router can be saved within one file. Please click **Backup** on the following screen to save them. If you want to set encryption password for these certificates, please type characters in both fields of **Encrypt password** and **Retype password**.

Also, you can use **Restore** to retrieve these two settings to the router whenever you want.

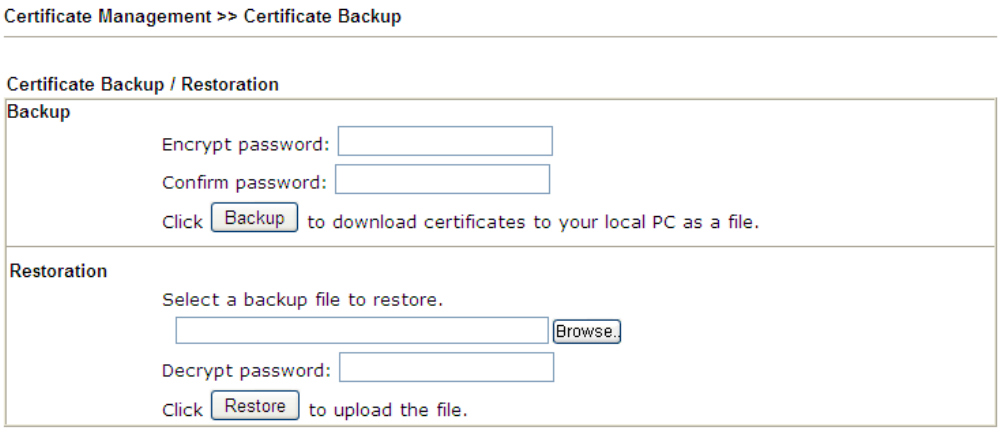

3.12 Wireless LAN

This function is used for “n” models only.

3.12.1 Basic Concepts

Over recent years, the market for wireless communications has enjoyed tremendous growth. Wireless technology now reaches or is capable of reaching virtually every location on the surface of the earth. Hundreds of millions of people exchange information every day via wireless communication products. The Vigor “n” model, a.k.a. Vigor wireless router, is designed for maximum flexibility and efficiency of a small office/home. Any authorized staff can bring a built-in WLAN client PDA or notebook into a meeting room for conference without laying a clot of LAN cable or drilling holes everywhere. Wireless LAN enables high mobility so WLAN users can simultaneously access all LAN facilities just like on a wired LAN as well as Internet access.

The Vigor wireless routers are equipped with a wireless LAN interface compliant with the standard IEEE 802.11n draft 2 protocol. To boost its performance further, the Vigor Router is also loaded with advanced wireless technology to lift up data rate up to 300 Mbps*. Hence, you can finally smoothly enjoy stream music and video.

> **Note**: * The actual data throughput will vary according to the network conditions and environmental factors, including volume of network traffic, network overhead and building materials.

In an Infrastructure Mode of wireless network, Vigor wireless router plays a role as an Access Point (AP) connecting to lots of wireless clients or Stations (STA). All the STAs will share the same Internet connection via Vigor wireless router. The **General Settings** will set up the information of this wireless network, including its SSID as identification, located channel etc.

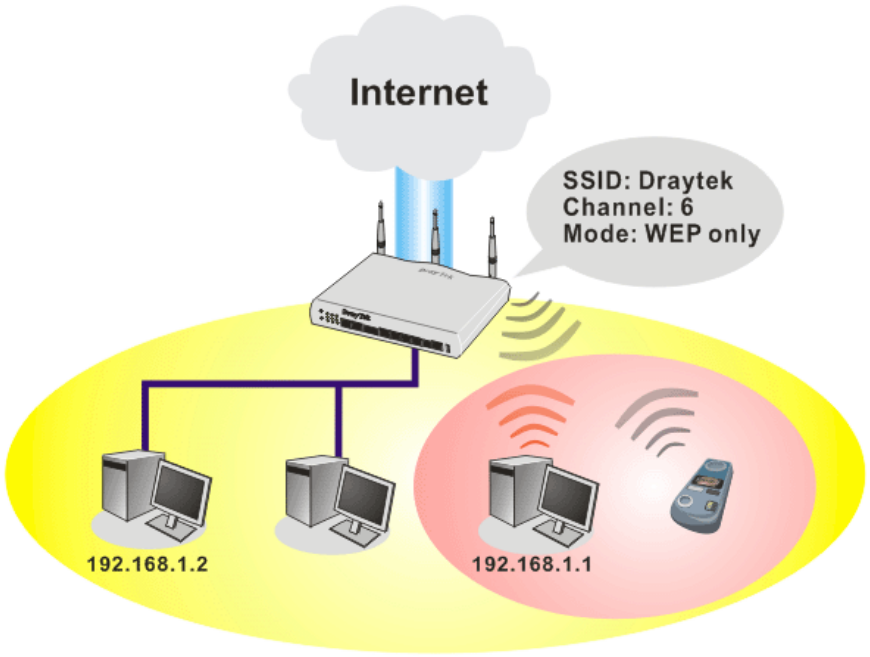

Multiple SSIDs

Vigor router supports four SSID settings for wireless connections. Each SSID can be defined with different name and download/upload rate for selecting by stations connected to the router wirelessly.

Security Overview

Real-time Hardware Encryption: Vigor Router is equipped with a hardware AES encryption engine so it can apply the highest protection to your data without influencing user experience.

Complete Security Standard Selection: To ensure the security and privacy of your wireless communication, we provide several prevailing standards on market.

WEP (Wired Equivalent Privacy) is a legacy method to encrypt each frame transmitted via radio using either a 64-bit or 128-bit key. Usually access point will preset a set of four keys and it will communicate with each station using only one out of the four keys.

WPA (Wi-Fi Protected Access), the most dominating security mechanism in industry, is separated into two categories: WPA-personal or called WPA Pre-Share Key (WPA/PSK), and WPA-Enterprise or called WPA/802.1x.

In WPA-Personal, a pre-defined key is used for encryption during data transmission. WPA applies Temporal Key Integrity Protocol (TKIP) for data encryption while WPA2 applies AES. The WPA-Enterprise combines not only encryption but also authentication.

Since WEP has been proved vulnerable, you may consider using WPA for the most secure connection. You should select the appropriate security mechanism according to your needs. No matter which security suite you select, they all will enhance the over-the-air data protection and /or privacy on your wireless network. The Vigor wireless router is very flexible and can support multiple secure connections with both WEP and WPA at the same time.

Separate the Wireless and the Wired LAN- WLAN Isolation enables you to isolate your wireless LAN from wired LAN for either quarantine or limit access reasons. To isolate means neither of the parties can access each other. To elaborate an example for business use, you may set up a wireless LAN for visitors only so they can connect to Internet without hassle of the confidential information leakage. For a more flexible deployment, you may add filters of MAC addresses to isolate users' access from wired LAN.

Manage Wireless Stations - Station List will display all the station in your wireless network and the status of their connection.

Below shows the menu items for Wireless LAN.

3.12.2 General Setup

By clicking the **General Settings**, a new web page will appear so that you could configure the SSID and the wireless channel. Please refer to the following figure for more information.

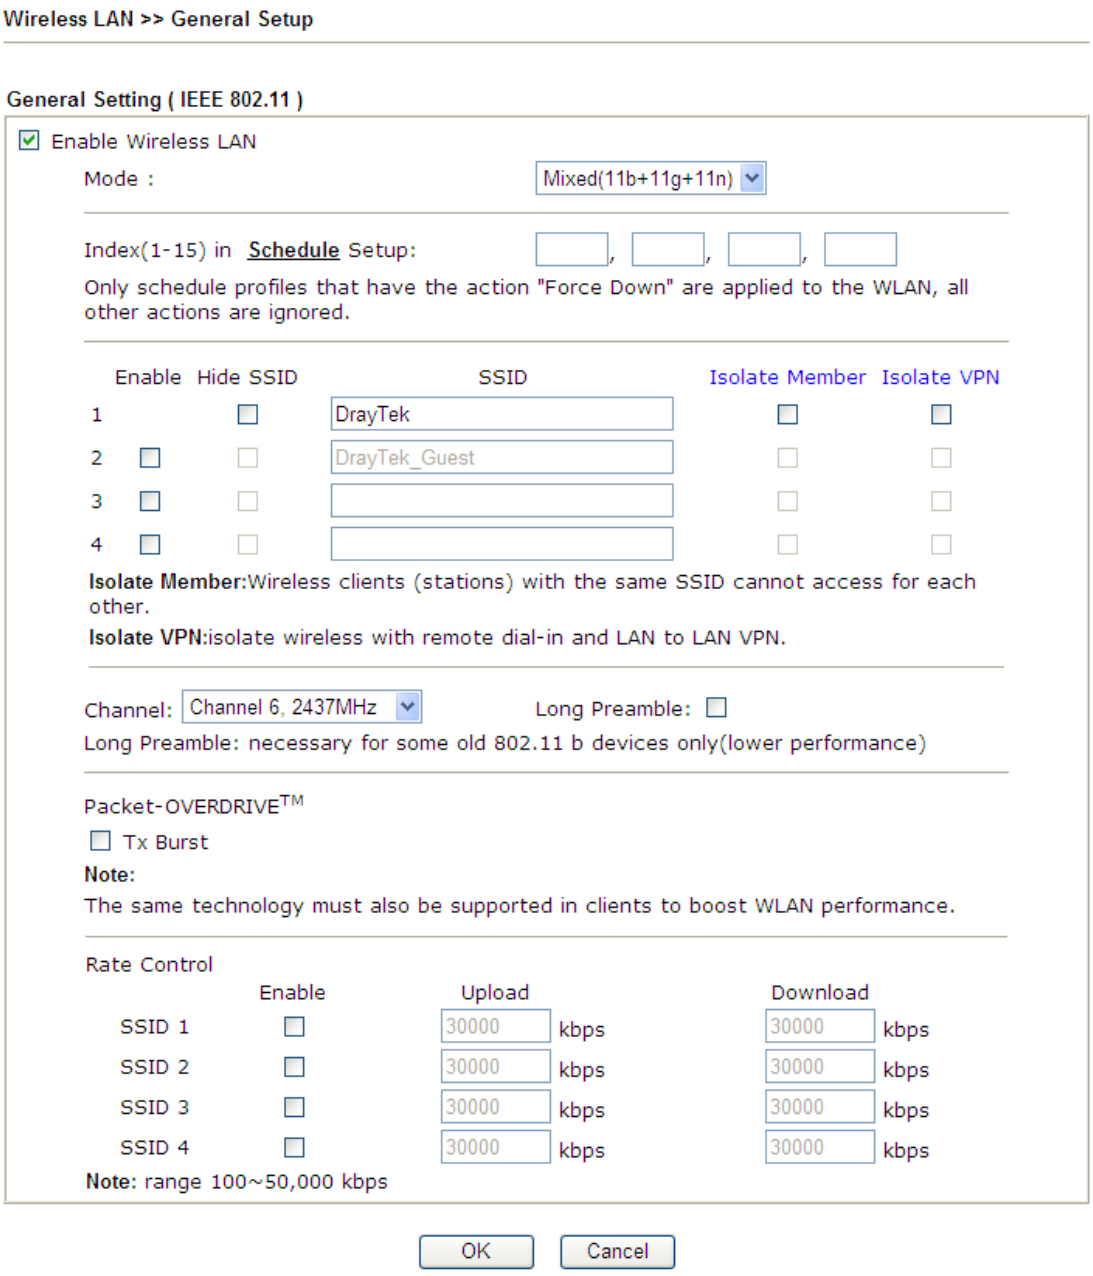

Available settings are explained as follows:

Item	Description
Enable Wireless LAN	Check the box to enable wireless function.
Mode	At present, the router can connect to 11g Only, 11n Only(2.4 GHz), Mixed (11b+11g), Mixed (11g+11n), and Mixed (11b+11g+11n) stations simultaneously. Simply choose Mixed (11b+11g+11n) mode.

	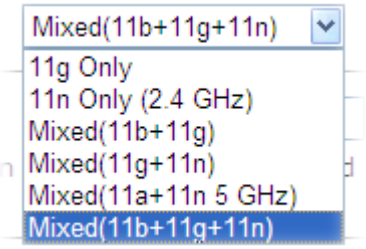 In which, 802.11b/g operates on 2.4G band, 802.11a operates on 5G band, and 802.11n operates on either 2.4G or 5G band.
Index(1-15)	Set the wireless LAN to work at certain time interval only. You may choose up to 4 schedules out of the 15 schedules pre-defined in **Applications >> Schedule** setup. The default setting of this field is blank and the function will always work.
Hide SSID	Check it to prevent from wireless sniffing and make it harder for unauthorized clients or STAs to join your wireless LAN. Depending on the wireless utility, the user may only see the information except SSID or just cannot see any thing about Vigor wireless router while site surveying. The system allows you to set four sets of SSID for different usage. In default, the first set of SSID will be enabled. You can hide it for your necessity.
SSID	Means the identification of the wireless LAN. SSID can be any text numbers or various special characters.
Isolate	**VPN** – Check this box to make the wireless clients (stations) with different VPN not accessing for each other. **Member** –Check this box to make the wireless clients (stations) with the same SSID not accessing for each other.
Channel	Means the channel of frequency of the wireless LAN. The default channel is 6. You may switch channel if the selected channel is under serious interference. If you have no idea of choosing the frequency, please select Auto to let system determine for you. 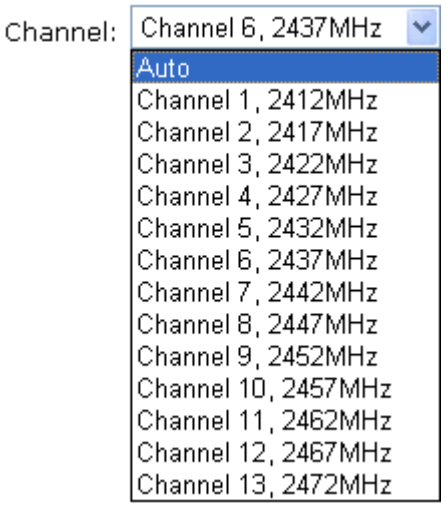

Long Preamble	This option is to define the length of the sync field in an 802.11 packet. Most modern wireless network uses short preamble with 56 bit sync field instead of long preamble with 128 bit sync field. However, some original 11b wireless network devices only support long preamble. Check it to use **Long Preamble** if needed to communicate with this kind of devices.
Packet-OVERDRIVE	This feature can enhance the performance in data transmission about 40%* more (by checking **Tx Burst**). It is active only when both sides of Access Point and Station (in wireless client) invoke this function at the same time. That is, the wireless client must support this feature and invoke the function, too. **Note:** Vigor N61 wireless adapter supports this function. Therefore, you can use and install it into your PC for matching with Packet-OVERDRIVE (refer to the following picture of Vigor N61 wireless utility window, choose **Enable** for **TxBURST** on the tab of **Option**). 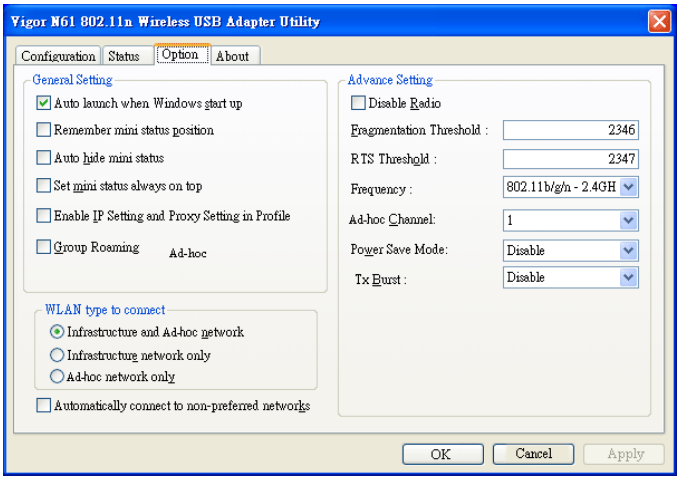 **Note:** * means the real transmission rate depends on the environment of the network.
Rate Control	It controls the data transmission rate through wireless connection. **Upload** – Check Enable and type the transmitting rate for data upload. Default value is 30,000 kbps. **Download** – Type the transmitting rate for data download. Default value is 30,000 kbps.

After finishing all the settings here, please click **OK** to save the configuration.

3.12.3 Security

This page allows you to set security with different modes for SSID 1, 2, 3 and 4 respectively. After configuring the correct settings, please click **OK** to save and invoke it.

The password (PSK) of default security mode is provided and stated on the label pasted on the bottom of the router. For the wireless client who wants to access into Internet through such router, please input the default PSK value for connection.

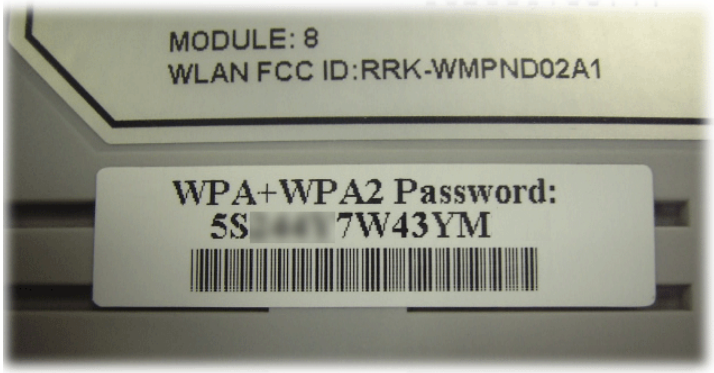

By clicking the **Security Settings**, a new web page will appear so that you could configure the settings of WPA and WEP.

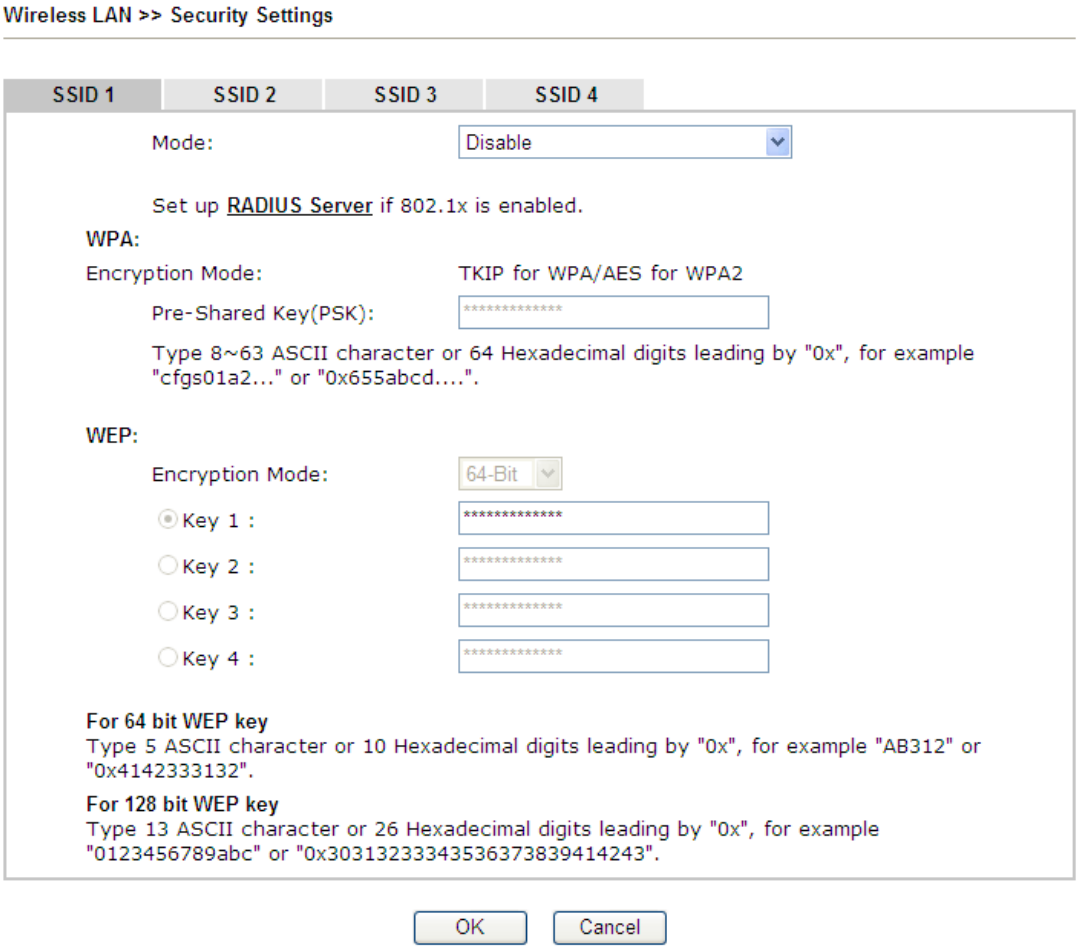
Wireless LAN >> Security Settings
SSID 1
SSID 2
SSID 3
SSID 4
Mode:
Disable
Set up RADIUS Server if 802.1x is enabled.
WPA:
Encryption Mode:
TKIP for WPA/AES for WPA2
Pre-Shared Key(PSK):
Type 8~63 ASCII character or 64 Hexadecimal digits leading by "0x", for example "cfgs01a2..." or "0x655abcd....".
WEP:
Encryption Mode:
64-Bit
Key 1 :
Key 2 :
Key 3 :
Key 4 :
For 64 bit WEP key
Type 5 ASCII character or 10 Hexadecimal digits leading by "0x", for example "AB312" or "0x4142333132".
For 128 bit WEP key
Type 13 ASCII character or 26 Hexadecimal digits leading by "0x", for example "0123456789abc" or "0x30313233343536373839414243".
OK
Cancel

Available settings are explained as follows:

Item	Description

Mode	There are several modes provided for you to choose. 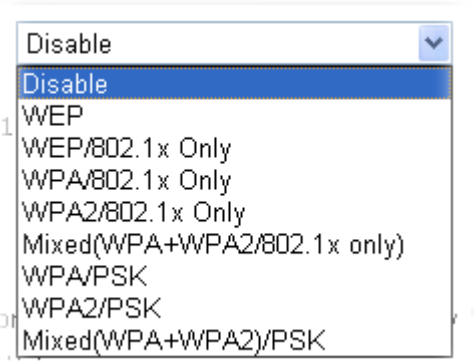 **Note:** You should also set **RADIUS Server** simultaneously if 802.1x mode is selected. **Disable** - Turn off the encryption mechanism. **WEP**-Accepts only WEP clients and the encryption key should be entered in WEP Key. **WEP/802.1x Only** - Accepts only WEP clients and the encryption key is obtained dynamically from RADIUS server with 802.1X protocol. **WPA/802.1x Only**- Accepts only WPA clients and the encryption key is obtained dynamically from RADIUS server with 802.1X protocol. **WPA2/802.1x Only**- Accepts only WPA2 clients and the encryption key is obtained dynamically from RADIUS server with 802.1X protocol. **Mixed (WPA+WPA2/802.1x only)** - Accepts WPA and WPA2 clients simultaneously and the encryption key is obtained dynamically from RADIUS server with 802.1X protocol. **WPA/PSK**-Accepts only WPA clients and the encryption key should be entered in PSK. **WPA2/PSK**-Accepts only WPA2 clients and the encryption key should be entered in PSK. **Mixed (WPA+ WPA2)/PSK** - Accepts WPA and WPA2 clients simultaneously and the encryption key should be entered in PSK.
WPA	The WPA encrypts each frame transmitted from the radio using the key, which either PSK (Pre-Shared Key) entered manually in this field below or automatically negotiated via 802.1x authentication. Either **8~63** ASCII characters, such as 012345678(or 64 Hexadecimal digits leading by 0x, such as "0x321253abcde..."). **Type** - Select from Mixed (WPA+WPA2) or WPA2 only. **Pre-Shared Key (PSK)** - Either **8~63** ASCII characters, such as 012345678..(or 64 Hexadecimal digits leading by 0x, such as "0x321253abcde...").
WEP	**64-Bit** - For 64 bits WEP key, either **5** ASCII characters, such as 12345 (or 10 hexadecimal digitals leading by 0x,

	such as 0x4142434445.) **128-Bit** - For 128 bits WEP key, either **13** ASCII characters, such as ABCDEFGHIJKLM (or 26 hexadecimal digits leading by 0x, such as 0x41424344454647484 94A4B4C4D). 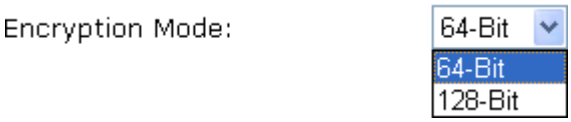 All wireless devices must support the same WEP encryption bit size and have the same key. **Four keys** can be entered here, but only one key can be selected at a time. The keys can be entered in ASCII or Hexadecimal. Check the key you wish to use.

After finishing all the settings here, please click **OK** to save the configuration.

3.12.4 Access Control

In the **Access Control**, the router may restrict wireless access to certain wireless clients only by locking their MAC address into a black or white list. The user may block wireless clients by inserting their MAC addresses into a black list, or only let them be able to connect by inserting their MAC addresses into a white list.

In the **Access Control** web page, users may configure the **white/black** list modes used by each SSID and the MAC addresses applied to their lists.

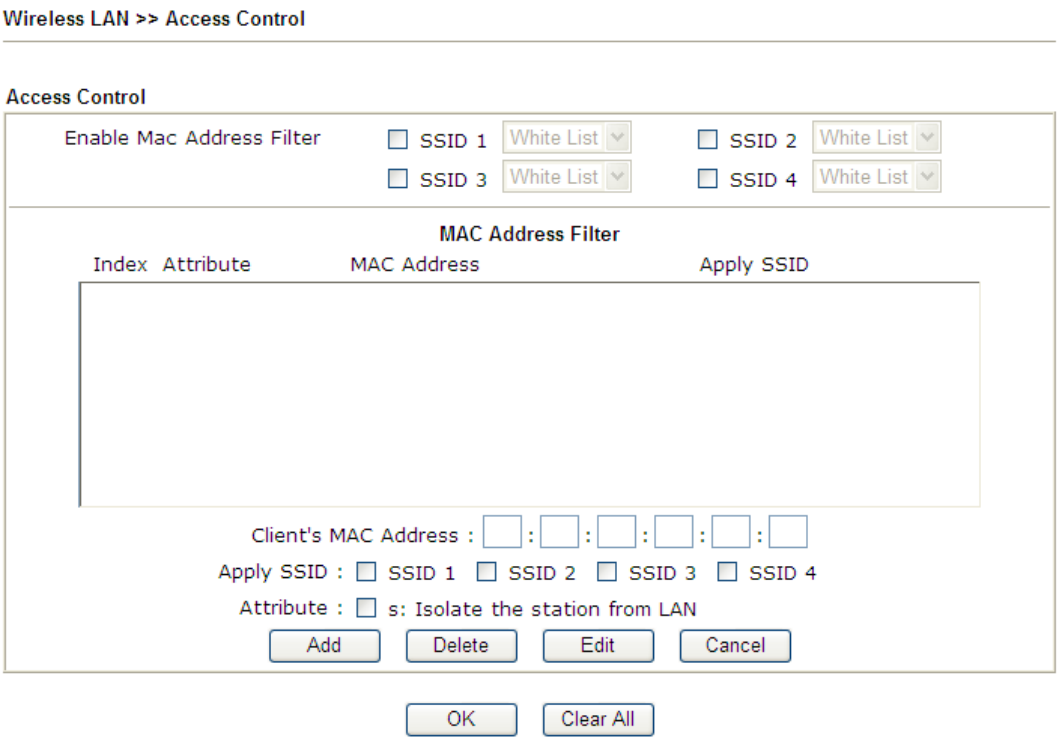

Available settings are explained as follows:

Item	Description
Enable Mac Address Filter	Select to enable the MAC Address filter for wireless LAN identified with SSID 1 to 4 respectively. All the clients (expressed by MAC addresses) listed in the box can be

	grouped under different wireless LAN. For example, they can be grouped under SSID 1 and SSID 2 at the same time if you check SSID 1 and SSID 2.
MAC Address Filter	Display all MAC addresses that are edited before.
Client's MAC Address	Manually enter the MAC address of wireless client.
Apply SSID	After entering the client's MAC address, check the box of the SSIDs desired to insert this MAC address into their access control list.
Attribute	**s: Isolate the station from LAN -** select to isolate the wireless connection of the wireless client of the MAC address from LAN.
Add	Add a new MAC address into the list.
Delete	Delete the selected MAC address in the list.
Edit	Edit the selected MAC address in the list.
Cancel	Give up the access control set up.
OK	Click it to save the access control list.
Clear All	Clean all entries in the MAC address list.

After finishing all the settings here, please click **OK** to save the configuration.

3.12.5 WPS

WPS (Wi-Fi Protected Setup) provides easy procedure to make network connection between wireless station and wireless access point (vigor router) with the encryption of WPA and WPA2.

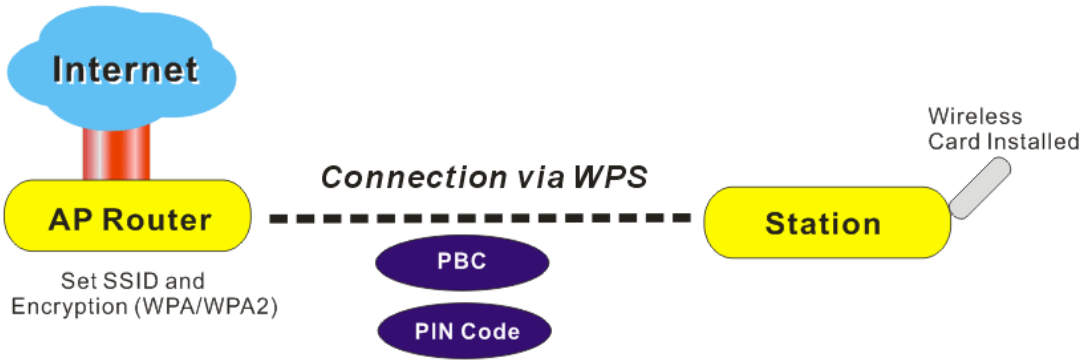

Note: Such function is available for the wireless station with WPS supported.

It is the simplest way to build connection between wireless network clients and vigor router. Users do not need to select any encryption mode and type any long encryption passphrase to setup a wireless client every time. He/she only needs to press a button on wireless client, and WPS will connect for client and router automatically.

There are two methods to do network connection through WPS between AP and Stations: pressing the ***Start PBC*** button or using ***PIN Code***.

- On the side of Vigor 2850 series which served as an AP, press **WPS** button once on the front panel of the router or click **Start PBC** on web configuration interface. On the side of a station with network card installed, press **Start PBC** button of network card.

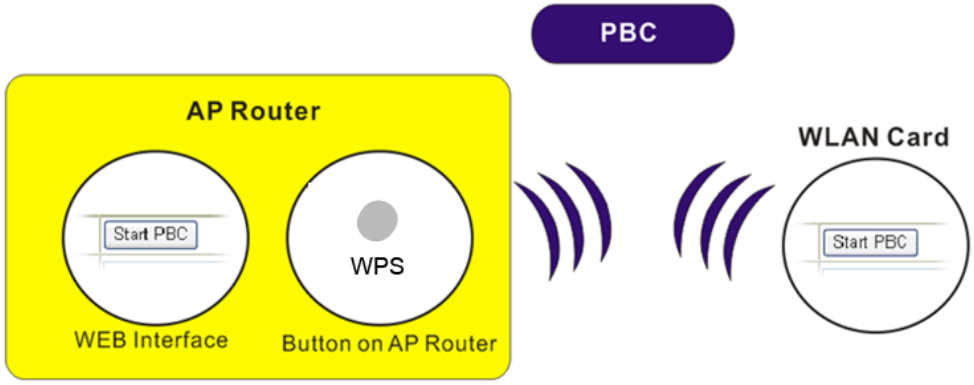

- If you want to use PIN code, you have to know the PIN code specified in wireless client. Then provide the PIN code of the wireless client you wish to connect to the vigor router.

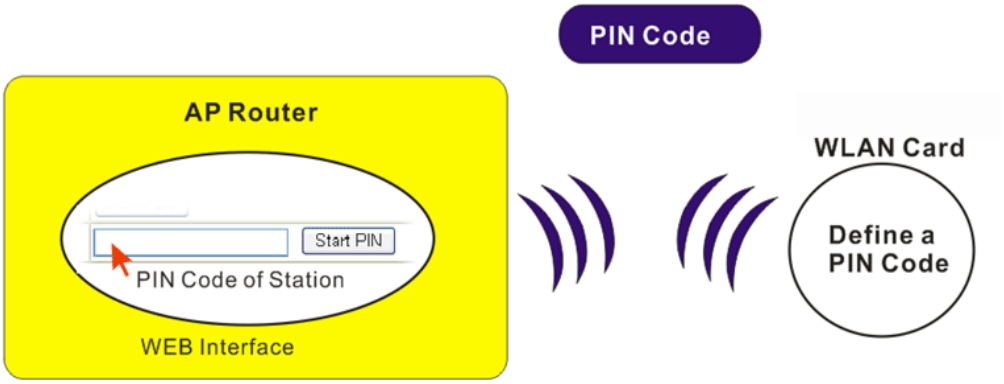

For WPS is supported in WPA-PSK or WPA2-PSK mode, if you do not choose such mode in **Wireless LAN>>Security**, you will see the following message box.

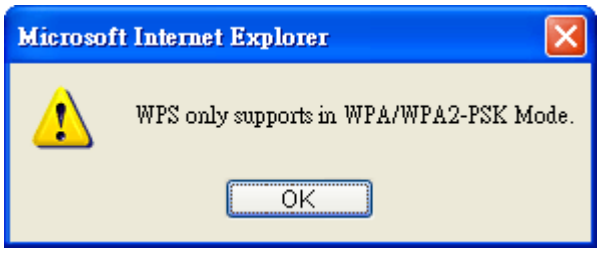

Please click **OK** and go back **Wireless LAN>>Security** to choose WPA-PSK or WPA2-PSK mode and access WPS again.

Below shows **Wireless LAN>>WPS** web page:

Available settings are explained as follows:

Item	Description
Enable WPS	Check this box to enable WPS setting.
WPS Status	Display related system information for WPS. If the wireless security (encryption) function of the router is properly configured, you can see ‘Configured’ message here.
SSID	Display the SSID1 of the router. WPS is supported by SSID1 only.
Authentication Mode	Display current authentication mode of the router. Only WPA2/PSK and WPA/PSK support WPS.
Configure via Push Button	Click **Start PBC** to invoke Push-Button style WPS setup procedure. The router will wait for WPS requests from wireless clients about two minutes. The WPS LED on the router will blink fast when WPS is in progress. It will return to normal condition after two minutes. (You need to setup WPS within two minutes)
Configure via Client PinCode	Please input the PIN code specified in wireless client you wish to connect, and click **Start PIN** button. The WPS LED on the router will blink fast when WPS is in progress. It will return to normal condition after two minutes. (You need to setup WPS within two minutes)

3.12.6 WDS

WDS means Wireless Distribution System. It is a protocol for connecting two access points (AP) wirelessly. Usually, it can be used for the following application:

- Provide bridge traffic between two LANs through the air.
- Extend the coverage range of a WLAN.

To meet the above requirement, two WDS modes are implemented in Vigor router. One is **Bridge**, the other is **Repeater**. Below shows the function of WDS-bridge interface:

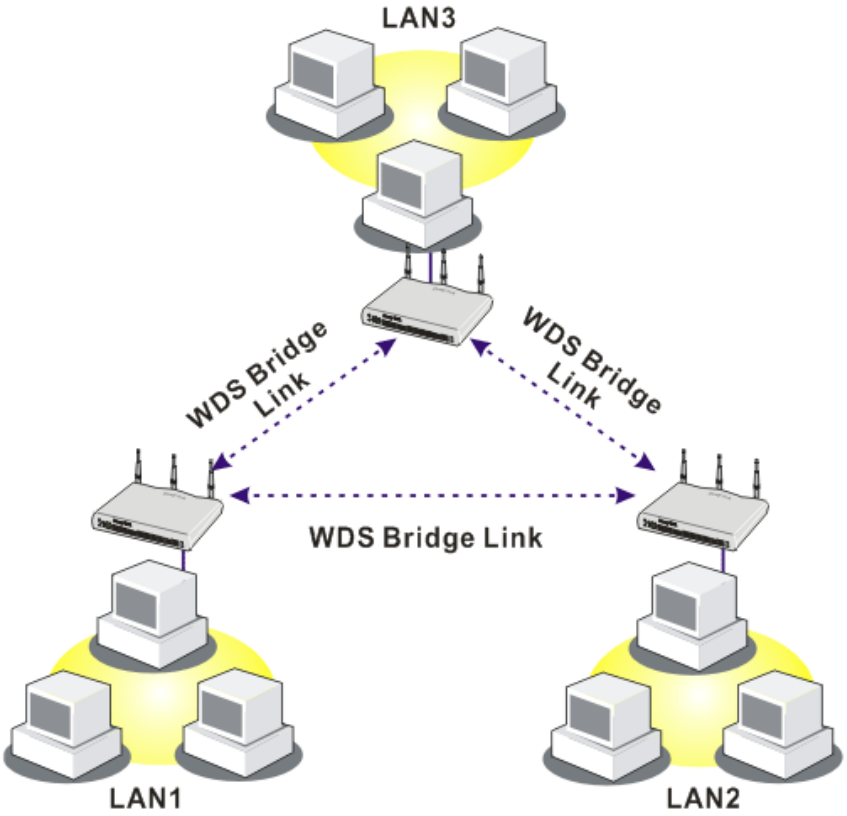

The application for the WDS-Repeater mode is depicted as below:

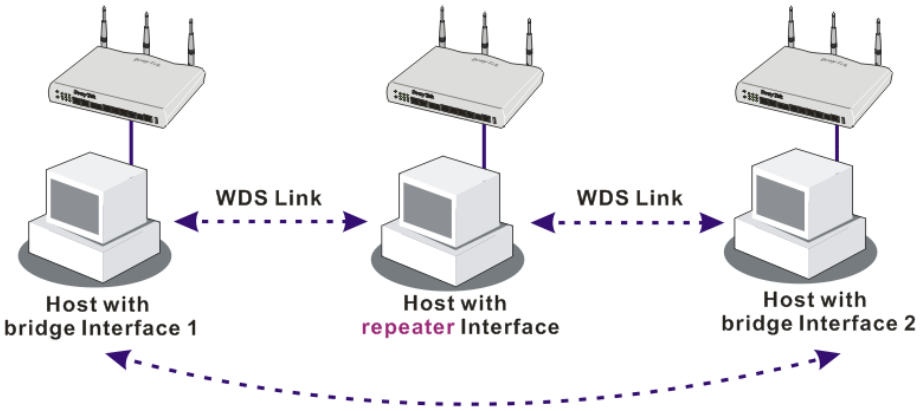

The major difference between these two modes is that: while in **Repeater** mode, the packets received from one peer AP can be repeated to another peer AP through WDS links. Yet in

Bridge mode, packets received from a WDS link will only be forwarded to local wired or wireless hosts. In other words, only Repeater mode can do WDS-to-WDS packet forwarding.

In the following examples, hosts connected to Bridge 1 or 3 can communicate with hosts connected to Bridge 2 through WDS links. However, hosts connected to Bridge 1 CANNOT communicate with hosts connected to Bridge 3 through Bridge 2.

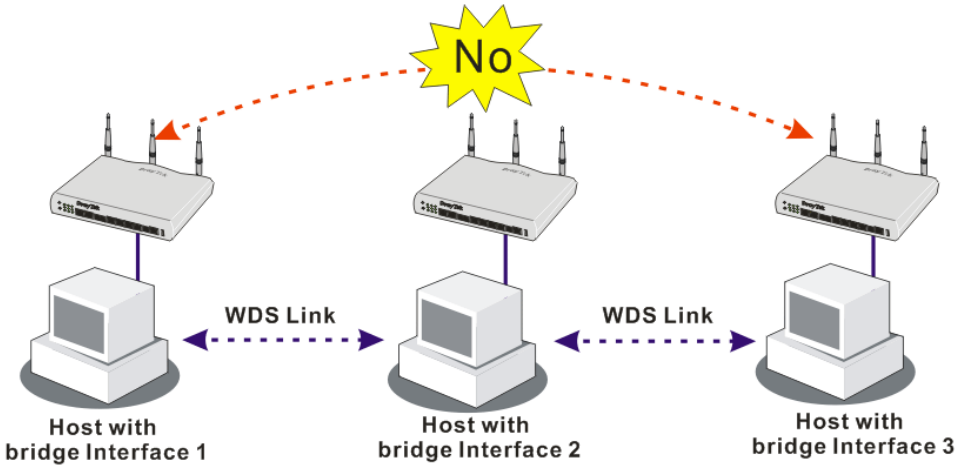

Click **WDS** from **Wireless LAN** menu. The following page will be shown.

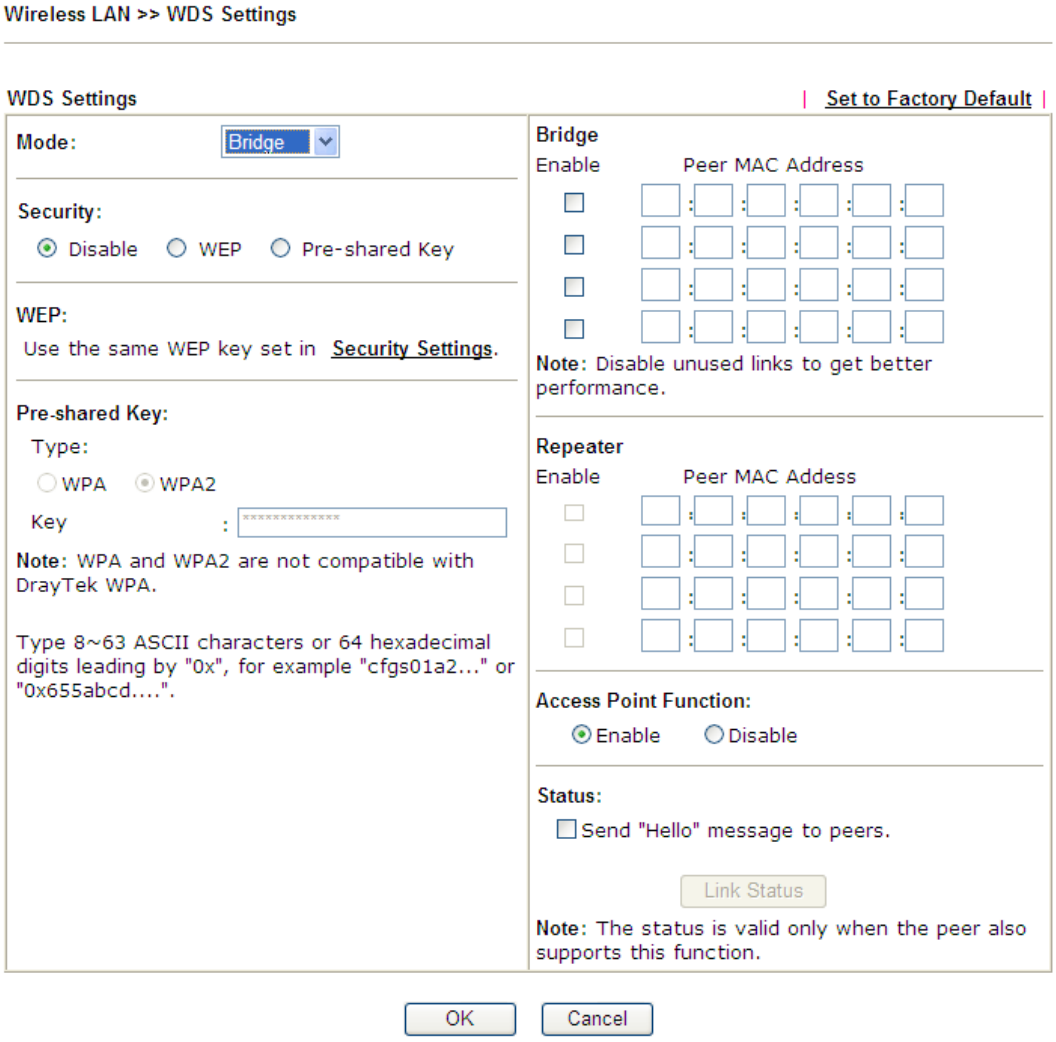

Available settings are explained as follows:

Item	Description
Mode	Choose the mode for WDS setting. **Disable** mode will not invoke any WDS setting. **Bridge** mode is designed to fulfill the first type of application. **Repeater** mode is for the second one.
Security	There are three types for security, **Disable**, **WEP** and **Pre-shared key**. The setting you choose here will make the following WEP or Pre-shared key field valid or not. Choose one of the types for the router.
WEP	Check this box to use the same key set in **Security Settings** page. If you did not set any key in **Security Settings** page, this check box will be dimmed.
Pre-shared Key	**Type –** There are some types for you to choose. **WPA** and **WPA2** are used for WDS devices (e.g.2920n wireless router, you can set the encryption mode as WPA or WPA2 to establish your WDS system between AP and the router. **Key -** Type 8 ~ 63 ASCII characters or 64 hexadecimal digits leading by “0x”.
Bridge	If you choose Bridge as the connecting mode, please type in the peer MAC address in these fields. Four peer MAC addresses are allowed to be entered in this page at one time. Yet please disable the unused link to get better performance. If you want to invoke the peer MAC address, remember to check **Enable** box in the front of the MAC address after typing.
Repeater	If you choose Repeater as the connecting mode, please type in the peer MAC address in these fields. Four peer MAC addresses are allowed to be entered in this page at one time. Similarly, if you want to invoke the peer MAC address, remember to check **Enable** box in the front of the MAC address after typing.
Access Point Function	Click **Enable** to make this router serving as an access point; click **Disable** to cancel this function.
Status	It allows user to send “hello” message to peers. Yet, it is valid only when the peer also supports this function.

After finishing all the settings here, please click **OK** to save the configuration.

3.12.7 Advanced Setting

This page allows users to set advanced settings such as operation mode, channel bandwidth, guard interval, and aggregation MSDU for wireless data transmission.

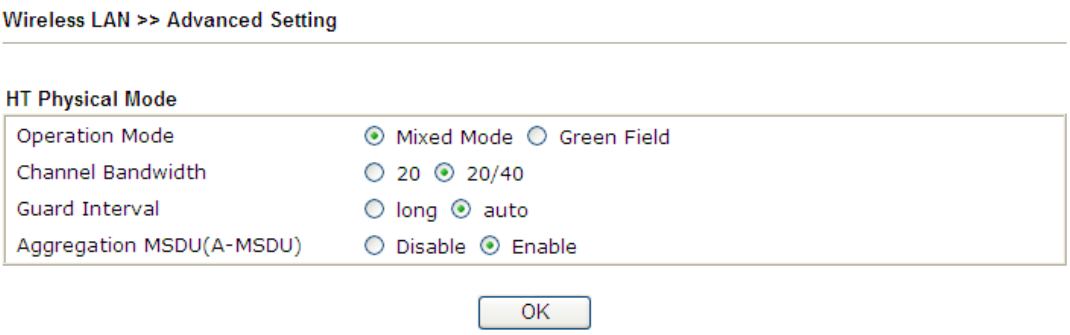

Available settings are explained as follows:

Item	Description
Operation Mode	**Mixed Mode** – the router can transmit data with the ways supported in both 802.11a/b/g and 802.11n standards. However, the entire wireless transmission will be slowed down if 802.11g or 802.11b wireless client is connected. **Green Field** – to get the highest throughput, please choose such mode. Such mode can make the data transmission happening between 11n systems only. In addition, it does not have protection mechanism to avoid the conflict with neighboring devices of 802.11a/b/g.
Channel Bandwidth	**20-** the router will use 20Mhz for data transmission and receiving between the AP and the stations. **20/40 –** the router will use 20Mhz or 40Mhz for data transmission and receiving according to the station capability. Such channel can increase the performance for data transit.
Guard Interval	It is to assure the safety of propagation delays and reflections for the sensitive digital data. If you choose **auto** as guard interval, the AP router will choose short guard interval (increasing the wireless performance) or long guard interval for data transmit based on the station capability.
Aggregation MSDU	Aggregation MSDU can combine frames with different sizes. It is used for improving MAC layer's performance for some brand's clients. The default setting is **Enable.**

After finishing all the settings here, please click **OK** to save the configuration.

3.12.8 WMM Configuration

WMM is an abbreviation of Wi-Fi Multimedia. It defines the priority levels for four access categories derived from 802.1d (prioritization tabs). The categories are designed with specific types of traffic, voice, video, best effort and low priority data. There are four accessing categories - AC_BE , AC_BK, AC_VI and AC_VO for WMM.

APSD (automatic power-save delivery) is an enhancement over the power-save mechanisms supported by Wi-Fi networks. It allows devices to take more time in sleeping state and consume less power to improve the performance by minimizing transmission latency.

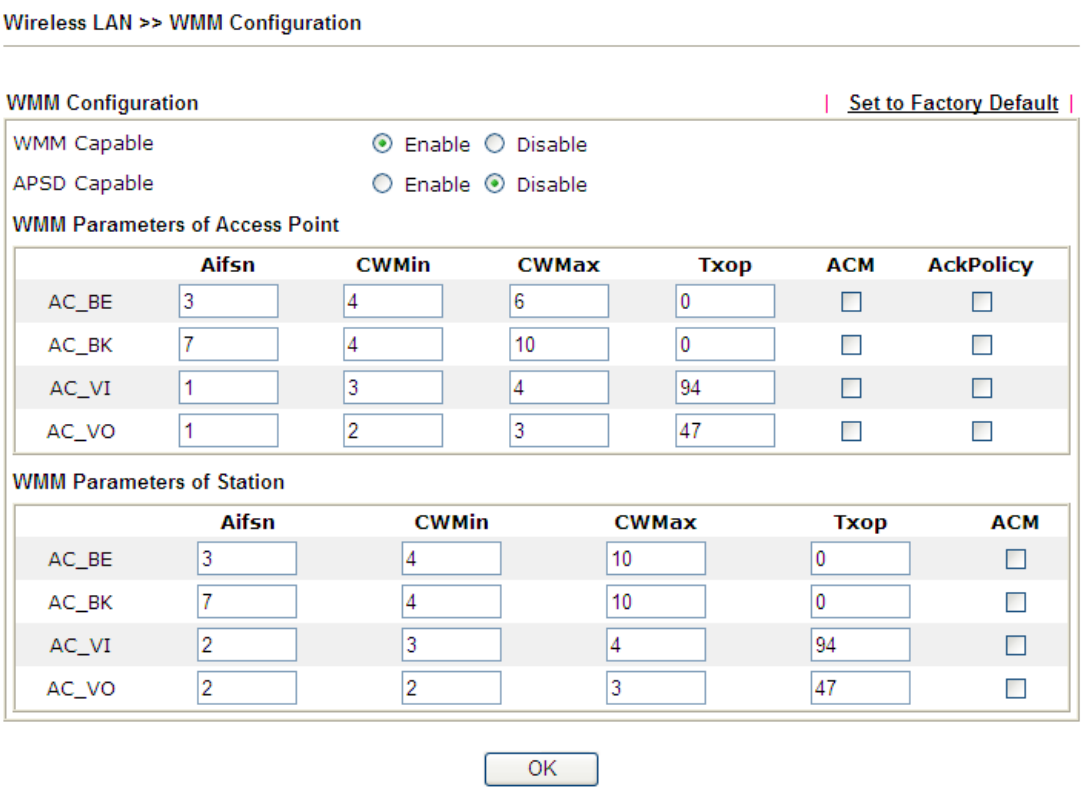

Available settings are explained as follows:

Item	Description
WMM Capable	To apply WMM parameters for wireless data transmission, please click the **Enable** radio button.
APSD Capable	The default setting is **Disable**.
Aifsn	It controls how long the client waits for each data transmission. Please specify the value ranging from 1 to 15. Such parameter will influence the time delay for WMM accessing categories. For the service of voice or video image, please set small value for AC_VI and AC_VO categories For the service of e-mail or web browsing, please set large value for AC_BE and AC_BK categories.
CWMin/CWMax	**CWMin** means contention Window-Min and **CWMax** means contention Window-Max. Please specify the value ranging from 1 to 15. Be aware that CWMax value must be greater than CWMin or equals to CWMin value. Both values will influence the time delay for WMM accessing categories. The difference between AC_VI and AC_VO

	categories must be smaller; however, the difference between AC_BE and AC_BK categories must be greater.
Txop	It means transmission opportunity. For WMM categories of AC_VI and AC_VO that need higher priorities in data transmission, please set greater value for them to get highest transmission opportunity. Specify the value ranging from 0 to 65535.
ACM	It is an abbreviation of Admission control Mandatory. It can restrict stations from using specific category class if it is checked. **Note:** Vigor2920 provides standard WMM configuration in the web page. If you want to modify the parameters, please refer to the Wi-Fi WMM standard specification.
AckPolicy	**"**Uncheck" (default value) the box means the AP router will answer the response request while transmitting WMM packets through wireless connection. It can assure that the peer must receive the WMM packets. "Check" the box means the AP router will not answer any response request for the transmitting packets. It will have better performance with lower reliability.

After finishing all the settings here, please click **OK** to save the configuration.

3.12.9 AP Discovery

Vigor router can scan all regulatory channels and find working APs in the neighborhood. Based on the scanning result, users will know which channel is clean for usage. Also, it can be used to facilitate finding an AP for a WDS link. Notice that during the scanning process (about 5 seconds), no client is allowed to connect to Vigor.

This page is used to scan the existence of the APs on the wireless LAN. Yet, only the AP which is in the same channel of this router can be found. Please click **Scan** to discover all the connected APs.

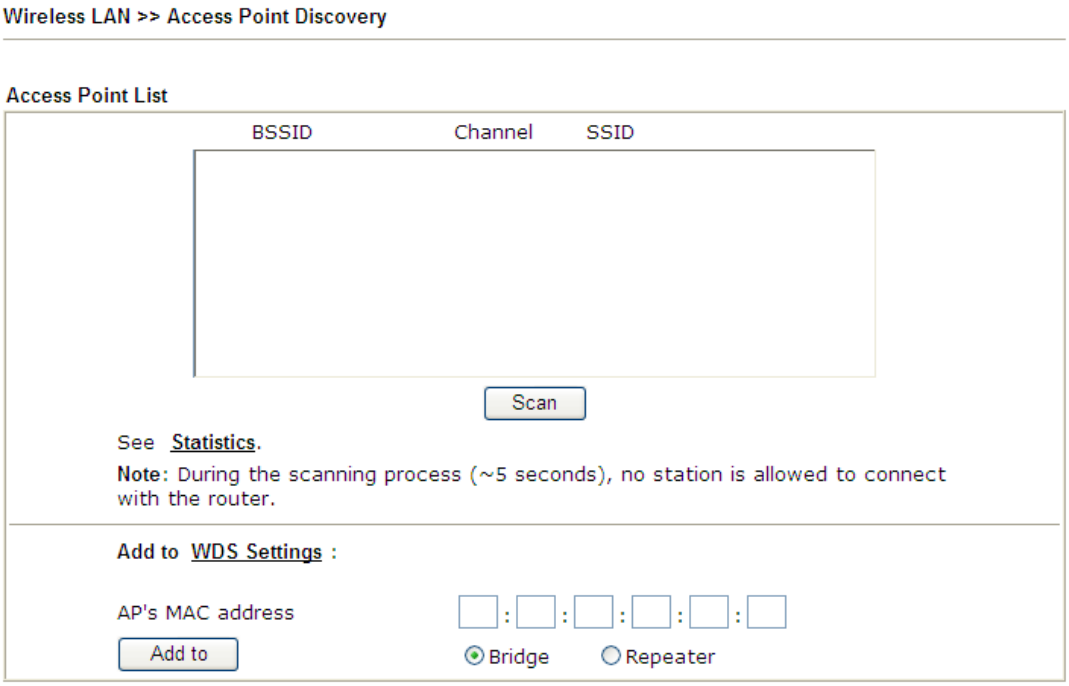

Available settings are explained as follows:

Item	Description
Scan	It is used to discover all the connected AP. The results will be shown on the box above this button.
Statistics	It displays the statistics for the channels used by APs. 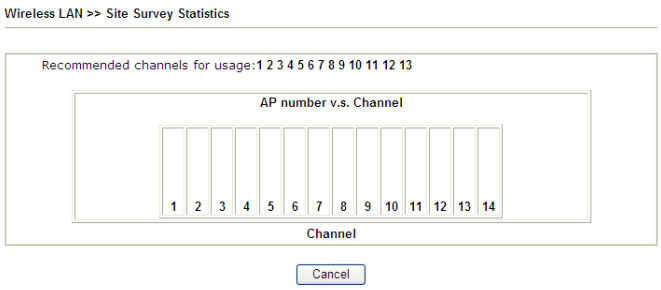
Add to	If you want the found AP applying the WDS settings, please type in the AP's MAC address on the bottom of the page and click Bridge or Repeater. Next, click **Add to**. Later, the MAC address of the AP will be added to Bridge or Repeater field of WDS settings page.

3.12.10 Station List

Station List provides the knowledge of connecting wireless clients now along with its status code. There is a code summary below for explanation. For convenient **Access Control**, you can select a WLAN station and click **Add to Access Control** below.

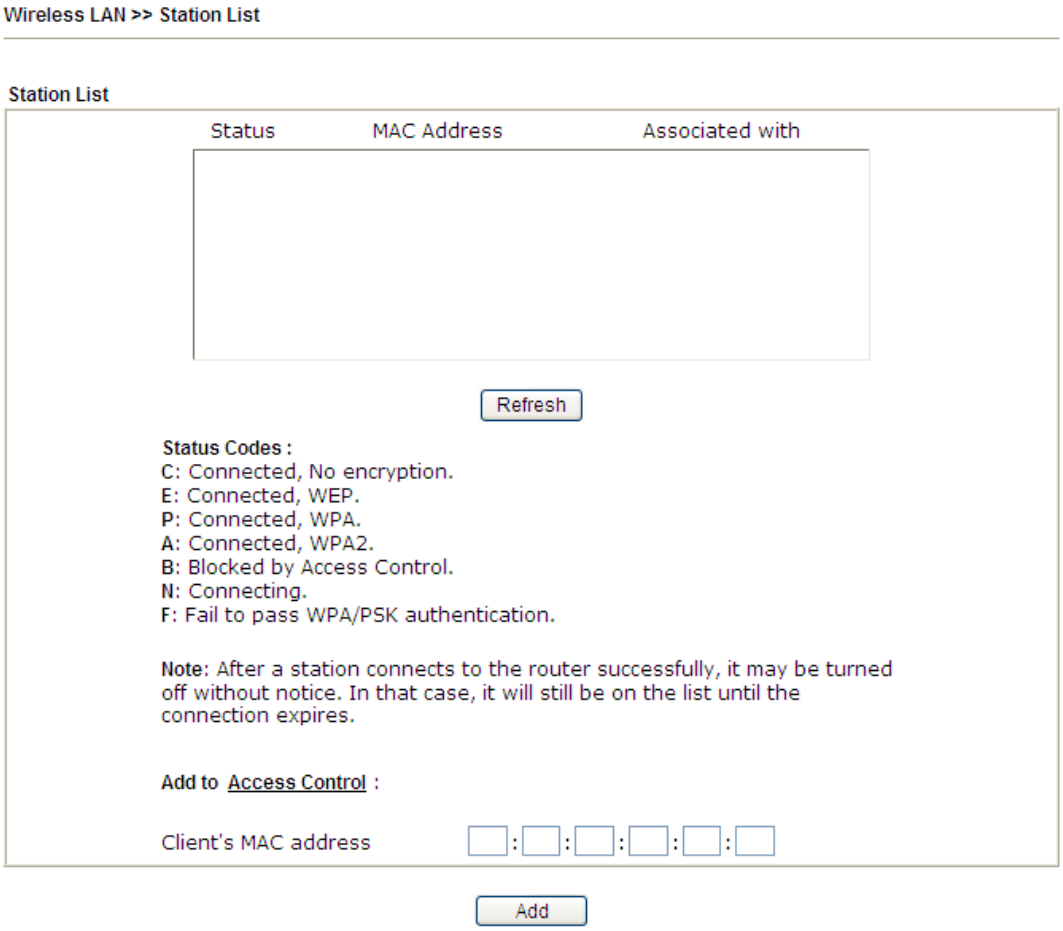
Wireless LAN >> Station List
Station List
Status
MAC Address
Associated with
Refresh
Status Codes :
C: Connected, No encryption.
E: Connected, WEP.
P: Connected, WPA.
A: Connected, WPA2.
B: Blocked by Access Control.
N: Connecting.
F: Fail to pass WPA/PSK authentication.
Note: After a station connects to the router successfully, it may be turned off without notice. In that case, it will still be on the list until the connection expires.
Add to Access Control :
Client's MAC address
Add

Available settings are explained as follows:

Item	Description
Refresh	Click this button to refresh the status of station list.
Add	Click this button to add current typed MAC address into **Access Control.**

3.13 SSL VPN

An SSL VPN (Secure Sockets Layer virtual private network) is a form of VPN that can be used with a standard Web browser.

There are two benefits that SSL VPN provides:

- It is not necessary for users to preinstall VPN client software for executing SSL VPN connection.
- There are less restrictions for the data encrypted through SSL VPN in comparing with traditional VPN.

3.13.1 General Setup

This page determines the general configuration for SSL VPN Server and SSL Tunnel.

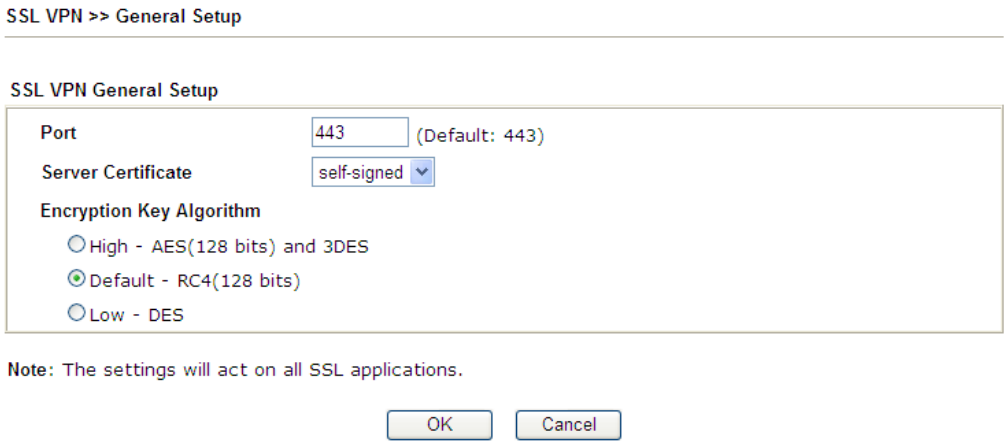

Available settings are explained as follows:

Item	Description
Port	Such port is set for SSL VPN server. It will not affect the HTTPS Port configuration set in **System Maintenance>>Management**. In general, the default setting is 443.
Server Certificate	When the client does not set any certificate, default certificate will be used for HTTPS and SSL VPN server. Choose any one of the user-defined certificates from the drop down list if users set several certificates previously. Otherwise, choose **Self-signed** to use the router's built-in default certificate. The default certificate can be used in SSL VPN server and HTTPS Web Proxy.

Encryption Key Algorithm	Choose the encryption level for the data connection in SSL VPN server.

After finishing all the settings here, please click **OK** to save the configuration.

3.13.2 SSL Web Proxy

SSL Web Proxy will allow the remote users to access the internal web sites over SSL.

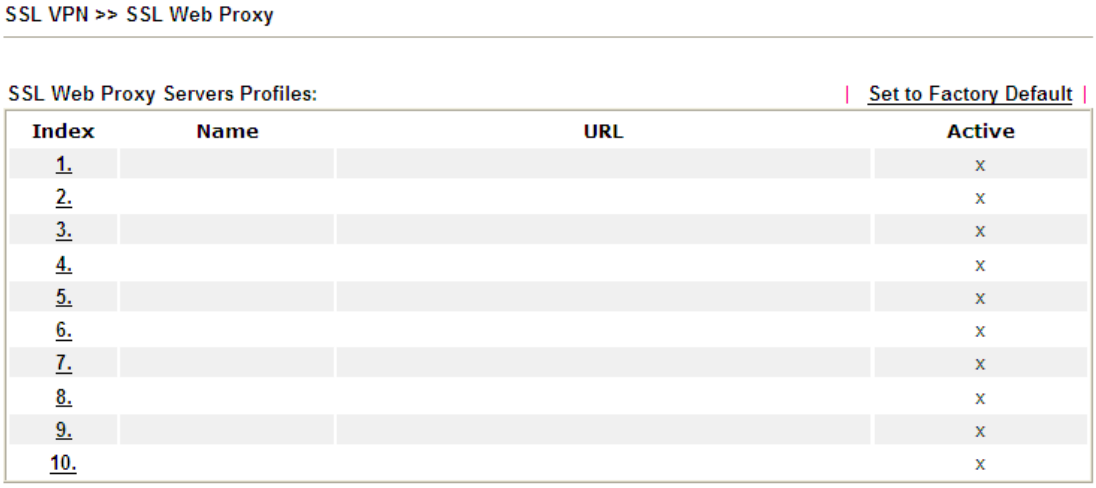

Each item is explained as follows:

Item	Description
Name	Display the name of the profile that you create.
URL	Display the URL.
Active	Display current status (active or inactive) of such profile.

Click number link under Index filed to set detailed configuration.

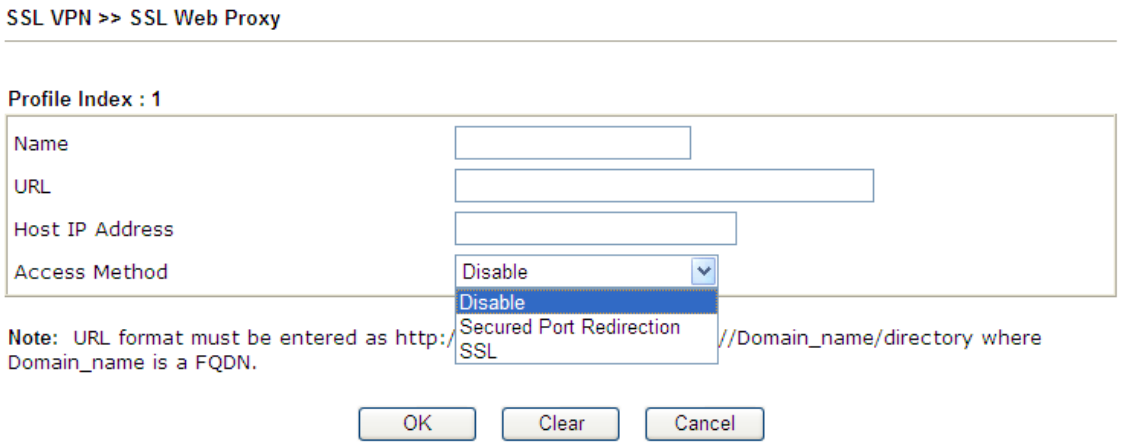

Available settings are explained as follows:

Item	Description
Name	Type name of the profile. The length of the name is limited to 15 characters.

URL	Type the address (function variation or IP address) or path of the proxy server.
Host IP Address	If you type function variation as URL, you have to type corresponding IP address in this filed. Such field must match with URL setting.
Access Method	There are three modes for you to choose. **Disable** – the profile will be inactive. If you choose **Disable**, all the web proxy profile appeared under VPN remote dial-in web page will disappear. **Secured Port Redirection** – such technique applies private port mapping to random WAN port. There are two restrictions for proxy web server for such selection: 1) it is only used for WAN to LAN access, the web server must be configured behind vigor router; 2) web server gateway must be indicated to vigor router. In addition, users must execute "Connect" manually in SSL Client Portal page. **SSL** – if you choose such selection, web proxy over SSL will be applied for VPN.

After finishing all the settings here, please click **OK** to save the configuration.

3.13.3 SSL Application

It provides a secure and flexible solution for network resources, including VNC (Virtual Network Computer) /RDP (Remote Desktop Protocol) /SAMBA, to any remote user with access to Internet and a web browser.

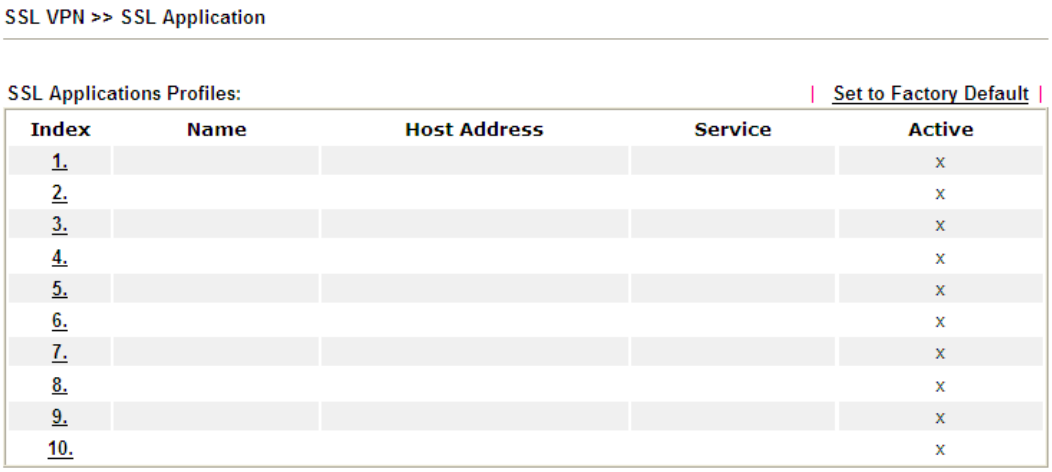

Each item is explained as follows:

Item	Description
Name	Display the application name of the profile that you create.
Host Address	Display the IP address for VNC/RDP or SAMBA path.
Service	Display the type of the service selected, e.g., VNC/RDP/SAMBA.
Active	Display current status (active or inactive) of the selected profile.

To create a new SSL application profile:

1. Click number link under Index filed to set detailed configuration.

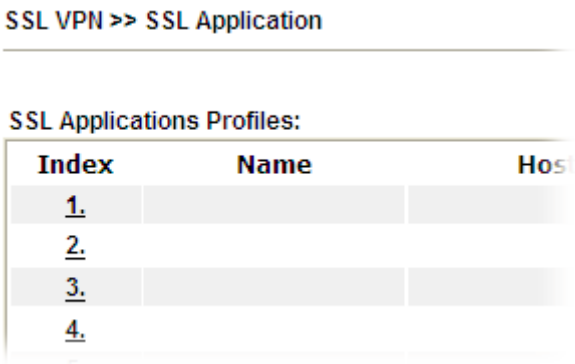

2. The following page will appear.

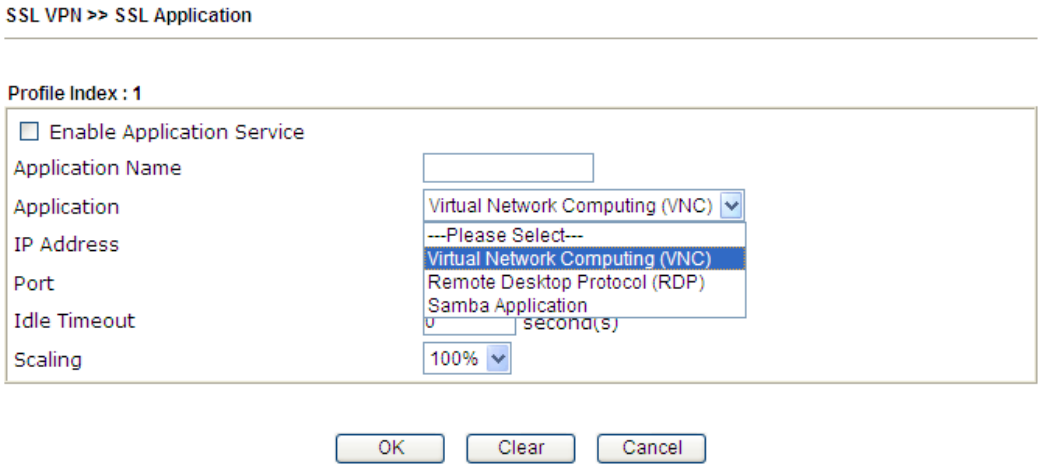

Available settings are explained as follows:

Item	Description
Enable Application Server	Check the box to enable such profile.
Application Name	Type a name for such application. The length of the name is limited to 23 characters.
Application	There are three types offered for you to create an application profile. 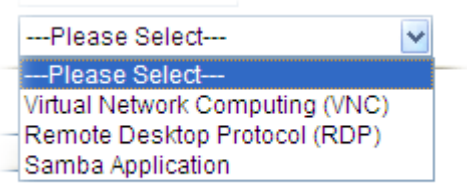 **Virtual Network Computing (VNC)** – It allows you to access and control a remote PC through VNC protocol. **Remote Desktop Protocol (RDP)** – It allows you to access and control a remote PC through RDP protocol.

	Samba Application – It allows you to access and control a remote PC through Samba service.
IP Address	If you choose VNC or RDP, you have to type the IP address for this protocol.
Port	If you choose VNC or RDP, you have to specify the port used for this protocol. The default setting is 5900.
Idle Timeout	If you choose VNC, you have to specify the time for disconnecting the SSL VPN tunnel.
Scaling	If you choose VNC, you have to choose the percentage (100%, 80%, 60%) for such application.
Screen Size	If you choose RDP, you have to choose the screen size for such application.
Samba Path	If you choose Samba, you have to specify the path of the Samba service.

3. Enter the required information.
4. After finished the above settings, click **OK** to save the configuration.

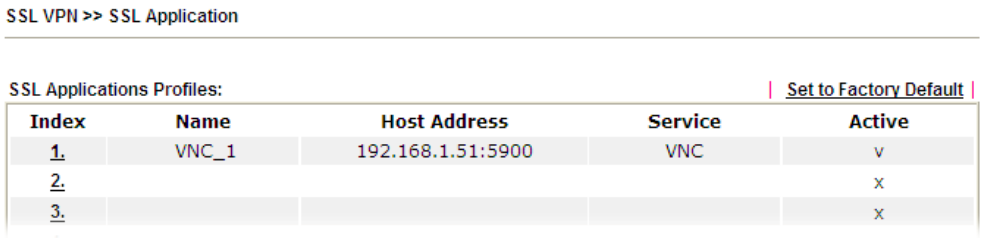

3.13.4 User Account

For SSL VPN, identity authentication and power management are implemented through deploying user accounts. Therefore, the user account for SSL VPN must be set together with remote dial-in user web page. Such menu item will guide to access into **VPN and Remote Access>>Remote Dial-in user**.

SSL VPN >> Remote Dial-in User

Remote Access User Accounts: | Set to Factory Default |

Index	User	Active	Status	Index	User	Active	Status
1.	carrie	V	LAN1-DHCP	17.	???	X	---
2.	???	X	---	18.	???	X	---
3.	???	X	---	19.	???	X	---
4.	???	X	---	20.	???	X	---
5.	???	X	---	21.	???	X	---
6.	???	X	---	22.	???	X	---
7.	???	X	---	23.	???	X	---
8.	???	X	---	24.	???	X	---
9.	???	X	---	25.	???	X	---
10.	???	X	---	26.	???	X	---
11.	???	X	---	27.	???	X	---
12.	???	X	---	28.	???	X	---
13.	???	X	---	29.	???	X	---
14.	???	X	---	30.	???	X	---
15.	???	X	---	31.	???	X	---
16.	???	X	---	32.	???	X	---

3.13.5 User Group

There are 10 user group profiles which can be created for authentication by LDAP server. Such profiles will be used by applications such as User Management, VPN and etc.

SSL VPN >> User Group

SSL User Group Profiles: | Set to Factory Default |

Index	Name	Status
1.		x
2.		x
3.		x
4.		x
5.		x
6.		x
7.		x
8.		x
9.		x
10.		x

Each item is explained as follows:

Item	Description
Set to Factory Default	Click to clear all indexes.
Index	Display the number of the client which connecting to FTP server.

Name	Display the name of the group profile.

Click any index number link to open the following page for detailed configuration.

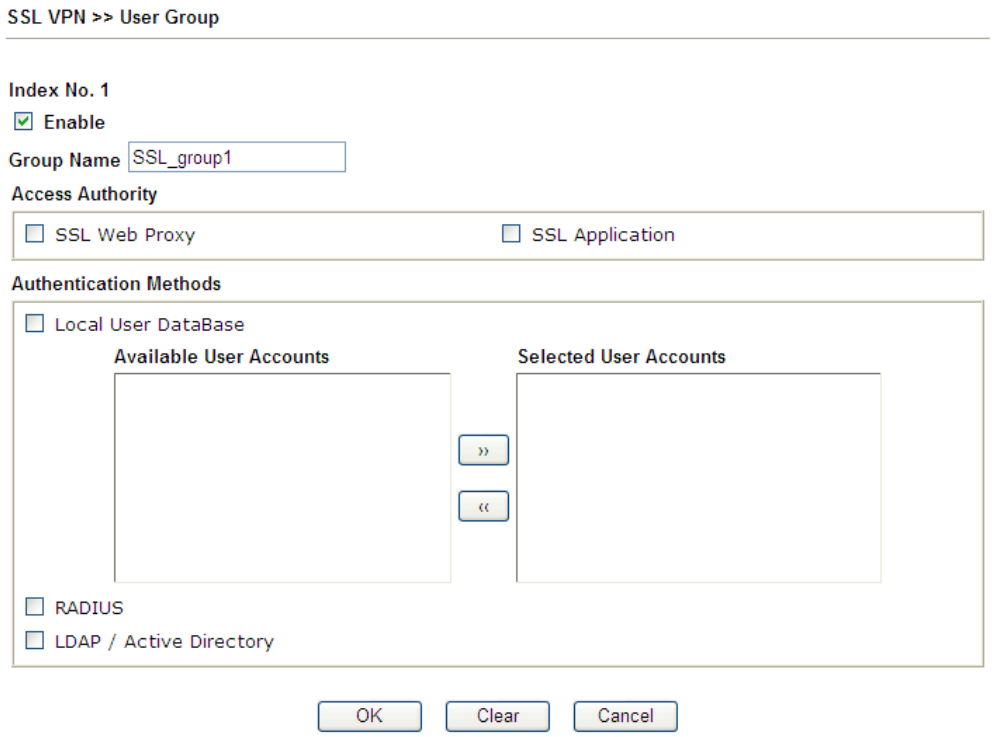

Available settings are explained as follows:

Item	Description
Enable	Check this box to enable such profile.
Group Name	Type a name for such profile. The length of the name is limited to 23 characters.
Access Authority	Specify the authority for such profile. At present, Vigor router allows you to create SSL Web Proxy and SSL Application profiles used for SSL VPN. The available profiles will be displayed here for you to select.
Authentication Methods	It can determine the authentication method used for such profile. **Local User DataBase –** The system will do the authentication by using the user defined account profiles (in **VPN and Remote Access>>Remote Dial-In User**). The enabled profiles will be listed in the **Available User Account** on the left box. To add a profile into a group, simply choose the one from the left box and click the >> button. It will be displayed in the **Selected User Account** on the right box. For detailed information about configuring the profile setting, refer to **Objects Setting>>IP Group**.

	RADIUS – The RADIUS server will do the authentication by using the username and password **LDAP / Active Directory -** If it is checked, the LDAP / AD server will do the authentication by using the username, password, information stated on the selected profiles. If the above three options are enabled, the system will do the authentication based on them in sequence.

After finishing all the settings here, please click **OK** to save the configuration.

3.13.6 Online User Status

If you have finished the configuration of SSL Web Proxy (server), users can find out corresponding settings when they access into **Draytek SSL VPN portal** interface.

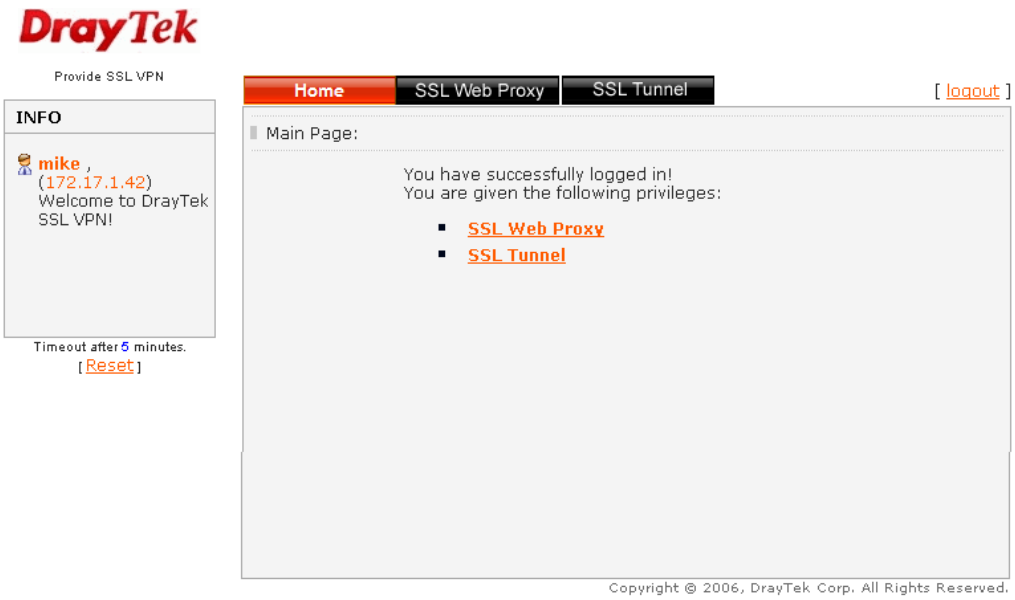

Next, users can open **SSL VPN>> Online Status** to view logging status of SSL VPN.

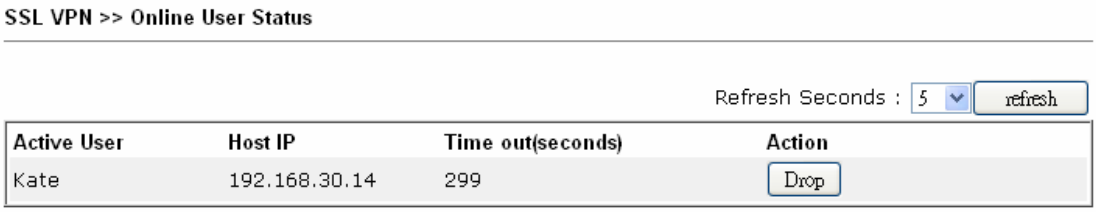

Available settings are explained as follows:

Item	Description
Active User	Display current user who visit SSL VPN server.
Host IP	Display the IP address for the host.
Time out	Display the time remaining for logging out.
Action	You can click **Drop** to drop certain login user from the router's SSL Portal UI.

3.14 USB Application

USB storage disk connected on Vigor router can be regarded as a server. By way of Vigor router, clients on LAN can access, write and read data stored in USB storage disk with different applications. After setting the configuration in **USB Application**, you can type the IP address of the Vigor router and username/password created in **USB Application>>USB User Management** on the client software. Then, the client can use the FTP site (USB storage disk) or share the Samba service through Vigor router.

3.14.1 USB General Settings

This page will determine the number of concurrent FTP connection, default charset for FTP server and enable Samba service. At present, the Vigor router can support USB storage disk with formats of FAT16 and FAT32 only. Therefore, before connecting the USB storage disk into the Vigor router, please make sure the memory format for the USB storage disk is FAT16 or FAT32. It is recommended for you to use FAT32 for viewing the filename completely (FAT16 cannot support long filename).

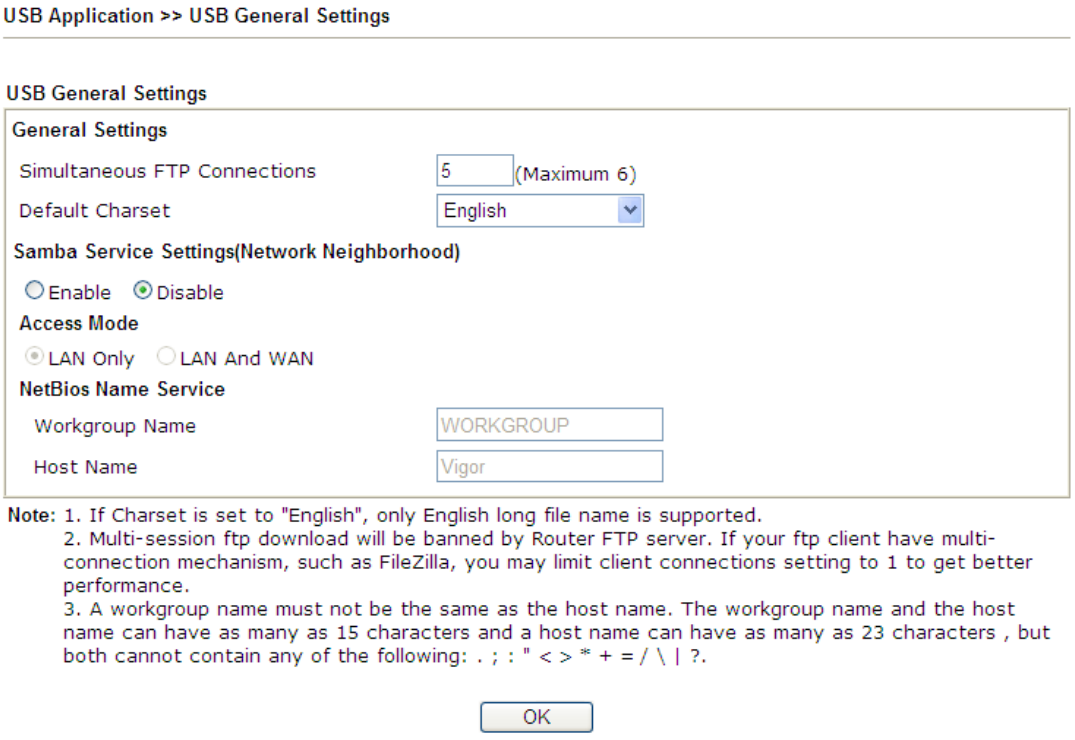
USB Application >> USB General Settings
USB General Settings
General Settings
Simultaneous FTP Connections
5
(Maximum 6)
Default Charset
English
Samba Service Settings(Network Neighborhood)
Enable
Disable
Access Mode
LAN Only
LAN And WAN
NetBios Name Service
Workgroup Name
WORKGROUP
Host Name
Vigor
Note: 1. If Charset is set to "English", only English long file name is supported.
2. Multi-session ftp download will be banned by Router FTP server. If your ftp client have multi-connection mechanism, such as FileZilla, you may limit client connections setting to 1 to get better performance.
3. A workgroup name must not be the same as the host name. The workgroup name and the host name can have as many as 15 characters and a host name can have as many as 23 characters , but both cannot contain any of the following: . ; : " < > * + = / \ | ?.
OK

Available settings are explained as follows:

Item	Description
General Settings	**Simultaneous FTP Connections -** This field is used to specify the quantity of the FTP sessions. The router allows up to 6 FTP sessions connecting to USB storage disk at one

	time. **Default Charset -** At present, Vigor router supports four types of character sets. Default Charset is for English based file name. 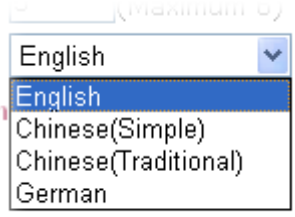
Samba Service Settings	Click **Enable** to invoke samba service via the router.
Access Mode	**LAN Only** – Users coming from internet cannot connect to the samba server of the router. **LAN And WAN** - Both LAN and WAN users can access samba server of the router.
NetBios Name Service	For the NetBios service of USB storage disk, you have to specify a workgroup name and a host name. A workgroup name must not be the same as the host name. The workgroup name can have as many as 15 characters and the host name can have as many as 23 characters. Both them cannot contain any of the following--- ; : " < > * + = \ | ?. **Workgroup Name –** Type a name for the workgroup. **Host Name –** Type the host name for the router.

After finishing all the settings here, please click **OK** to save the configuration.

3.14.2 USB User Management

This page allows you to set profiles for FTP/Samba users. Any user who wants to access into the USB storage disk must type the same username and password configured in this page. Before adding or modifying settings in this page, please insert a USB storage disk first. Otherwise, an error message will appear to warn you.

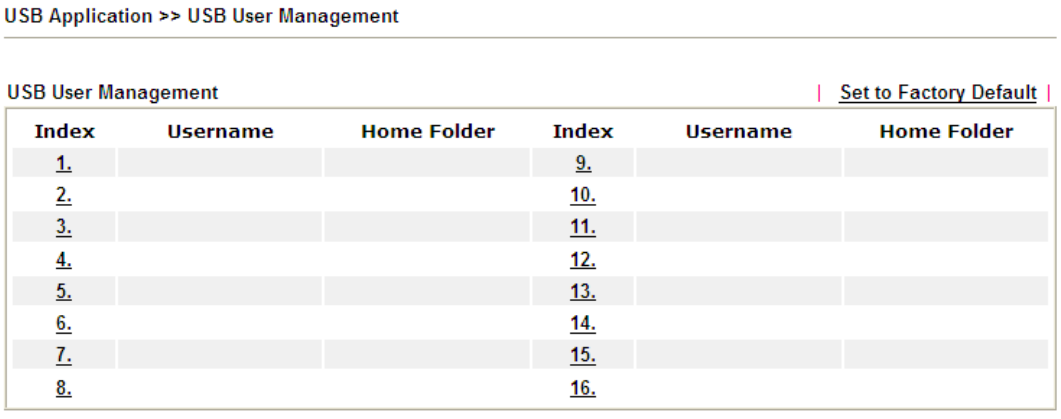

Click index number to access into configuration page.

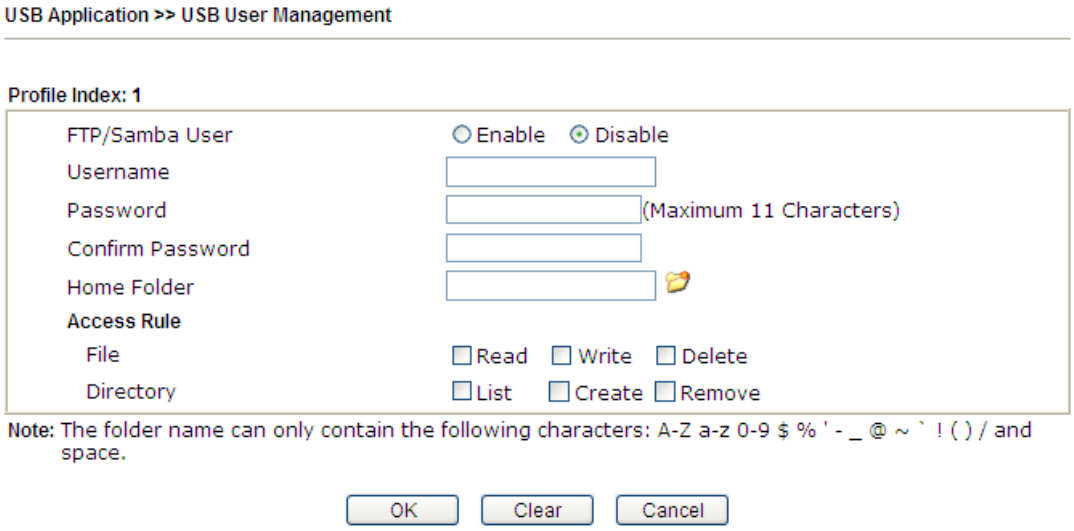

Available settings are explained as follows:

Item	Description
FTP/Samba User	**Enable** – Click this button to activate this profile (account) for FTP service or Samba User service. Later, the user can use the username specified in this page to login into FTP server. **Disable** – Click this button to disable such profile.
Username	Type the username for FTP/Samba users for accessing into FTP server (USB storage disk). Be aware that users cannot access into USB storage disk in anonymity. Later, you can open FTP client software and type the username specified here for accessing into USB storage disk. The length of the name is limited to 11 characters. **Note:** "Admin" could not be typed here as username, for the word is specified for accessing into web pages of Vigor router only. Also, it is reserved for FTP firmware upgrade usage. **Note:** FTP Passive mode is not supported by Vigor Router. Please disable the mode on the FTP client.
Password	Type the password for FTP/Samba users for accessing FTP server. Later, you can open FTP client software and type the password specified here for accessing into USB storage disk. The length of the password is limited to 11 characters.
Confirm Password	Type the password again to make confirmation.
Home Folder	It determines the folder for the client to access into. The user can enter a directory name in this field. Then, after clicking **OK**, the router will create the specific/new folder in the USB storage disk. In addition, if the user types "/" here, he/she can access into all of the disk folders and files in USB storage disk. **Note:** When write protect status for the USB storage disk is **ON**, you cannot type any new folder name in this field.

	Only “/” can be used in such case. You can click to open the following dialog to add any new folder which can be specified as the Home Folder. 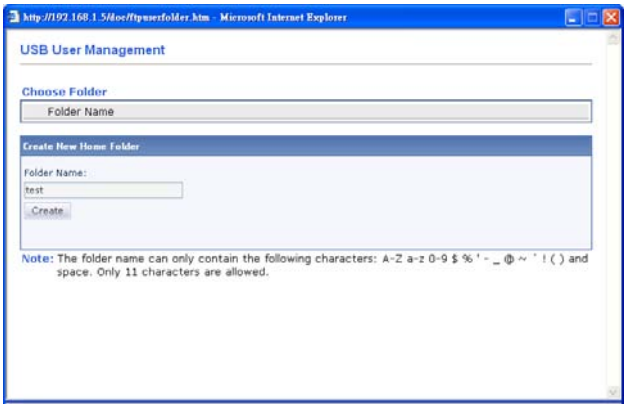
Access Rule	It determines the authority for such profile. Any user, who uses such profile for accessing into USB storage disk, must follow the rule specified here. **File** – Check the items (Read, Write and Delete) for such profile. **Directory** –Check the items (List, Create and Remove) for such profile.

Before you click **OK**, you have to insert a USB storage disk into the USB interface of the Vigor router. Otherwise, you cannot save the configuration.

3.14.3 File Explorer

File Explorer offers an easy way for users to view and manage the content of USB storage disk connected on Vigor router.

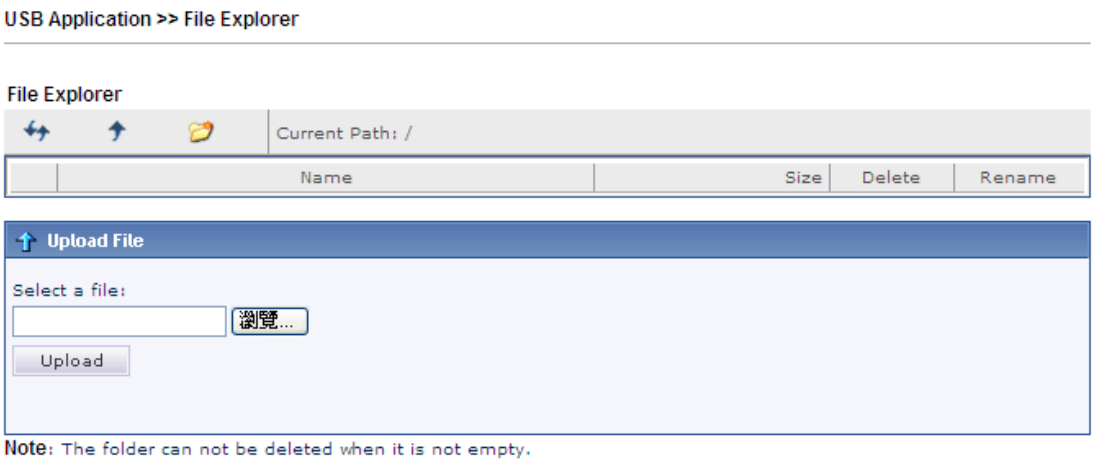

Available settings are explained as follows:

Item	Description
Refresh	Click this icon to refresh files list.
Back	Click this icon to return to the upper directory.

Create	Click this icon to add a new folder.
Current Path	Display current folder.
Upload	Click this button to upload the selected file to the USB storage disk. The uploaded file in the USB diskette can be shared for other user through FTP.

3.14.4 USB Disk Status

This page is to monitor the status for the users who accessing into FTP or Samba server (USB storage disk) via the Vigor router. If you want to remove the storage disk from USB port in router, please click **Disconnect USB Disk** first. And then, remove the USB storage disk later.

USB Application >> USB Disk Status
USB Mass Storage Device Status
Connection Status: No Disk Connected
Disconnect USB Disk
Disk Capacity: 0 MB
Free Capacity: 0 MB Refresh
USB Disk Users Connected
Refresh
Index
Service
IP Address(Port)
Username
Note: If the write protect switch of USB disk is turned on, the USB disk is in READ-ONLY mode. No data can be written to it.

Available settings are explained as follows:

Item	Description
Connection Status	If there is no USB storage disk connected to Vigor router, "**No Disk Connected**" will be shown here.
Disk Capacity	It displays the total capacity of the USB storage disk.
Free Capacity	It displays the free space of the USB storage disk. Click **Refresh** at any time to get new status for free capacity.
Index	It displays the number of the client which connecting to FTP server.
IP Address	It displays the IP address of the user's host which connecting to the FTP server.
Username	It displays the username that user uses to login to the FTP server.

When you insert USB storage disk into the Vigor router, the system will start to find out such device within several seconds.

3.14.5 Syslog Explorer

Such page provides real-time syslog and displays the information on the screen.

For Web Syslog

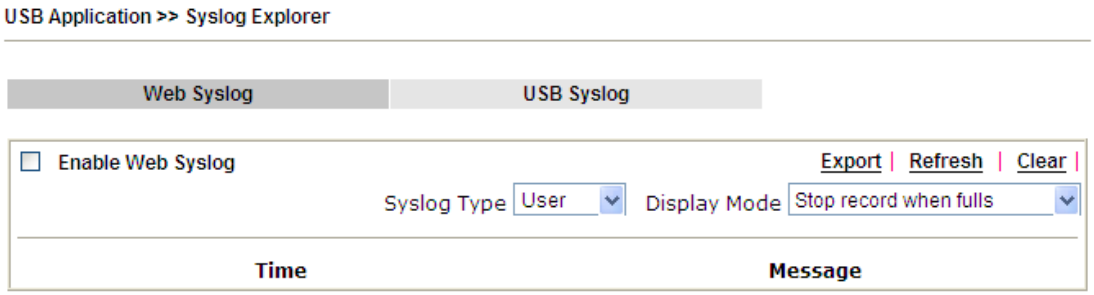

Available settings are explained as follows:

Item	Description
Enable Web Syslog	Check this box to enable the function of Web Syslog.
Syslog Type	Use the drop down list to specify a type of Syslog to be displayed. 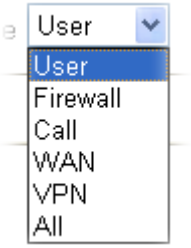
Display Mode	There are two modes for you to choose. 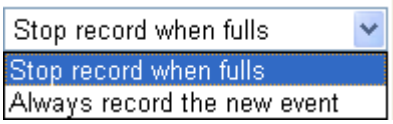 **Stop record when fulls –** when the capacity of syslog is full, the system will stop recording. **Always record the new event –** only the newest events will be recorded by the system.
Time	Display the time of the event occurred.
Message	Display the information for each event.

For USB Syslog

This page displays the syslog recorded on the USB storage disk.

Available settings are explained as follows:

Item	Description
Time	Display the time of the event occurred.
Log Type	Display the type of the record.
Message	Display the information for each event.

3.14.6 Temperature Sensor

A USB Thermometer can be attached to Vigor router to monitor the environmental temperature. If the temperature is higher the upper limit or lower than the lower limit, an alert would be sent out for notification.

Temperature Sensor Settings

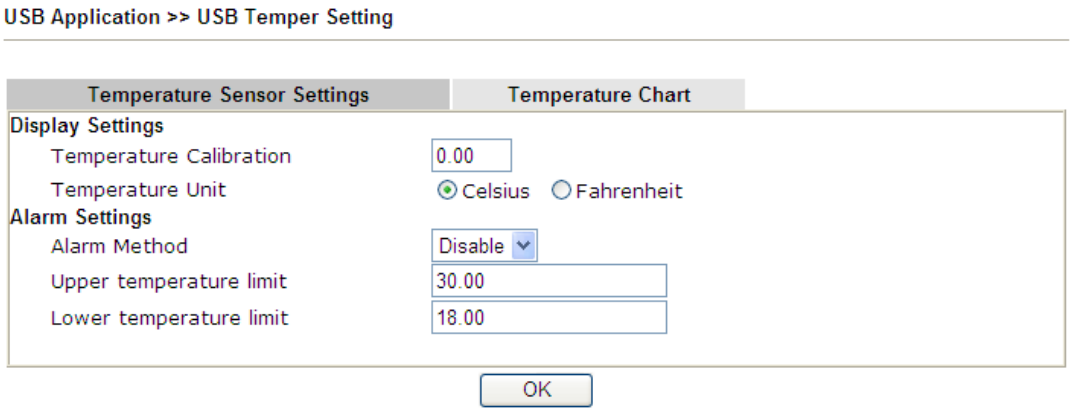

Available settings are explained as follows:

Item	Description
Display Settings	**Temperature Calibration** - Type a value used for correcting the temperature error. **Temperature Unit -** Choose the display unit of the temperature. There are two types for you to choose.
Alarm Settings	**Alarm Method** – Choose one of the options as the alarm method.

	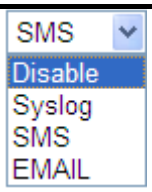 ● **Disable** – The function is disabled. ● **Syslog** –The temperature log will be recorded on Syslog. ● **SMS** – The alert will be sent via SMS app. ● **EMAIL** - The alert will be sent to the e-mail address that you offer on the page of **System Maintenance>>Syslog / Mail Alert Setup**. **Upper temperature limit/Lower temperature limit** - Type the upper limit and lower limit for the system to send out temperature alert.
OK	Save the settings.

Temperature Chart

Below shows an example of temperature graph:

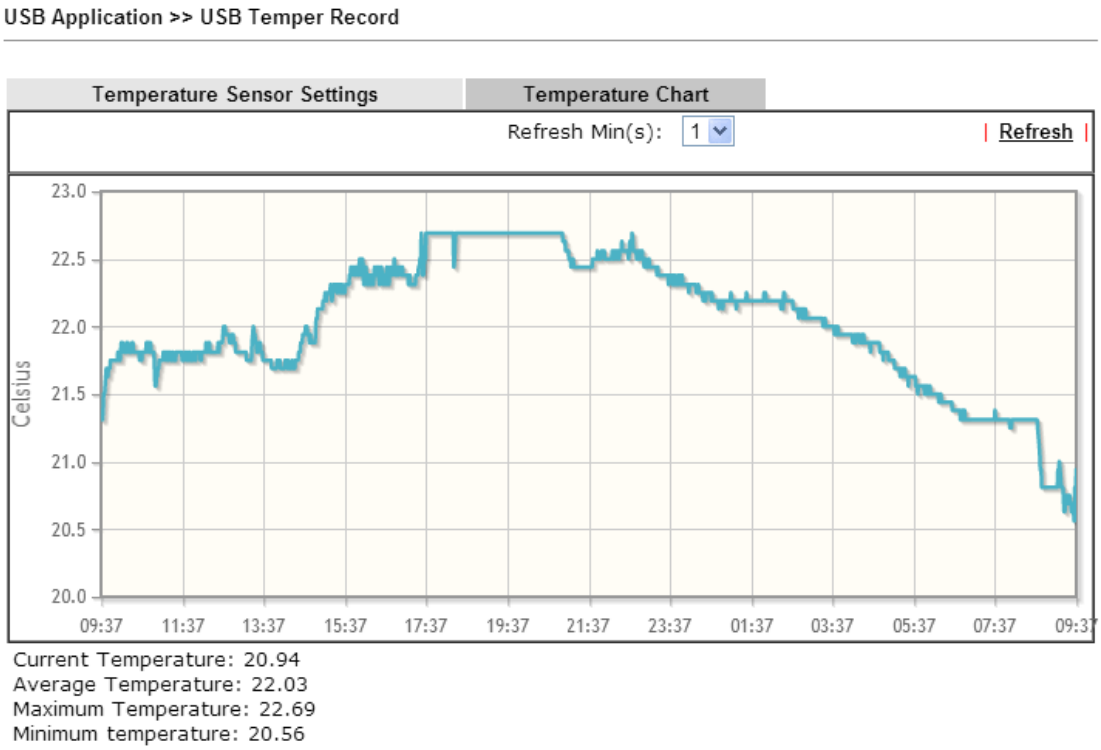

3.15 System Maintenance

For the system setup, there are several items that you have to know the way of configuration: System Status, TR-069, Administrator Password, User Password, Login Customization, Configuration Backup, Syslog /Mail Alert, Time and Date, Management, Reboot System, Firmware Upgrade and Activation.

Below shows the menu items for System Maintenance.

3.15.1 System Status

The **System Status** provides basic network settings of Vigor router. It includes LAN and WAN interface information. Also, you could get the current running firmware version or firmware related information from this presentation.

System Status

Model Name	: **Vigor2860n**
Firmware Version	: **3.7.1_RC5a**
Build Date/Time	: **Feb 5 2013 12:24:58**

LAN

	MAC Address	IP Address	Subnet Mask	DHCP Server	DNS
LAN1	00-1D-AA-A8-B6-A8	192.168.1.1	255.255.255.0	Yes	168.95.1.1
LAN2	00-1D-AA-A8-B6-A8	192.168.2.1	255.255.255.0	Yes	168.95.1.1
LAN3	00-1D-AA-A8-B6-A8	192.168.3.1	255.255.255.0	Yes	168.95.1.1
LAN4	00-1D-AA-A8-B6-A8	192.168.4.1	255.255.255.0	Yes	168.95.1.1
LAN5	00-1D-AA-A8-B6-A8	192.168.5.1	255.255.255.0	Yes	168.95.1.1
LAN6	00-1D-AA-A8-B6-A8	192.168.6.1	255.255.255.0	Yes	168.95.1.1
IP Routed Subnet	00-1D-AA-A8-B6-A8	192.168.0.1	255.255.255.0	Yes	168.95.1.1

Wireless LAN

MAC Address	Frequency Domain	Firmware Version	SSID
00-1D-AA-A8-B6-A8	Europe	2.5.0.11	DrayTek

WAN

	Link Status	MAC Address	Connection	IP Address	Default Gateway
WAN1	Disconnected	00-1D-AA-A8-B6-A9	PPPoE	---	---
WAN2	Connected	00-1D-AA-A8-B6-AA	Static IP	172.16.3.130	172.16.1.1
WAN3	Disconnected	00-1D-AA-A8-B6-AB	---	---	---

IPv6

	Address	Scope	Internet Access Mode
LAN	FE80::21D:AAFF:FEA8:B6A8/64	Link	---

User Mode is OFF now.

Available settings are explained as follows:

Item	Description
Model Name	Display the model name of the router.
Firmware Version	Display the firmware version of the router.
Build Date/Time	Display the date and time of the current firmware build.
LAN	**MAC Address** - Display the MAC address of the LAN Interface. **IP Address** - Display the IP address of the LAN interface. **Subnet Mask** - Display the subnet mask address of the LAN interface. **DHCP Server** - Display the current status of DHCP server of the LAN interface **DNS** - Display the assigned IP address of the primary DNS.
WAN	**Link Status** - Display current connection status. **MAC Address** - Display the MAC address of the WAN Interface. **Connection** - Display the connection type. **IP Address** - Display the IP address of the WAN interface. **Default Gateway** - Display the assigned IP address of the default gateway.
IPv6	**Address -** Display the IPv6 address for LAN. **Scope -** Display the scope of IPv6 address. For example, IPv6 **Link Local** could only be used for direct IPv6 link. It can't be used for IPv6 internet. **Internet Access Mode –** Display the connection mode chosen for accessing into Internet.

3.15.2 TR-069

This device supports TR-069 standard. It is very convenient for an administrator to manage a TR-069 device through an Auto Configuration Server, e.g., VigorACS.

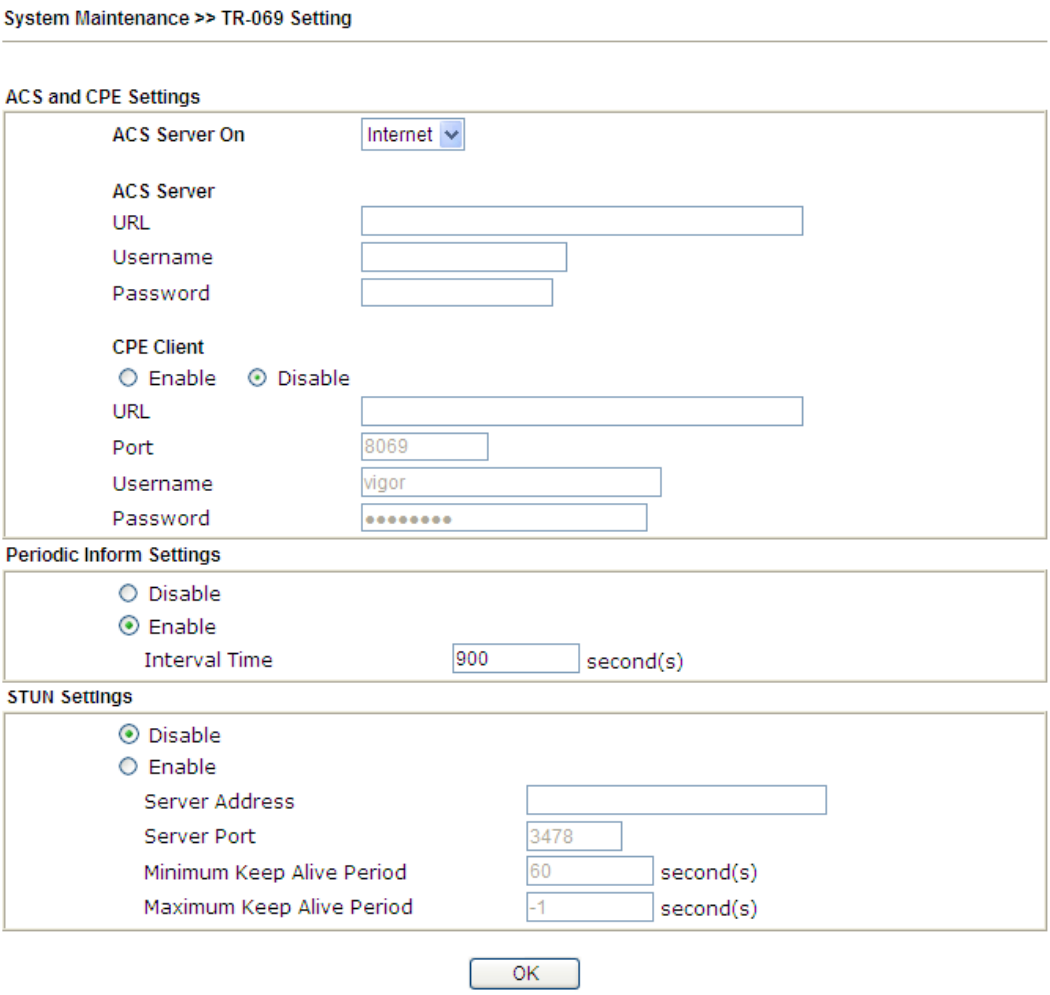

Available settings are explained as follows:

Item	Description
ACS Server On	Choose the interface for the router connecting to ACS server.
ACS Server	**URL/Username/Password –** Such data must be typed according to the ACS (Auto Configuration Server) you want to link. Please refer to Auto Configuration Server user's manual for detailed information.
CPE Client	Such information is useful for Auto Configuration Server. **Enable/Disable** – Allow/Deny the CPE Client to connect with Auto Configuration Server. **Port** – Sometimes, port conflict might be occurred. To solve such problem, you might change port number for CPE.
Periodic Inform Settings	The default setting is **Enable**. Please set interval time or schedule time for the router to send notification to CPE. Or click **Disable** to close the mechanism of notification.

STUN Settings	The default is **Disable**. If you click **Enable**, please type the relational settings listed below: **Server IP –** Type the IP address of the STUN server. **Server Port –** Type the port number of the STUN server. **Minimum Keep Alive Period –** If STUN is enabled, the CPE must send binding request to the server for the purpose of maintaining the binding in the Gateway. Please type a number as the minimum period. The default setting is "60 seconds". **Maximum Keep Alive Period –** If STUN is enabled, the CPE must send binding request to the server for the purpose of maintaining the binding in the Gateway. Please type a number as the maximum period. A value of "-1" indicates that no maximum period is specified.

3.15.3 Administrator Password

This page allows you to set new password.

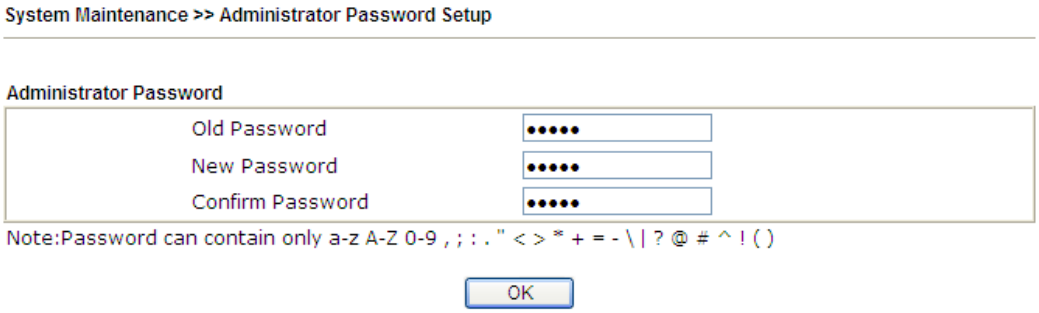
System Maintenance >> Administrator Password Setup
Administrator Password
Old Password
New Password
Confirm Password
Note:Password can contain only a-z A-Z 0-9 , ; : . " < > * + = - \ | ? @ # ^ ! ( )
OK

Available settings are explained as follows:

Item	Description
Old Password	Type in the old password. The factory default setting for password is **"admin"**.
New Password	Type in new password in this field. The length of the password is limited to 23 characters.
Confirm Password	Type in the new password again.

When you click **OK**, the login window will appear. Please use the new password to access into the web user interface again.

3.15.4 User Password

This page allows you to set new password for user operation.

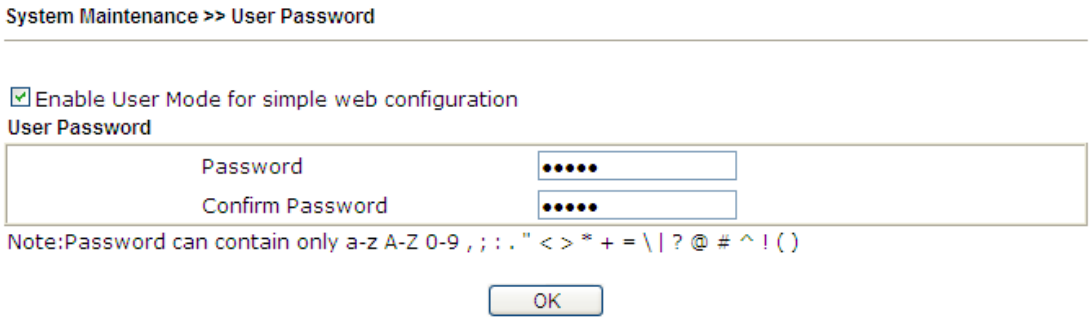
System Maintenance >> User Password
Enable User Mode for simple web configuration
User Password
Password
Confirm Password
Note:Password can contain only a-z A-Z 0-9 , ; : . " < > * + = \ | ? @ # ^ ! ( )
OK

Available settings are explained as follows:

Item	Description
Enable User Mode for simple web configuration	After checking this box, you can access into the web user interface with the password typed here for simple web configuration. The settings on simple web user interface will be different with full web user interface accessed by using the administrator password.
Password	Type in new password in this field. The length of the password is limited to 31 characters.
Confirm Password	Type in the new password again.

When you click **OK**, the login window will appear. Please use the new password to access into the web user interface again.

Below shows an example for accessing into User Operation with User Password.

1. Open **System Maintenance>>User Password**.

2. Check the box of **Enable User Mode for simple web configuration** to enable user mode operation. Type a new password in the field of New Password and click **OK**.

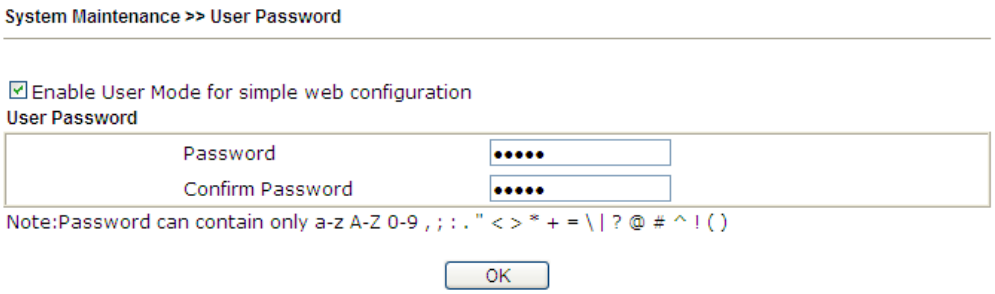
System Maintenance >> User Password
Enable User Mode for simple web configuration
User Password
Password
Confirm Password
Note:Password can contain only a-z A-Z 0-9 , ; : . " < > * + = \ | ? @ # ^ ! ( )
OK

3. The following screen will appear. Simply click **OK**.

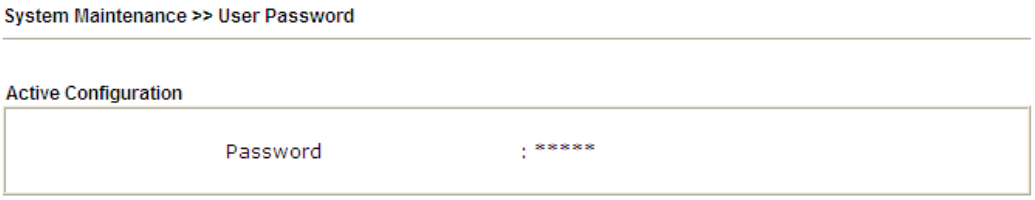

4. Log out Vigor router web user interface by clicking the Logout button.

5. The following window will be open to ask for username and password. Type the new user password in the filed of **Password** and click **Login**.

6. The main screen with User Mode will be shown as follows.

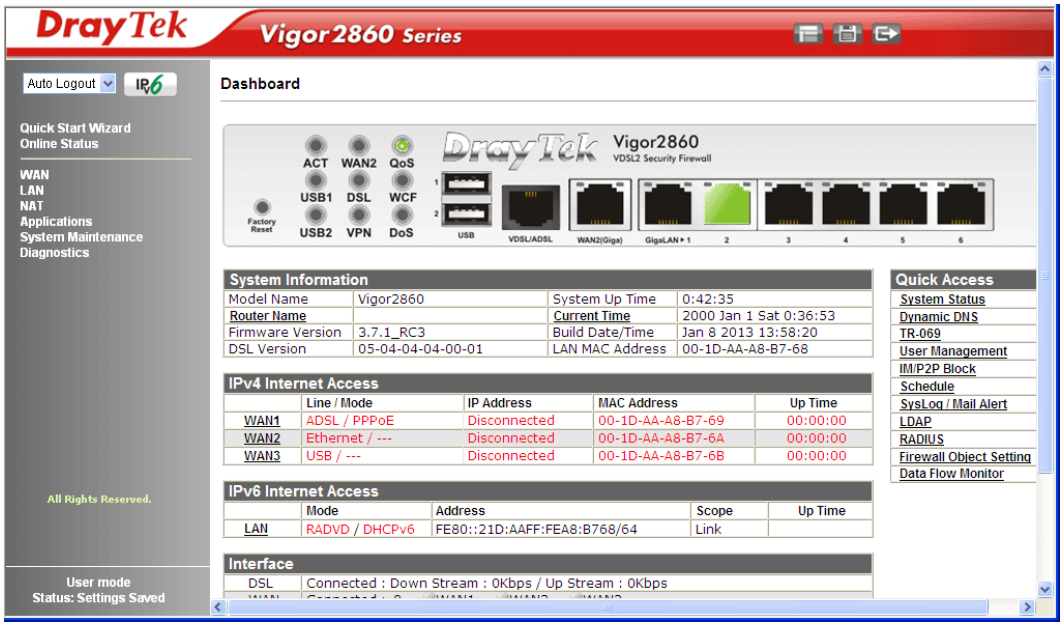

Settings to be configured in User Mode will be less than settings in Admin Mode. Only basic configuration settings will be available in User Mode.

Note: Setting in User Mode can be configured as same as in Admin Mode.

3.15.5 Login Customization

When you want to access into the web user interface of Vigor router, the system will ask you to offer username and password first. At that moment, the background of the web page is blank and no heading will be displayed on the Login window. This page allows you to specify login URL and the heading on the Login window if you have such requirement.

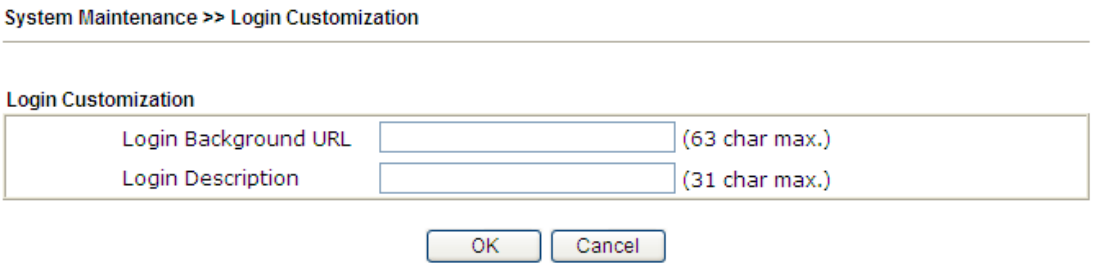

Available settings are explained as follows:

Item	Description
Login Background URL	Type the URL for the web page which will be shown as the background.
Login Description	Type a brief description (e.g., Welcome to DrayTek) which will be shown on the heading of the login dialog.

3.15.6 Configuration Backup

Backup the Configuration

Follow the steps below to backup your configuration.

1. Go to **System Maintenance** >> **Configuration Backup**. The following windows will be popped-up, as shown below.

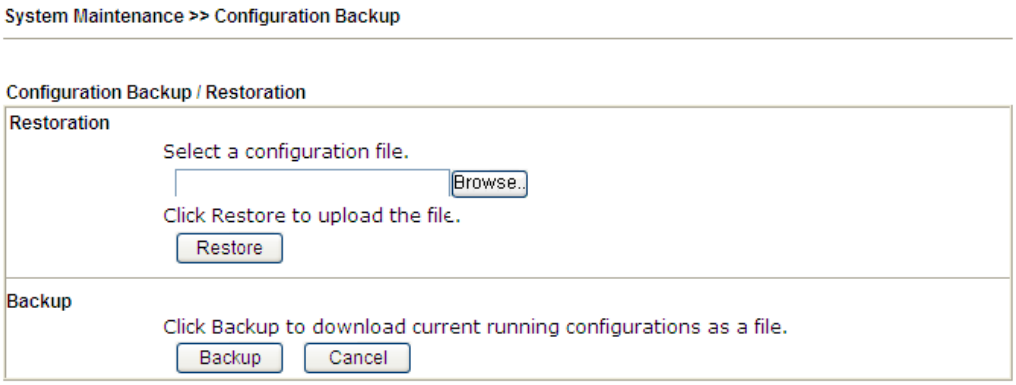

2. Click **Backup** button to get into the following dialog. Click **Save** button to open another dialog for saving configuration as a file.

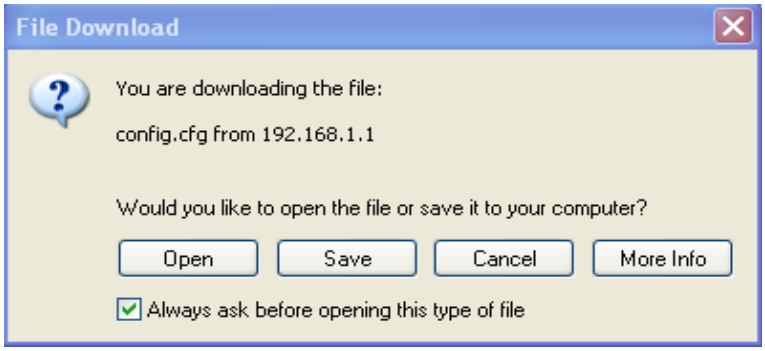
File Download
You are downloading the file:
config.cfg from 192.168.1.1
Would you like to open the file or save it to your computer?
Open
Save
Cancel
More Info
Always ask before opening this type of file

3. In **Save As** dialog, the default filename is **config.cfg**. You could give it another name by yourself.

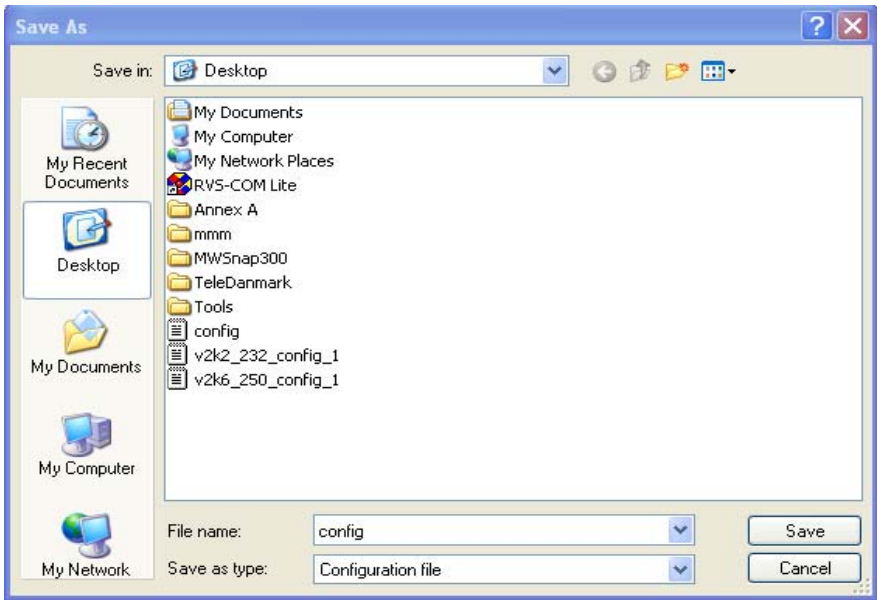

4. Click **Save** button, the configuration will download automatically to your computer as a file named **config.cfg**.

The above example is using **Windows** platform for demonstrating examples. The **Mac** or **Linux** platform will appear different windows, but the backup function is still available.

> **Note:** Backup for Certification must be done independently. The Configuration Backup does not include information of Certificate.

Restore Configuration

1. Go to **System Maintenance** >> **Configuration Backup**. The following windows will be popped-up, as shown below.

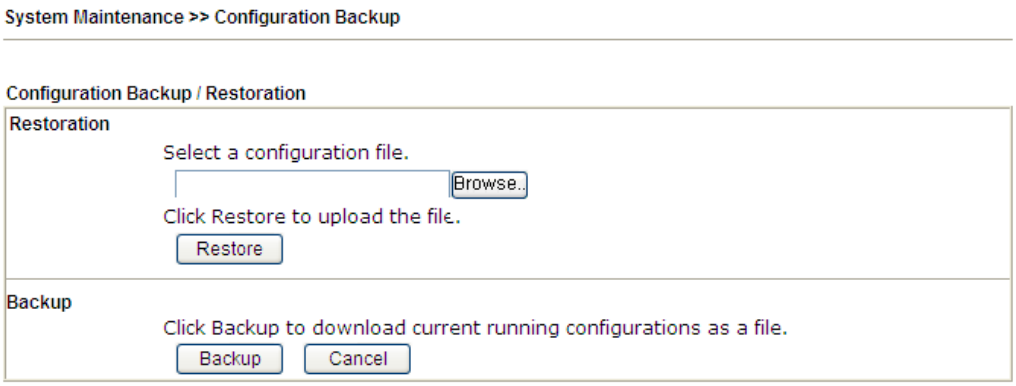

2. Click **Browse** button to choose the correct configuration file for uploading to the router.
3. Click **Restore** button and wait for few seconds, the following picture will tell you that the restoration procedure is successful.

3.15.7 Syslog/Mail Alert

SysLog function is provided for users to monitor router. There is no bother to directly get into the Web user interface of the router or borrow debug equipments.

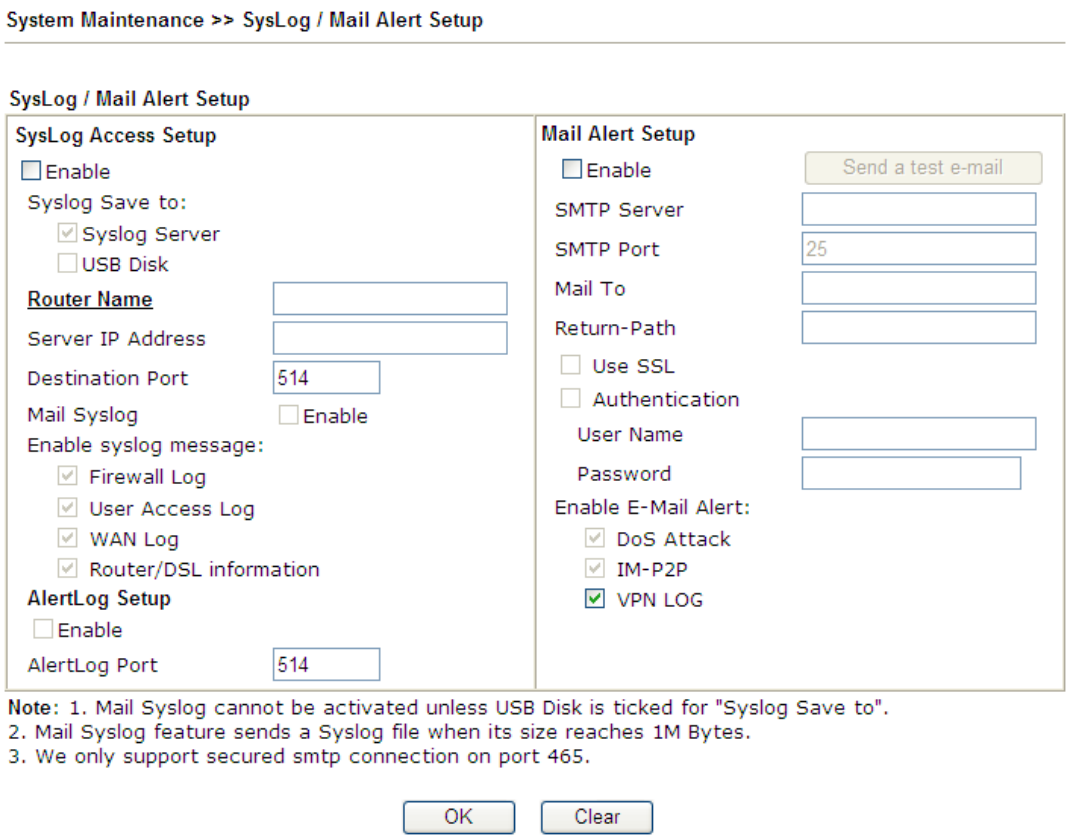

Available settings are explained as follows:

Item	Description
SysLog Access Setup	**Enable** - Check **Enable** to activate function of syslog. **Syslog Save to** – Check **Syslog Server** to save the log to Syslog server. Check **USB Disk** to save the log to the attached USB storage disk.
Router Name	Display the name for such router configured in **System Maintenance>>Management.** If there is no name here, simply lick the link to access into **System Maintenance>>Management** to set the router name. **Server IP Address** -The IP address of the Syslog server. **Destination Port** - Assign a port for the Syslog protocol. **Mail Syslog –** Check the box to recode the mail event on Syslog. **Enable syslog message** - Check the box listed on this web page to send the corresponding message of firewall, VPN, User Access, Call, WAN, Router/DSL information to

	Syslog.
AlertLog Setup	Check **Enable** to activate function of alert log. **AlertLog Port** - Type the port number for alert log. The default setting is 514.
Mail Alert Setup	Check **Enable** to activate function of mail alert. **Send a test e-mail** - Make a simple test for the e-mail address specified in this page. Please assign the mail address first and click this button to execute a test for verify the mail address is available or not. **SMTP Server/SMTP Port** - The IP address/Port number of the SMTP server. **Mail To** - Assign a mail address for sending mails out. **Return-Path** - Assign a path for receiving the mail from outside. **Use SSL** - Check this box to use port 465 for SMTP server for some e-mail server uses https as the transmission method. **Authentication** - Check this box to activate this function while using e-mail application. **User Name** - Type the user name for authentication. **Password** - Type the password for authentication. **Enable E-mail Alert** - Check the box to send alert message to the e-mail box while the router detecting the item(s) you specify here.

Click **OK** to save these settings.

For viewing the Syslog, please do the following:

1. Just set your monitor PC's IP address in the field of Server IP Address
2. Install the Router Tools in the **Utility** within provided CD. After installation, click on the **Router Tools>>Syslog** from program menu.

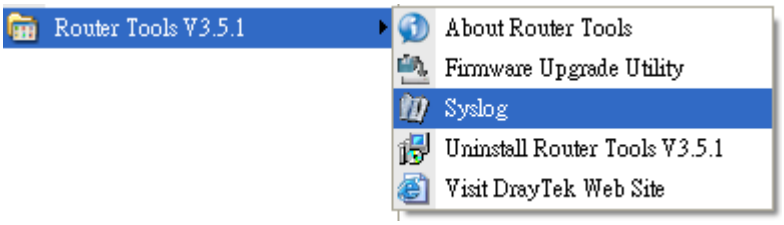

3. From the Syslog screen, select the router you want to monitor. Be reminded that in **Network Information**, select the network adapter used to connect to the router. Otherwise, you won't succeed in retrieving information from the router.

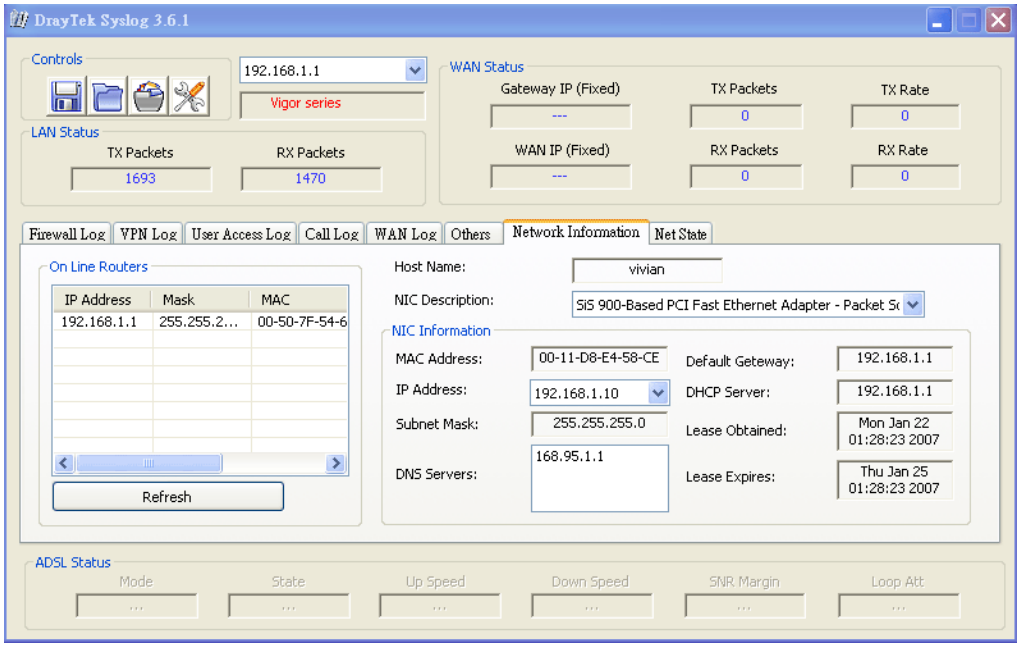
DrayTek Syslog 3.6.1
Controls
192.168.1.1
Vigor series
LAN Status
TX Packets
1693
RX Packets
1470
WAN Status
Gateway IP (Fixed)

TX Packets
0
TX Rate
0
WAN IP (Fixed)

RX Packets
0
RX Rate
0
Firewall Log
VPN Log
User Access Log
Call Log
WAN Log
Others
Network Information
Net State
On Line Routers
IP Address
Mask
MAC
192.168.1.1
255.255.2...
00-50-7F-54-6
Refresh
Host Name:
vivian
NIC Description:
SiS 900-Based PCI Fast Ethernet Adapter - Packet Sc
NIC Information
MAC Address:
00-11-D8-E4-58-CE
IP Address:
192.168.1.10
Subnet Mask:
255.255.255.0
DNS Servers:
168.95.1.1
Default Geteway:
192.168.1.1
DHCP Server:
192.168.1.1
Lease Obtained:
Mon Jan 22 01:28:23 2007
Lease Expires:
Thu Jan 25 01:28:23 2007
ADSL Status
Mode
State
Up Speed
Down Speed
SNR Margin
Loop Att

3.15.8 Time and Date

It allows you to specify where the time of the router should be inquired from.

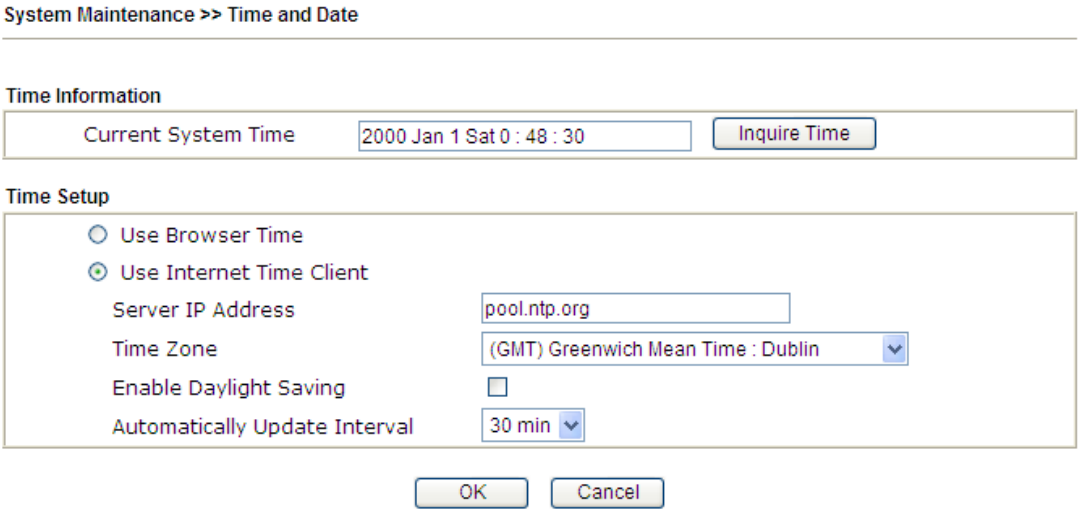

Available settings are explained as follows:

Item	Description
Current System Time	Click **Inquire Time** to get the current time.
Use Browser Time	Select this option to use the browser time from the remote administrator PC host as router's system time.
Use Internet Time	Select to inquire time information from Time Server on the Internet using assigned protocol.
Time Protocol	Select a time protocol.
Server IP Address	Type the IP address of the time server.
Time Zone	Select the time zone where the router is located.
Enable Daylight Saving	Check the box to enable the daylight saving. Such feature is available for certain area.
Automatically Update Interval	Select a time interval for updating from the NTP server.

Click **OK** to save these settings.

3.15.9 Management

This page allows you to manage the settings for access control, access list, port setup, and SNMP setup. For example, as to management access control, the port number is used to send/receive SIP message for building a session.

The management pages for IPv4 and IPv6 protocols are different.

For IPv4

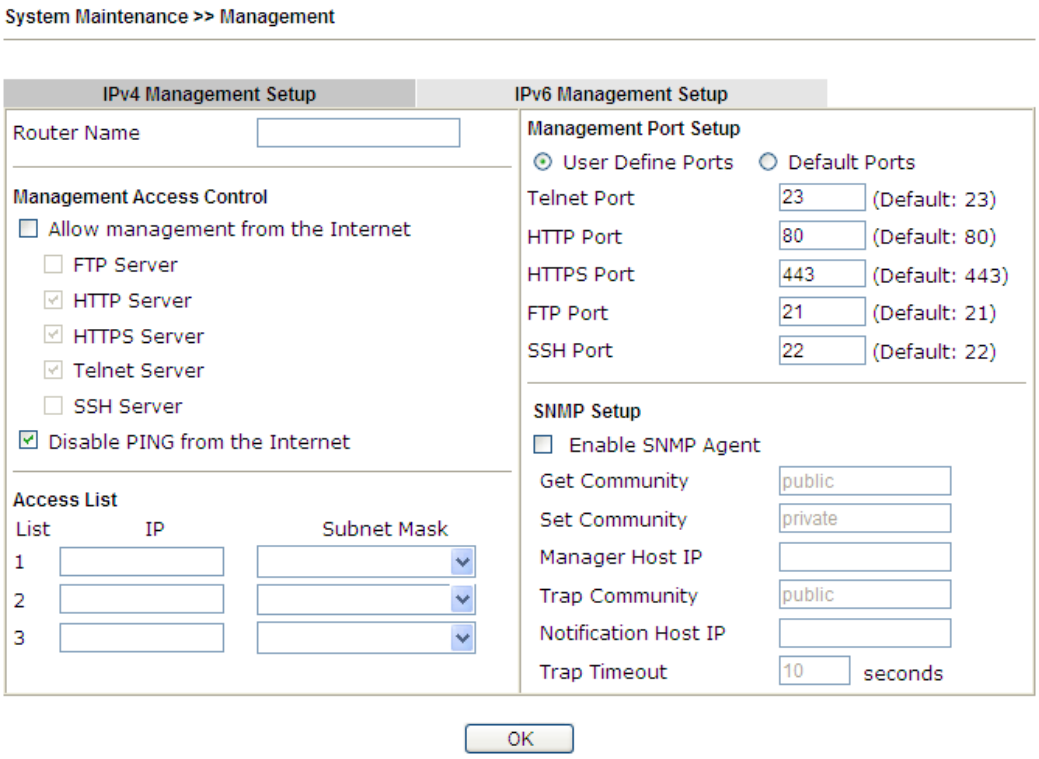

Available settings are explained as follows:

Item	Description
Router Name	Type in the router name provided by ISP.
Management Access Control	**Allow management from the Internet** - Enable the checkbox to allow system administrators to login from the Internet. There are several servers provided by the system to allow you managing the router from Internet. Check the box(es) to specify. **Disable PING from the Internet** - Check the checkbox to reject all PING packets from the Internet. For security issue, this function is enabled by default.
Access List	You could specify that the system administrator can only login from a specific host or network defined in the list. A maximum of three IPs/subnet masks is allowed. **List IP** - Indicate an IP address allowed to login to the router. **Subnet Mask** - Represent a subnet mask allowed to login to the router.

Management Port Setup	**User Define Ports** - Check to specify user-defined port numbers for the Telnet, HTTP and FTP servers. **Default Ports** - Check to use standard port numbers for the Telnet and HTTP servers. **Enable SNMP Agent** - Check it to enable this function. **Get Community** - Set the name for getting community by typing a proper character. The default setting is **public.** **Set Community** - Set community by typing a proper name. The default setting is **private.** **Manager Host IP** - Set one host as the manager to execute SNMP function. Please type in IP address to specify certain host. **Trap Community** - Set trap community by typing a proper name. The default setting is **public.** **Notification Host IP** - Set the IP address of the host that will receive the trap community. **Trap Timeout** - The default setting is 10 seconds.

After finished the above settings, click **OK** to save the configuration.

For IPv6

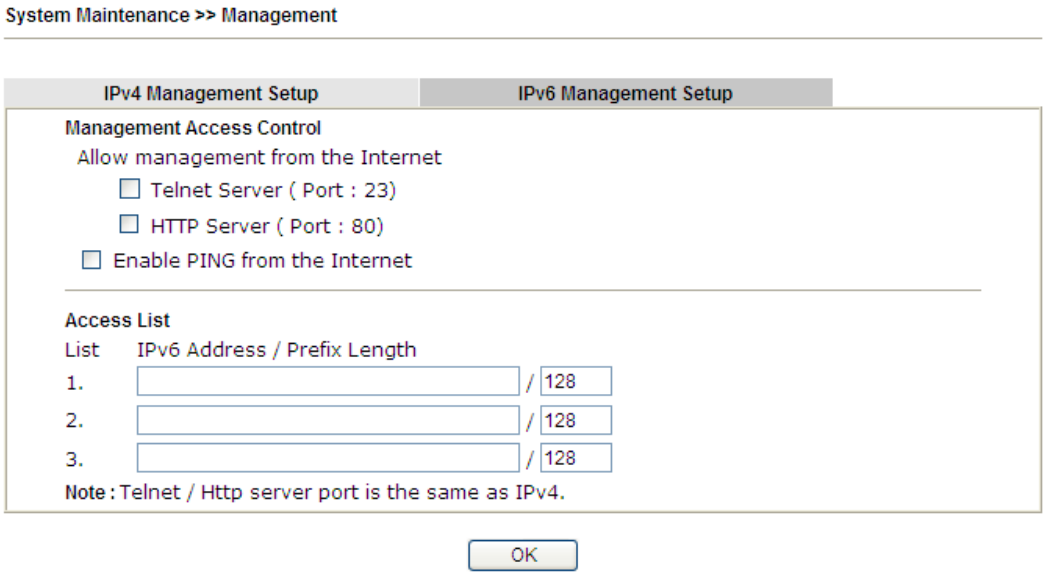

Available settings are explained as follows:

Item	Description
Management Access Control	**Allow management from the Internet** - Enable the checkbox to allow system administrators to login from the Internet. There are several servers provided by the system to allow you managing the router from Internet. Check the box(es) to specify. **Enable PING from the Internet** - Check the checkbox to enable all PING packets from the Internet. For security issue, this function is disabled by default.

Access List	You could specify that the system administrator can only login from a specific host or network defined in the list. A maximum of three IPs/subnet masks is allowed. **IPv6 Address /Prefix Length**- Indicate the IP address(es) allowed to login to the router.

After finished the above settings, click **OK** to save the configuration.

3.15.10 Reboot System

The Web user interface may be used to restart your router. Click **Reboot System** from **System Maintenance** to open the following page.

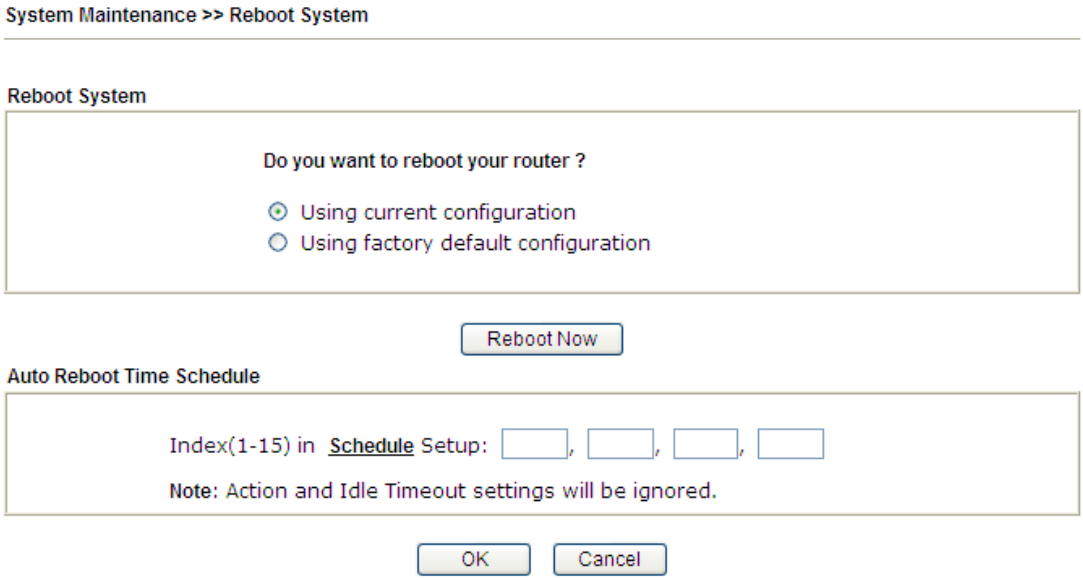

Index (1-15) in Schedule Setup - You can type in four sets of time schedule for performing system reboot. All the schedules can be set previously in **Applications >> Schedule** web page and you can use the number that you have set in that web page.

If you want to reboot the router using the current configuration, check **Using current configuration** and click **Reboot Now**. To reset the router settings to default values, check **Using factory default configuration** and click **Reboot Now**. The router will take 5 seconds to reboot the system.

Note: When the system pops up Reboot System web page after you configure web settings, please click **Reboot Now** to reboot your router for ensuring normal operation and preventing unexpected errors of the router in the future.

3.15.11 Firmware Upgrade

Before upgrading your router firmware, you need to install the Router Tools. The **Firmware Upgrade Utility** is included in the tools. The following web page will guide you to upgrade firmware by using an example. Note that this example is running over Windows OS (Operating System).

Download the newest firmware from DrayTek's web site or FTP site. The DrayTek web site is www.DrayTek.com (or local DrayTek's web site) and FTP site is ftp.DrayTek.com.

Click **System Maintenance>> Firmware Upgrade** to launch the Firmware Upgrade Utility.

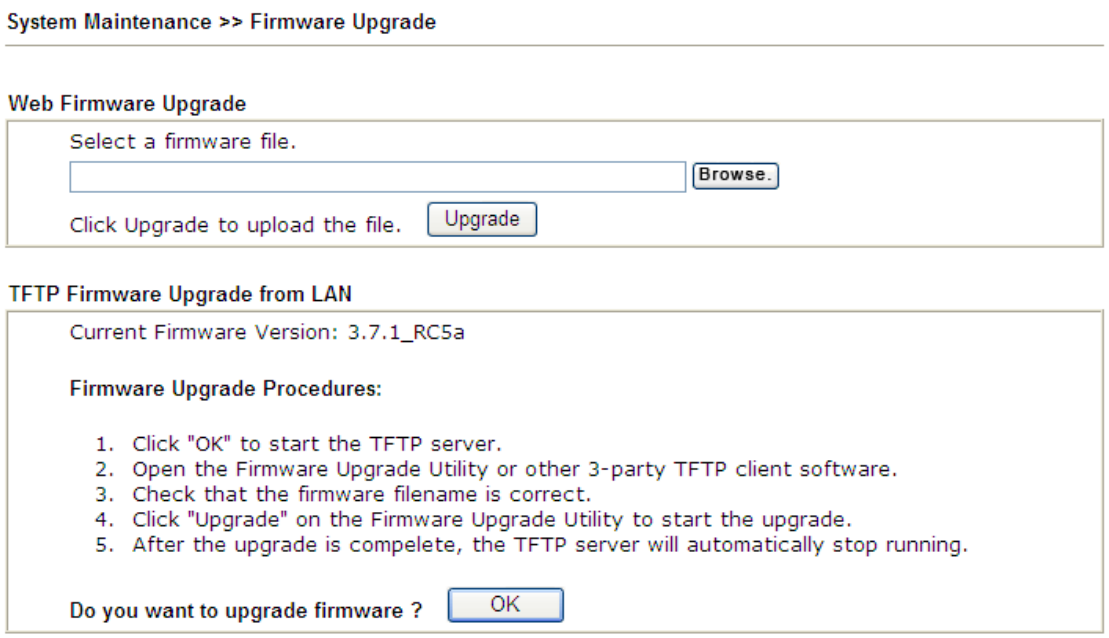
System Maintenance >> Firmware Upgrade
Web Firmware Upgrade
Select a firmware file.
Browse.
Click Upgrade to upload the file.
Upgrade
TFTP Firmware Upgrade from LAN
Current Firmware Version: 3.7.1_RC5a
Firmware Upgrade Procedures:
1. Click "OK" to start the TFTP server.
2. Open the Firmware Upgrade Utility or other 3-party TFTP client software.
3. Check that the firmware filename is correct.
4. Click "Upgrade" on the Firmware Upgrade Utility to start the upgrade.
5. After the upgrade is compelete, the TFTP server will automatically stop running.
Do you want to upgrade firmware ?
OK

Click **OK**. The following screen will appear. Please execute the firmware upgrade utility first.

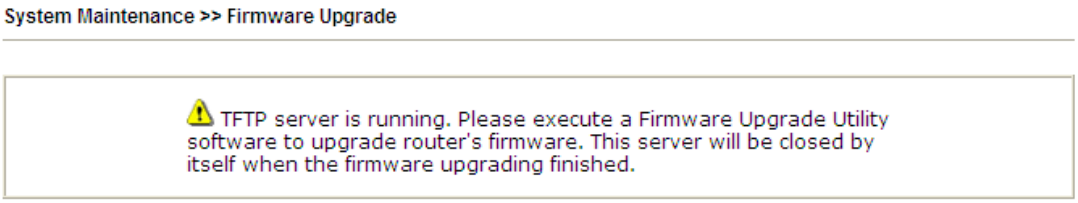
System Maintenance >> Firmware Upgrade
TFTP server is running. Please execute a Firmware Upgrade Utility software to upgrade router's firmware. This server will be closed by itself when the firmware upgrading finished.

For the detailed information about firmware update, please go to Chapter 5.

3.15.12 Activation

There are three ways to activate WCF on vigor router, using **Service Activation Wizard**, by means of **CSM>>Web Content Filter Profile** or via **System Maintenance>>Activation**.

After you have finished the setting profiles for WCF (refer to **Web Content Filter Profile**), it is the time to activate the mechanism for your computer.

Click **System Maintenance>>Activation** to open the following page for accessing http://myvigor.draytek.com.

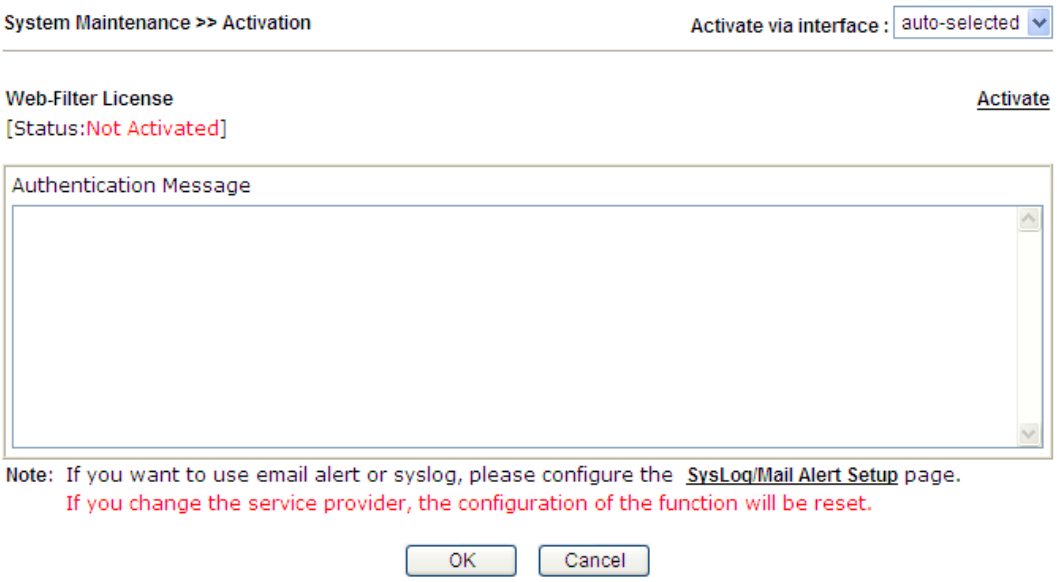
System Maintenance >> Activation
Activate via interface : auto-selected
Web-Filter License
[Status:Not Activated]
Activate
Authentication Message
Note: If you want to use email alert or syslog, please configure the SysLog/Mail Alert Setup page.
If you change the service provider, the configuration of the function will be reset.
OK
Cancel

Available settings are explained as follows:

Item	Description
Activate via Interface	Choose WAN interface used by such device for activating Web Content Filter. 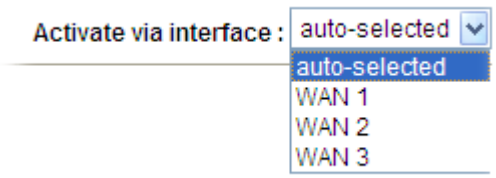
Activate	The **Activate** link brings you accessing into www.vigorpro.com to finish the activation of the account and the router.
Authentication Message	As for authentication information of **web filter**, the process of authenticating will be displayed on this field for your reference.

Below shows the successful activation of Web Content Filter:

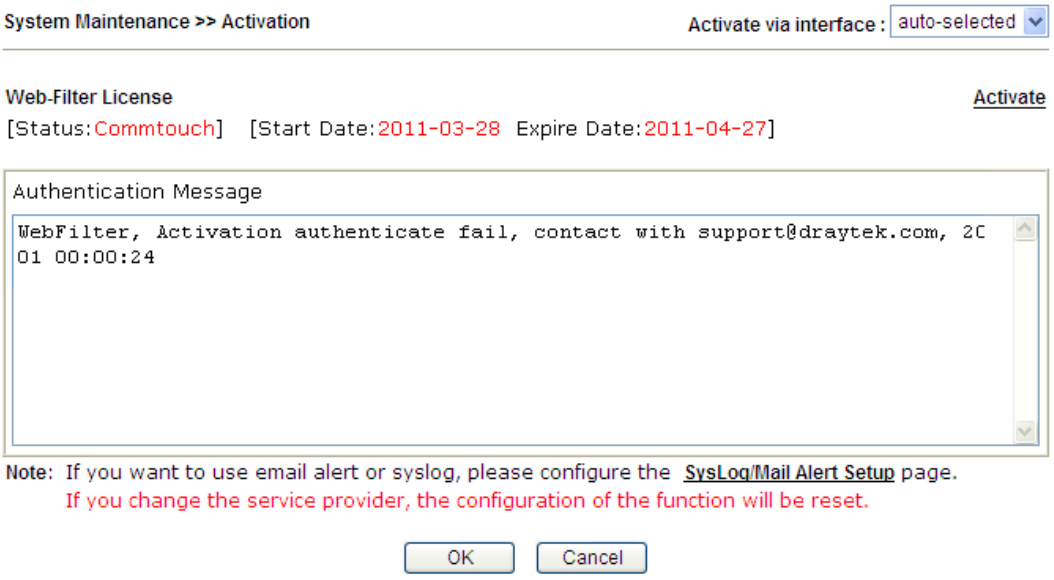
System Maintenance >> Activation
Activate via interface : auto-selected
Web-Filter License
Activate
[Status:Commtouch] [Start Date:2011-03-28 Expire Date:2011-04-27]
Authentication Message
WebFilter, Activation authenticate fail, contact with support@draytek.com, 20
01 00:00:24
Note: If you want to use email alert or syslog, please configure the SysLog/Mail Alert Setup page.
If you change the service provider, the configuration of the function will be reset.
OK
Cancel

3.16 Diagnostics

Diagnostic Tools provide a useful way to **view** or **diagnose** the status of your Vigor router.

Below shows the menu items for Diagnostics.

3.16.1 Dial-out Triggering

Click **Diagnostics** and click **Dial-out Triggering** to open the web page. The internet connection (e.g., PPPoE) is triggered by a package sending from the source IP address.

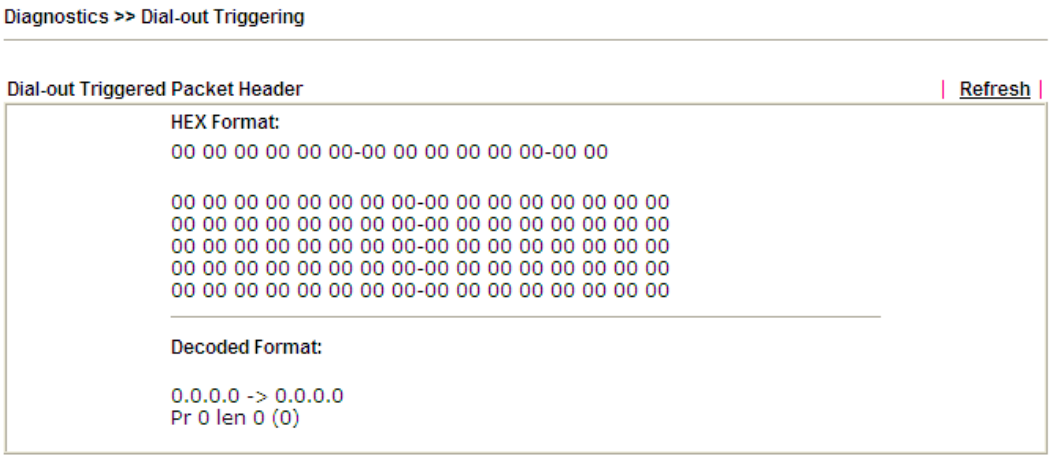

Available settings are explained as follows:

Item	Description
Decoded Format	It shows the source IP address (local), destination IP (remote) address, the protocol and length of the package.
Refresh	Click it to reload the page.

3.16.2 Routing Table

Click **Diagnostics** and click **Routing Table** to open the web page.

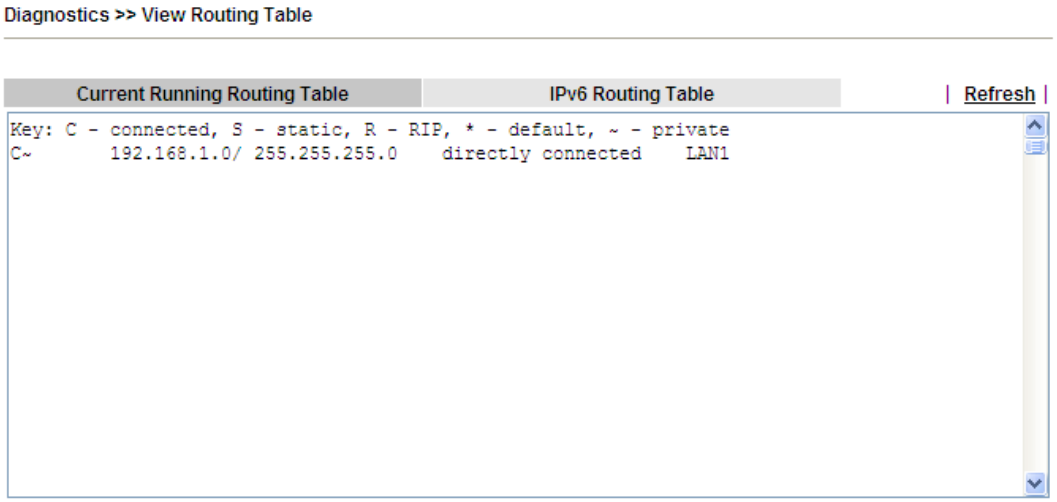
Diagnostics >> View Routing Table
Current Running Routing Table
IPv6 Routing Table
Refresh
Key: C - connected, S - static, R - RIP, * - default, ~ - private
C~ 192.168.1.0/ 255.255.255.0 directly connected LAN1

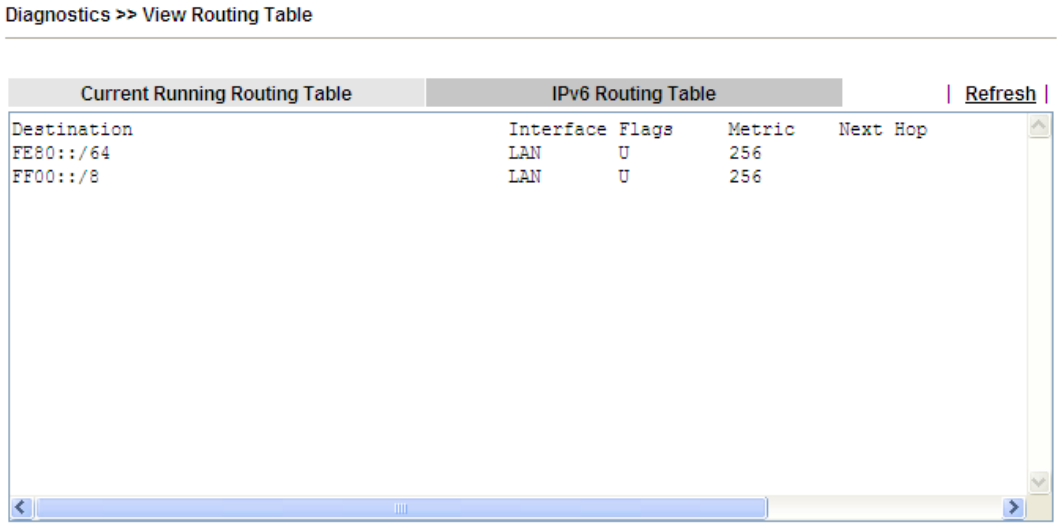

Available settings are explained as follows:

Item	Description
Refresh	Click it to reload the page.

3.16.3 ARP Cache Table

Click **Diagnostics** and click **ARP Cache Table** to view the content of the ARP (Address Resolution Protocol) cache held in the router. The table shows a mapping between an Ethernet hardware address (MAC Address) and an IP address.

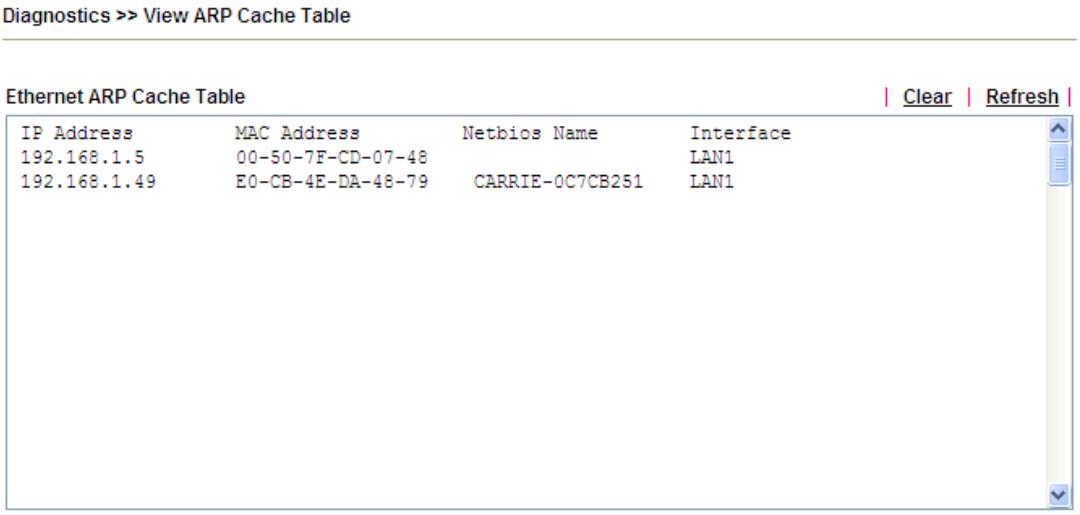

Available settings are explained as follows:

Item	Description
Refresh	Click it to reload the page.

3.16.4 IPv6 Neighbour Table

The table shows a mapping between an Ethernet hardware address (MAC Address) and an IPv6 address. This information is helpful in diagnosing network problems, such as IP address conflicts, etc.

Click **Diagnostics** and click **IPv6 Neighbour Table** to open the web page.

Available settings are explained as follows:

Item	Description

Refresh	Click it to reload the page.

3.16.5 DHCP Table

The facility provides information on IP address assignments. This information is helpful in diagnosing network problems, such as IP address conflicts, etc.

Click **Diagnostics** and click **DHCP Table** to open the web page.

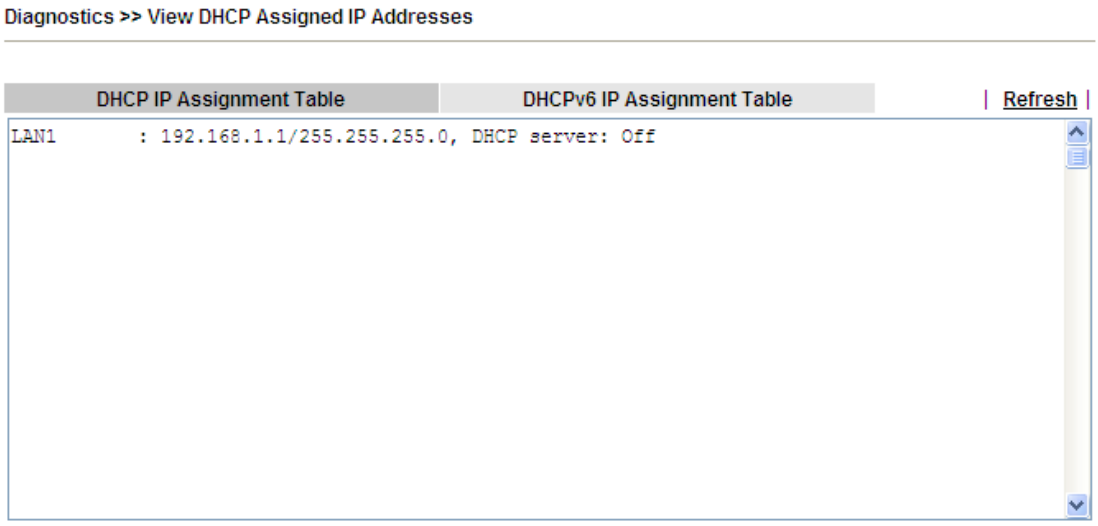
Diagnostics >> View DHCP Assigned IP Addresses
DHCP IP Assignment Table
DHCPv6 IP Assignment Table
Refresh
LAN1 : 192.168.1.1/255.255.255.0, DHCP server: Off

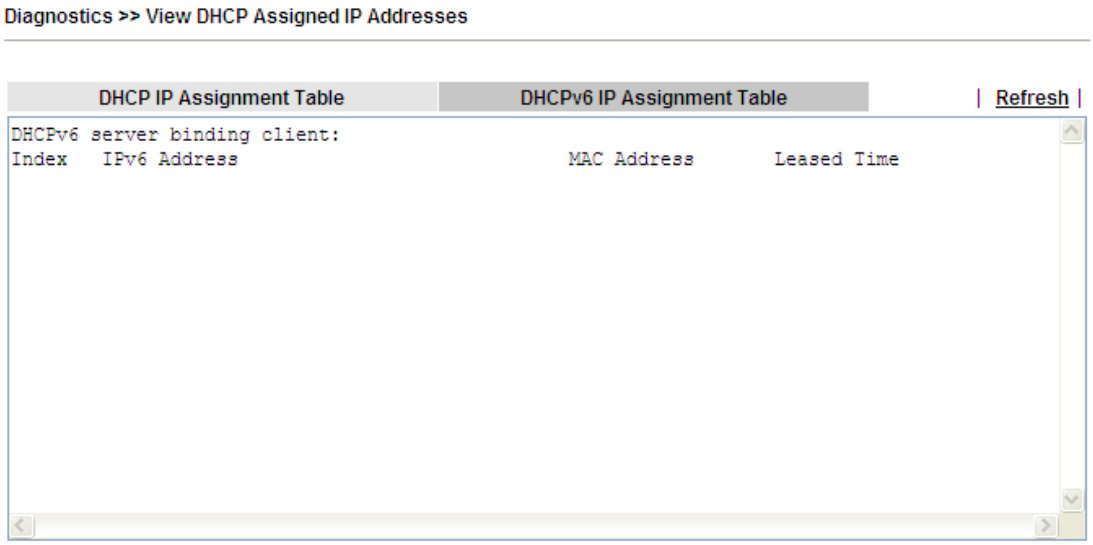
Diagnostics >> View DHCP Assigned IP Addresses
DHCP IP Assignment Table
DHCPv6 IP Assignment Table
Refresh
DHCPv6 server binding client:
Index IPv6 Address MAC Address Leased Time

Available settings are explained as follows:

Item	Description
Index	It displays the connection item number.
IP Address	It displays the IP address assigned by this router for specified PC.
MAC Address	It displays the MAC address for the specified PC that DHCP assigned IP address for it.
Leased Time	It displays the leased time of the specified PC.

HOST ID	It displays the host ID name of the specified PC.
Refresh	Click it to reload the page.

3.16.6 NAT Sessions Table

Click **Diagnostics** and click **NAT Sessions Table** to open the list page.

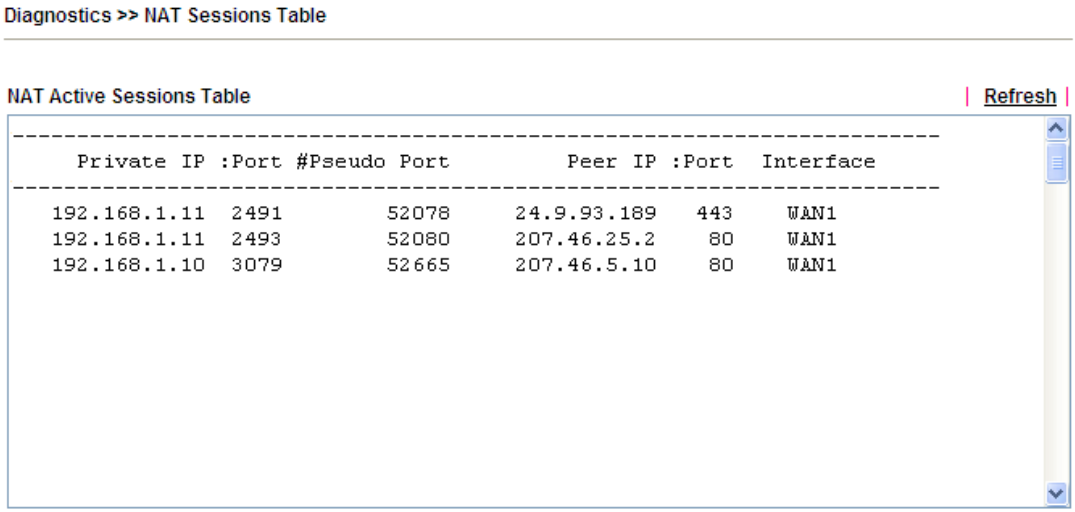
Diagnostics >> NAT Sessions Table
NAT Active Sessions Table
Refresh
Private IP :Port #Pseudo Port Peer IP :Port Interface
192.168.1.11 2491 52078 24.9.93.189 443 WAN1
192.168.1.11 2493 52080 207.46.25.2 80 WAN1
192.168.1.10 3079 52665 207.46.5.10 80 WAN1

Available settings are explained as follows:

Item	Description
Private IP:Port	It indicates the source IP address and port of local PC.
#Pseudo Port	It indicates the temporary port of the router used for NAT.
Peer IP:Port	It indicates the destination IP address and port of remote host.
Interface	It displays the representing number for different interface.
Refresh	Click it to reload the page.

3.16.7 Ping Diagnosis

Click **Diagnostics** and click **Ping Diagnosis** to pen the web page.

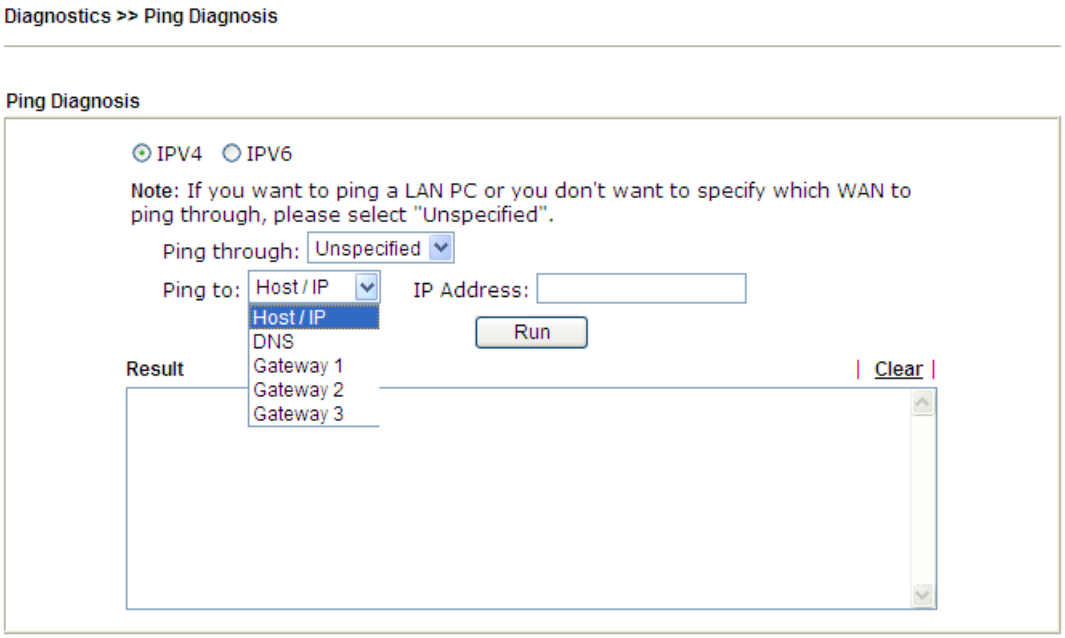

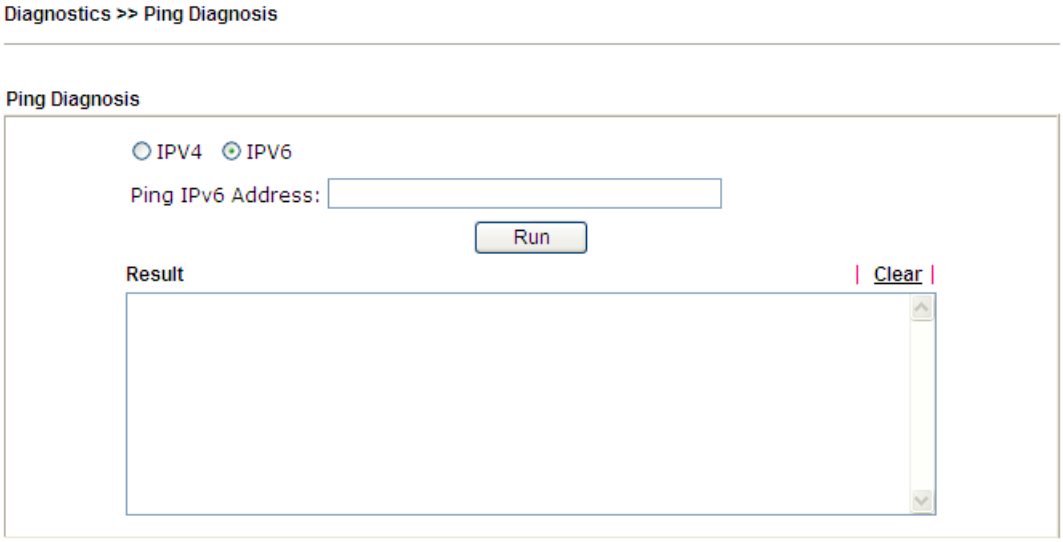

Available settings are explained as follows:

Item	Description
IPV4 /IPV6	Choose the interface for such function.
Ping through	Use the drop down list to choose the WAN interface that you want to ping through or choose **Unspecified** to be determined by the router automatically.
Ping to	Use the drop down list to choose the destination that you want to ping.
IP Address	Type the IP address of the Host/IP that you want to ping.
Ping IPv6 Address	Type the IPv6 address that you want to ping.

Run	Click this button to start the ping work. The result will be displayed on the screen.
Clear	Click this link to remove the result on the window.

3.16.8 Data Flow Monitor

This page displays the running procedure for the IP address monitored and refreshes the data in an interval of several seconds. The IP address listed here is configured in Bandwidth Management. You have to enable IP bandwidth limit and IP session limit before invoke Data Flow Monitor. If not, a notification dialog box will appear to remind you enabling it.

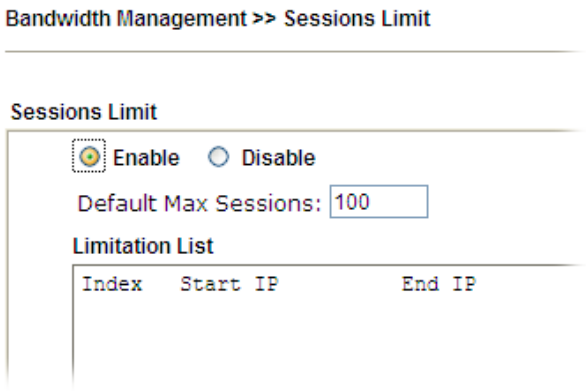

Click **Diagnostics** and click **Data Flow Monitor** to open the web page. You can click **IP Address**, **TX rate**, **RX rate** or **Session** link for arranging the data display.

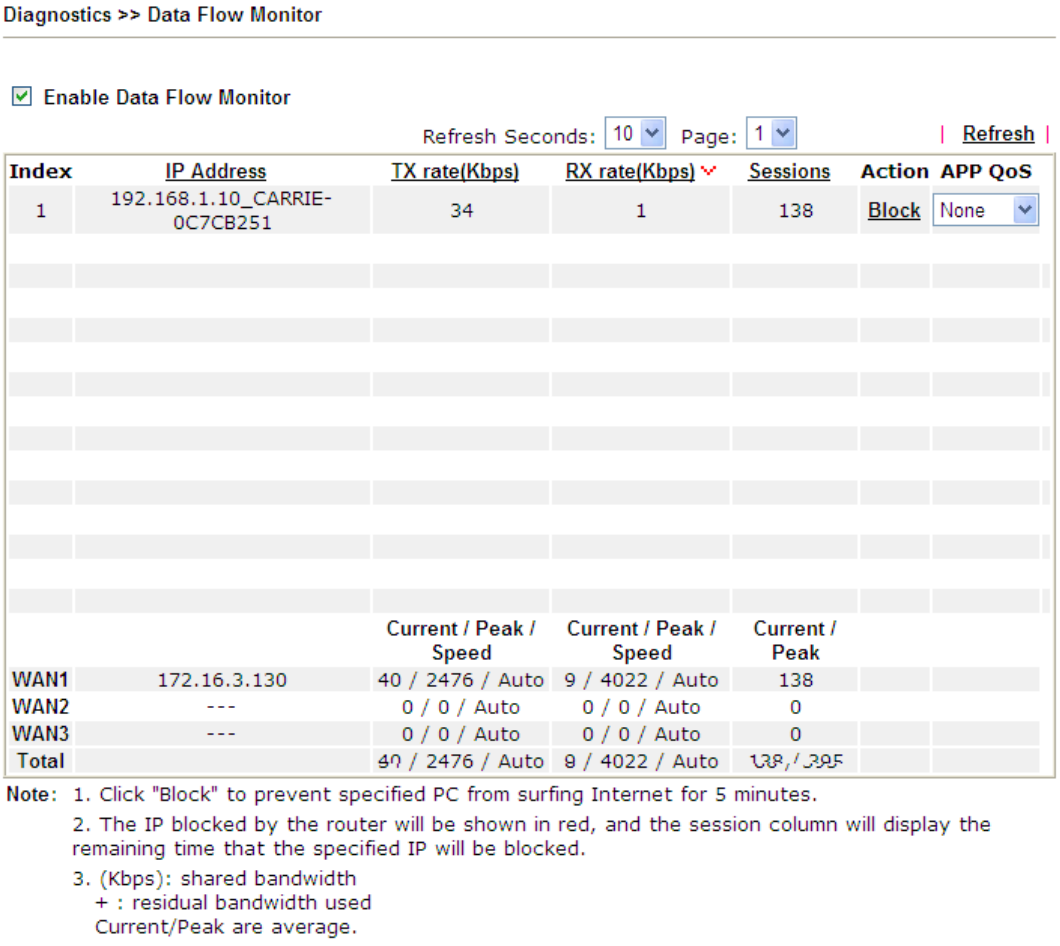
Diagnostics >> Data Flow Monitor
Enable Data Flow Monitor
Refresh Seconds: 10 Page: 1 | Refresh |
Index IP Address TX rate(Kbps) RX rate(Kbps) Sessions Action APP QoS
1 192.168.1.10_CARRIE-0C7CB251 34 1 138 Block None
Current / Peak / Speed Current / Peak / Speed Current / Peak
WAN1 172.16.3.130 40 / 2476 / Auto 9 / 4022 / Auto 138
WAN2 --- 0 / 0 / Auto 0 / 0 / Auto 0
WAN3 --- 0 / 0 / Auto 0 / 0 / Auto 0
Total 40 / 2476 / Auto 9 / 4022 / Auto 138 / 395
Note: 1. Click "Block" to prevent specified PC from surfing Internet for 5 minutes.
2. The IP blocked by the router will be shown in red, and the session column will display the remaining time that the specified IP will be blocked.
3. (Kbps): shared bandwidth
+ : residual bandwidth used
Current/Peak are average.

Available settings are explained as follows:

Item	Description
Enable Data Flow Monitor	Check this box to enable this function.
Refresh Seconds	Use the drop down list to choose the time interval of refreshing data flow that will be done by the system automatically. 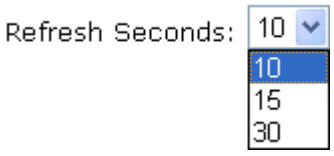
Refresh	Click this link to refresh this page manually.
Index	Display the number of the data flow.
IP Address	Display the IP address of the monitored device.
TX rate (kbps)	Display the transmission speed of the monitored device.
RX rate (kbps)	Display the receiving speed of the monitored device.
Sessions	Display the session number that you specified in Limit Session web page.
Action	**Block** - can prevent specified PC accessing into Internet within 5 minutes. 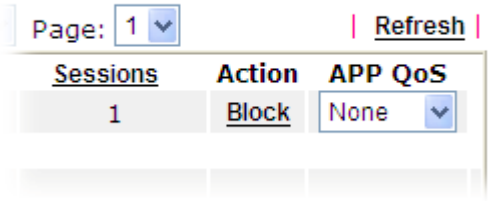 **Unblock** – the device with the IP address will be blocked in five minutes. The remaining time will be shown on the session column. 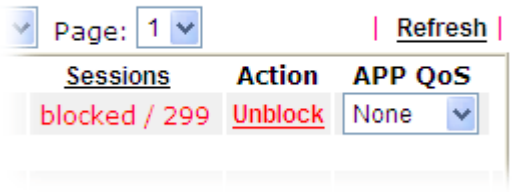
Current /Peak/Speed	**Current** means current transmission rate and receiving rate for WAN interface. **Peak** means the highest peak value detected by the router in data transmission. **Speed** means line speed specified in **WAN>>General Setup**. If you do not specify any rate at that page, here will display **Auto** for instead.

3.16.9 Traffic Graph

Click **Diagnostics** and click **Traffic Graph** to pen the web page. Choose WAN1/WAN2/WAN3 Bandwidth, Sessions, daily or weekly for viewing different traffic graph. Click **Reset** to zero the accumulated RX/TX (received and transmitted) data of WAN. Click **Refresh** to renew the graph at any time.

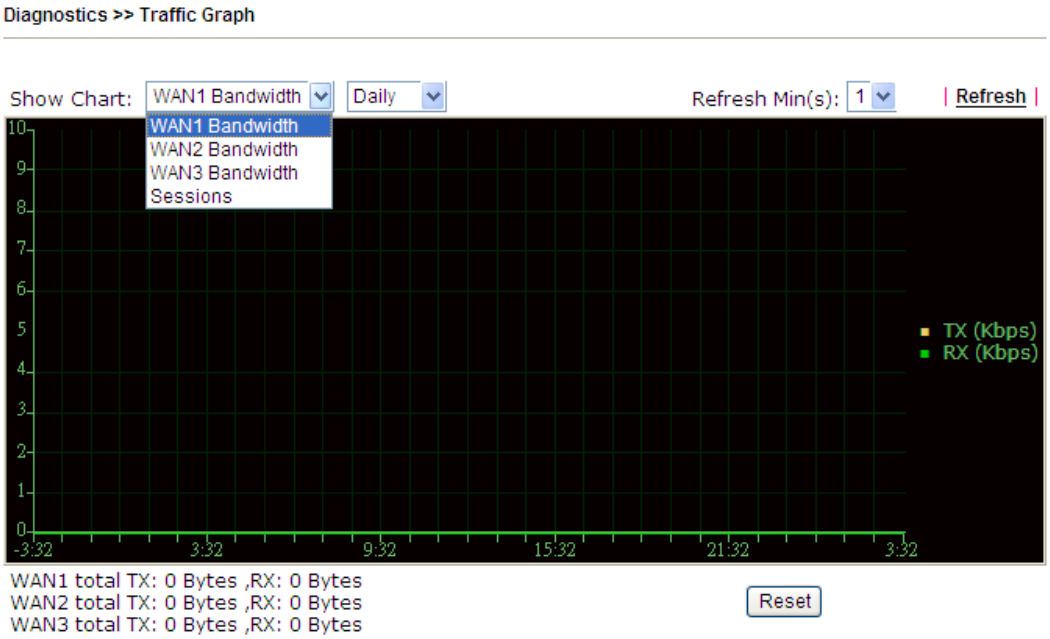

The horizontal axis represents time. Yet the vertical axis has different meanings. For WAN1/WAN2/WAN3Bandwidth chart, the numbers displayed on vertical axis represent the numbers of the transmitted and received packets in the past.

For Sessions chart, the numbers displayed on vertical axis represent the numbers of the NAT sessions during the past.

3.16.10 Trace Route

Click **Diagnostics** and click **Trace Route** to open the web page. This page allows you to trace the routes from router to the host. Simply type the IP address of the host in the box and click **Run**. The result of route trace will be shown on the screen.

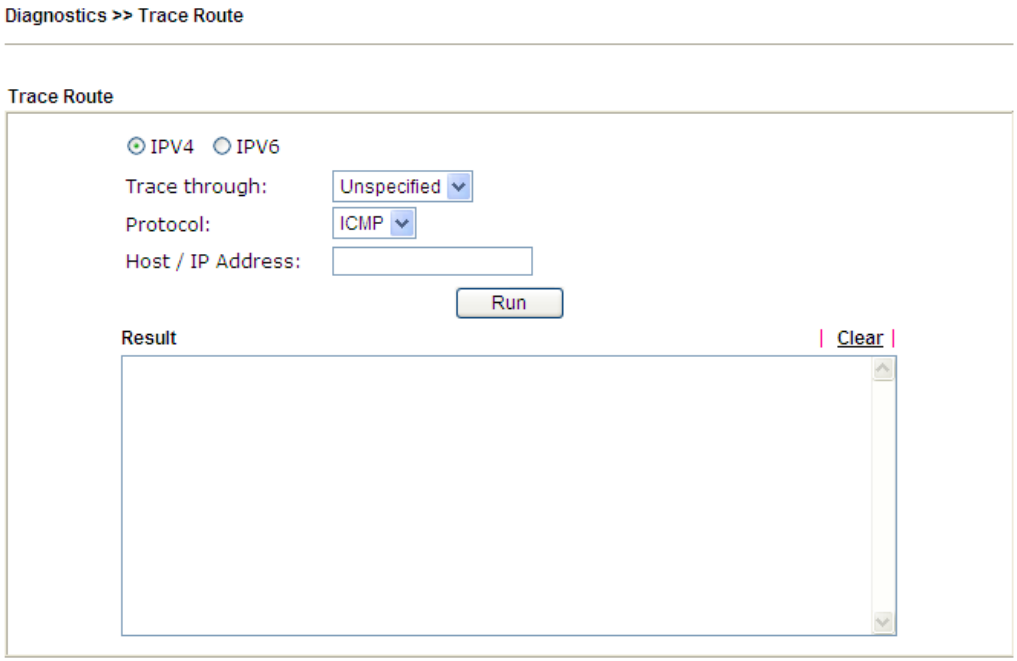

or

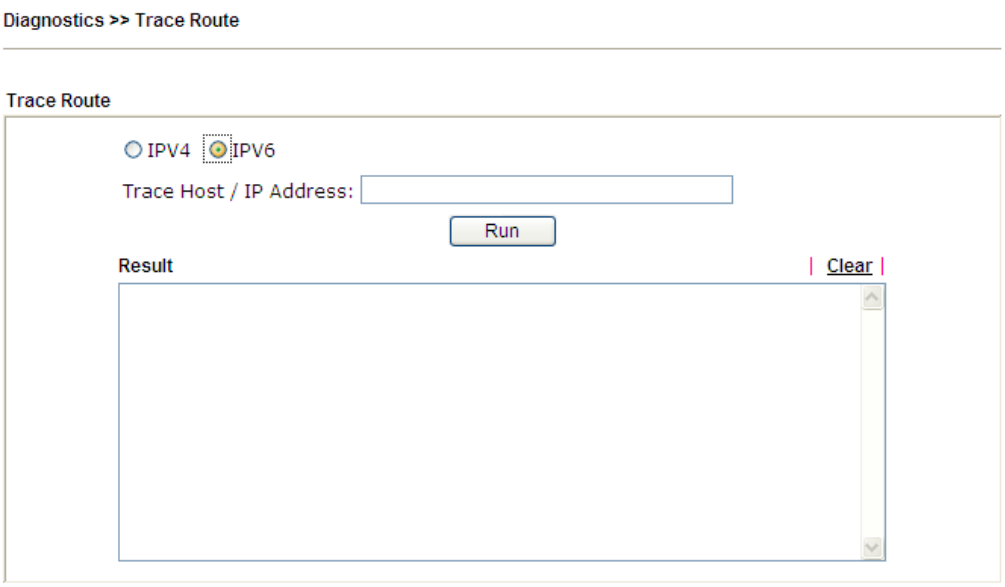

Available settings are explained as follows:

Item	Description
IPv4 / IPv6	Click one of them to display corresponding information for it.
Trace through	Use the drop down list to choose the interface that you want to ping through.

Protocol	Use the drop down list to choose the protocol that you want to ping through.
Host/IP Address	It indicates the IP address of the host.
Trace Host/IP Address	It indicates the IPv6 address of the host.
Run	Click this button to start route tracing work.
Clear	Click this link to remove the result on the window.

3.16.11 Web Firewall Syslog

Such page provides real-time syslog and displays the information on the screen.

For Web Syslog

This page displays the time and message for User/Firewall/call/WAN/VPN settings. You can check **Enable Web Syslog,** specify the type of Syslog and choose the display mode you want. Later, the event of Syslog with specified type will be shown for your reference.

Available settings are explained as follows:

Item	Description
Enable Web Syslog	Check this box to enable the function of Web Syslog.
Syslog Type	Use the drop down list to specify a type of Syslog to be displayed.
Export	Click this link to save the data as a file.
Refresh	Click this link to refresh this page manually.
Clear	Click this link to clear information on this page.
Display Mode	There are two modes for you to choose.

	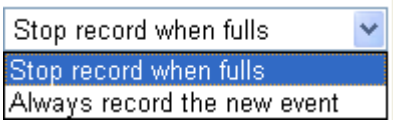 **Stop record when fulls –** when the capacity of syslog is full, the system will stop recording. **Always record the new event –** only the newest events will be recorded by the system.
Time	Display the time of the event occurred.
Message	Display the information for each event.

For USB Syslog

This page displays the syslog recorded on the USB storage disk.

Available settings are explained as follows:

Item	Description
Time	Display the time of the event occurred.
Log Type	Display the type of the record.
Message	Display the information for each event.

3.16.12 TSPC Status

IPv6 TSPC status web page could help you to diagnose the connection status of TSPC.

If TSPC has configured properly, the router will display the following page when the user connects to tunnel broker successfully.

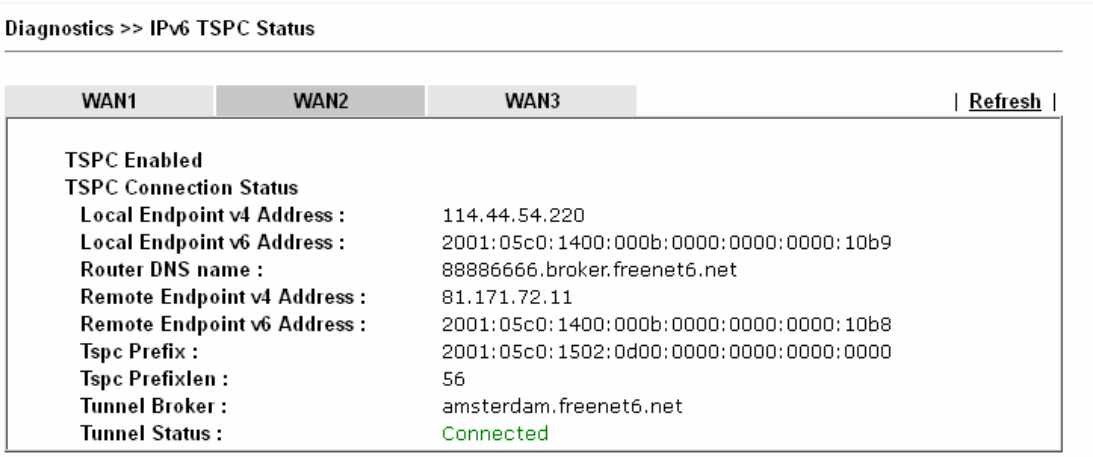

Available settings are explained as follows:

Item	Description
Refresh	Click this link to refresh this page manually.

3.17 External Devices

Vigor router can be used to connect with many types of external devices. In order to control or manage the external devices conveniently, open **External Devices** to make detailed configuration.

3.17.1 All Devices

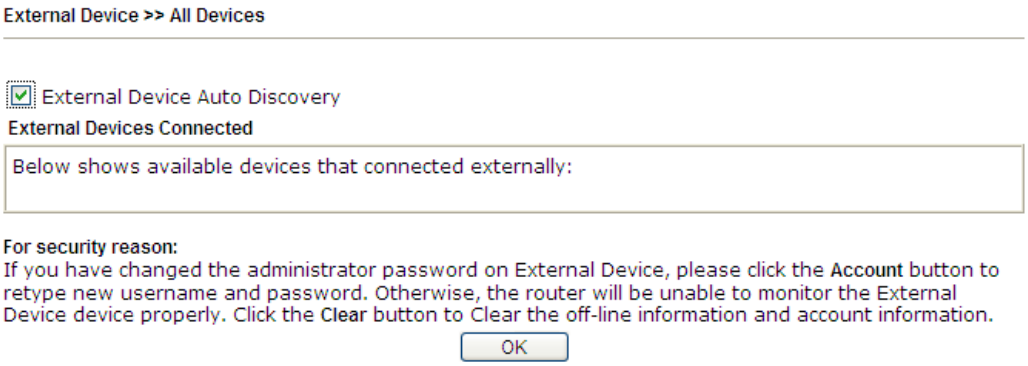
External Device >> All Devices
External Device Auto Discovery
External Devices Connected
Below shows available devices that connected externally:
For security reason:
If you have changed the administrator password on External Device, please click the Account button to retype new username and password. Otherwise, the router will be unable to monitor the External Device device properly. Click the Clear button to Clear the off-line information and account information.
OK

Available settings are explained as follows:

Item	Description
External Device Auto Discovery	Check this box to detect the external device automatically and display on this page.

From this web page, check the box of **External Device Auto Discovery**. Later, all the available devices will be displayed in this page with icons and corresponding information. You can change the device name if required or remove the information for off-line device whenever you want.

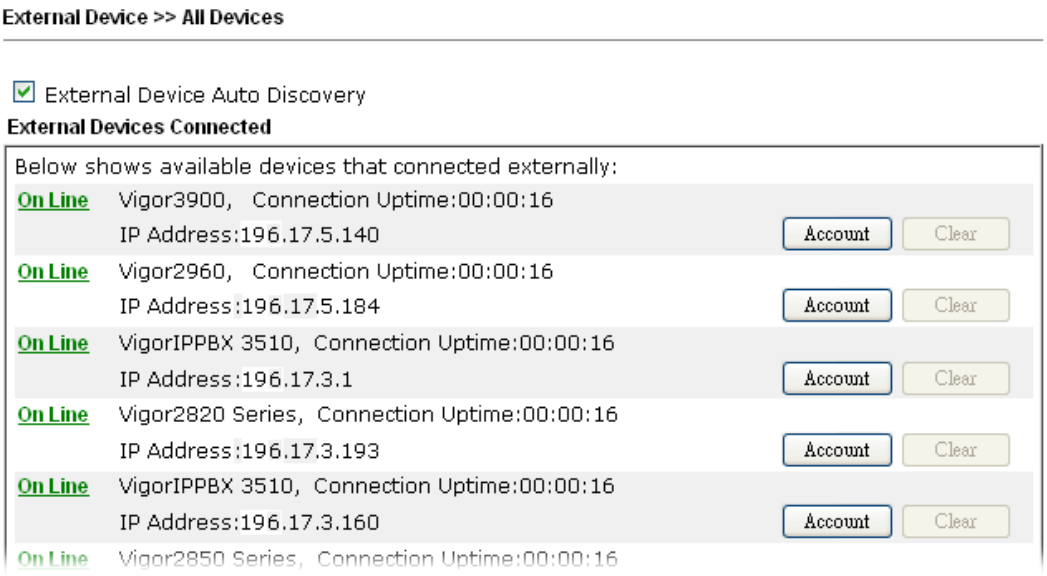

When you finished the configuration, click **OK** to save it.

Note: Only DrayTek products can be detected by this function.

3.17.2 Access Point Devices

Vigor2860 can be treated as a server, named APM server, which manages access point devices. Basically, Vigor2860 can manage up to 5 devices (Access Point, treated as a client) at one time.

The access point shall be registered to Vigor2860 first. Then the Status page will display the registered access point automatically when this page is open. This page is very convenient for the network administrator to control or modify the managed access point at any time.

Status

The status page can display related information of the registered client such as device name, IP address, SSID, encryption, channel, the number of the wireless clients, firmware version of the access point, the accessing password about the managed access point.

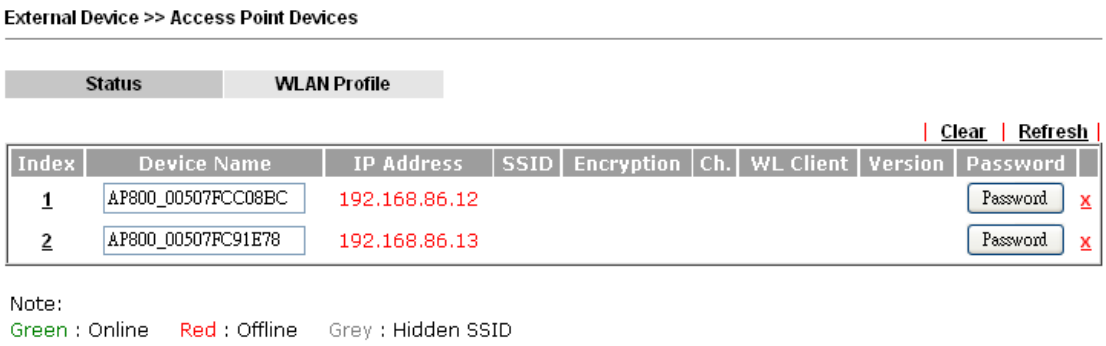

Available settings are explained as follows:

Item	Description
Index	Click the index number link to open the detailed configuration page for the selected entry.
Clear	Click it to remove all the settings modified in this page.

Refresh	Click it to refresh current page.
Index	Click the number index to open the settings page of the device.
Device Name	Display the name of the device.
IP Address	Display the IP address of the device.
SSID	Display the SSID configure by the device.
Encryption	Display the encryption method used by the device.
Ch. (Channel)	Display the channel used by the device.
WL Client	Display the number of the host (wireless client) connecting to such AP device.
Version	Display firmware version used by the device.
Password	Click the button to review /edit the username and password of the device.

WLAN Profile

This page can be used to configure **five** different WLAN profiles which can be applied to the connected AP devices. The WLAN profile can be used for connected Vigor Access Point only.

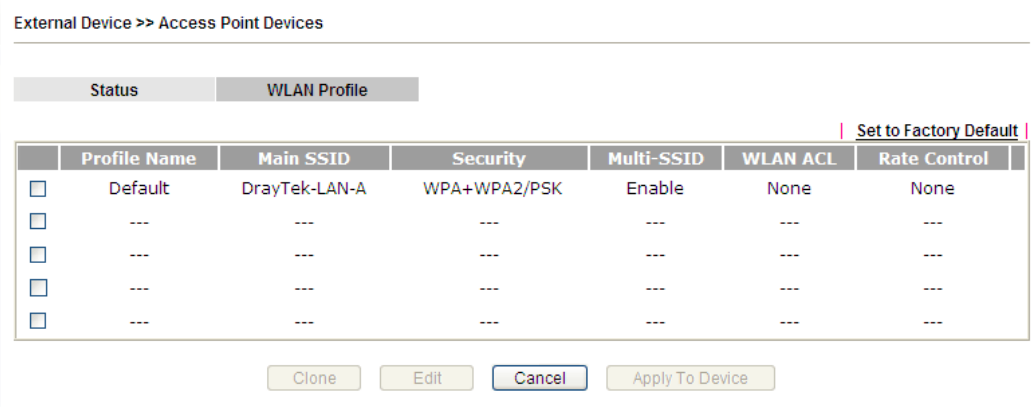

Available settings are explained as follows:

Item	Description
Set to Factory Default	Clear all of the settings and return to factory default

	settings.
Profile Name	Display the name of the profile scanned by Vigor router.
Main SSID	Display the SSID used by the Vigor router.
Security	Display the mode used by the Vigor router.
Multi-SSID	Display if the multi-SSID function is enabled or not.
WLAN ACL	Display the access control (None, White List, or Black List) configured for such profile.
Rate Control	Display if the function of rate control is enabled or not.
Clone	It will pop up a window for you to copy the parameter settings from a profile to another profile. 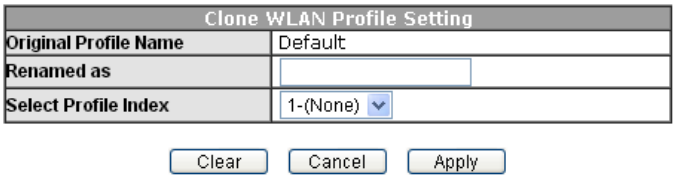 **Original Profile Name** – Display the original profile name of the selected index. **Select Profile Index** – Choose the index number of the profile that you want to clone from. **Renamed as** – When a profile index is selected, the original name will be displayed in the box first. You can change it by typing a new name.
Edit	It allows you to modify the detailed settings for each WLAN profile.
Cancel	It can cancel the settings you just made on this page.
Apply To Device	The WLAN profile can be applied to specified Device (AP device) if it is required. Simply check the box on the left side of the WLAN profile you want, and then click the **Apply To Device** button. The following dialog box will appear. 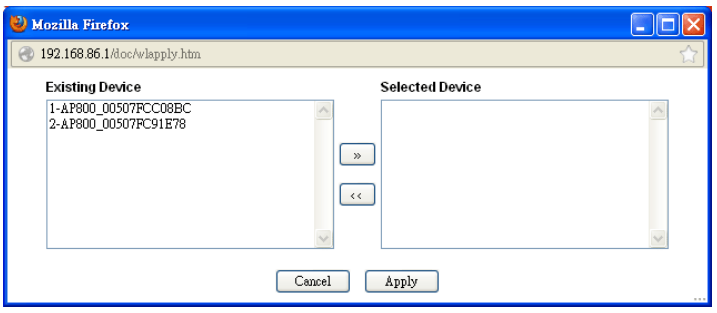 **Existing Device** – This field will display the access point connected to Vigor2860 and worked well. **Selected Device** – This field will display the access point which will be applied with the WLAN profile. Choose one of the devices from the Existing Device and click to move it to the right field of Selected Device.

	Then click Apply. The selected device now will be applied with the selected WLAN profile.

To edit a WALN profile, follow the step listed below:

1. Check the box of the entry that you want to edit. Then, click the **Edit** button.

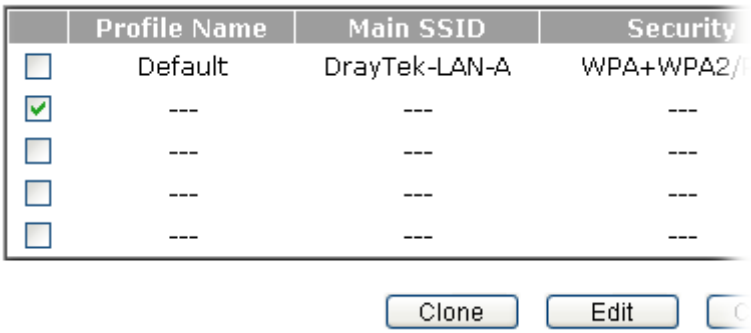

2. The following page will appear. All the wireless connection related to Vigor Access Point (e.g., AP800) will be shown as follows.

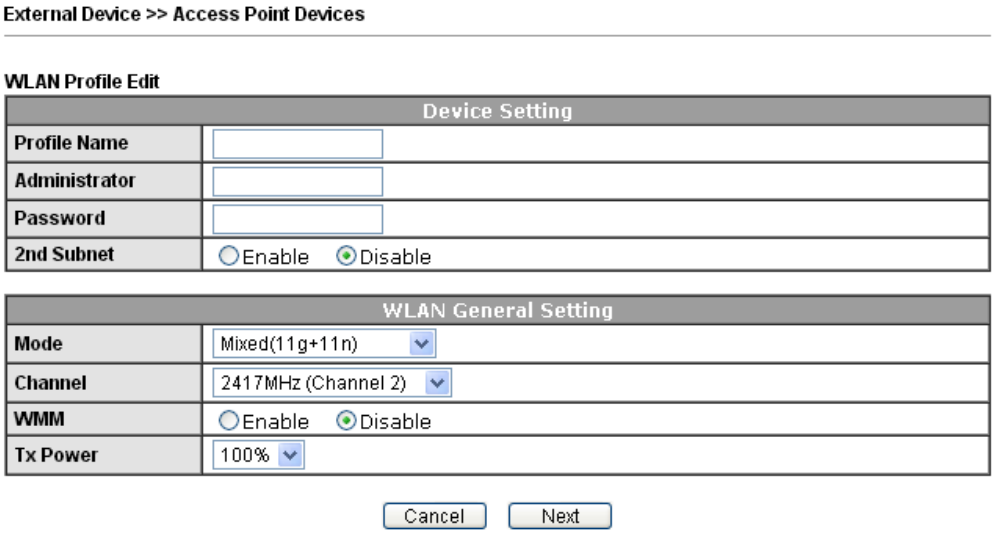

Available settings are explained as follows:

Item	Description
Device Setting	**Profile Name –** Type a name for such profile. **Administrator –** Type the username for such profile. It will be used for the clients trying to connect to the access point. **Password –** Type a password for such profile. It will be used for the clients trying to connect to the access point. **2nd Subnet –** Click **Enable** to enable the second subnet.
WLAN General Setting	**Mode –** Specify a connection mode for wireless network. **Channel –** Specify a channel for the wirelss connection. **WMM –** To apply WMM parameters for wireless data transmission, please click the **Enable** radio button. **Tx Power -** The default setting is the maximum (100%). Lower down the value may degrade range and throughput of wireless.

Cancel	Cancel the setting configured on this page.
Next	Access into the next setting page.

3. Type the required information and click **Next** to open next page. You can configure the settings for SSID1, SSID2, SSID3 and SSID4 respectively.

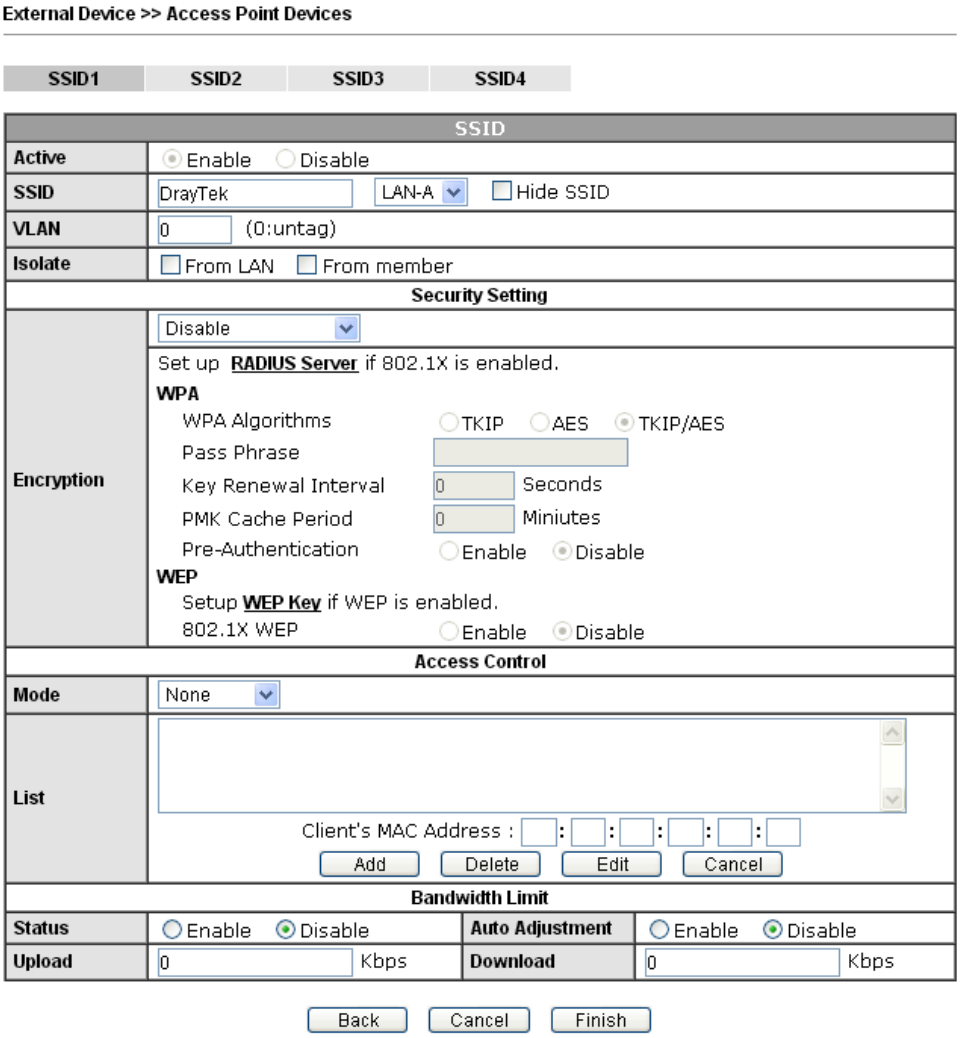

Available settings are explained as follows:

Item	Description
SSID	**Active –** Click **Enable** to activate such SSID setting. **SSID –** The default name will be displayed. Change the SSID if it is required. Next, choose LAN-A or LAN-B as the subnet. If required, you can check the box of **Hide SSID**. Then it will not be recognized by wireless station when the user tries to search the Access Point for connection. **VLAN –** Type the value for such SSID. Packets transferred from such SSID to LAN will be tagged with the number. **Isolate – From LAN -** Check this box to make the wireless clients (stations) with the same SSID not accessing for wired PC in LAN. **Isolate – From Member -** Check this box to make the

	wireless clients (stations) with the same SSID not accessing for each other.
Security Setting	**Disable –** There are several modes provided for you to choose. **WPA Algorithm –**Select TKIP, AES or TKIP/AES as the algorithm for WPA. Such feature is available for **WPA2/802.1x, WPA/802.1x, WPA/PSK or WPA2/PSK or Mixed (WPA+WPA2)/PSK** mode. **Pass Phrase –**Either **8~63** ASCII characters, such as 012345678..(or 64 Hexadecimal digits leading by 0x, such as "0x321253abcde..."). Such feature is available for **WPA/PSK or WPA2/PSK or Mixed (WPA+WPA2)/PSK** mode. **Key Renewal Interval –** Either **8~63** ASCII characters, such as 012345678..(or 64 Hexadecimal digits leading by 0x, such as "0x321253abcde..."). Such feature is available for **WPA/PSK or WPA2/PSK or Mixed (WPA+WPA2)/PSK** mode. **PMK Cache Period –**Set the expired time of WPA2 PMK (Pairwise master key) cache. PMK Cache manages the list from the BSSIDs in the associated SSID with which it has pre-authenticated. Such feature is available for **WPA2/802.1** mode. **Pre-Authentication –** Enables a station to authenticate to multiple APs for roaming securer and faster. With the pre-authentication procedure defined in IEEE 802.11i specification, the pre-four-way-handshake can reduce handoff delay perceivable by a mobile node. It makes roaming faster and more secure (Only valid in WPA2). **Enable** - Enable IEEE 802.1X Pre-Authentication. **WEP Key –** Four keys can be entered here, but only one key can be selected at a time. The format of WEP Key is restricted to 5 ASCII characters or 10 hexadecimal values in 64-bit encryption level, or restricted to 13 ASCII characters or 26 hexadecimal values in 128-bit encryption level. The allowed content is the ASCII characters from 33(!) to 126(~) except '#' and ','. Such feature is available for **WEP** mode. **802.1X WEP - Enable** - Enable the WEP Encryption.
Access Control	**Mode (Black List/White List) –** Select to enable black list or white list filter policy. **List –**Display all MAC addresses that are edited before. **Client's MAC Address –**Manually enter the MAC address of wireless client. **Add –**Add a new MAC address into the list. **Delete –**Delete the selected MAC address in the list. **Edit –**Edit the selected MAC address in the list. **Cancel -** Give up the access control set up.
Bandwidth Limit	**Status –** Click **Enable** to enable the function of bandwidth limit.

	Upload – Type the value as the uploading rate of data transmission. **Auto Adjustment –** Click **Enable** to make the router manage the bandwidth limit automatically. **Download -** Type the value as the downloading rate of data transmission.
Back	Return to the previous setting page.
Cancel	Cancel the setting configured on this page.
Finish	Complete the configuration of this page.

4. Continue to type the required information on this page. When you finished the configuration, click **Finish**. A new WLAN profile has been created as follows.

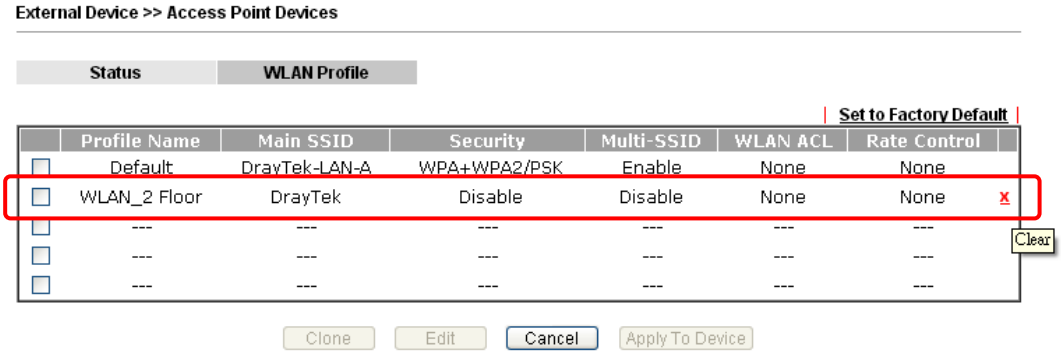

4 Tutorials and Applications

4.1 How to configure settings for IPv6 Service in Vigor2860

Due to the shortage of IPv4 address, more and more countries use IPv6 to solve the problem. However, to continually use the original rich resources of IPv4, both IPv6 and IPv4 networks shall communicate for each other via intercommunication mechanism to complete the shifting job from IPv4 to IPv6 gradually. At present, there are three common types of intercommunication mechanisms:

- **Dual Stack**

  The user can use both IPv4 and IPv6 techniques at the same time. That means adding an IPv6 stack on the origin network layer to let the host own the communication capability of IPv4 and IPv6.

- **Tunnel**

  Both IPv6 hosts can communication for each other via existing IPv4 network environment. The IPv6 packets will be encapsulated with the header of IPv4 first. Later, the packets will be transformed and judged by IPv4 router. Once the packets arrive the border between IPv4 and IPv6, the header of IPv4 on the packets will be removed. Then, the packets with IPv6 address will be forwarded to the destination of IPv6 network.

- **Translation**

  Such feature is active only for the user who uses IPv4 to communicate with other user using IPv4 service.

Before configuring the settings on Vigor2860, you need to know which connection type that your IPv6 service used.

> **Note**: For the IPv6 service, you have to configure WAN/LAN settings before using the service.

I. Configuring the WAN Settings

For the IPv6 WAN settings for Vigor2860, there are five connection types to be chosen: PPP, TSPC, AICCU, DHCPv6 Client and Static IPv6.

1. Access into the web user interface of Viogr2860. Open **WAN**>> **Internet Access**. Choose one of the WAN interfaces as the one supporting IPv6 service. Then, click the IPv6 button of the selected WAN.

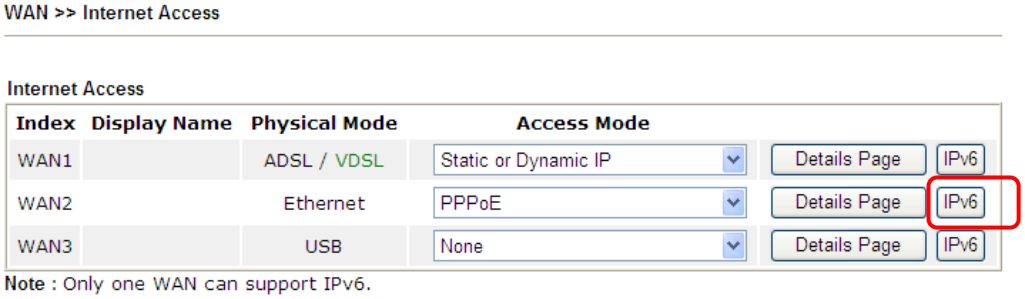

Note: Only one WAN interface support IPv6 service at one time. In this example, WAN2 is chosen as the one supporting IPv6 service.

2. In the following figure, use the drop down list to choose a proper connection type.

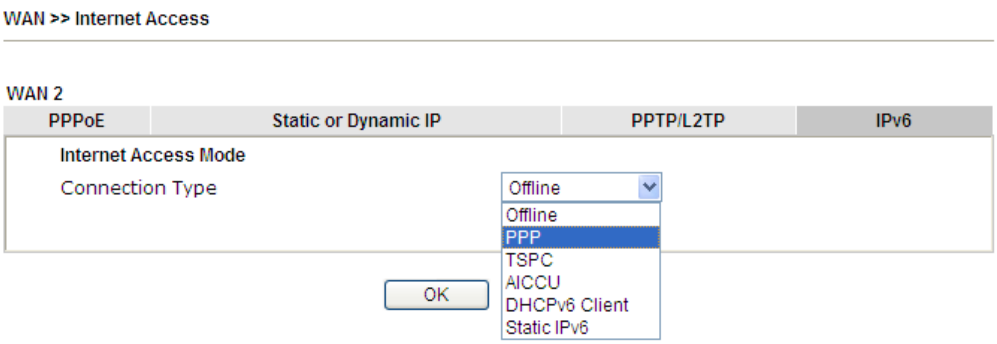

Different connection types will bring out different configuration page. Refer to the following:

- **PPP – Dual Stack application, IPv4 and IPv6 services can be utilized at the same time**

Choose PPP and type the information for PPPoE of IPv4.

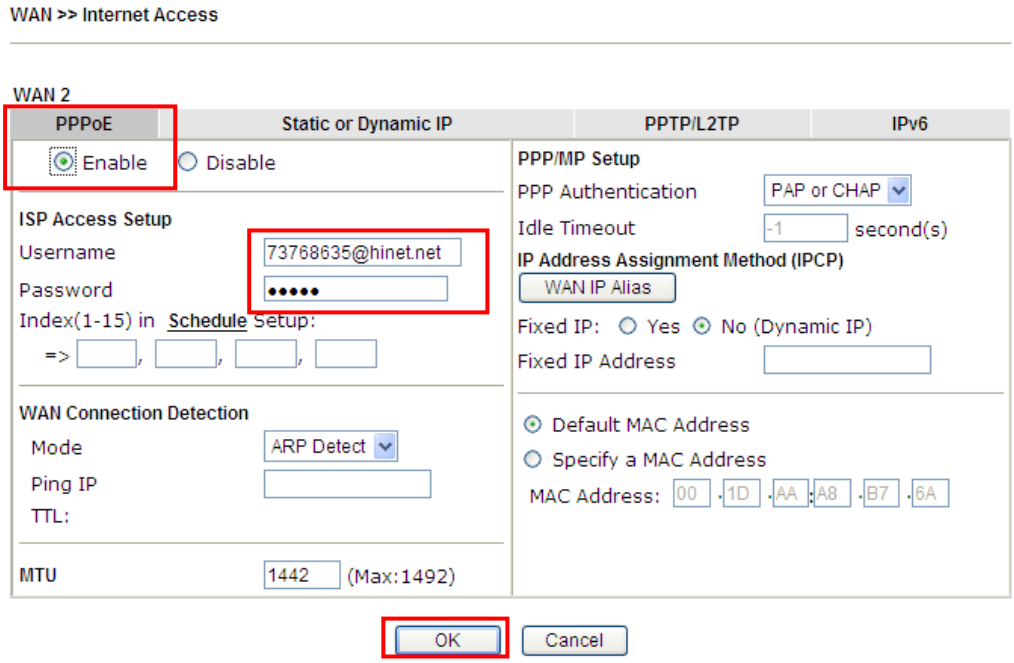

Access into the setting page for IPv6 service, it is not necessary for you to configure anything.

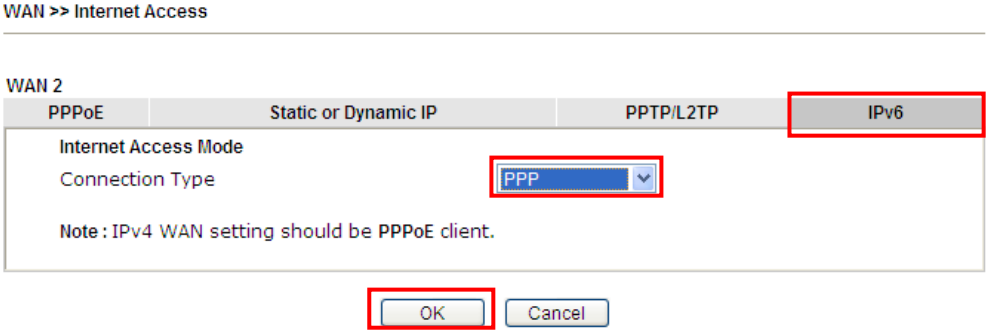

Click **OK** and open **Online Status**. If the connection is successful, you will get the IP address for IPv4 and IPv6 at the same time.

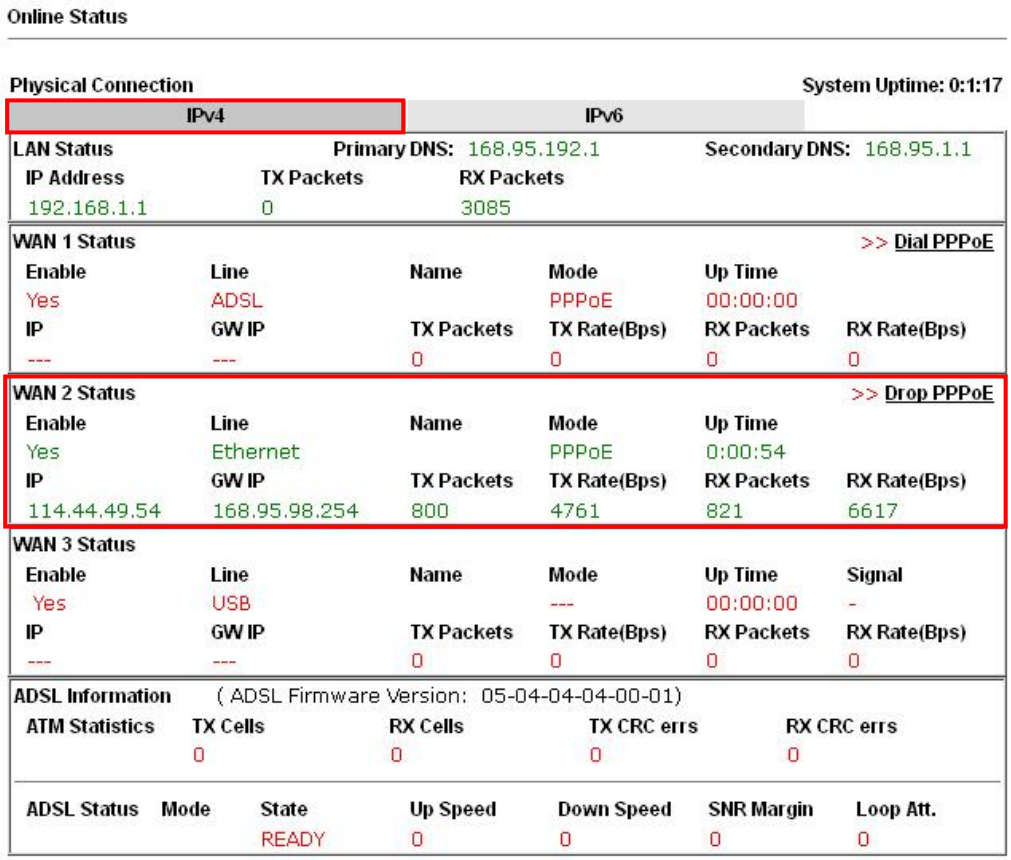

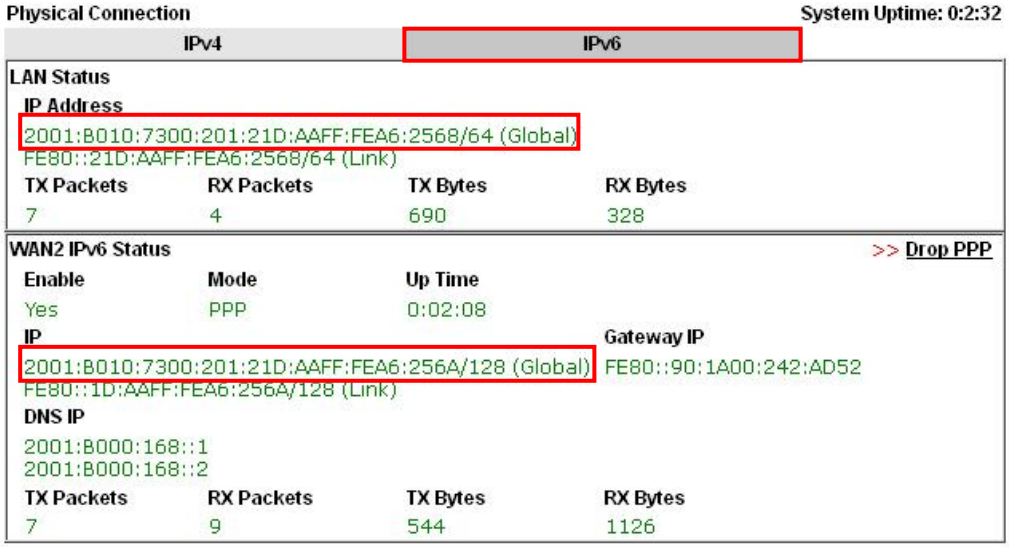

- **TSPC – Tunnel application, both IPv6 hosts communicate through IPv4 network**

  Choose **TSPC** and type the information for TSPC service.

  Note: While using such mode, you have to make sure the IPv4 network connection is normal.

  (In the following figure, the TSPC information is obtained from http://gogo6.com/ after applied for the service.)

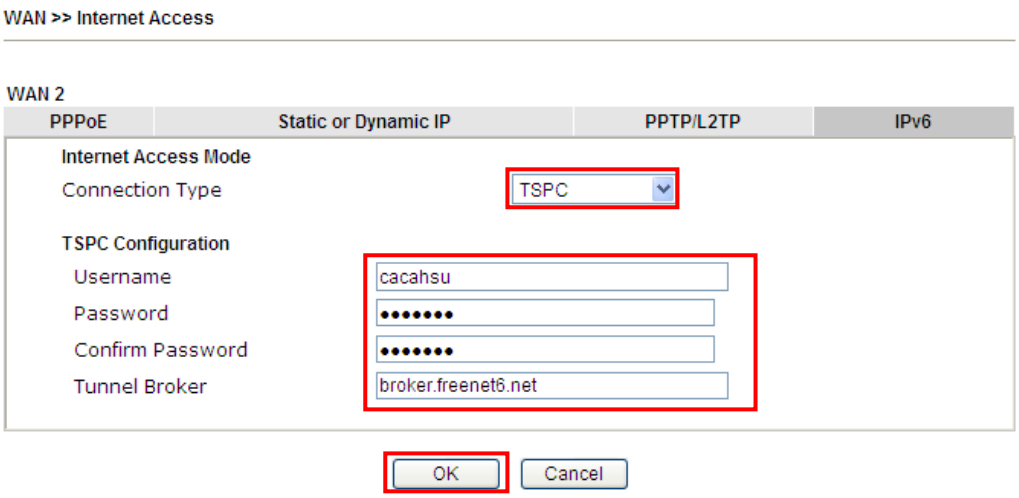

  Click **OK** and open **Online Status**. If the connection is successful, the physical connection will be shows as follows:

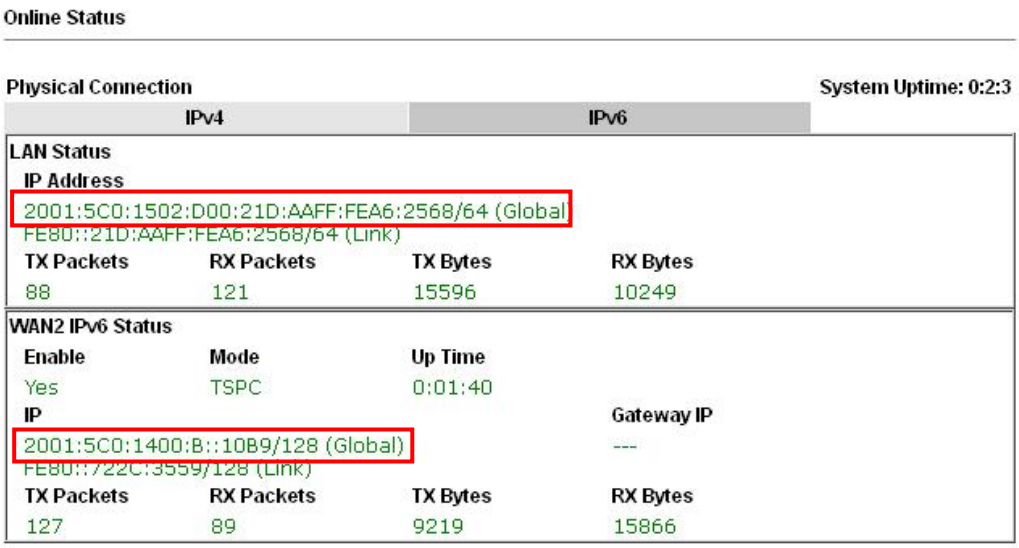

- **AICCU – Tunnel application**

Choose AICCU and type the information for AICCU of IPv6.

Note: While using such mode, you have to make sure the IPv4 network connection is normal.

(In the following figure, the AICCU information is obtained from https://www.sixxs.net/main/ after applied for the service.)

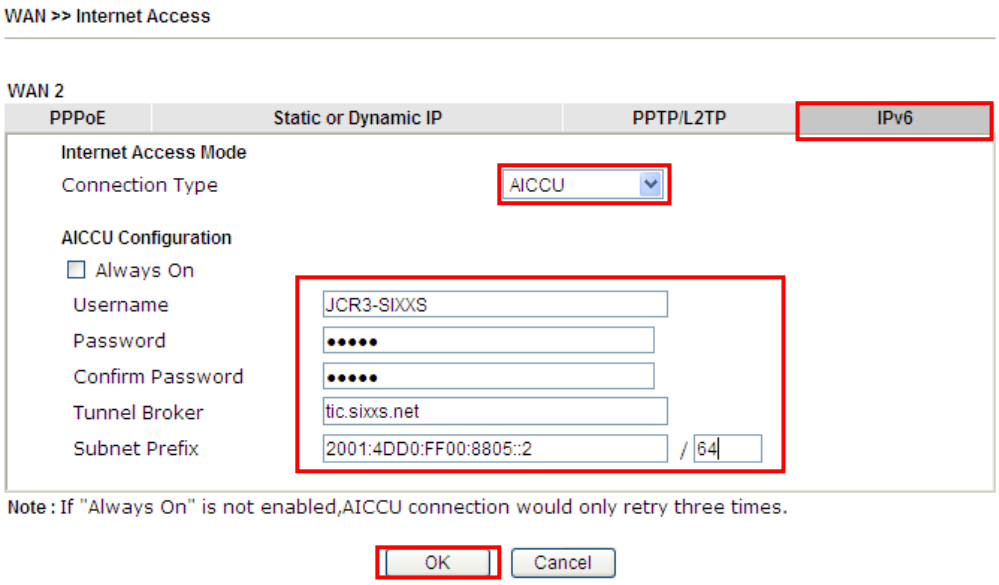

Click **OK** and open **Online Status**. If the connection is successful, the physical connection will be shows as follows:

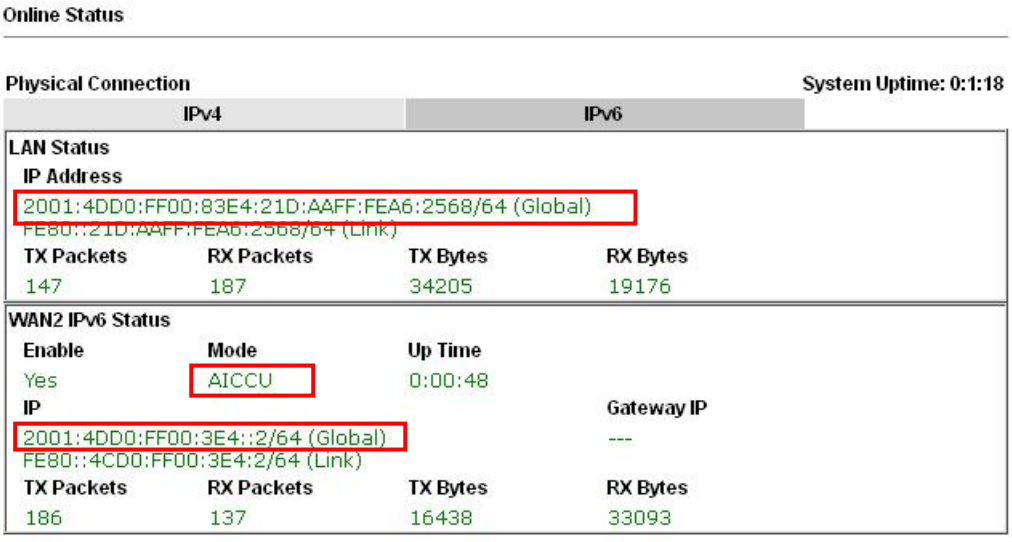

- **DHCPv6 Client**

  Choose DHCPv6 Client. Click one of the identity associations and type the IAID number.

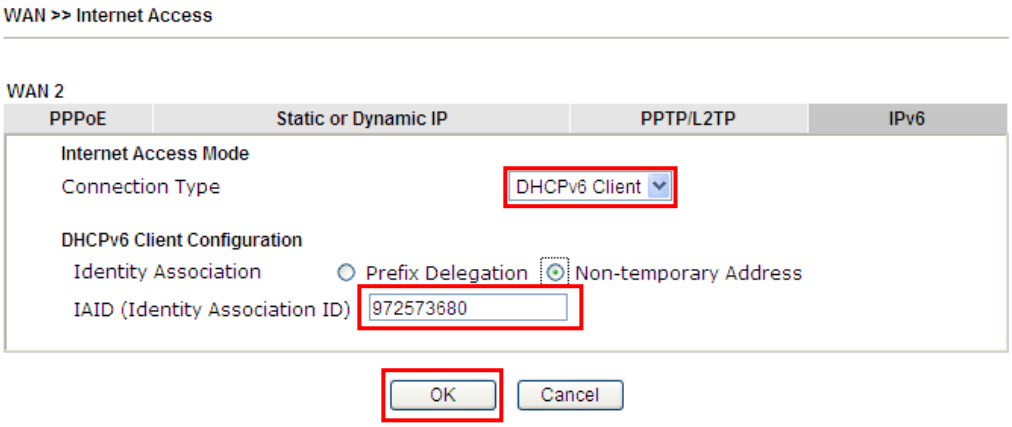

  Click **OK** and open **Online Status**. If the connection is successful, the physical connection will be shows as follows:

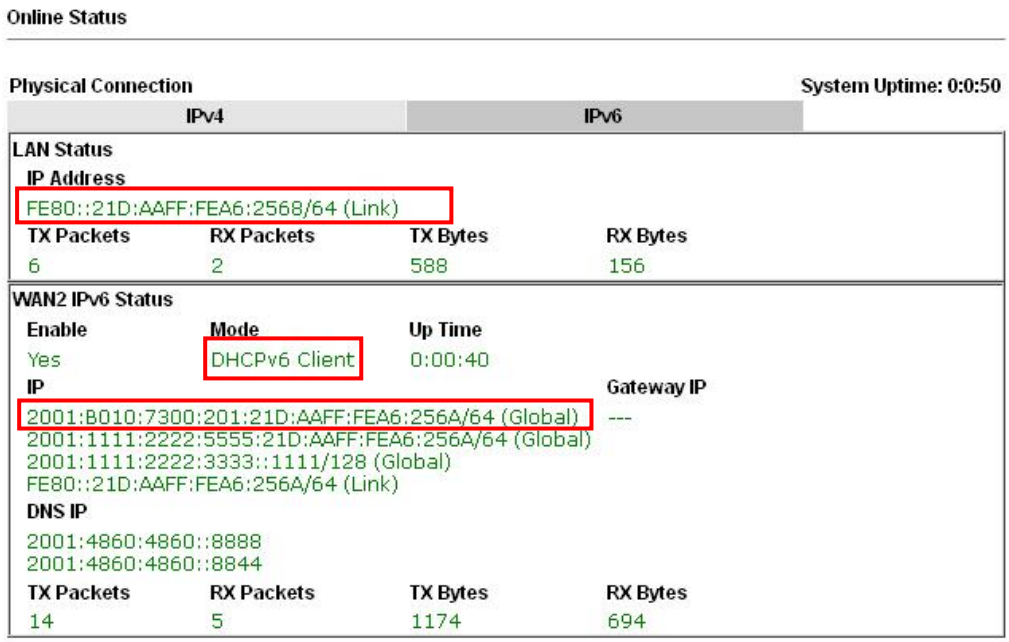

- **Static IPv6**

Choose Static IPv6. Type IPv6 address, Prefix Length and Gateway Address.

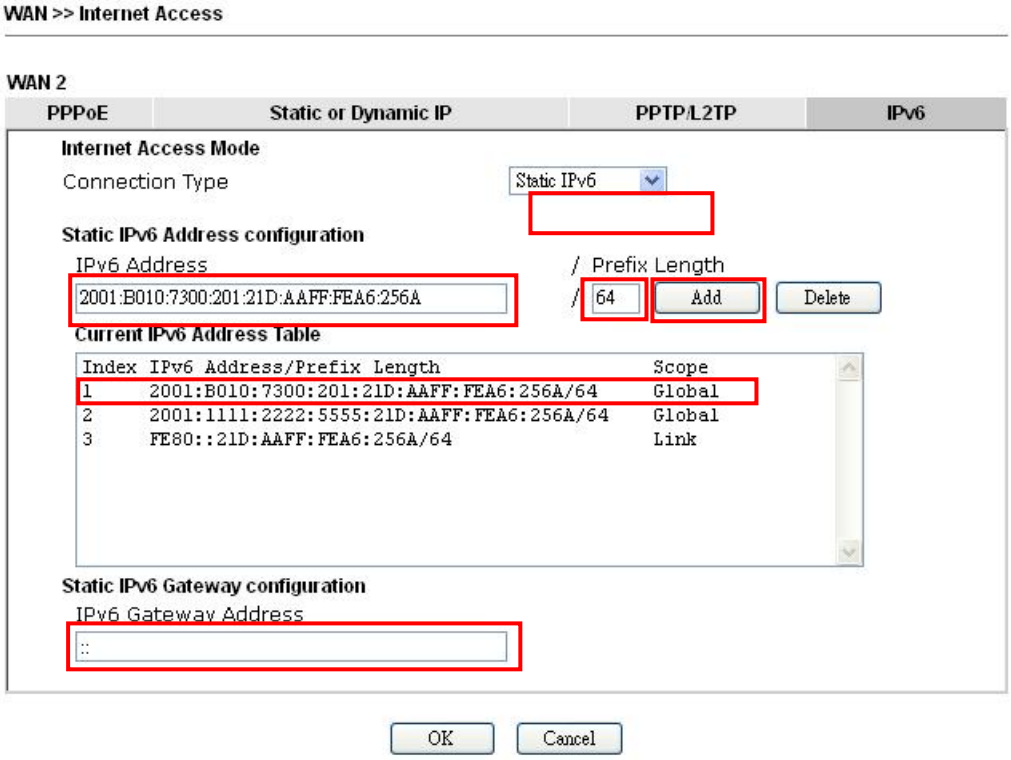

Click **OK** and open **Online Status**. If the connection is successful, the physical connection will be shows as follows:

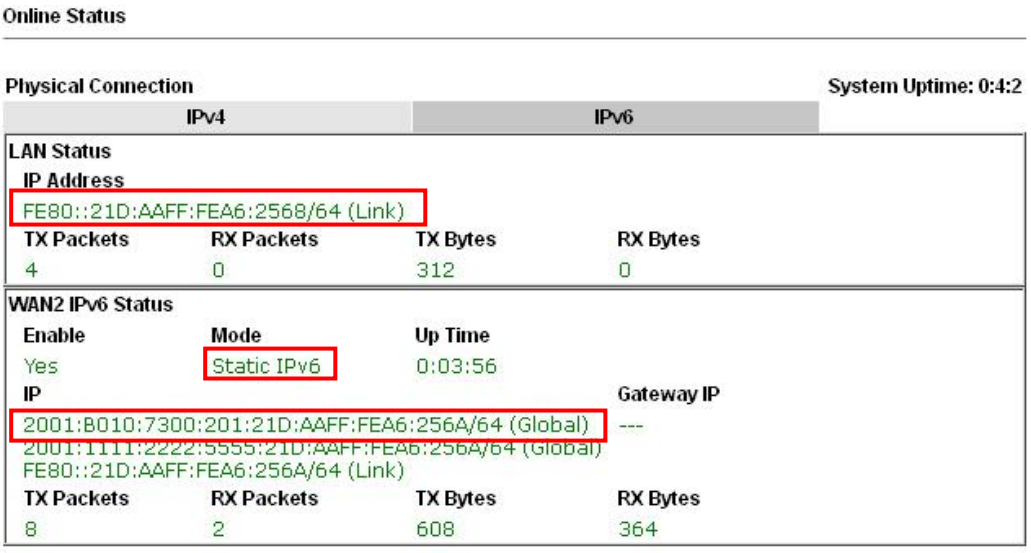

II. Configuring the LAN Settings

After finished the WAN settings for IPv6, please configure the LAN settings to make the router's client getting the IPv6 address.

1. Access into the web user interface of Viogr2860. Open **LAN**>> **General Setup**. Click the **IPv6** button.

> **Note**: Only the subnet of **LAN1** supports IPv6 feature.

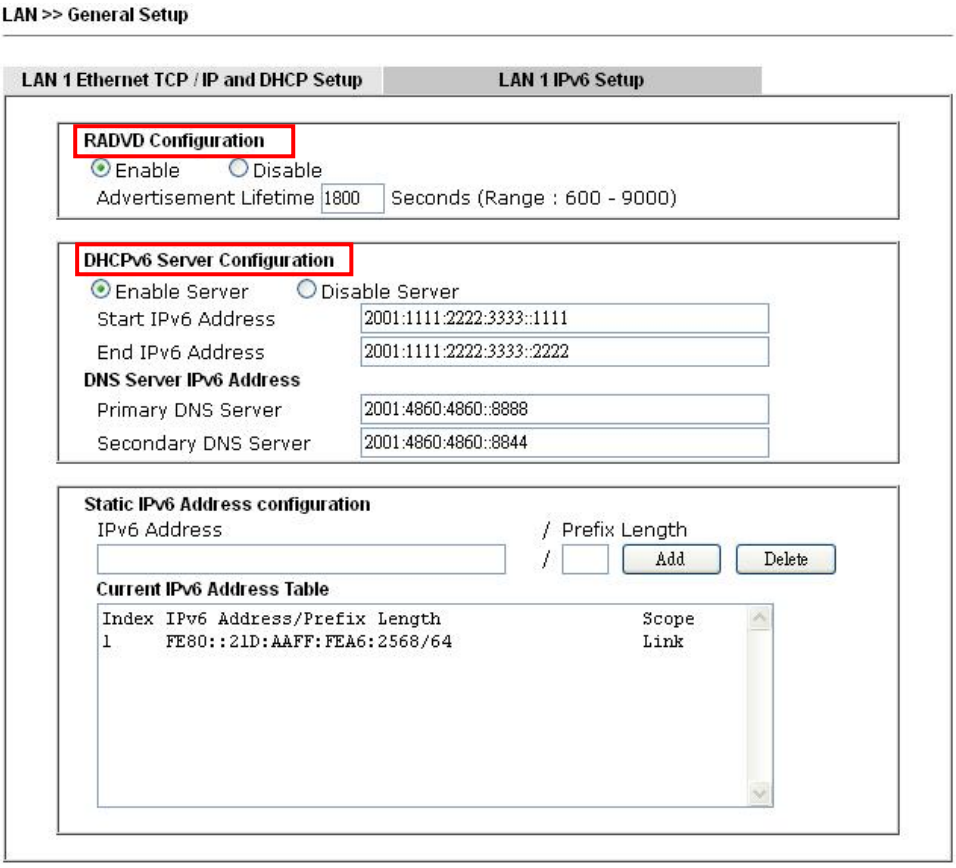

2. In the field of **RADVD Configuration**, the default setting is **Enable**. The client's PC will ask RADVD service for the Prefix of IPv6 address automatically, and generate an Interface ID by itself to compose a full and unique IPv6 address.

3. In the field of **HCPv6 Server Configuration**, when DHCPv6 service is enabled, you can assign available IPv6 address for the client manually.

> **Note:** When both mechanisms are enabled, the client can determine which mechanism to be used (e.g., the default mechanism for Windows7 is RADVD).

III. Confirming IPv6 Service Run Successfully

1. Make sure you have get the correct IPv6 IP address. Get into MS-DOS interface and type the command of “ipconfig”. Refer to the following figure.

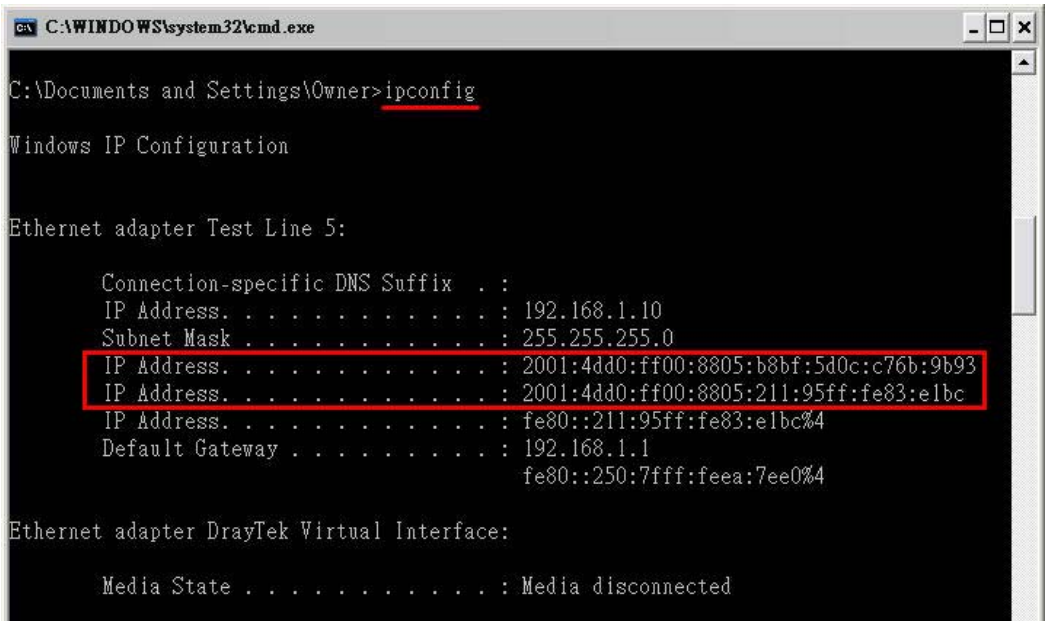
C:\WINDOWS\system32\cmd.exe
C:\Documents and Settings\Owner>ipconfig
Windows IP Configuration
Ethernet adapter Test Line 5:
Connection-specific DNS Suffix . :
IP Address. . . . . : 192.168.1.10
Subnet Mask . . . . . : 255.255.255.0
IP Address. . . . . : 2001:4dd0:ff00:8805:b8bf:5d0c:c76b:9b93
IP Address. . . . . : 2001:4dd0:ff00:8805:211:95ff:fe83:e1bc
IP Address. . . . . : fe80::211:95ff:fe83:e1bc%4
Default Gateway . . . . . : 192.168.1.1
fe80::250:7fff:feea:7ee0%4
Ethernet adapter DrayTek Virtual Interface:
Media State . . . . . : Media disconnected

From the above figure we can see IPv6 IP address has been captured by the system.

2. Use the Ping command to ping any IPv6 address indicating an IPv6 website. For example, www.kame.net is a website supporting IPv4 IP and IPv6 IP services. Its IPv6 address is seen with a format of 2001:200:dff:fff1:216:3eff:feb1:44d7.

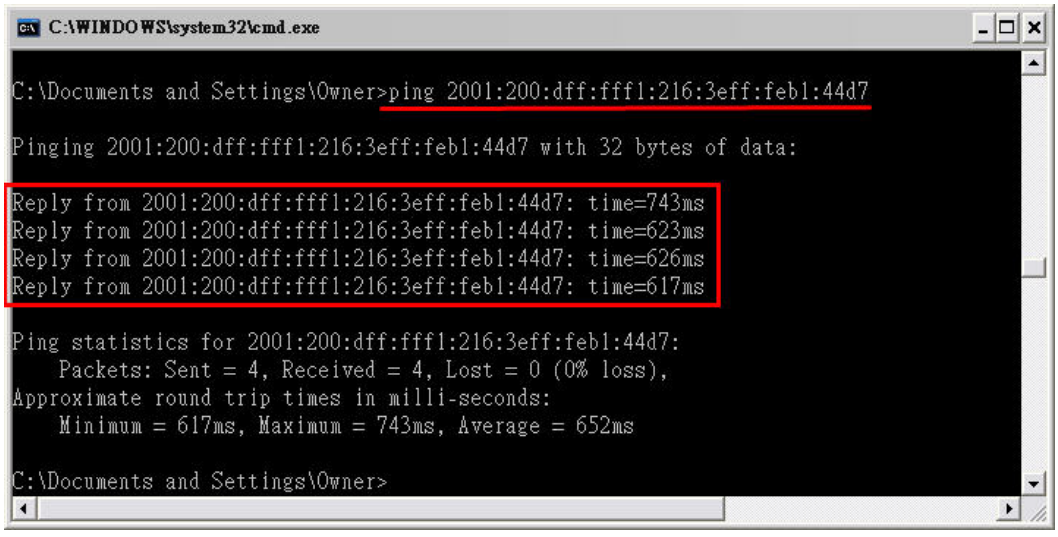
C:\WINDOWS\system32\cmd.exe
C:\Documents and Settings\Owner>ping 2001:200:dff:fff1:216:3eff:feb1:44d7
Pinging 2001:200:dff:fff1:216:3eff:feb1:44d7 with 32 bytes of data:
Reply from 2001:200:dff:fff1:216:3eff:feb1:44d7: time=743ms
Reply from 2001:200:dff:fff1:216:3eff:feb1:44d7: time=623ms
Reply from 2001:200:dff:fff1:216:3eff:feb1:44d7: time=626ms
Reply from 2001:200:dff:fff1:216:3eff:feb1:44d7: time=617ms
Ping statistics for 2001:200:dff:fff1:216:3eff:feb1:44d7:
Packets: Sent = 4, Received = 4, Lost = 0 (0% loss),
Approximate round trip times in milli-seconds:
Minimum = 617ms, Maximum = 743ms, Average = 652ms
C:\Documents and Settings\Owner>

After getting the above message, it means the IPv6 service has been activated successfully.

3. Connect to the website for IPv6. Open a web browser and type an URL of IPv6, e.g., www.kame.net. If your computer accesses into the website by using IPv6 address, you may see a turtle dancing on the screen. If not, only a steady turtle will be seen.

If you can see a turtle dancing on the screen, that means IPv6 service is ready for you to access and utilize.

4.2 How to establish OpenVPN - host to LAN tunnels(authenticated without CA) via SmartVPN Client?

OpenVPN is an open source software application that implements virtual private network (VPN) techniques for creating secure point-to-point or site-to-site connections in routed or bridged configurations and remote access facilities. OpenVPN uses a custom security protocol that utilizes SSL/TLS for key exchange. It is capable of traversing network address translators (NATs) and firewalls.

OpenVPN allows remote users to authenticate for each other using a pre-shared secret key, certificate, or username/password. When OpenVPN is used in a multi-client server configuration, it allows the server to release an authentication certificate for every client via signature and Certificate authority.

Below shows an illustration for successful OpenVPN tunnel established between Vigor router (Main Office) and notebook (Remote User). The OpenVPN settings for both ends shall be the same. Otherwise, the VPN connection is unable to establish successfully.

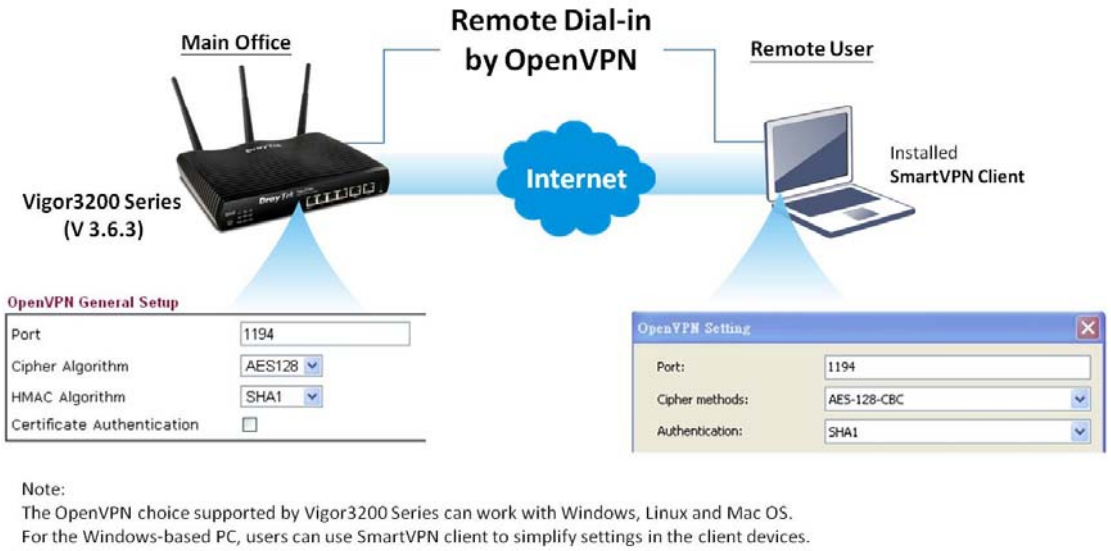

Note:
The OpenVPN choice supported by Vigor3200 Series can work with Windows, Linux and Mac OS.
For the Windows-based PC, users can use SmartVPN client to simplify settings in the client devices.

Note: Before configuring settings for OpenVPN, you should install **SmartVPN Client 4.1.0.1** on your PC and latest firmware version on your Vigor router.

Settings for Router (Main Office)

1. Access into the web user interface of Vigor router.
2. Open **VPN and Remote Access >> OpenVPN General Setup** to configure the OpenVPN setting with **disabled** Certificate Authentication. Click **OK** to save the settings.

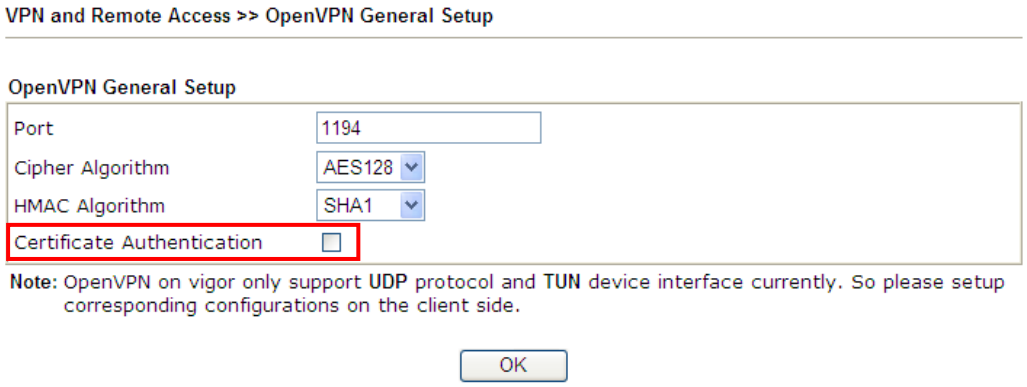
VPN and Remote Access >> OpenVPN General Setup
OpenVPN General Setup
Port
1194
Cipher Algorithm
AES128
HMAC Algorithm
SHA1
Certificate Authentication
Note: OpenVPN on vigor only support UDP protocol and TUN device interface currently. So please setup corresponding configurations on the client side.
OK

3. Open **VPN and Remote Access >> Remote Dial-in User** to create a profiles for Dial-in User. Set the Username (e.g., jos) and Password (e.g., jos) for OpenVPN. Click **OK** to save the settings.

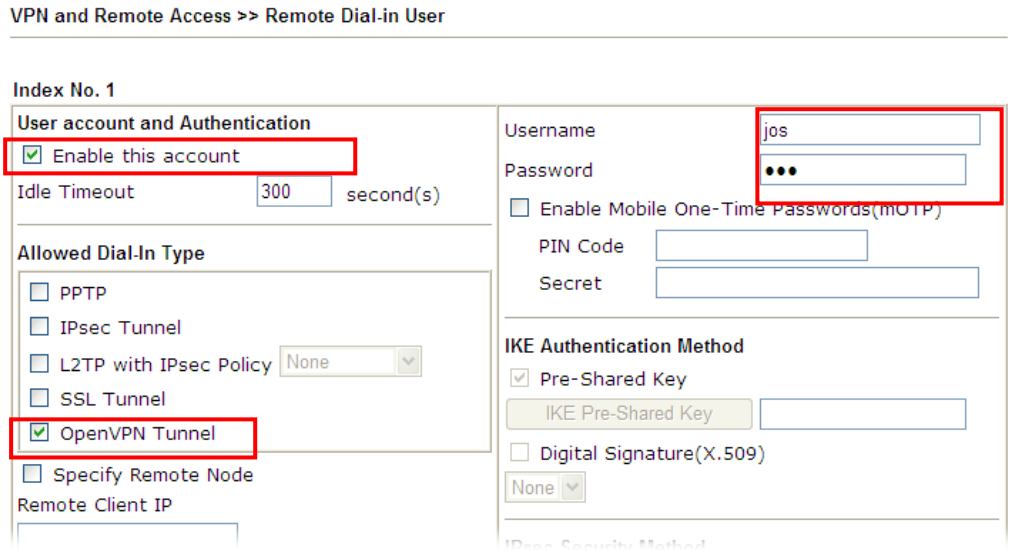

Settings for PC (Remote User)

1. Execute **SmartVPN Client.** Click **Insert** to create a new dial-in VPN profile (e.g., Profile 6).

DrayTek Smart VPN Client 4.1.0.1
DrayTek
Smart VPN Client
Step 0. Enable/Allow IPSec NAT-Traversal and L2TP
This step will add the ProhibitIpSec registry value and the AssumeUDPEncapsulationContextOnSendRule registry value to computer. For more infomation, please read the article Q240262 and Q818043 in the Microsoft Knowledgement Base.
Configure
Step 1. Dial to ISP
If you have already gotten a public IP, you can skip this step.
Dial
Step 2. Connect to VPN Server
Connect
Insert
Remove
Setup
Auto-Run when start up:
Status: No connection
OpenVPN
ISP
VPN

2. Type a name (e.g., Profile 6) as the **Profile Name** and an IP address (e.g., 200.200.200.200) as VPN Server IP. Set jos/jos as the **User Name**/**Password**. Click **OpenVPN** as the type of VPN and click **OK** to display the **OpenVPN Setting** dialog.

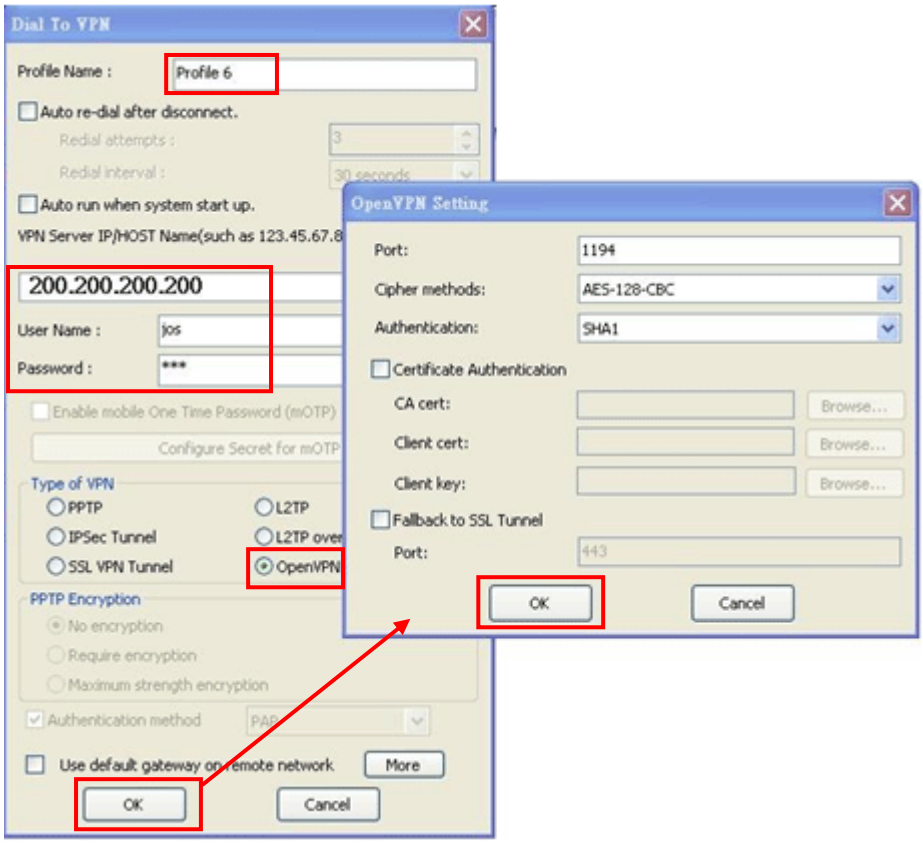

3. Configure the Port number, Cipher methods and Authentication as the settings defined above. Then click **OK**.

Checking the VPN Connection Status

Now both ends (router and remote PC) are configured well.

1. Access into the web user interface of Vigor router.
2. Open **VPN and Remote Access>>Connection Management** to check the VPN connection status. From the following figure, we can know that the remote user can access the Vigor router's LAN successfully by using the username/password (jos/jos).

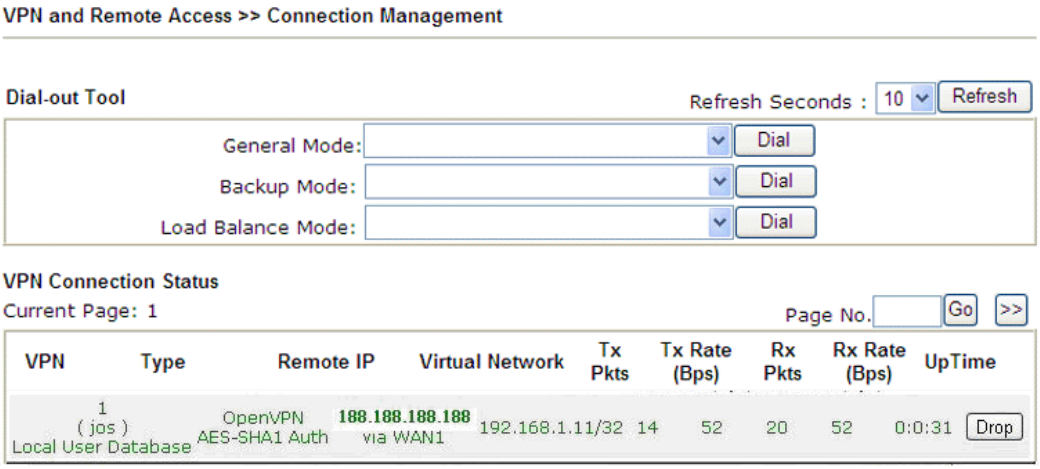

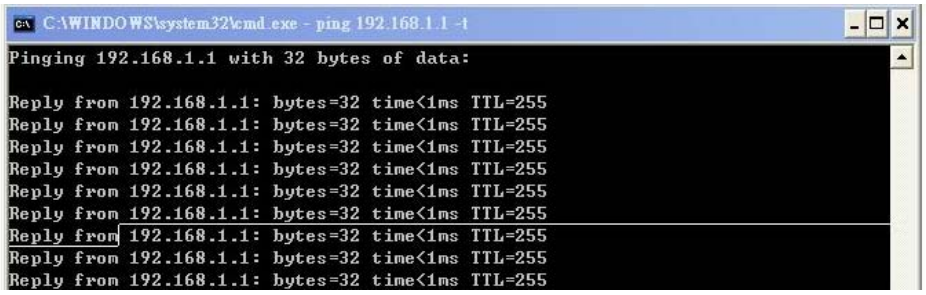
C:\WINDOWS\system32\cmd.exe - ping 192.168.1.1 -t
Pinging 192.168.1.1 with 32 bytes of data:
Reply from 192.168.1.1: bytes=32 time<1ms TTL=255
Reply from 192.168.1.1: bytes=32 time<1ms TTL=255
Reply from 192.168.1.1: bytes=32 time<1ms TTL=255
Reply from 192.168.1.1: bytes=32 time<1ms TTL=255
Reply from 192.168.1.1: bytes=32 time<1ms TTL=255
Reply from 192.168.1.1: bytes=32 time<1ms TTL=255
Reply from 192.168.1.1: bytes=32 time<1ms TTL=255
Reply from 192.168.1.1: bytes=32 time<1ms TTL=255
Reply from 192.168.1.1: bytes=32 time<1ms TTL=255

4.3 How can I get the files from USB storage device connecting to Vigor router?

Files on USB storage device can be reviewed by opening **USB Applicaiton>>File Explorer.** If it is necessary for you to delete, copy files on the device or write, paste files to the devcie, it must be done through SAMBA server or FTP server.

Samba service is based on the original USB FTP service. You will need to setup USB FTP first. We would like to give brief instructions on USB FTP setup here.

1. Plug the USB device to the USB port on the router. Make sure **Disk Connected** appears on the **Connection Status** as the figure shown below:

Note: If the write protect switch of USB disk is turned on, the USB disk is in **READ-ONLY** mode. No data can be written to it.

2. Then, please open **USB Application >> USB General Settings** to enable Samba service.

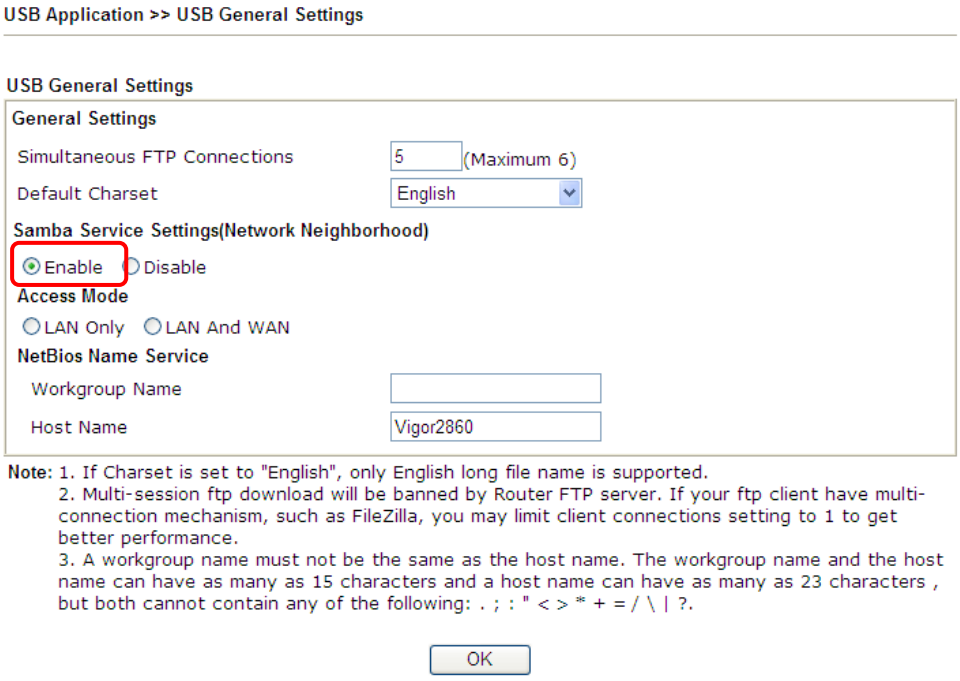

Note: 1. If Charset is set to "English", only English long file name is supported.
2. Multi-session ftp download will be banned by Router FTP server. If your ftp client have multi-connection mechanism, such as FileZilla, you may limit client connections setting to 1 to get better performance.
3. A workgroup name must not be the same as the host name. The workgroup name and the host name can have as many as 15 characters and a host name can have as many as 23 characters , but both cannot contain any of the following: . ; : " < > * + = / \ | ?.

3. Setup a user account for the FTP service by using **USB Application >>USB User Management.** Click **Enable** to enable FTP/Samba User account. Here we add a new account "user1" and assign authorities “Read”, “Write” and “List” to it.

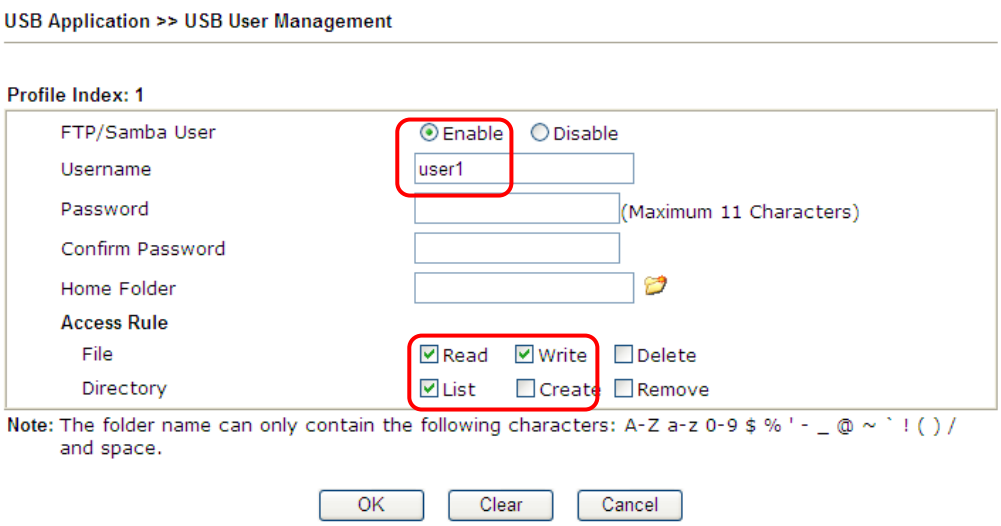

4. Click **OK** to save the configuration.

5. Make sure the FTP service is running properly. Please open a browser and type *ftp://192.168.1.1*. Use the account "**user1**" to login.

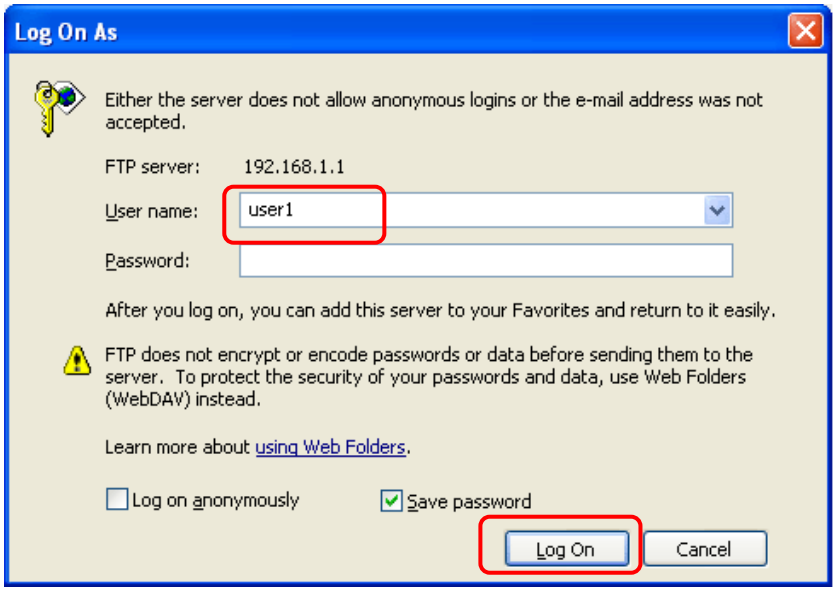
Log On As
Either the server does not allow anonymous logins or the e-mail address was not accepted.
FTP server: 192.168.1.1
User name: user1
Password:
After you log on, you can add this server to your Favorites and return to it easily.
FTP does not encrypt or encode passwords or data before sending them to the server. To protect the security of your passwords and data, use Web Folders (WebDAV) instead.
Learn more about using Web Folders.
Log on anonymously
Save password
Log On
Cancel

6. When the following screen appears, it means the FTP service is running properly.

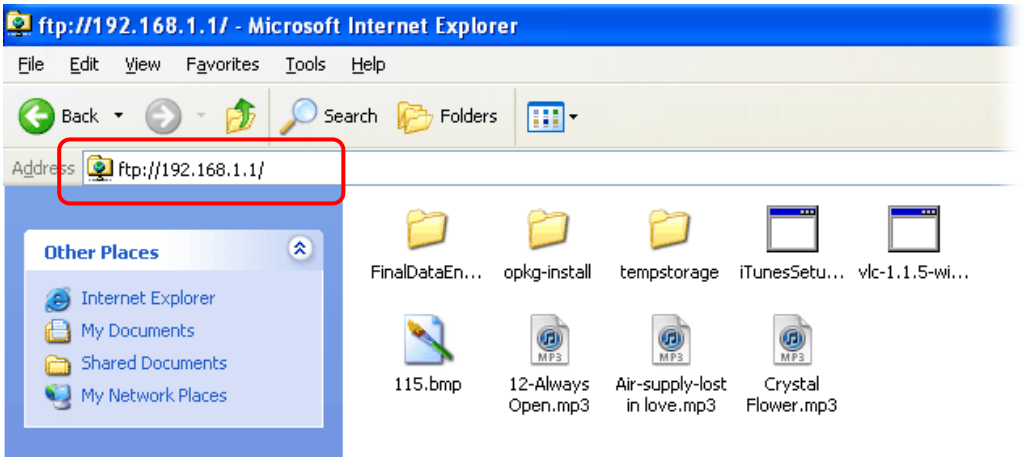

7. Return to **USB Application >> USB Disk Status**. The information for FTP server will be shown as below.

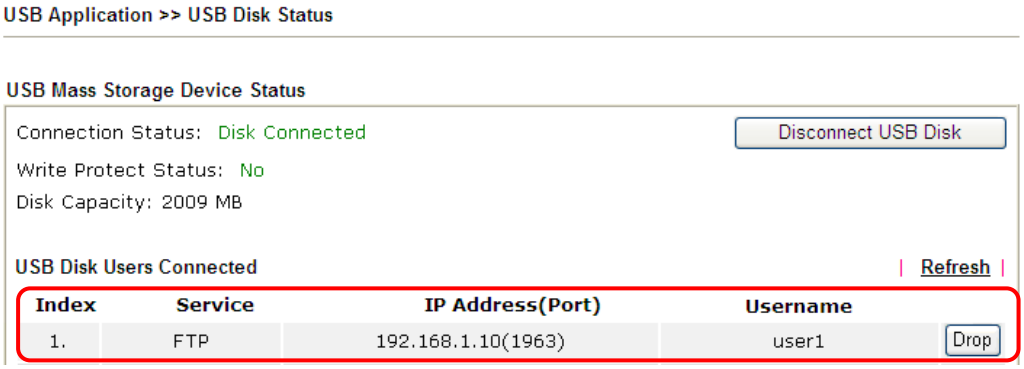
USB Application >> USB Disk Status
USB Mass Storage Device Status
Connection Status: Disk Connected
Disconnect USB Disk
Write Protect Status: No
Disk Capacity: 2009 MB
USB Disk Users Connected
Refresh
Index Service IP Address(Port) Username
1. FTP 192.168.1.10(1963) user1 Drop

Now, users in LAN of Vigor2710 can access into the USB storage device by typing ftp://192.168.1.1 on any browser. They can add or remove files / directories, depending on the Access Rule for FTP account settings in **USB Application >>USB User Management.**

4.4 How to Build a LAN-to-LAN VPN Between Remote Office and Headquarter via IPSec Tunnel (Main Mode)

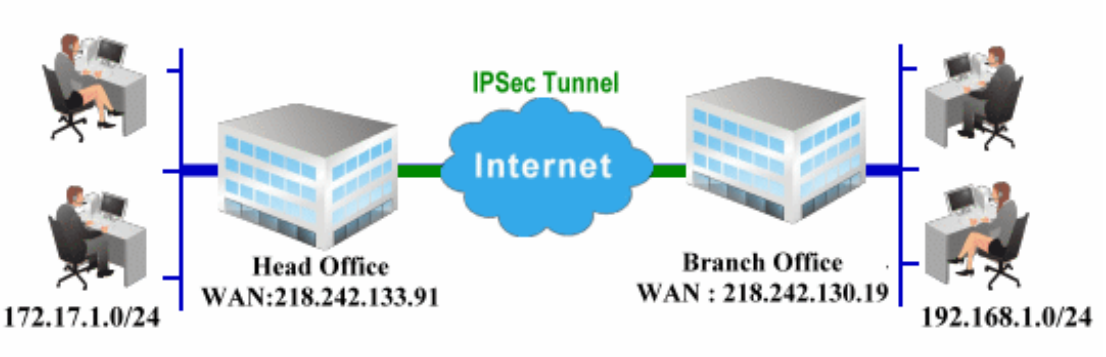

Configuration on Vigor Router for Head Office

1. Log into the web user interface of Vigor router.
2. Open **VPN and Remote Access>>LAN to LAN** to create a LAN-to-LAN profile. The following settings are for a permanent VPN connection.

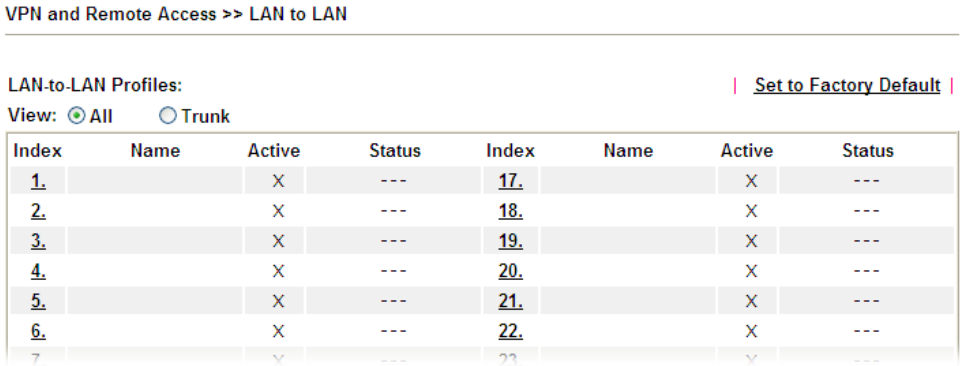
VPN and Remote Access >> LAN to LAN
LAN-to-LAN Profiles:
Set to Factory Default
View: All Trunk
Index Name Active Status Index Name Active Status
1. X --- 17. X ---
2. X --- 18. X ---
3. X --- 19. X ---
4. X --- 20. X ---
5. X --- 21. X ---
6. X --- 22. X ---

3. Click any index number to open the configuration page. Type a name which is easy for identification for such profile (in this case, type *VPN Server*)**,** and check the box of **Enable This Profile**. For Vigor router will be set as a **server**, the call direction shall be set as **Dial-in** and set 0 as **Idle Timeout**.

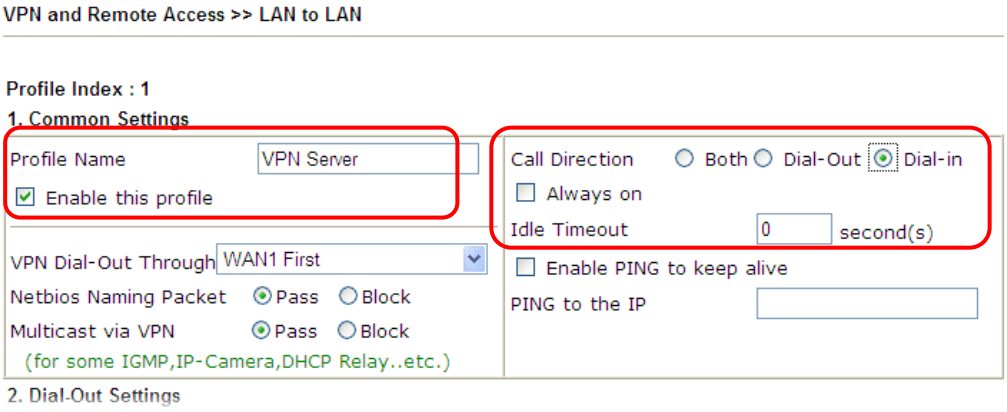
VPN and Remote Access >> LAN to LAN
Profile Index : 1
1. Common Settings
Profile Name VPN Server
Enable this profile
Call Direction Both Dial-Out Dial-in
Always on
Idle Timeout 0 second(s)
VPN Dial-Out Through WAN1 First
Enable PING to keep alive
Netbios Naming Packet Pass Block
PING to the IP
Multicast via VPN Pass Block
(for some IGMP,IP-Camera,DHCP Relay..etc.)
2. Dial-Out Settings

4. Now navigate to the next section, **Dial-In Settings** to check PPTP, IPSec Tunnel and L2TP boxes. Check the box of **Specify Remote…** and type the **Peer VPN Server IP** (e.g., 218.242.130.19 in this case). Press the **IKE Pre-Shared Key** button to set the **PSK**; and select **Medium (AH)** or **High (ESP)** as the security method.

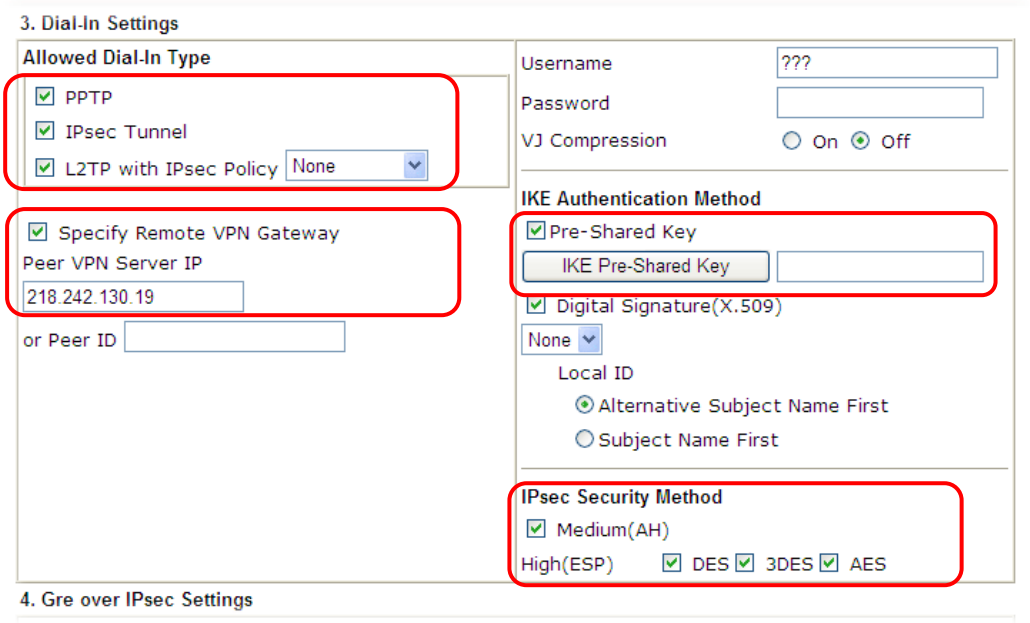

5. Continue to navigate to the **TCP/IP Network Settings** for setting the LAN IP for remote side.

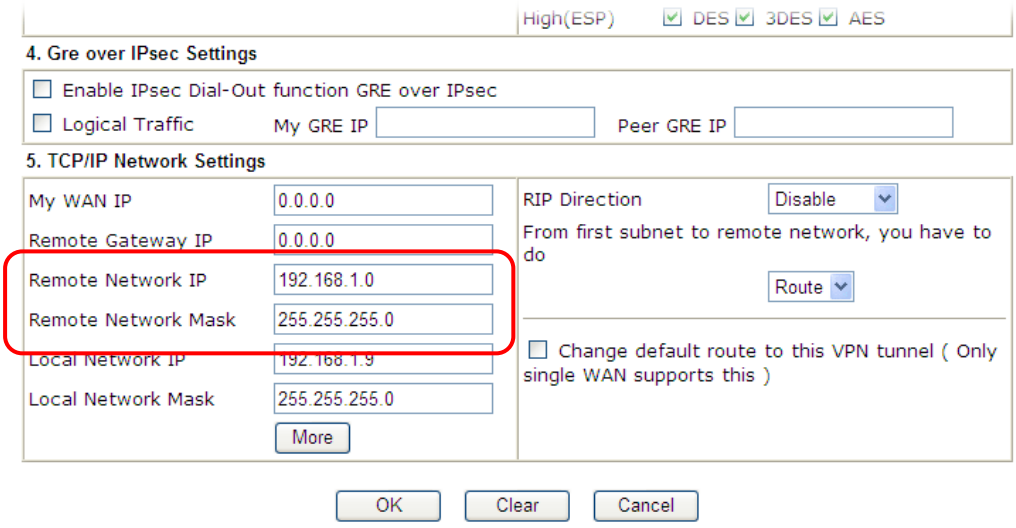

6. Click **OK** to save the settings.

7. Open **VPN and Remote Access>>Connection Management** to check the dial-in connection status (from branch office).

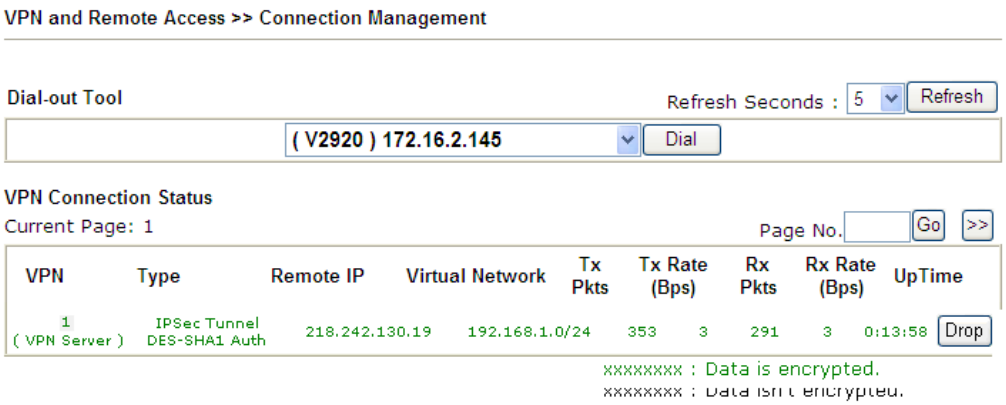

Configuration on Vigor Router for Branch Office

1. Log into the web user interface of Vigor router.
2. Open **VPN and Remote Access>>LAN to LAN** to create a LAN-to-LAN profile. The following settings are for a permanent VPN connection.

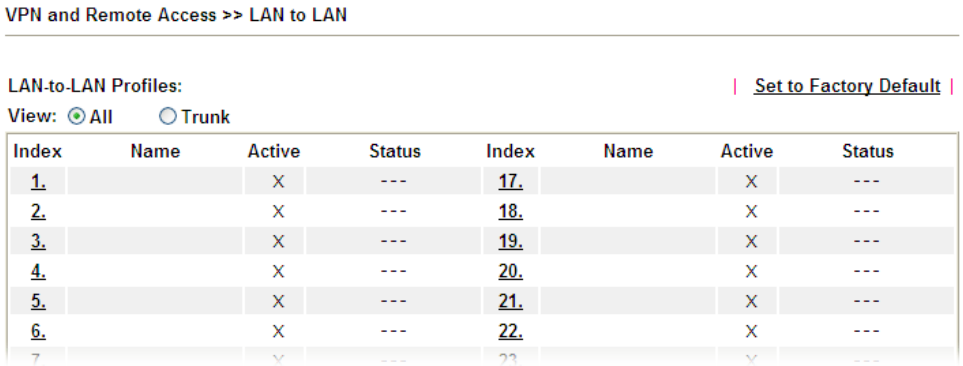

3. Click any index number to open the configuration page. Type a name which is easy for identification for such profile (in this case, type *VPN Client*)**,** and check the box of **Enable This Profile**. For such Vigor router will be set as a **client**, the call direction shall be set as **Dial-out.** Check the box of **Always on** for a permanent VPN connection.

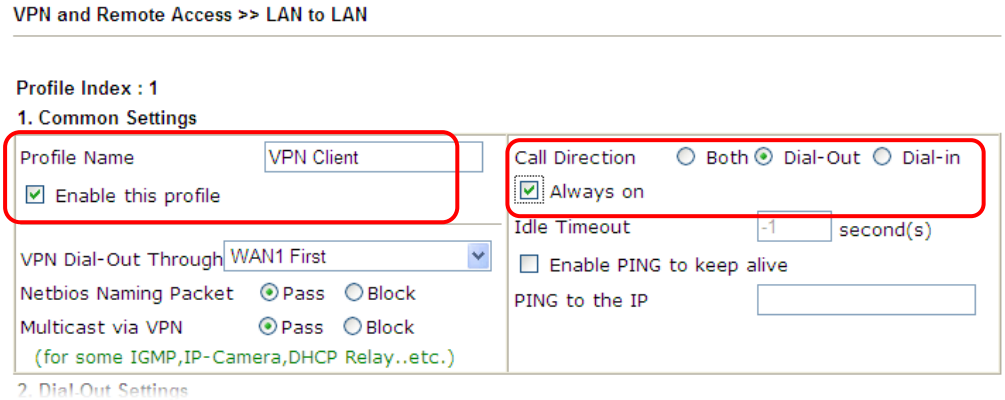

4. Now navigate to the next section, **Dial-Out Settings** to select the **IPSec Tunnel** service and type the remote server IP/host name (e.g., 218.242.133.91, in this case). Press the **IKE Pre-Shared Key** button to set the **PSK**; and select **Medium (AH)** or **High (ESP)** as the security method.

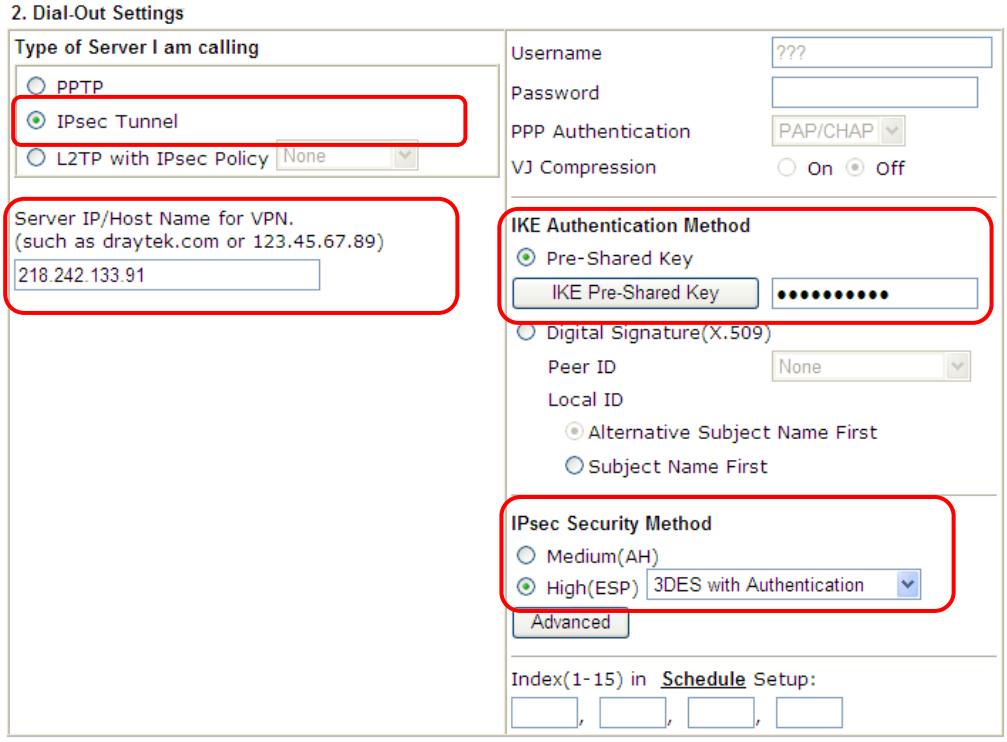

5. Continue to navigate to the **TCP/IP Network Settings** for setting the LAN IP for the remote side.

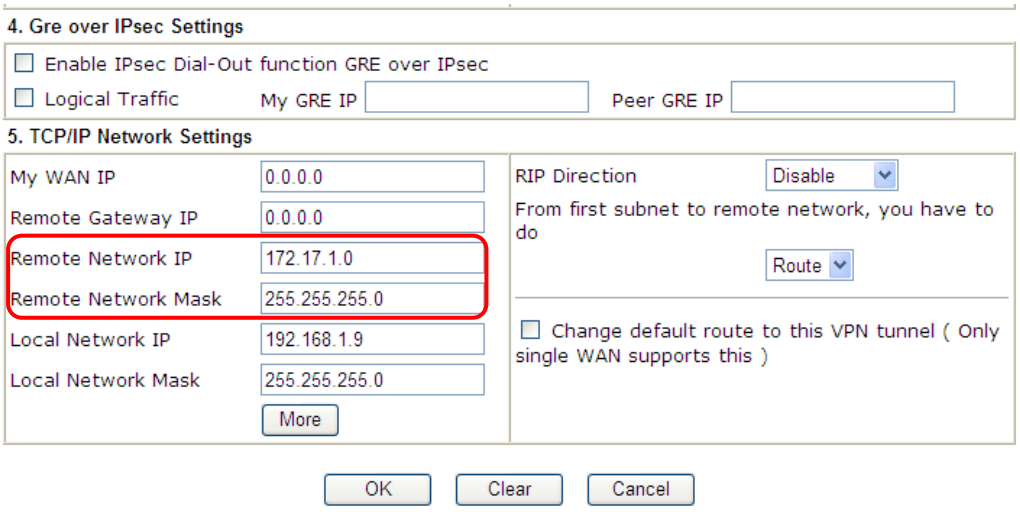

6. Click **OK** to save the settings.

7. Open **VPN and Remote Access>>Connection Management** to check the dial-in connection status (from head office).

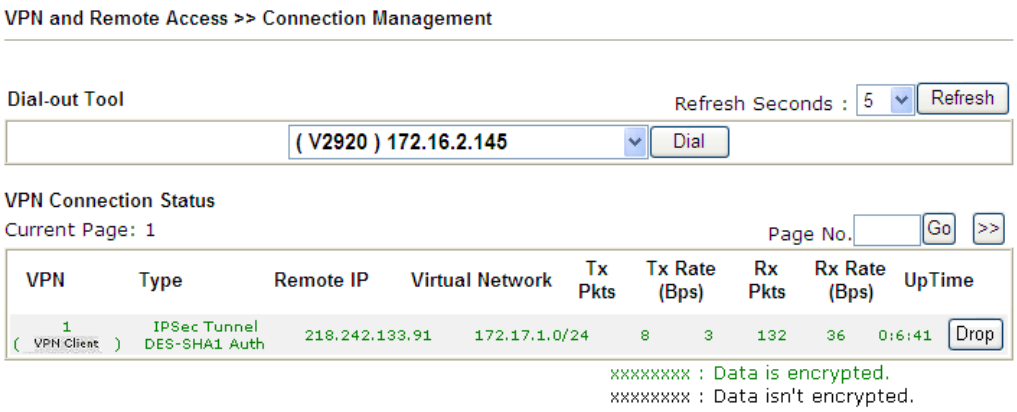

4.5 How to Optimize the Bandwidth through QoS Technology

Have you ever gotten any problems in uploading/downloading files (Voice, video or email/data only) with the narrow/districted bandwidth you may share from the common Internet connection line? The advanced bandwidth management technology-QoS (Quality of Service) helps you to well allocate the bandwidth upon your demand of Voice, Video, or Data transferring. Let's see how to get the optimum bandwidth per your request by using DrayTek Vigor router as below.

Scenario: The Internet connection you got from ISP line is 2MB/512Kb. There are VoIP telephony network, IPTV set top box and data server at your home. Assume you want to allocate 30% of the bandwidth you got to VoIP demand, 50% for IPTV, 15% for mail/data, 5% for others. Let's see how easily it is to do the setting as below:

1. Open **Bandwidth Management>> Quality of Service**.

2. You will get the following page. Click the **Edit** link for **Class 1**.

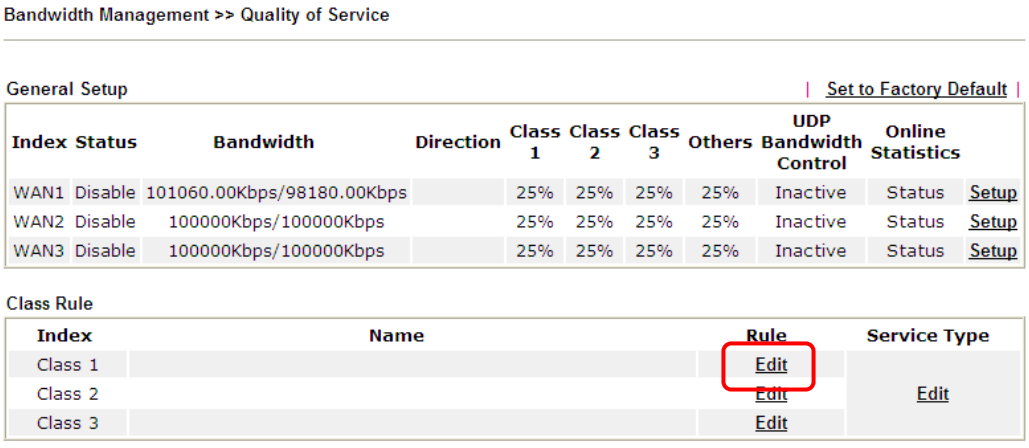

3. In the following page, type a name (e.g., VoIP) for such class and click **Add**.

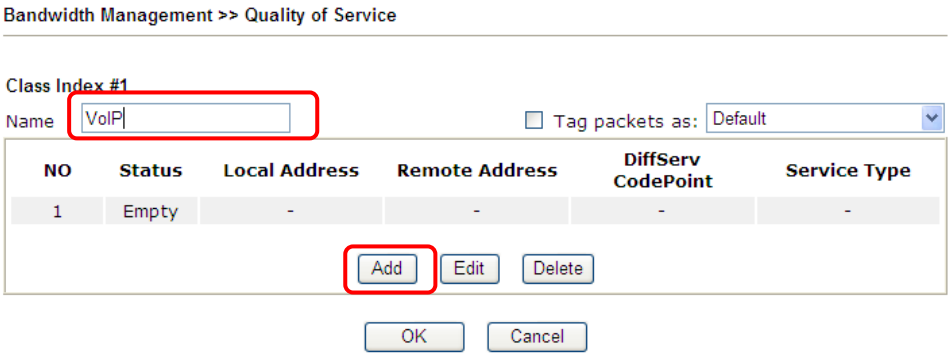

4. Check the box of **ACT**. Click **Edit** to specify the local address.

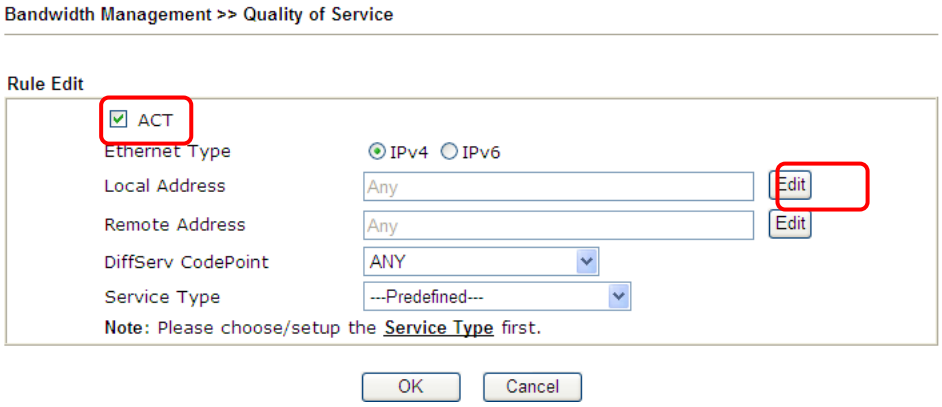

5. In the pop-up window, choose **Range Address** as the **Address Type** and type the start IP address and end IP address in relational fields. Click **OK** to save the settings and exit the window.

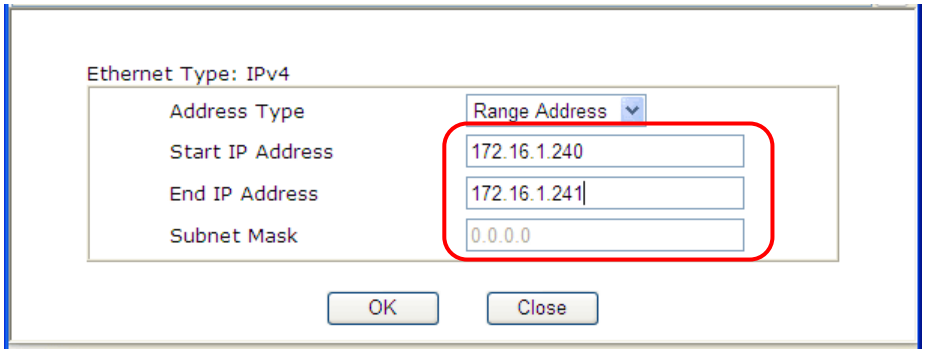

6. Click **OK** again to save the settings.

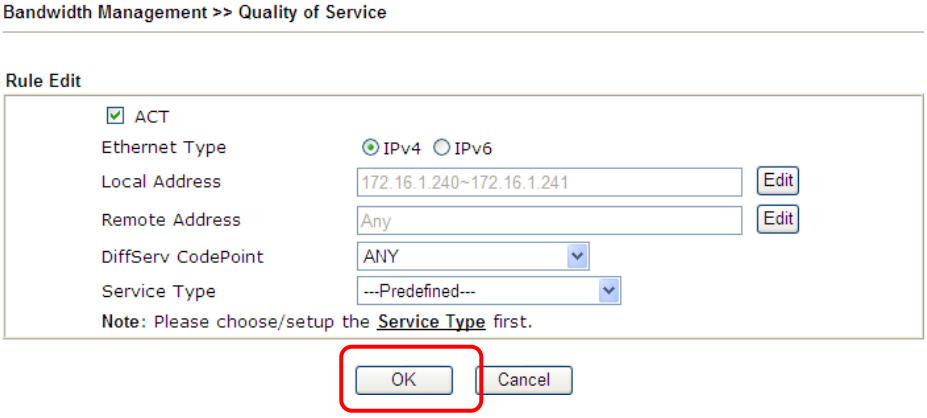

7. The class rule for VoIP has been set. Click **OK** to return to previous page.

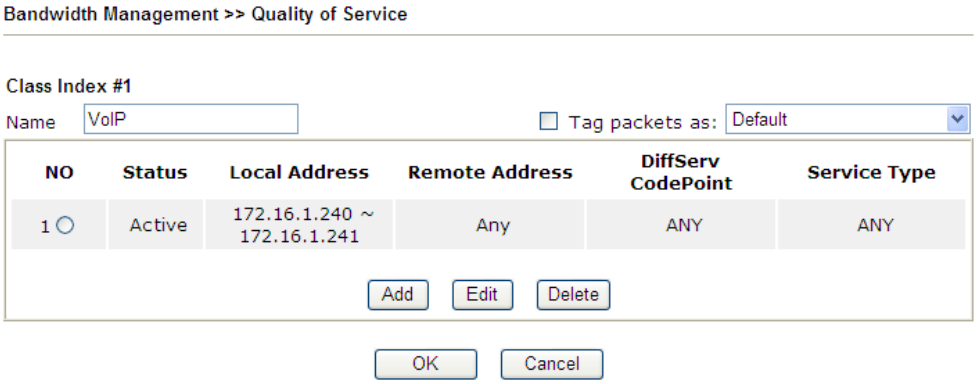
Bandwidth Management >> Quality of Service
Class Index #1
Name VoIP
Tag packets as: Default
NO Status Local Address Remote Address DiffServ CodePoint Service Type
1 Active 172.16.1.240 ~ 172.16.1.241 Any ANY ANY
Add Edit Delete
OK Cancel

8. Do the same steps to add class rules for IPTV and Data/Email with IP addresses as shown below.

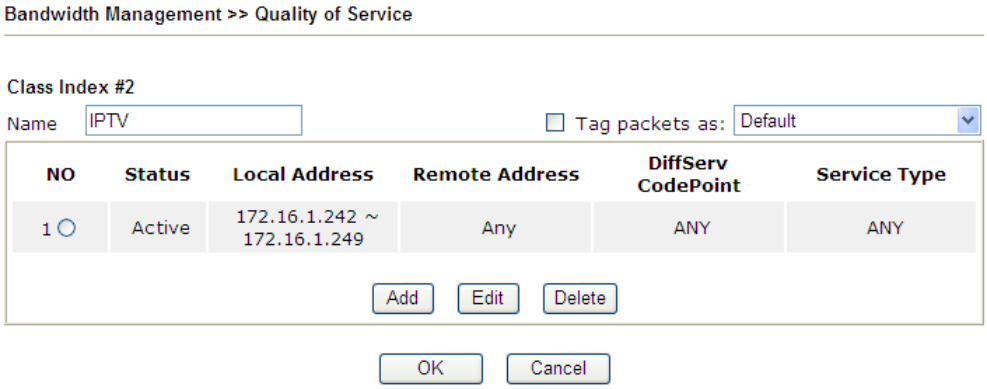
Bandwidth Management >> Quality of Service
Class Index #2
Name IPTV
Tag packets as: Default
NO Status Local Address Remote Address DiffServ CodePoint Service Type
1 Active 172.16.1.242 ~ 172.16.1.249 Any ANY ANY
Add Edit Delete
OK Cancel

and

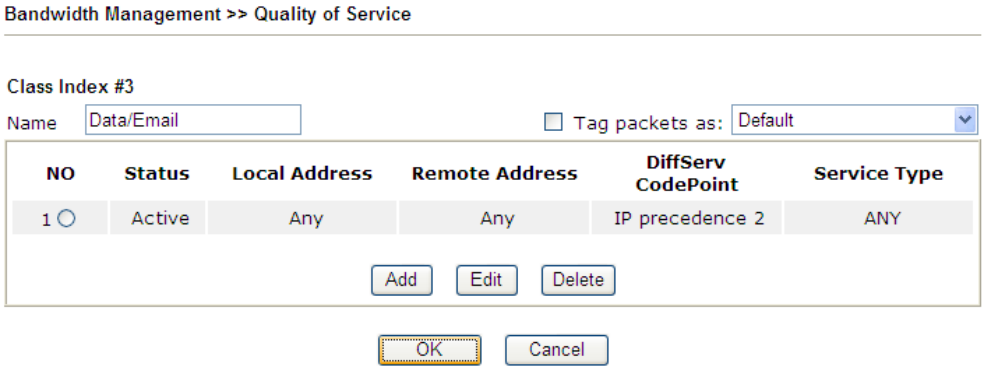
Bandwidth Management >> Quality of Service
Class Index #3
Name Data/Email
Tag packets as: Default
NO Status Local Address Remote Address DiffServ CodePoint Service Type
1 Active Any Any IP precedence 2 ANY
Add Edit Delete
OK Cancel

9. Assuming you get 2MB/512Kb Internet line. You can click the **Setup** link of WAN1 to set up the bandwidth for different groups among VoIP, IPTV and Data/Email.

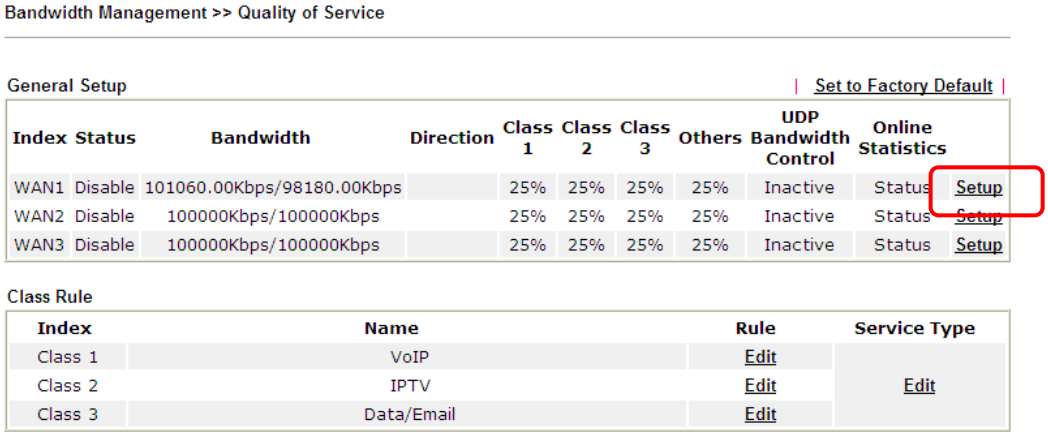
Bandwidth Management >> Quality of Service
General Setup
Set to Factory Default
Index Status Bandwidth Direction Class 1 Class 2 Class 3 Others UDP Bandwidth Control Online Statistics
WAN1 Disable 101060.00Kbps/98180.00Kbps 25% 25% 25% 25% Inactive Status Setup
WAN2 Disable 100000Kbps/100000Kbps 25% 25% 25% 25% Inactive Status Setup
WAN3 Disable 100000Kbps/100000Kbps 25% 25% 25% 25% Inactive Status Setup
Class Rule
Index Name Rule Service Type
Class 1 VoIP Edit
Class 2 IPTV Edit Edit
Class 3 Data/Email Edit

10. In the Setup page, check the box of **Enable the QoS Control**. Type 30, 50 and 15 in the boxes for VoIP, IPTV and Data/Email respectively. Check the box of **Enable UDP Bandwidth Control**.

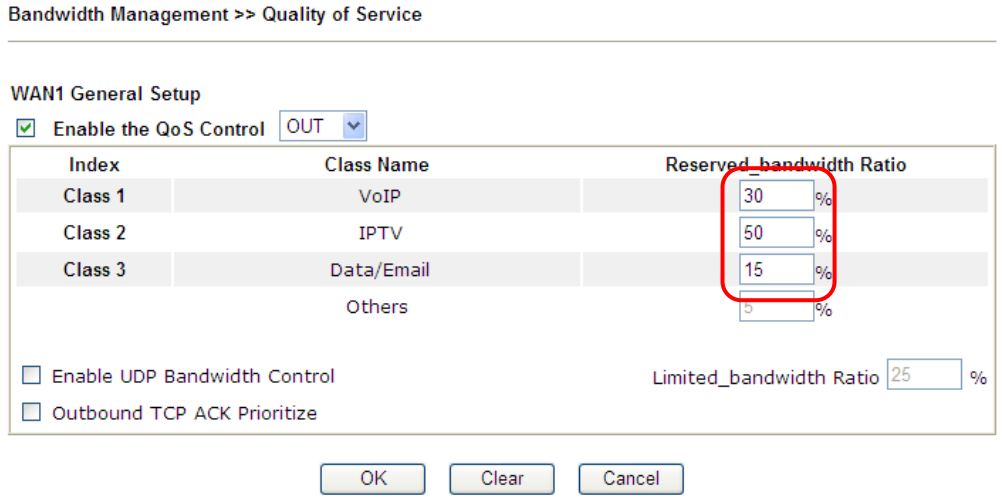

11. Click **OK** to save the settings. The class rules for WAN1 are defined as shown below.

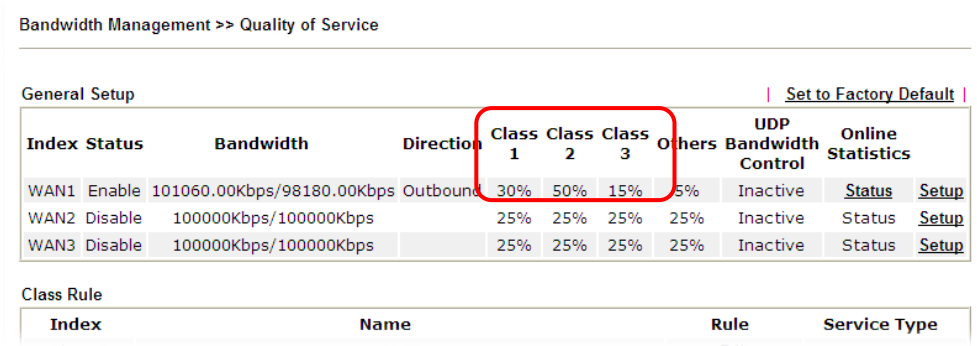
Bandwidth Management >> Quality of Service
General Setup
Set to Factory Default
Index Status Bandwidth Direction Class 1 Class 2 Class 3 Others UDP Bandwidth Control Online Statistics
WAN1 Enable 101060.00Kbps/98180.00Kbps Outbound 30% 50% 15% 5% Inactive Status Setup
WAN2 Disable 100000Kbps/100000Kbps 25% 25% 25% 25% Inactive Status Setup
WAN3 Disable 100000Kbps/100000Kbps 25% 25% 25% 25% Inactive Status Setup
Class Rule
Index Name Rule Service Type

4.6 QoS Setting Example

Assume a teleworker sometimes works at home and takes care of children. When working time, he would use Vigor router at home to connect to the server in the headquarter office downtown via either HTTPS or V PN to check email and access internal database. Meanwhile, children may chat on Skype in the restroom.

1. Go to **Bandwidth Management>>Quality of Service.**

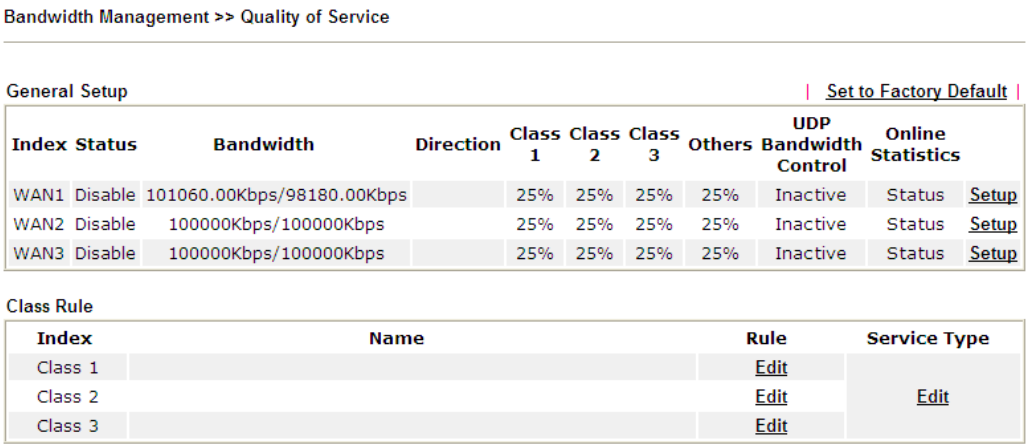
Bandwidth Management >> Quality of Service
General Setup
Set to Factory Default
Index Status Bandwidth Direction Class 1 Class 2 Class 3 Others UDP Bandwidth Control Online Statistics
WAN1 Disable 101060.00Kbps/98180.00Kbps 25% 25% 25% 25% Inactive Status Setup
WAN2 Disable 100000Kbps/100000Kbps 25% 25% 25% 25% Inactive Status Setup
WAN3 Disable 100000Kbps/100000Kbps 25% 25% 25% 25% Inactive Status Setup
Class Rule
Index Name Rule Service Type
Class 1 Edit
Class 2 Edit Edit
Class 3 Edit

2. Click **Setup** link of WAN(1/2/3). Make sure the QoS Control on the left corner is checked. And select **BOTH** in **Direction**.

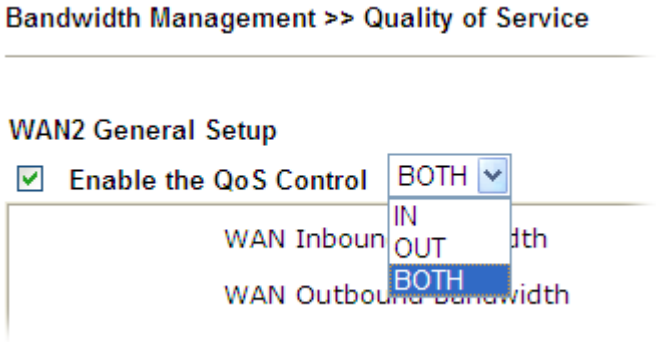

3. Set Inbound/Outbound bandwidth.

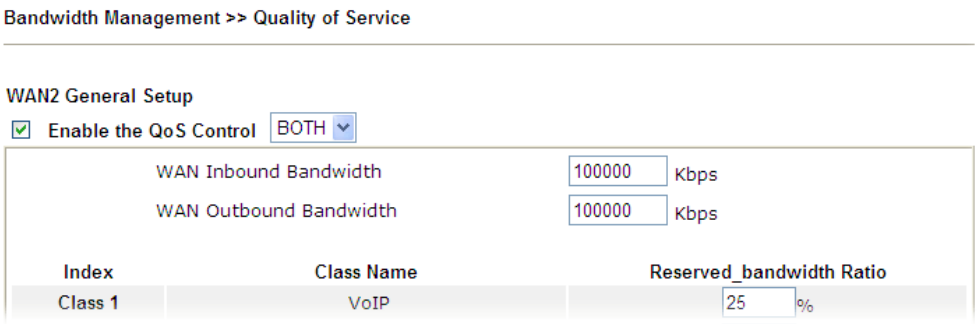

Note: The rate of outbound/inbound must be smaller than the real bandwidth to ensure correct calculation of QoS. It is suggested to set the bandwidth value for inbound/outbound as 80% - 85% of physical network speed provided by ISP to maximize the QoS performance.

4. Return to previous page. Enter the Name of Index Class 1 by clicking **Edit** link. Type the name "**E-mail**" for Class 1. Click **OK** to save the settings.

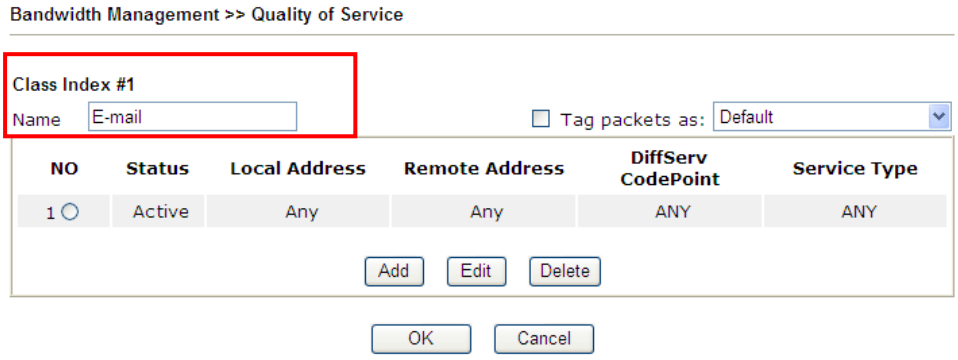
Bandwidth Management >> Quality of Service
Class Index #1
Name E-mail
Tag packets as: Default
NO Status Local Address Remote Address DiffServ CodePoint Service Type
1 Active Any Any ANY ANY
Add Edit Delete
OK Cancel

5. Click the **Setup** link for WAN2. The user can set reserved bandwidth (e.g., 25%) for **E-mail** using protocol POP3 and SMTP. Click **OK** to save the settings.

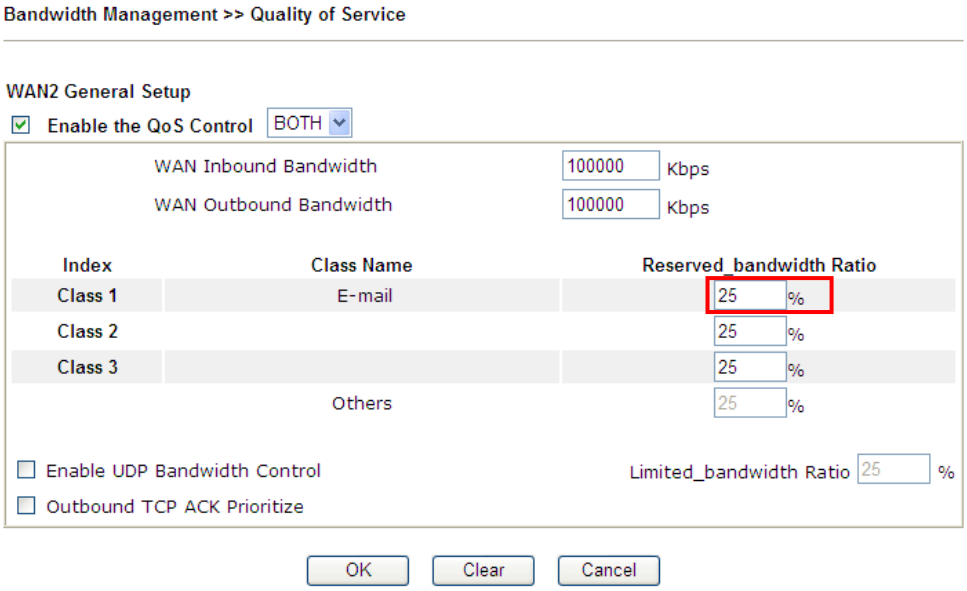
Bandwidth Management >> Quality of Service
WAN2 General Setup
Enable the QoS Control BOTH
WAN Inbound Bandwidth 100000 Kbps
WAN Outbound Bandwidth 100000 Kbps
Index Class Name Reserved_bandwidth Ratio
Class 1 E-mail 25 %
Class 2 25 %
Class 3 25 %
Others 25 %
Enable UDP Bandwidth Control
Limited_bandwidth Ratio 25 %
Outbound TCP ACK Prioritize
OK Clear Cancel

6. Return to previous page. Enter the Name of Index Class 2 by clicking **Edit** link. In this index, the user will set reserved bandwidth for **HTTPS**. And click **OK**.

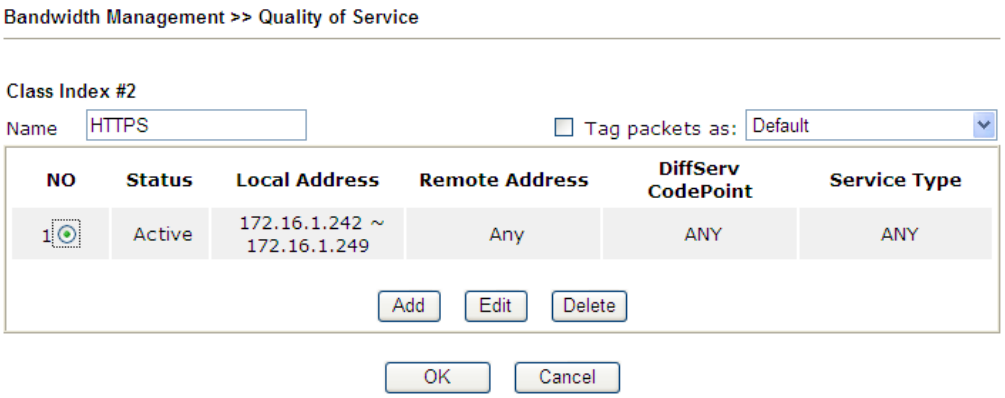
Bandwidth Management >> Quality of Service
Class Index #2
Name HTTPS
Tag packets as: Default
NO Status Local Address Remote Address DiffServ CodePoint Service Type
1 Active 172.16.1.242 ~ 172.16.1.249 Any ANY ANY
Add Edit Delete
OK Cancel

7. Click **Setup** link for WAN2.

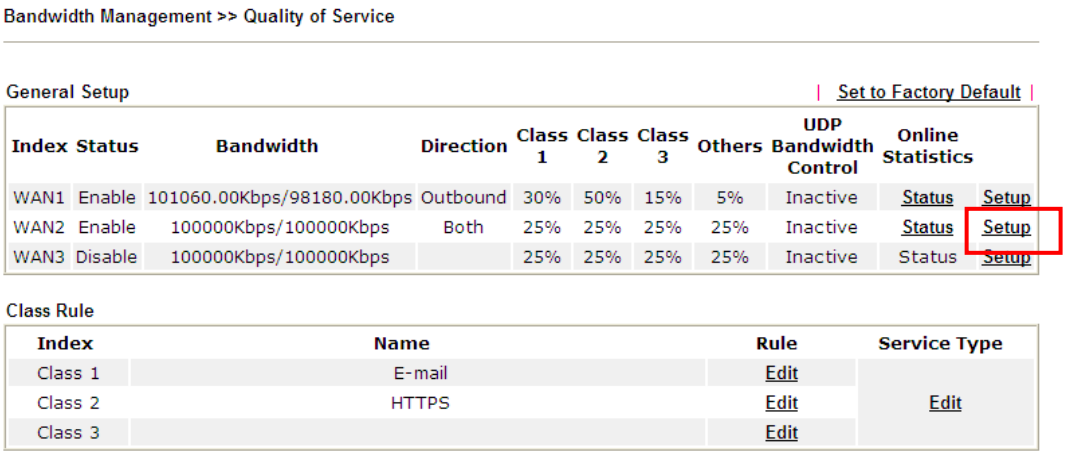
Bandwidth Management >> Quality of Service
General Setup
Set to Factory Default
Index Status Bandwidth Direction Class 1 Class 2 Class 3 Others UDP Bandwidth Control Online Statistics
WAN1 Enable 101060.00Kbps/98180.00Kbps Outbound 30% 50% 15% 5% Inactive Status Setup
WAN2 Enable 100000Kbps/100000Kbps Both 25% 25% 25% 25% Inactive Status Setup
WAN3 Disable 100000Kbps/100000Kbps 25% 25% 25% 25% Inactive Status Setup
Class Rule
Index Name Rule Service Type
Class 1 E-mail Edit
Class 2 HTTPS Edit Edit
Class 3 Edit

8. Check **Enable UDP Bandwidth Control** on the bottom to prevent enormous UDP traffic influent other application. Click **OK**.

Bandwidth Management >> Quality of Service
WAN2 General Setup
Enable the QoS Control BOTH
WAN Inbound Bandwidth 100000 Kbps
WAN Outbound Bandwidth 100000 Kbps
Index Class Name Reserved_bandwidth Ratio
Class 1 E-mail 25 %
Class 2 HTTPS 25 %
Class 3 25 %
Others 25 %
Enable UDP Bandwidth Control
Limited_bandwidth Ratio 25 %
Outbound TCP ACK Prioritize
OK Clear Cancel

9. If the worker has connected to the headquarter using host to host VPN tunnel. (Please refer to Chapter 3 VPN for detail instruction), he may set up an index for it. Enter the Class Name of Index 3. In this index, he will set reserved bandwidth for 1 VPN tunnel.

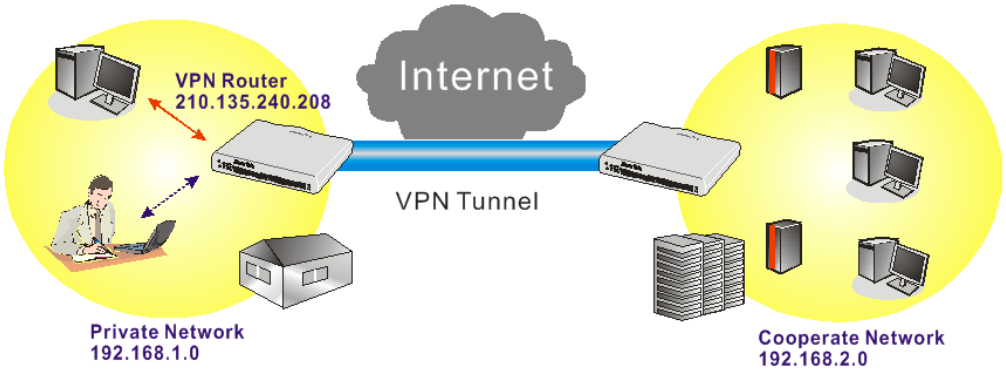

10. Click **Edit** for Class 3 to open a new window. In this index, the user will set reserved bandwidth for **VPN**.

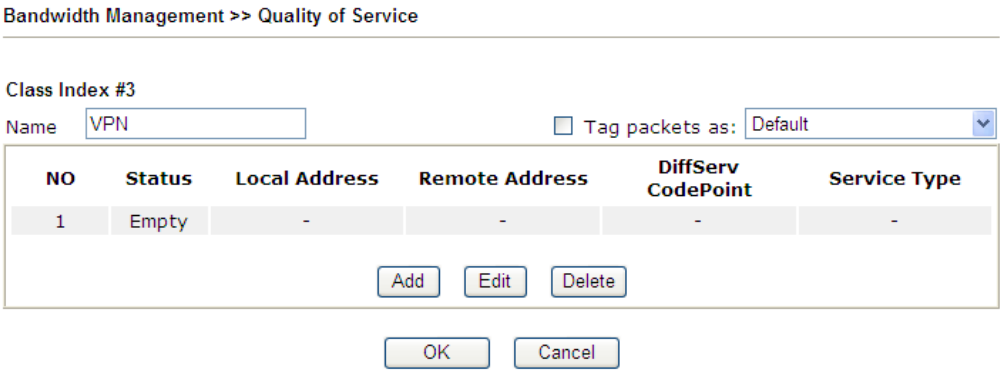

11. Click **Add** to open the following window. Check the **ACT** box, first.

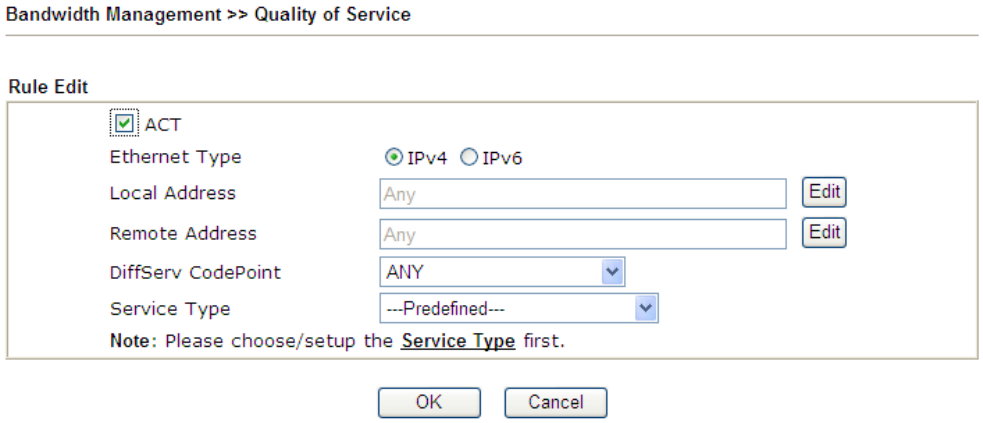

12. Then click **Edit** of **Local Address** to set a worker's subnet address. Click **Edit** of **Remote Address** to set headquarter's IP address. Leave other fields and click **OK**.

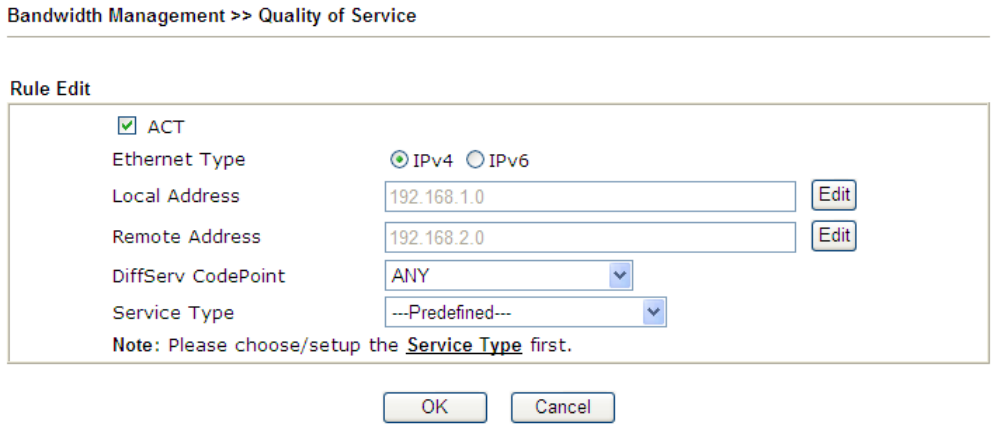

4.7 How to Implement the LDAP/AD Authentication for User Management?

For simplifying the configuration of LDAP authentication for User Access Management, we implement “Group” feature.

There is no need to pre-configure user profile for each user on Vigor router anymore. We only need to configure the Groups DN, then the Vigor router (e.g., Vigor 3200 series) can pass the authentication to LDAP server with the pre-defined Group path.

Below shows the configuration steps:

1. Access into the web user interface of the Vigor router.
2. Open **Applications>>Active Directory /LDAP** to get the following page for configuring LDAP related settings.

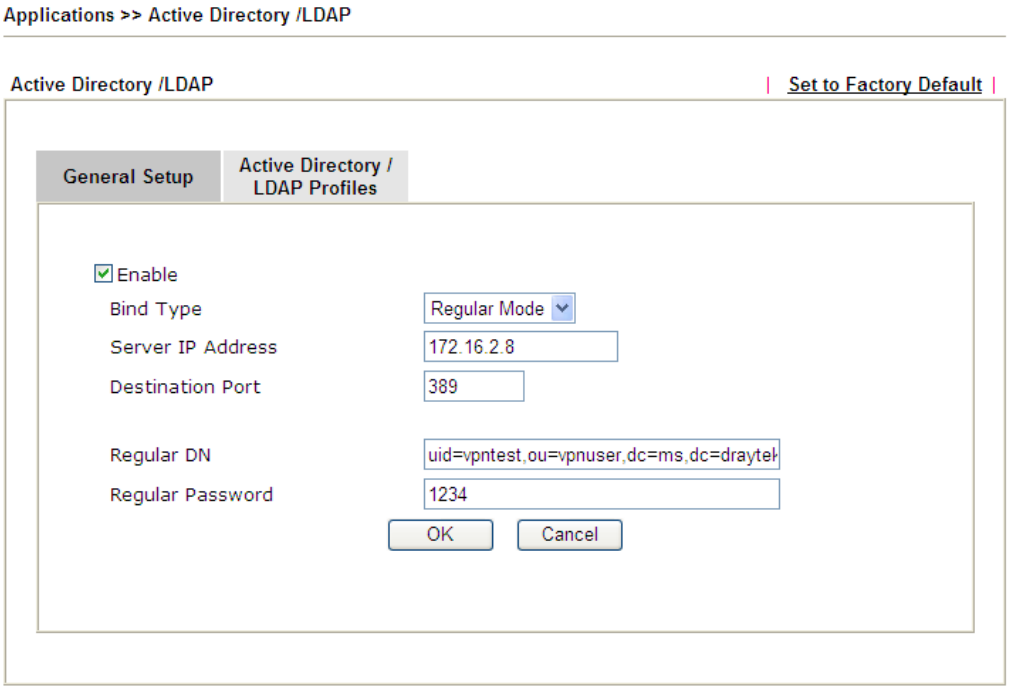

There are three types of bind type supported:

- **Simple Mode** – Just simply do the bind authentication without any search action.
- **Anonymous** – Perform a search action first with Anonymous account then do the bind authentication.
- **Regular Mode**– Mostly it is the same with anonymous mode. The different is that, the server will firstly check if you have the search authority.
  For the regular mode, you’ll need to type in the **Regular DN** and **Regular Password**.

3. Create LDAP server profiles. Click the **Active Directory /LDAP** tab to open the profile web page and click any one of the index number link.

   If we have two groups “**RD1**” and “**SHRD**” on LDAP server, we can configure two LDAP server profiles with different Group Distinguished Name.

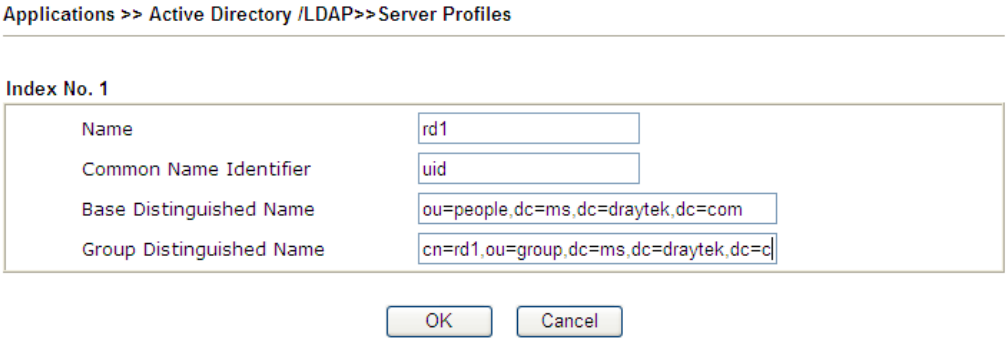

and

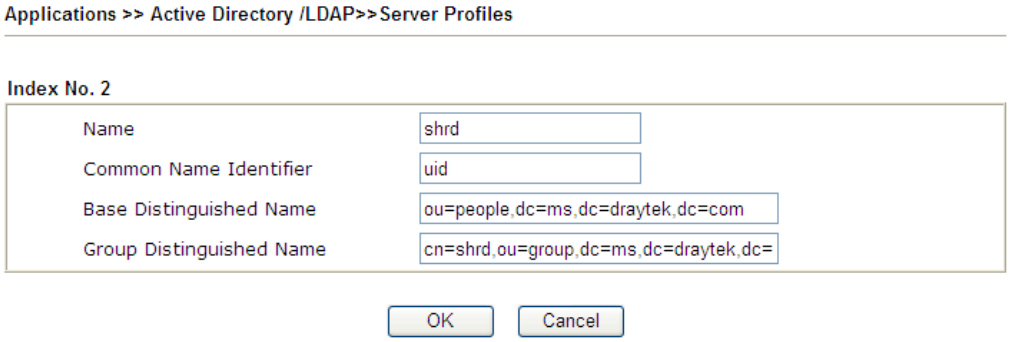

4. Click **OK** to save the settings above.
5. Open **User Management>>General Setup.** Select **User-Based** as the **Mode** option.

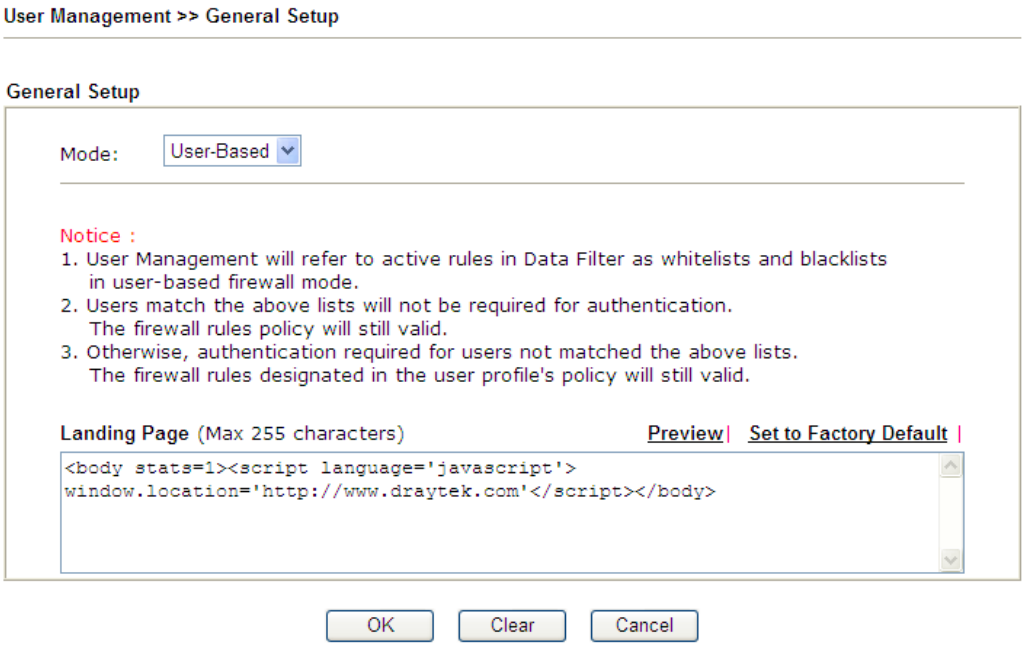
User Management >> General Setup
General Setup
Mode:
User-Based
Notice :
1. User Management will refer to active rules in Data Filter as whitelists and blacklists in user-based firewall mode.
2. Users match the above lists will not be required for authentication. The firewall rules policy will still valid.
3. Otherwise, authentication required for users not matched the above lists. The firewall rules designated in the user profile's policy will still valid.
Landing Page (Max 255 characters)
Preview | Set to Factory Default |
<body stats=1><script language='javascript'>
window.location='http://www.draytek.com'</script></body>
OK
Clear
Cancel

6. Then open **VPN and Remote Access>>PPP General Setup** to **check** the profile(s) that will be authenticated with LDAP server.

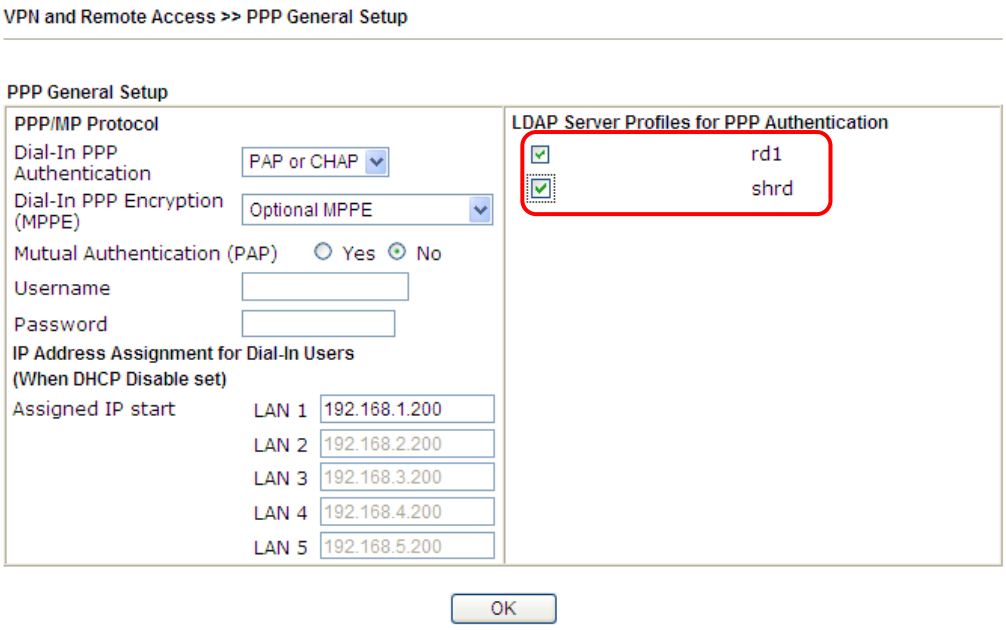

7. After above configurations, users belong to either “rd1” or “shrd” group can access Internet after inputting their credentials on LDAP server.

4.8 How to use Landing Page Feature

Landing Page is a special feature configured under **User Management**. It can specify the message, content to be seen or specify which website to be accessed into when users try to access into the Internet by passing the authentication. Here, we take Vigor2860 series router as an example.

Example 1：Users can see the message for landing page after logging into Internet successfully

1. Open the web user interface of Vigor2860.
2. Open **User Management -> General Setup** to get the following page. In the field of **Landing Page**, please type the words of "**Login Success**". Please note that the maximum number of characters to be typed here is 255.

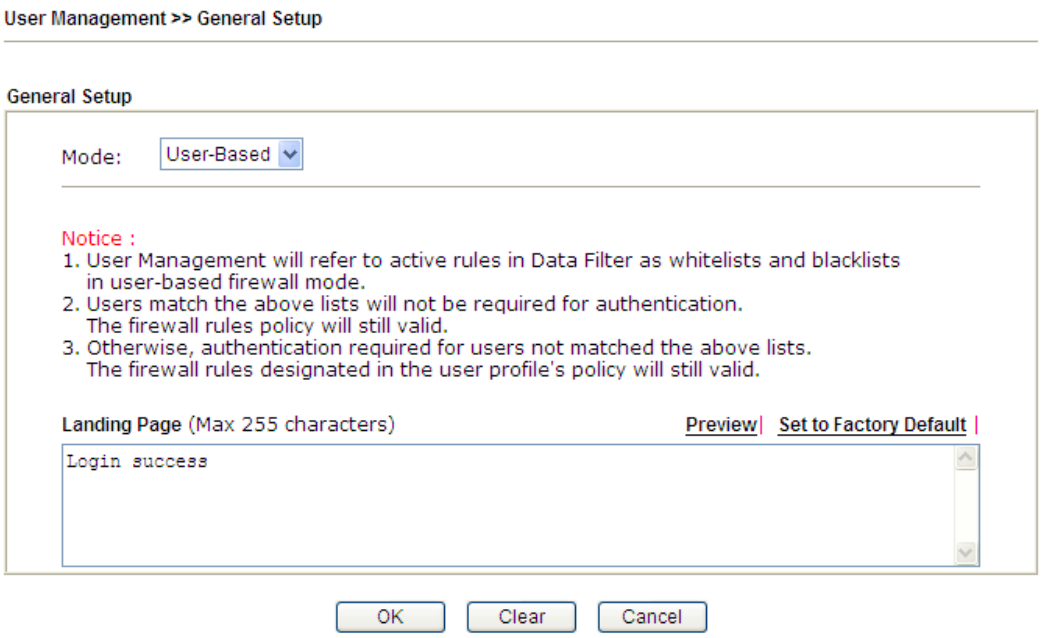
User Management >> General Setup
General Setup
Mode:
User-Based
Notice :
1. User Management will refer to active rules in Data Filter as whitelists and blacklists in user-based firewall mode.
2. Users match the above lists will not be required for authentication. The firewall rules policy will still valid.
3. Otherwise, authentication required for users not matched the above lists. The firewall rules designated in the user profile's policy will still valid.
Landing Page (Max 255 characters)
Preview
Set to Factory Default
Login success
OK
Clear
Cancel

3. Now you can enable the **Landing Page** function. Open **User Management -> User Profile** and click one of the index number (e.g., index number 3) links.

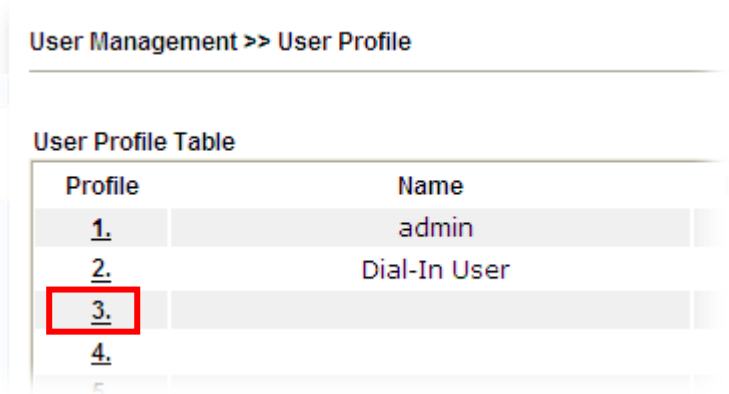

4. In the following page, check the box of **Landing page** and click **OK** to save the settings.

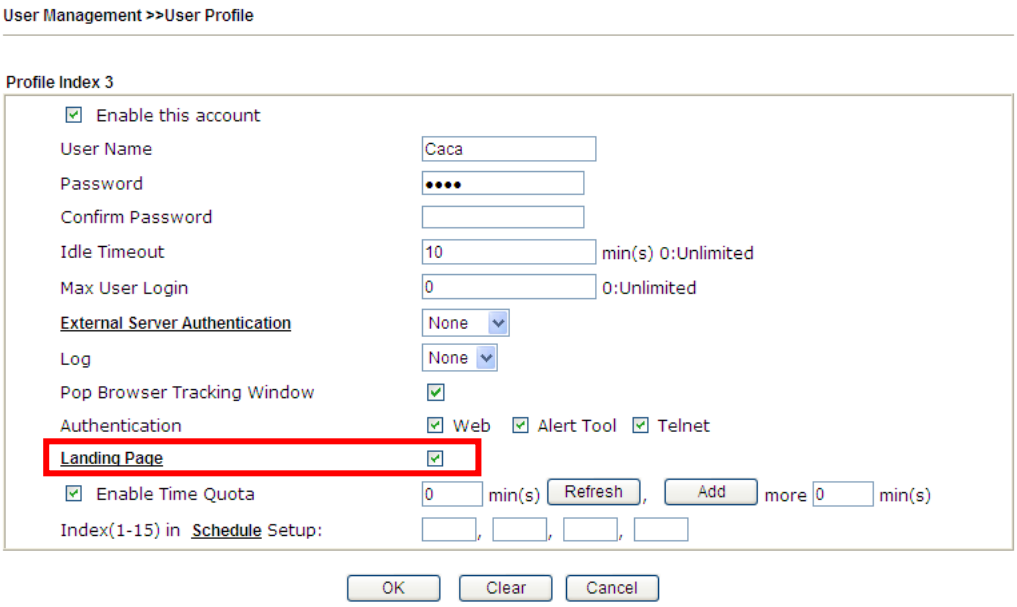

5. Open any browser (e.g., FireFox, Internet Explorer). The logging page will appear and asks for username and password. Please type the correct username and password.

6. Click **Login**. If the logging is successful, you will see the message of Login Success from the browser you use.

Example 2：The system will connect to http://www.draytek.com automatically after logging into Internet successfully

1. In the field of **Landing Page**, please type the words as below:

   “ <body stats=1><script language='javascript'>
   window.location='http://www.draytek.com'</script></body>”

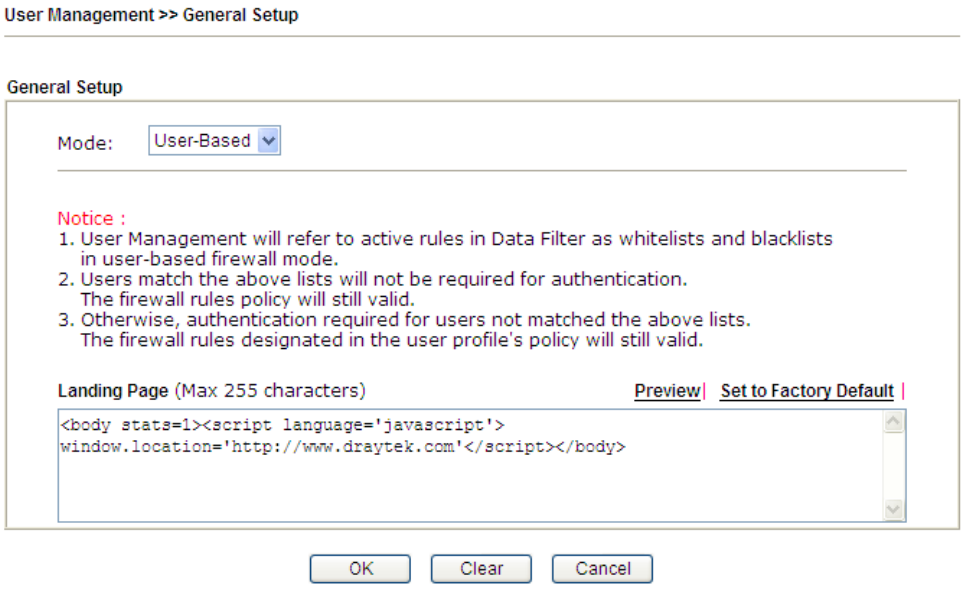
User Management >> General Setup
General Setup
Mode:
User-Based
Notice :
1. User Management will refer to active rules in Data Filter as whitelists and blacklists in user-based firewall mode.
2. Users match the above lists will not be required for authentication. The firewall rules policy will still valid.
3. Otherwise, authentication required for users not matched the above lists. The firewall rules designated in the user profile's policy will still valid.
Landing Page (Max 255 characters)
Preview
Set to Factory Default
<body stats=1><script language='javascript'>
window.location='http://www.draytek.com'</script></body>
OK
Clear
Cancel

2. Next, enable the **Landing Page** function. Open **User Management -> User Profile** and click one of the index number (e.g., index number 3) links.

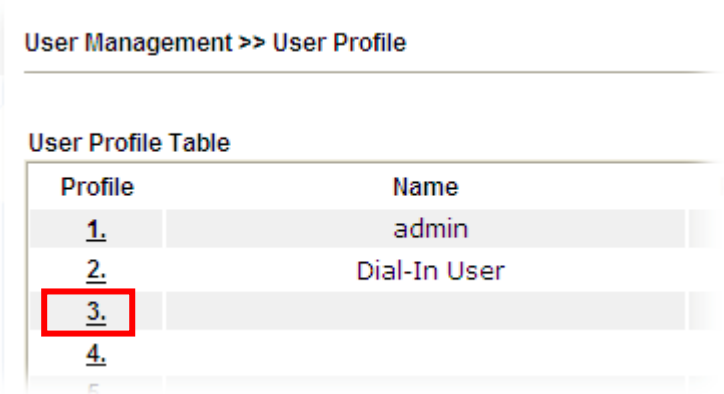

3. In the following page, check the box of **Landing page** and click **OK** to save the settings.

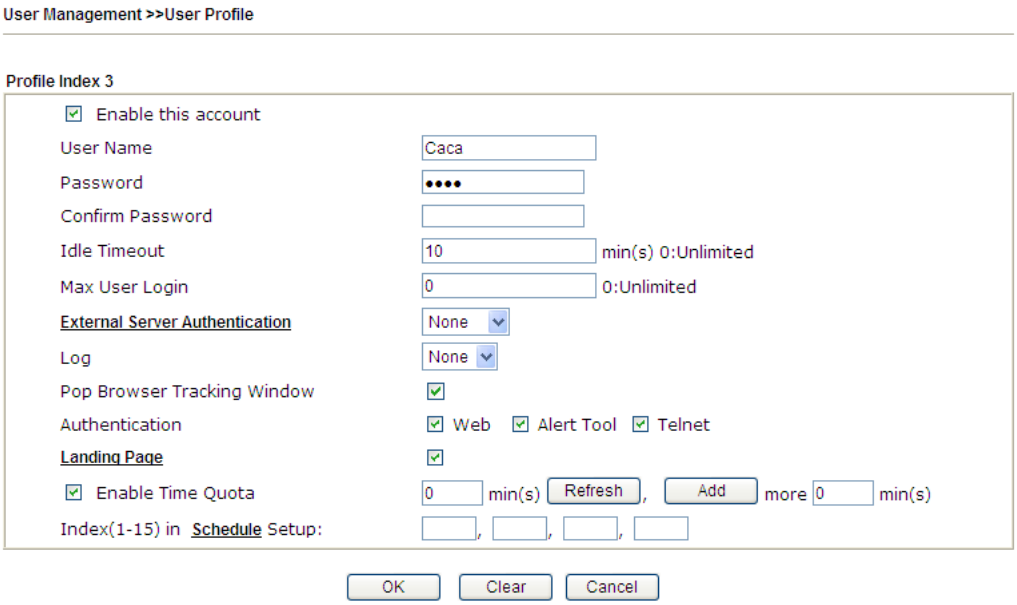

4. Open any browser (e.g., FireFox, Internet Explorer). The logging page will appear and asks for username and password. Please type the correct username and password.

5. Click **Login**. If the logging is successful, you will be directed into the website of www.draytek.com.

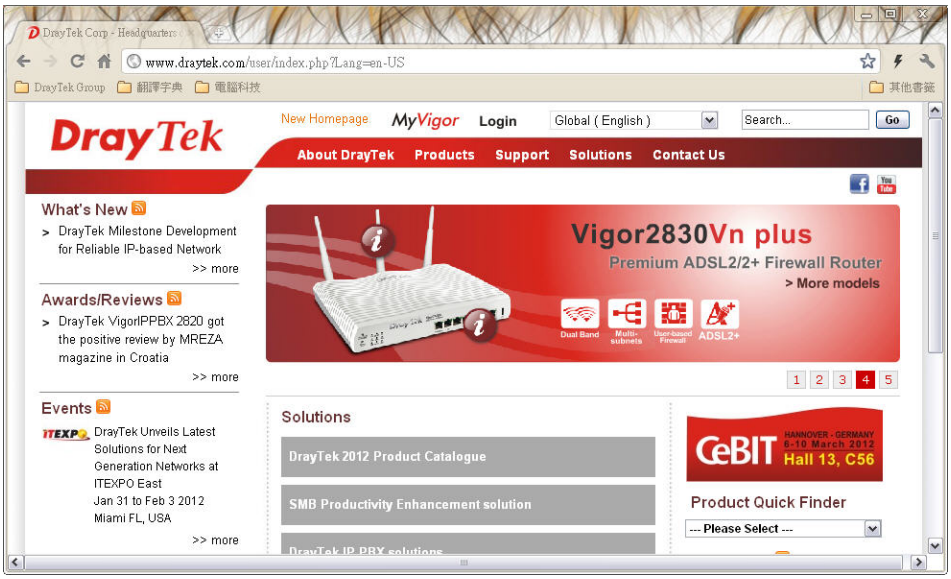

4.9 How to Send out SMS via Vigor Router

Such vigor router supports the feature of SMS.

1. Go to **Application >>Short Message Service** to create a new SMS profile.

2. Click any index number link to access into the following web page.

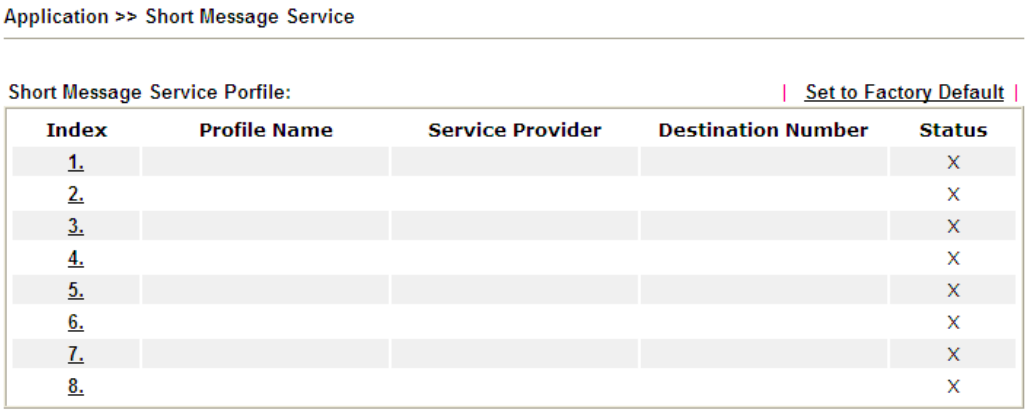

3. In the configuration page, please type profile name, username, password, destination name, quota, sending interval and choose a correct Service Provider. Click **OK** to save the settings and exit this page.

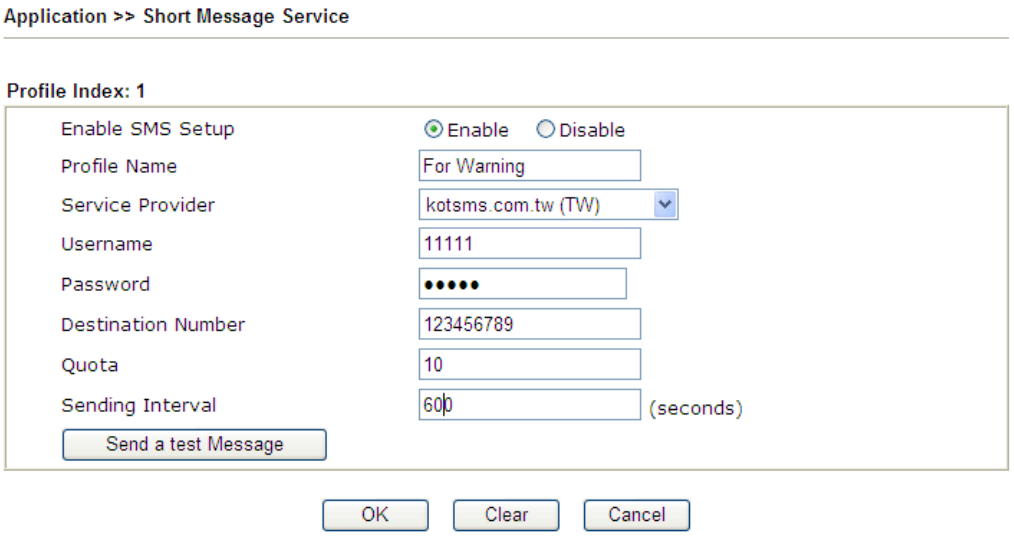

Click **Enable** to enable SMS setup; type a name for identification as **Profile Name**; use the drop down list to choose the **Service Provider** that you apply for SMS; type the **Username** and **Password** that you apply for SMS; type the telephone number that you want to receive the SMS in the field of **Destination Number**; type the total number of the messages that the router will send out in the field of **Quota**; type the shortest time

interval for the system to send SMS in the field of **Sending Interval**. For example, it is set with 60 (seconds). If WAN1 disconnects for three times within 60 seconds, the system will send the SMS notification just for once. The **Send a test Message** button allows you to send one SMS to the user just for test.

4. Now, a new SMS proifle has been created.

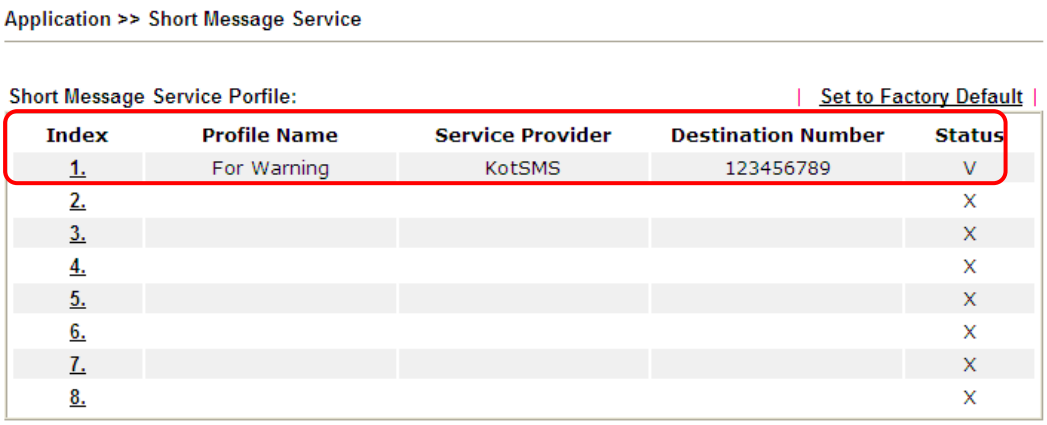

5. Go to **WAN>>General Setup**. In this case, choose the **WAN2** link as an example.

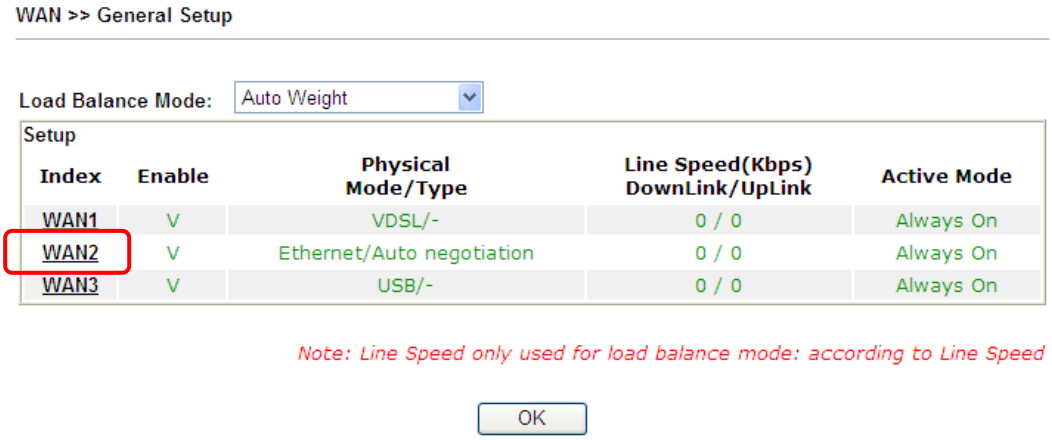
WAN >> General Setup
Load Balance Mode:
Auto Weight
Setup
Index
Enable
Physical Mode/Type
Line Speed(Kbps) DownLink/UpLink
Active Mode
WAN1 V VDSL/- 0 / 0 Always On
WAN2 V Ethernet/Auto negotiation 0 / 0 Always On
WAN3 V USB/- 0 / 0 Always On
Note: Line Speed only used for load balance mode: according to Line Speed
OK

6. Configure the settings as the following figure. Choose one of the SMS profiles. In this example, the profile “For warning” is selected. Then, click **OK** to save the settings.

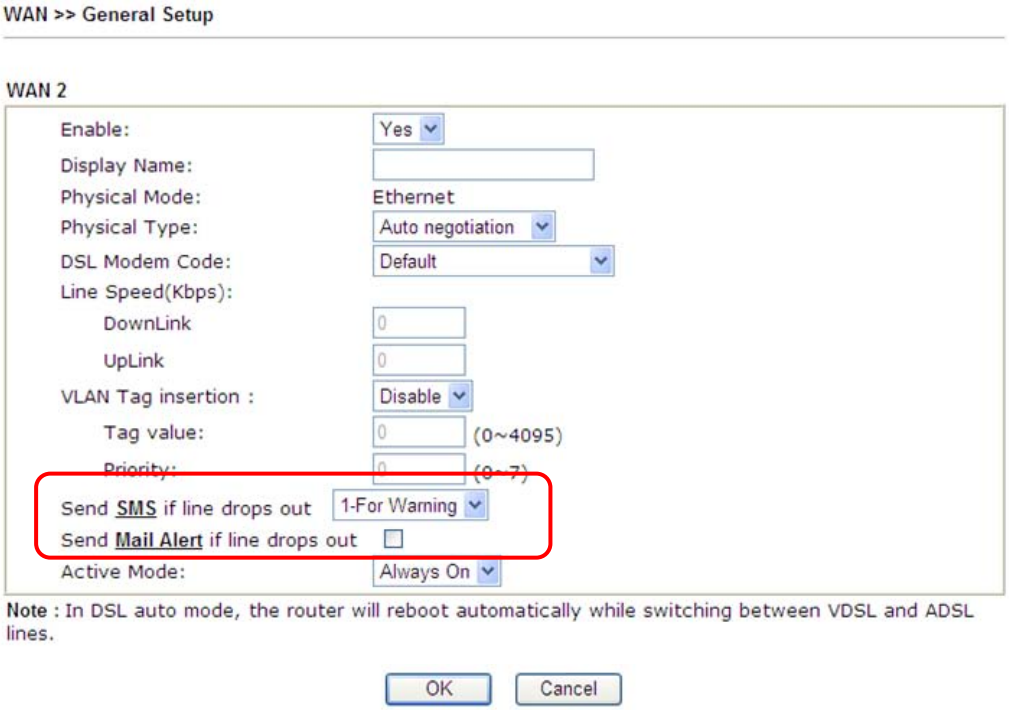

When such WAN (e.g., WAN2 in this example) disconnects due to some reason, the system will use other WAN for connection instead and send SMS to notify the user (destination number #123456789). However, if there is no available WAN for connection, the system will send SMS to inform the user after reconnecting WAN2 successfully.

4.10 How to Create an Account for MyVigor

The website of MyVigor (a server located on http://myvigor.draytek.com) provides several useful services (such as Anti-Spam, Web Content Filter, Anti-Intrusion, and etc.) to filtering the web pages for the sake of protecting your system.

To access into MyVigor for getting more information, please create an account for MyVigor.

4.10.1 Create an Account via Vigor Router

1. Click **CSM>> Web Content Filter Profile**. The following page will appear.

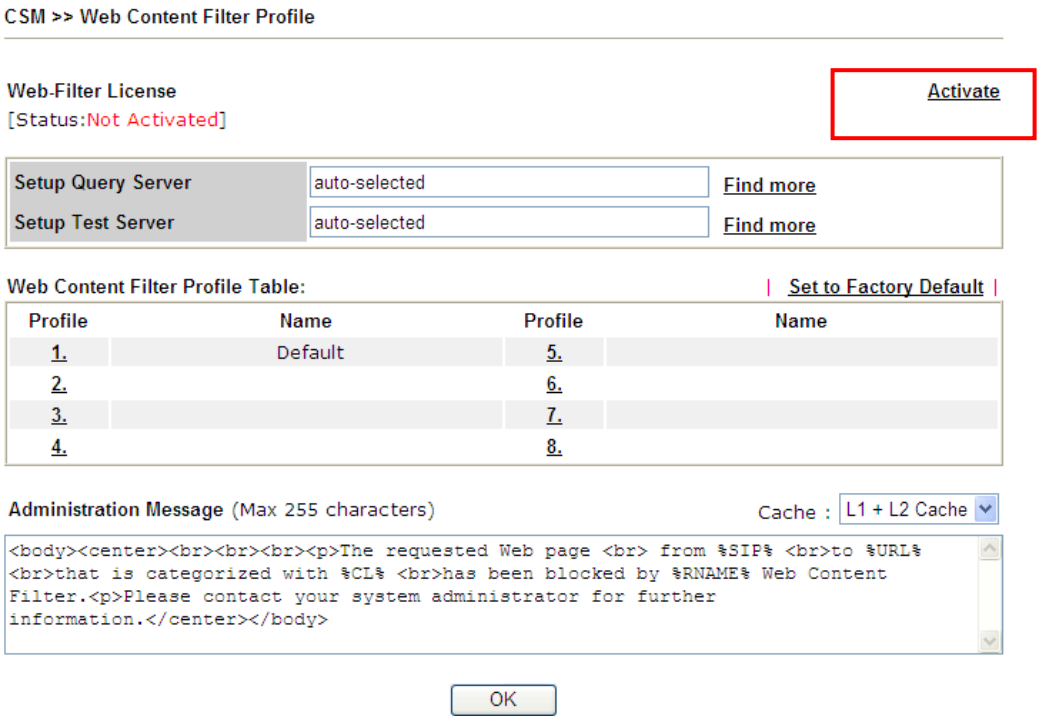

Or

Click **System Maintenance>>Activation** to open the following page.

2. Click the **Activate** link. A login page for MyVigor web site will pop up automatically.

Please take a moment to register.
Membership Registration entitles you to upgrade firmware for your purchased product and receive news about upcoming products and services!
LOGIN
UserName :
Password :
Auth Code :
t x x h d d
If you cannot read the word, click here
Forgotten password?
Login
Don't have a MyVigor Account ?
Create an account now
If you are having difficulty logging in, contact our customer service.
Customer Service : (886) 3 597 2727 or

3. Click the link of **Create an account now**.

4. Check to confirm that you accept the Agreement and click **Accept**.

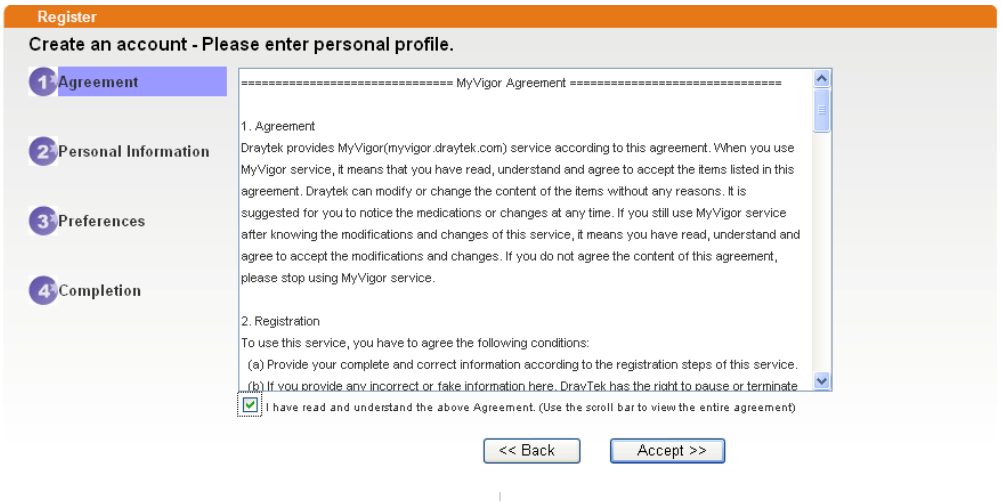
Register
Create an account - Please enter personal profile.
1 Agreement
2 Personal Information
3 Preferences
4 Completion
========== MyVigor Agreement ==========
1. Agreement
Draytek provides MyVigor(myvigor.draytek.com) service according to this agreement. When you use MyVigor service, it means that you have read, understand and agree to accept the items listed in this agreement. Draytek can modify or change the content of the items without any reasons. It is suggested for you to notice the medications or changes at any time. If you still use MyVigor service after knowing the modifications and changes of this service, it means you have read, understand and agree to accept the modifications and changes. If you do not agree the content of this agreement, please stop using MyVigor service.
2. Registration
To use this service, you have to agree the following conditions:
(a) Provide your complete and correct information according to the registration steps of this service.
(b) If you provide any incorrect or fake information here, DrayTek has the right to pause or terminate
I have read and understand the above Agreement. (Use the scroll bar to view the entire agreement)
<< Back
Accept >>

5. Type your personal information in this page and then click **Continue**.

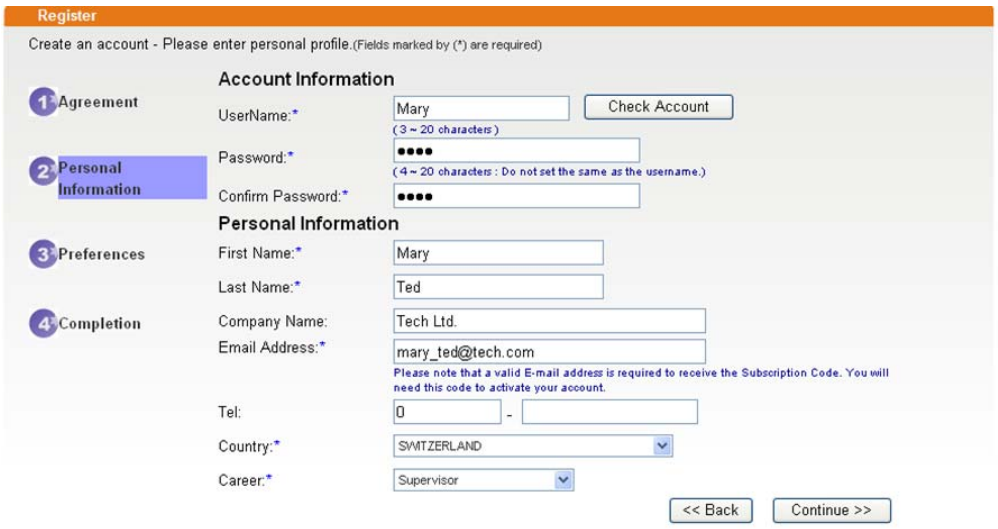

6. Choose proper selection for your computer and click **Continue**.

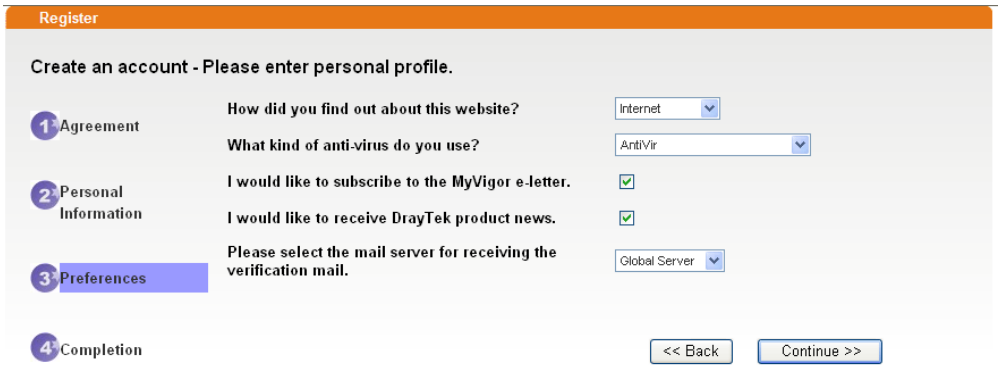
Register
Create an account - Please enter personal profile.
1 Agreement
2 Personal Information
3 Preferences
4 Completion
How did you find out about this website?
Internet
What kind of anti-virus do you use?
AntiVir
I would like to subscribe to the MyVigor e-letter.
I would like to receive DrayTek product news.
Please select the mail server for receiving the verification mail.
Global Server
<< Back
Continue >>

7. Now you have created an account successfully. Click START.

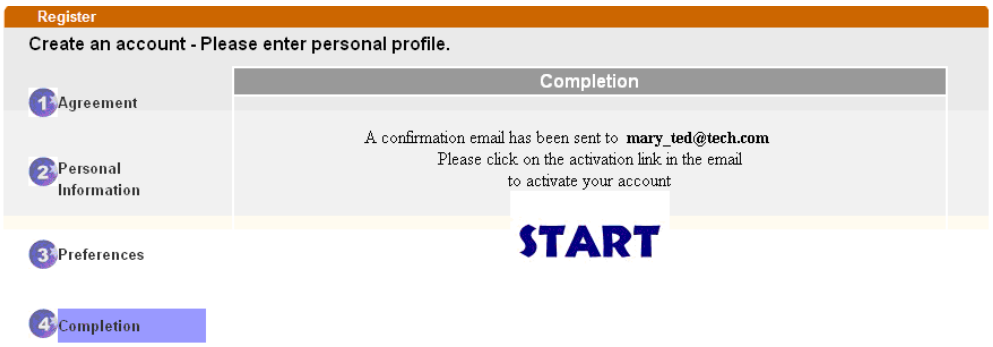

8. Check to see the confirmation ***email*** with the title of **New Account Confirmation Letter from myvigor.draytek.com**.

****** This is an automated message from myvigor.draytek.com.******

Thank you (**Mary**) for creating an account.

Please click on the activation link below to activate your account

Link : Activate my Account

9. Click the **Activate my Account** link to enable the account that you created. The following screen will be shown to verify the register process is finished. Please click **Login**.

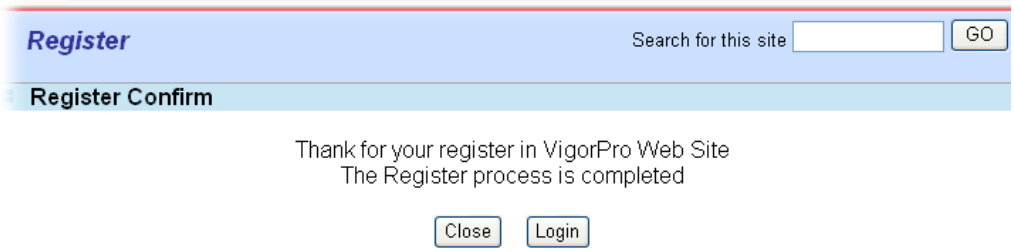

10. When you see the following page, please type in the account and password (that you just created) in the fields of **UserName** and **Password**.

Please take a moment to register.
Membership Registration entitles you to upgrade firmware for your purchased product and receive news about upcoming products and services!
LOGIN
UserName :
Mary
Password :
Auth Code :
T4he1C
If you cannot read the word, click here
Forgotten password?
Login
Don't have a MyVigor Account ?
Create an account now
If you are having difficulty logging in, contact our customer service.
Customer Service : (886) 3 597 2727 or

11. Now, click **Login**. Your account has been activated. You can access into MyVigor server to activate the service (e.g., WCF) that you want.

4.10.2 Create an Account via MyVigor Web Site

1. Access into http://myvigor.draytek.com. Find the line of **Not registered yet?**. Then, click the link **Click here!** to access into next page.

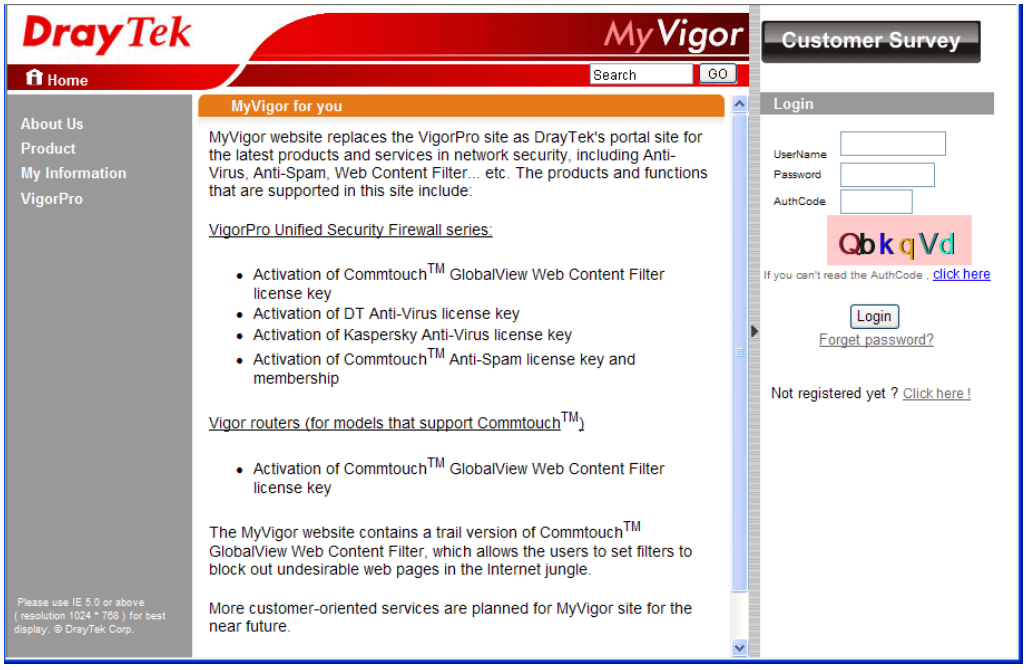
DrayTek
MyVigor
Home
Search
GO
About Us
Product
My Information
VigorPro
MyVigor for you
MyVigor website replaces the VigorPro site as DrayTek's portal site for the latest products and services in network security, including Anti-Virus, Anti-Spam, Web Content Filter... etc. The products and functions that are supported in this site include:
VigorPro Unified Security Firewall series:
Activation of Commtouch™ GlobalView Web Content Filter license key
Activation of DT Anti-Virus license key
Activation of Kaspersky Anti-Virus license key
Activation of Commtouch™ Anti-Spam license key and membership
Vigor routers (for models that support Commtouch™)
Activation of Commtouch™ GlobalView Web Content Filter license key
The MyVigor website contains a trail version of Commtouch™ GlobalView Web Content Filter, which allows the users to set filters to block out undesirable web pages in the Internet jungle.
More customer-oriented services are planned for MyVigor site for the near future.
Please use IE 5.0 or above (resolution 1024 * 768) for best display. © DrayTek Corp.
Customer Survey
Login
UserName
Password
AuthCode
If you can't read the AuthCode , click here
Login
Forget password?
Not registered yet ? Click here !

2. Check to confirm that you accept the Agreement and click **Accept**.

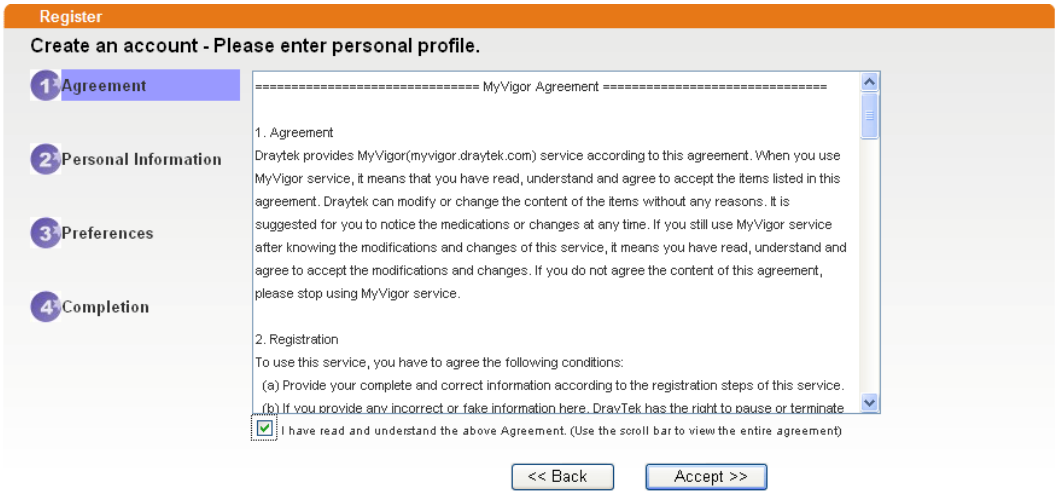
Register
Create an account - Please enter personal profile.
1 Agreement
2 Personal Information
3 Preferences
4 Completion
========== MyVigor Agreement ==========
1. Agreement
Draytek provides MyVigor(myvigor.draytek.com) service according to this agreement. When you use MyVigor service, it means that you have read, understand and agree to accept the items listed in this agreement. Draytek can modify or change the content of the items without any reasons. It is suggested for you to notice the medications or changes at any time. If you still use MyVigor service after knowing the modifications and changes of this service, it means you have read, understand and agree to accept the modifications and changes. If you do not agree the content of this agreement, please stop using MyVigor service.
2. Registration
To use this service, you have to agree the following conditions:
(a) Provide your complete and correct information according to the registration steps of this service.
(b) If you provide any incorrect or fake information here, DrayTek has the right to pause or terminate
I have read and understand the above Agreement. (Use the scroll bar to view the entire agreement)
<< Back
Accept >>

3. Type your personal information in this page and then click **Continue**.

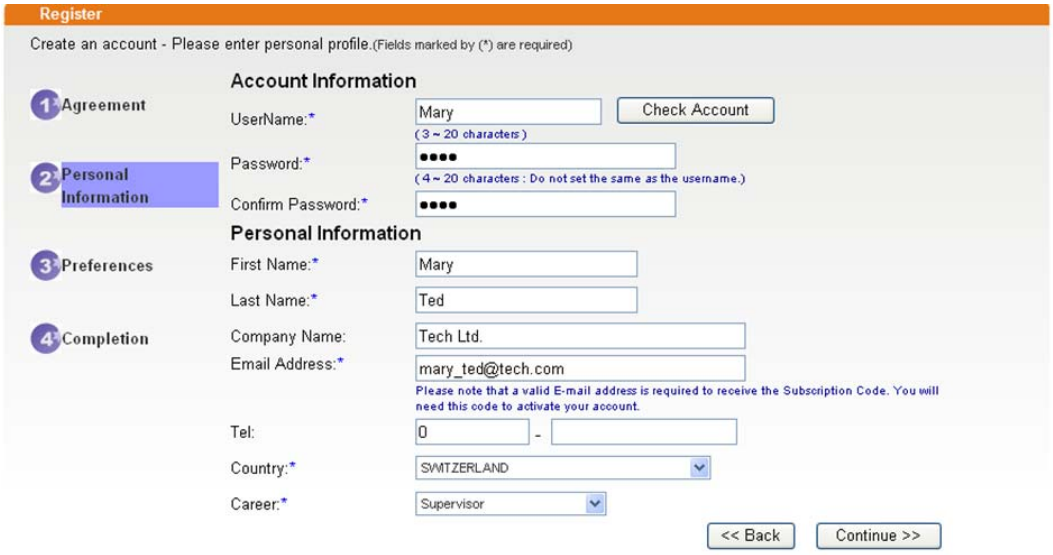

4. Choose proper selection for your computer and click **Continue**.

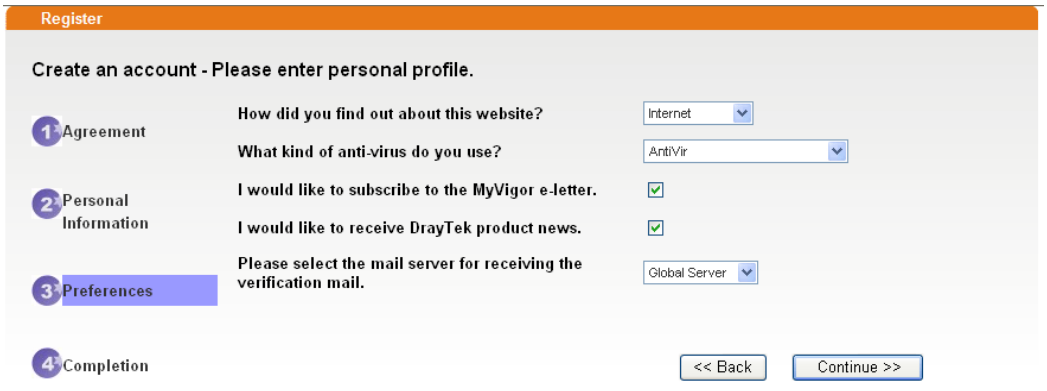
Register
Create an account - Please enter personal profile.
1 Agreement
2 Personal Information
3 Preferences
4 Completion
How did you find out about this website?
Internet
What kind of anti-virus do you use?
AntiVir
I would like to subscribe to the MyVigor e-letter.
I would like to receive DrayTek product news.
Please select the mail server for receiving the verification mail.
Global Server
<< Back
Continue >>

5. Now you have created an account successfully. Click START.

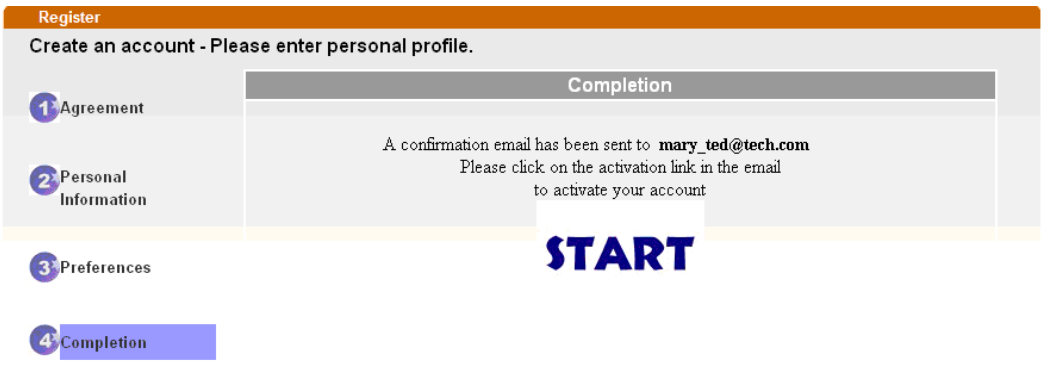

6. Check to see the confirmation ***email*** with the title of **New Account Confirmation Letter from myvigor.draytek.com**.

****** This is an automated message from myvigor.draytek.com.******

Thank you (**Mary**) for creating an account.

Please click on the activation link below to activate your account

Link : Activate my Account

7. Click the **Activate my Account** link to enable the account that you created. The following screen will be shown to verify the register process is finished. Please click **Login**.

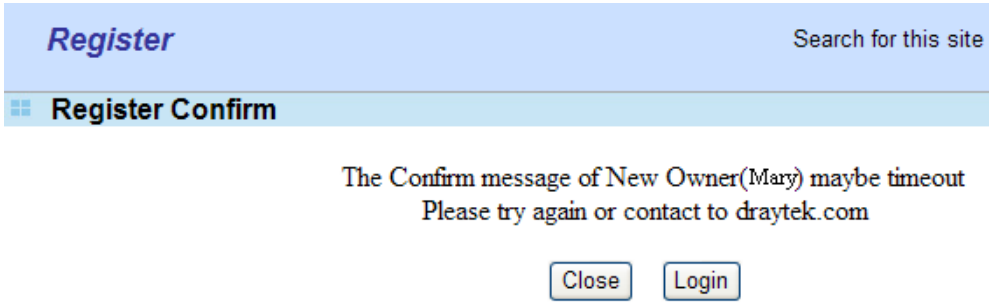

8. When you see the following page, please type in the account and password (that you just created) in the fields of **UserName** and **Password**. Then type the code in the box of Auth Code according to the value displayed on the right side of it.

Please take a moment to register.
Membership Registration entitles you to upgrade firmware for your purchased product and receive news about upcoming products and services!
LOGIN
UserName :
Mary
Password :
Auth Code :
T4he1C
T4he1C
If you cannot read the word, click here
Forgotten password?
Login
Don't have a MyVigor Account ?
Create an account now
If you are having difficulty logging in, contact our customer service.
Customer Service : (886) 3 597 2727 or

Now, click **Login**. Your account has been activated. You can access into MyVigor server to activate the service (e.g., WCF) that you want.

4.11 How to Setup Address Mapping

NAT Address Mapping function lets you specify the outgoing IP address(es) for one internal IP address or a block of internal IP addresses.

Now, Vigor2860 and VigorPro 5510 Series support this feature. We will take an example to introduce how to make use of this feature. The scenario is shown below, with a Vigor2860 involved. Both WAN connections are active and the WAN1 connection has 3 IP addresses.

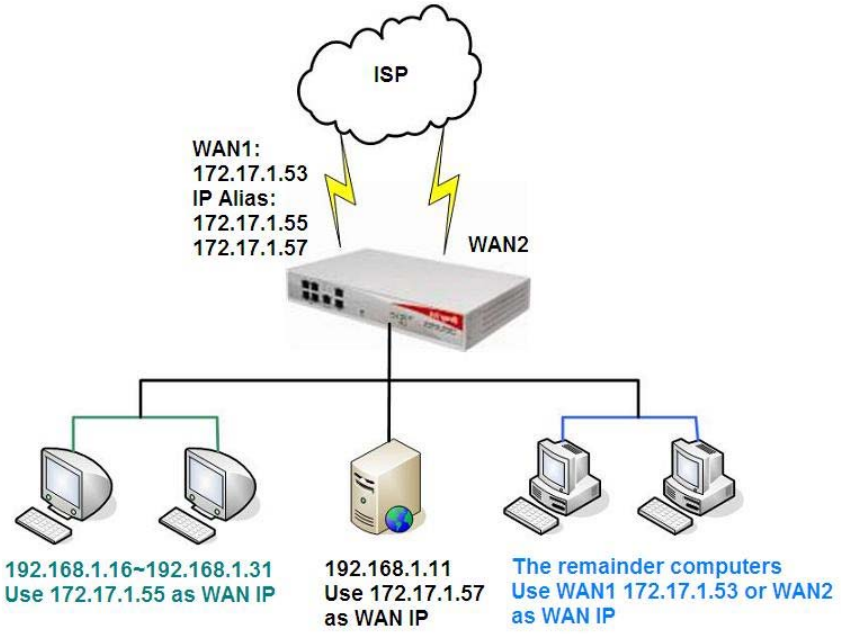

1. Log into the web user interface of Vigor2860.
2. Open **WAN>>Internet Access**. For WAN1, choose **Static or Dynamic IP** as the **Access Mode**.

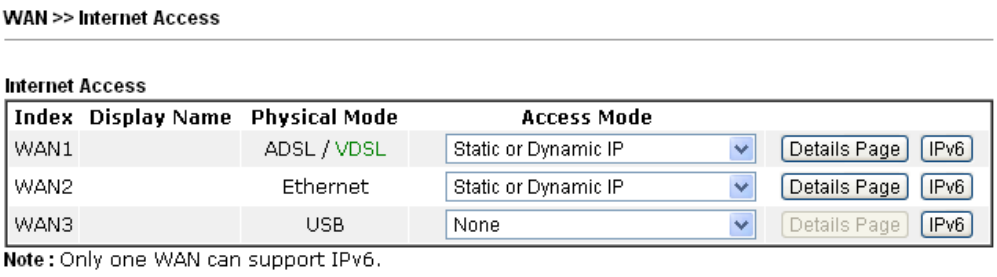
WAN >> Internet Access
Internet Access
Index Display Name Physical Mode Access Mode
WAN1 ADSL / VDSL Static or Dynamic IP Details Page IPv6
WAN2 Ethernet Static or Dynamic IP Details Page IPv6
WAN3 USB None Details Page IPv6
Note : Only one WAN can support IPv6.

3. Click the **Details Page** of WAN 1 to open the following page. From the above figure, set main WAN IP address as *172.17.1.53*.

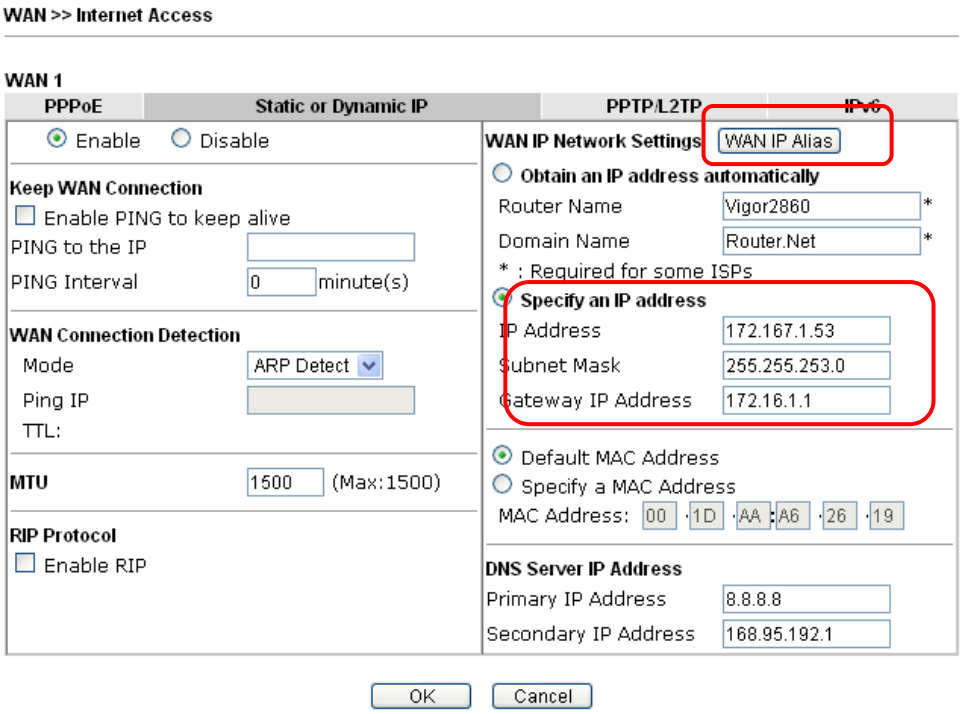

Click the WAN IP Alias button to configure the other two IP addresses which are *172.17.1.55* and *172.17.1.57*. Make sure **Join IP NAT Pool** is not checked.

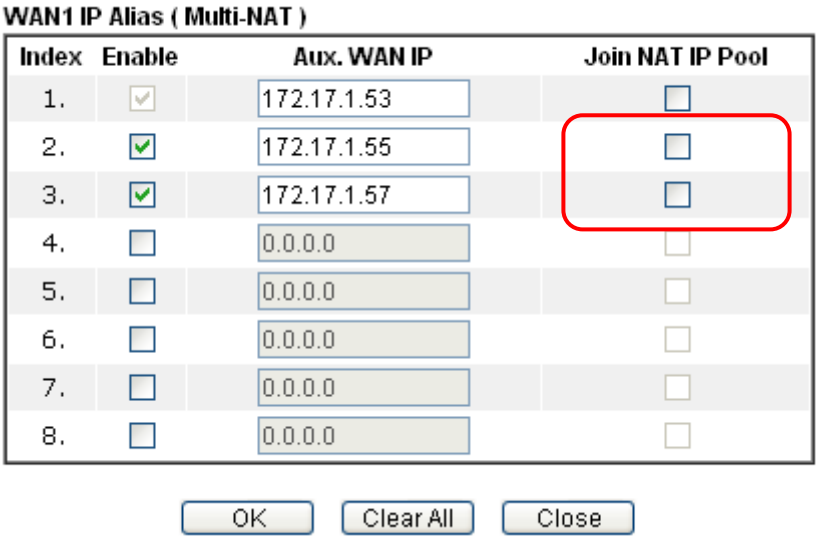

The outgoing traffic is routed to WAN1 port or WAN2 port according to the Load-balance policy. When the traffic is routed to WAN1 port, by default WAN1 main IP address (*172.17.1.53* in this example) is used to replace the source private IP address. Therefore, all the client IP addresses will be transmitted to *172.17.1.53* by default.

Since you have additional IP addresses on WAN1 connection, you may want some of the internal PCs be presented to the Internet with different IP addresses. In this example, the server with IP address *192.168.1.11* is to be presented to the Internet as *172.17.1.57* and the computers with a block of IP addresses from *192.168.1.16* through *192.168.1.31* are to be presented as *172.17.1.55*.

4. Click **OK** to save the settings.

5. Open **NAT >> Address Mapping**. Pay special attention to the Mask setup.

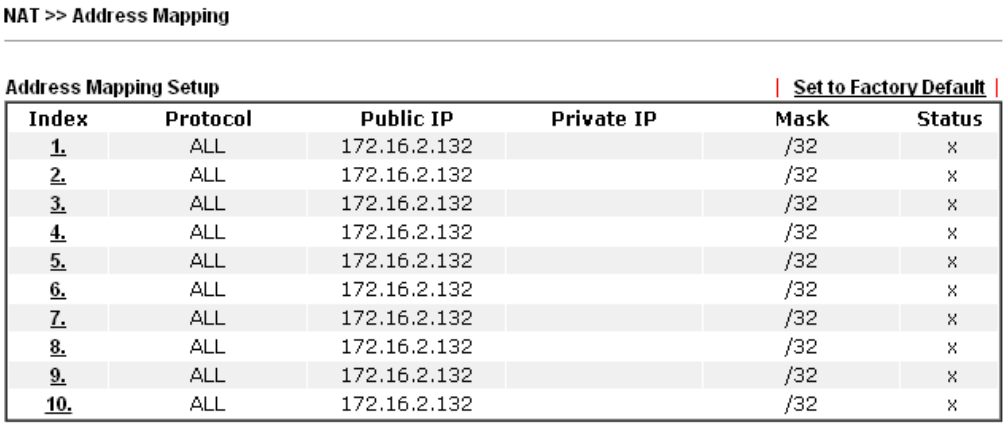

NAT >> Address Mapping

Address Mapping Setup | Set to Factory Default |

Index	Protocol	Public IP	Private IP	Mask	Status
1.	ALL	172.16.2.132		/32	x
2.	ALL	172.16.2.132		/32	x
3.	ALL	172.16.2.132		/32	x
4.	ALL	172.16.2.132		/32	x
5.	ALL	172.16.2.132		/32	x
6.	ALL	172.16.2.132		/32	x
7.	ALL	172.16.2.132		/32	x
8.	ALL	172.16.2.132		/32	x
9.	ALL	172.16.2.132		/32	x
10.	ALL	172.16.2.132		/32	x

6. Click Index number 1 and 2 to configure the details.

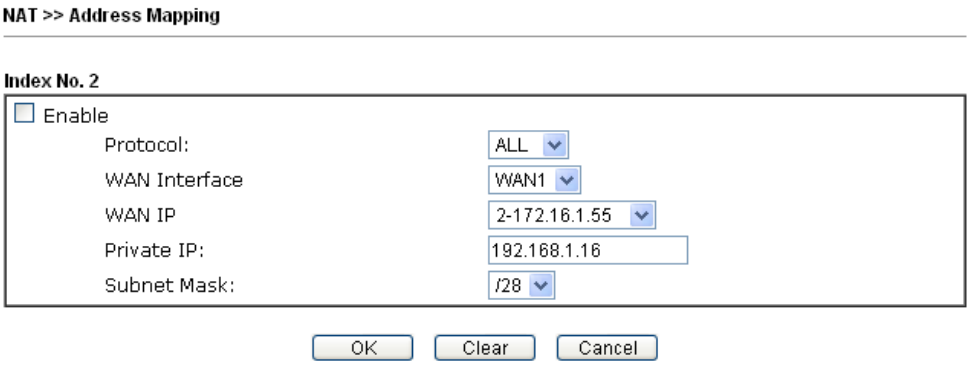

NAT >> Address Mapping

Index No. 2

Enable

Protocol: ALL

WAN Interface: WAN1

WAN IP: 2-172.16.1.55

Private IP: 192.168.1.16

Subnet Mask: /28

OK Clear Cancel

Here the Private IP can be any IP address within the range of 192.168.1.16 through 192.168.1.31. The Subnet Mask defines the size of the IP range, and the Private IP is an indicator of the IP range. Therefore, the combination of Private IP and Subnet Mask determine the IP range.

7. Upon completing the above configuration, you have specified the outgoing IP address(es) for some specific computers. But you still have to specify the outgoing interface for them. Otherwise, the traffic may be routed out with IP address 172.17.1.55 or 172.17.1.57 through WAN2 port. The load-balance policies are below.

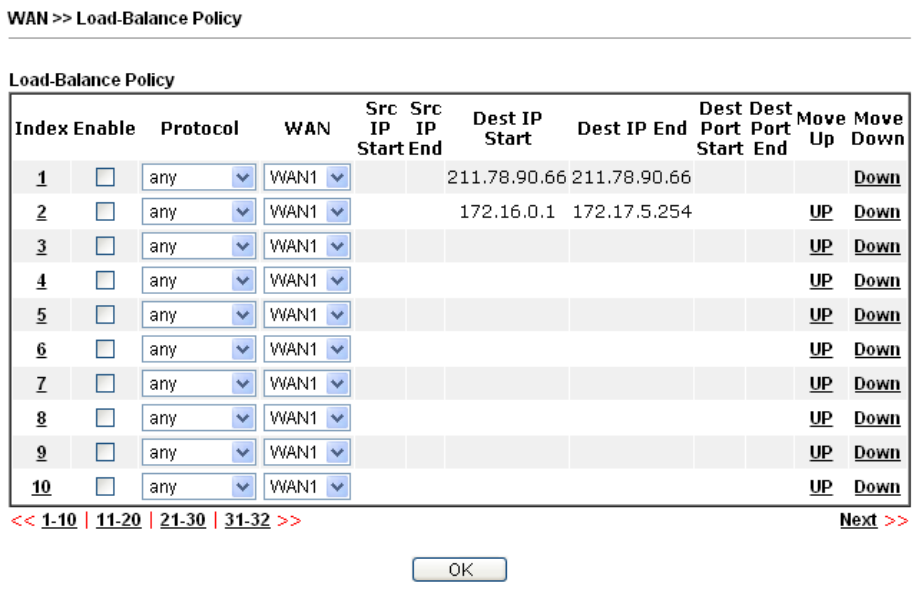

WAN >> Load-Balance Policy

Load-Balance Policy

Index	Enable	Protocol	WAN	Src IP Start	Src IP End	Dest IP Start	Dest IP End	Dest Port Start	Dest Port End	Move Up	Move Down
1	☐	any	WAN1			211.78.90.66	211.78.90.66				Down
2	☐	any	WAN1			172.16.0.1	172.17.5.254			UP	Down
3	☐	any	WAN1							UP	Down
4	☐	any	WAN1							UP	Down
5	☐	any	WAN1							UP	Down
6	☐	any	WAN1							UP	Down
7	☐	any	WAN1							UP	Down
8	☐	any	WAN1							UP	Down
9	☐	any	WAN1							UP	Down
10	☐	any	WAN1							UP	Down

<< 1-10 | 11-20 | 21-30 | 31-32 >> Next >>

OK

8. Click Index number 1 and 2 to configure the details. Make sure **Auto failover to the other WAN** is unchecked.

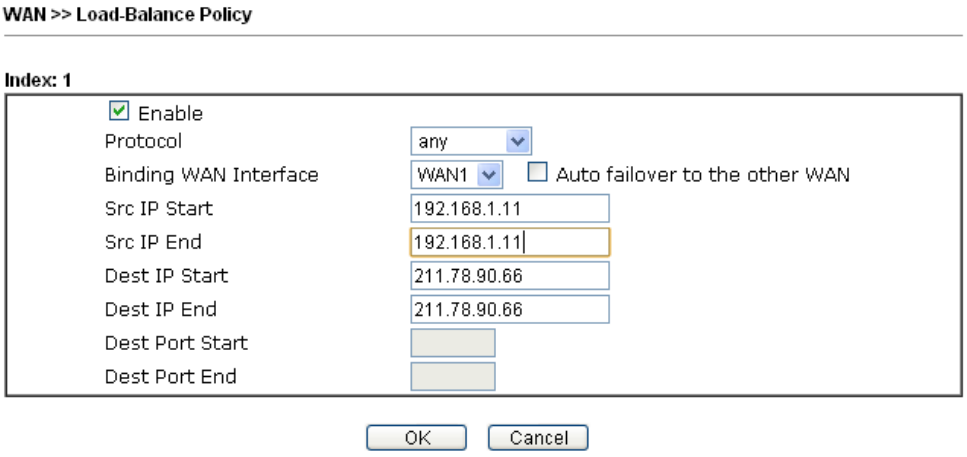

And

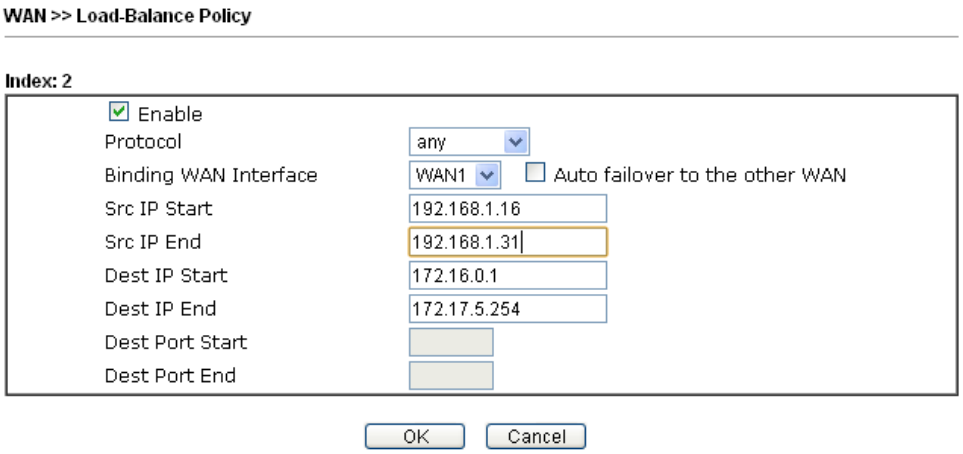

9. Click **OK** to save the settings. The load-balance policy has been configured properly.

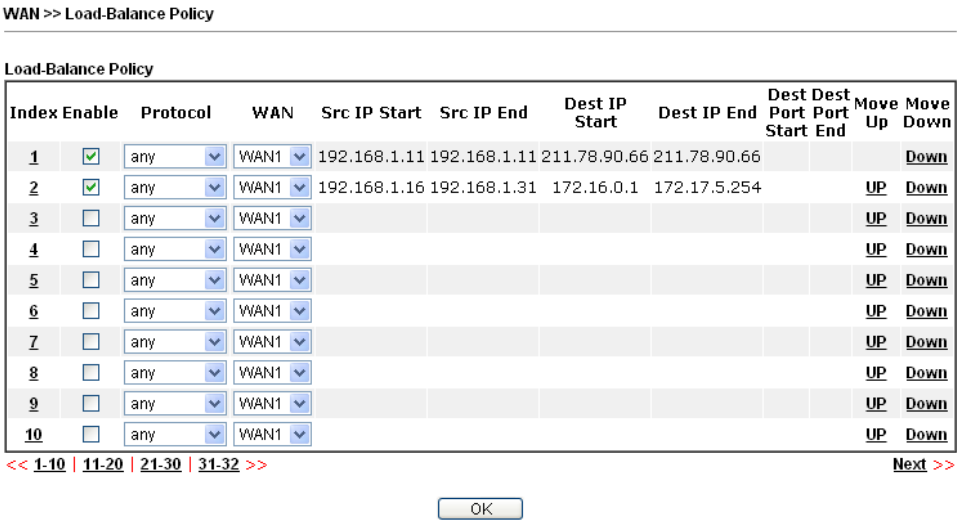
WAN >> Load-Balance Policy
Load-Balance Policy
Index Enable Protocol WAN Src IP Start Src IP End Dest IP Start Dest IP End Dest Port Start Dest Port End Move Up Move Down
1 any WAN1 192.168.1.11 192.168.1.11 211.78.90.66 211.78.90.66 Down
2 any WAN1 192.168.1.16 192.168.1.31 172.16.0.1 172.17.5.254 UP Down
3 any WAN1 UP Down
4 any WAN1 UP Down
5 any WAN1 UP Down
6 any WAN1 UP Down
7 any WAN1 UP Down
8 any WAN1 UP Down
9 any WAN1 UP Down
10 any WAN1 UP Down
<< 1-10 | 11-20 | 21-30 | 31-32 >>
Next >>
OK

10. Now, you bind some specific computers to some WAN IP alias for outgoing traffic. For incoming traffic, you still have to open the relevant ports by using **Port Redirection**, **DMZ** or **Open Ports** functions.

4.12 How to Configure Certain Computers Accessing to Internet

We can specify certain computers (e.g., 192.168.1.10 ~ 192.168.1.20) accessing to Internet through Vigor router. Others (e.g., 192.168.1.31 and 192.168.1.32) outside the range can get the source from LAN only.

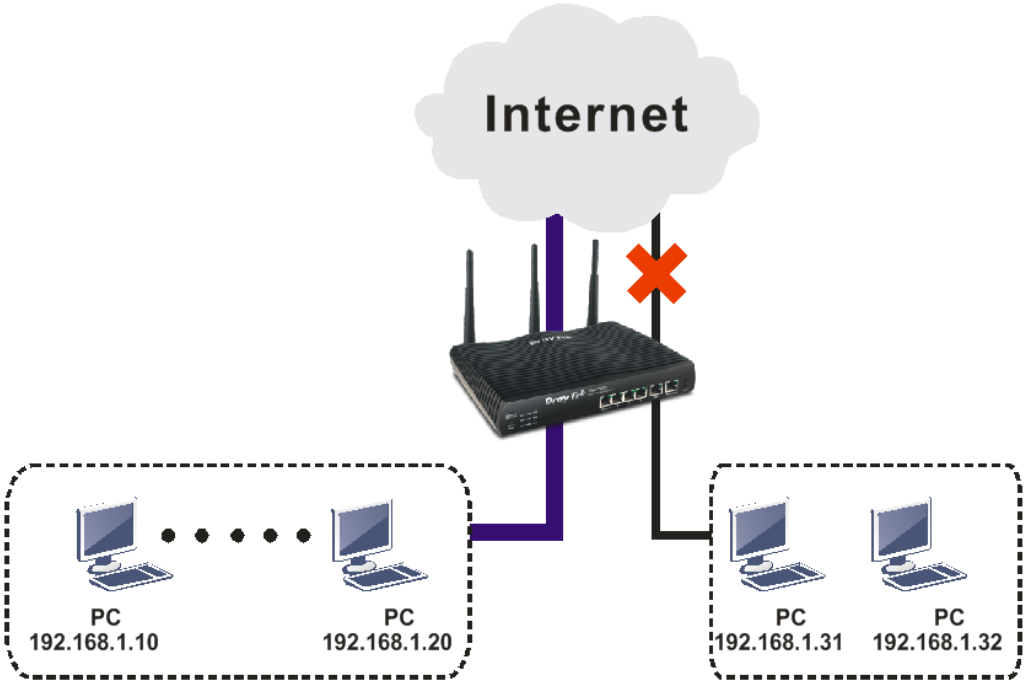

The way we can use is to set two rules under **Firewall**. For **Rule 1** of **Set 2** under **Firewall>>Filter Setup** is used as the default setting, we has to create a new rule starting from Filter Rule 2 of Set 2.

1. Access into the web user interface of Vigor router.
2. Open **Firewall>>Filter Setup**. Click the **Set 2** link and choose the **Filter Rule 2** button.

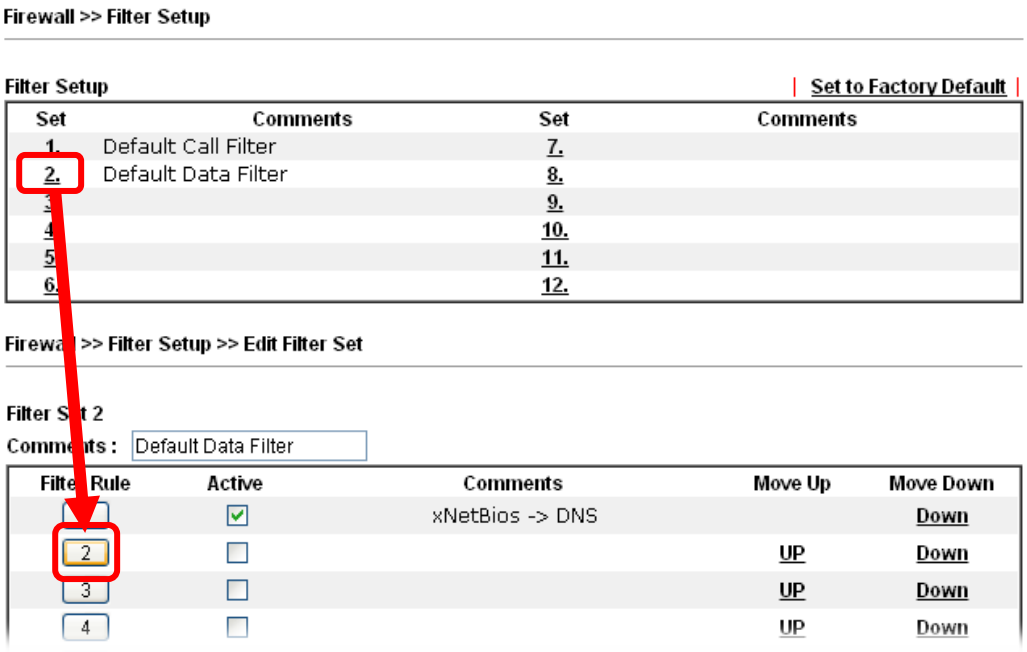

3. Check the box of **Check to enable the Filter Rule**. Type the comments (e.g., **block_all**). Choose **Block If No Further Match** for the **Filter** setting. Then, click **OK**.

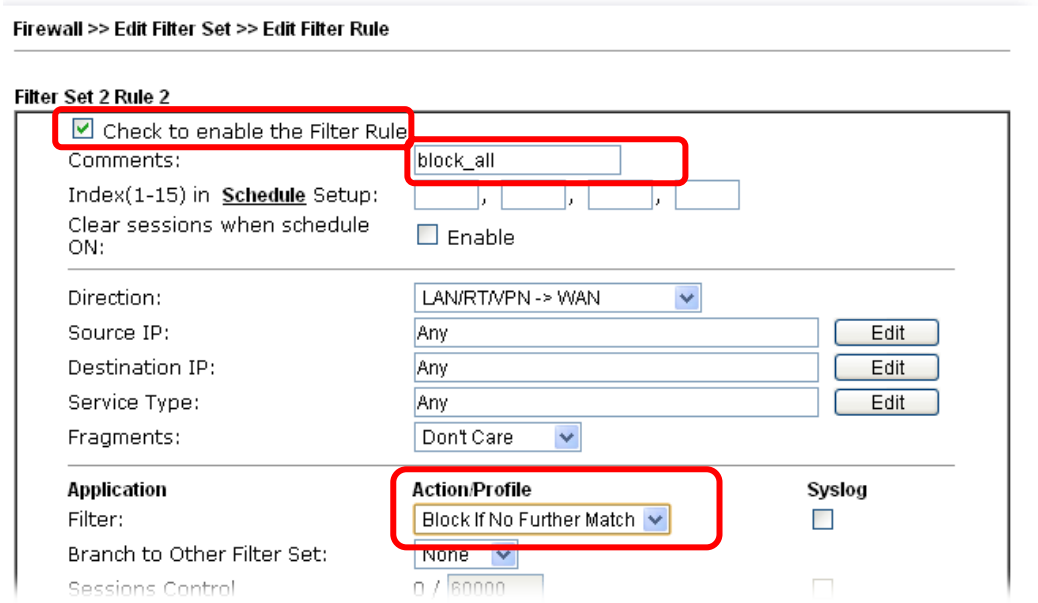

Note: In default, the router will check the packets starting with Set 2, Filter Rule 2 to Filter Rule 7. If **Block If No Further Match** for is selected for **Filter**, the firewall of the router would check the packets with the rules starting from Rule 3 to Rule 7. The packets not matching with the rules will be processed according to Rule 2.

4. Next, set another rule. Just open **Firewall>>Filter Setup**. Click the **Set 2** link and choose the **Filter Rule 3** button.

5. Check the box of **Check to enable the Filter Rule**. Type the comments (e.g., **open_ip**). Click the **Edit** button for **Source IP**.

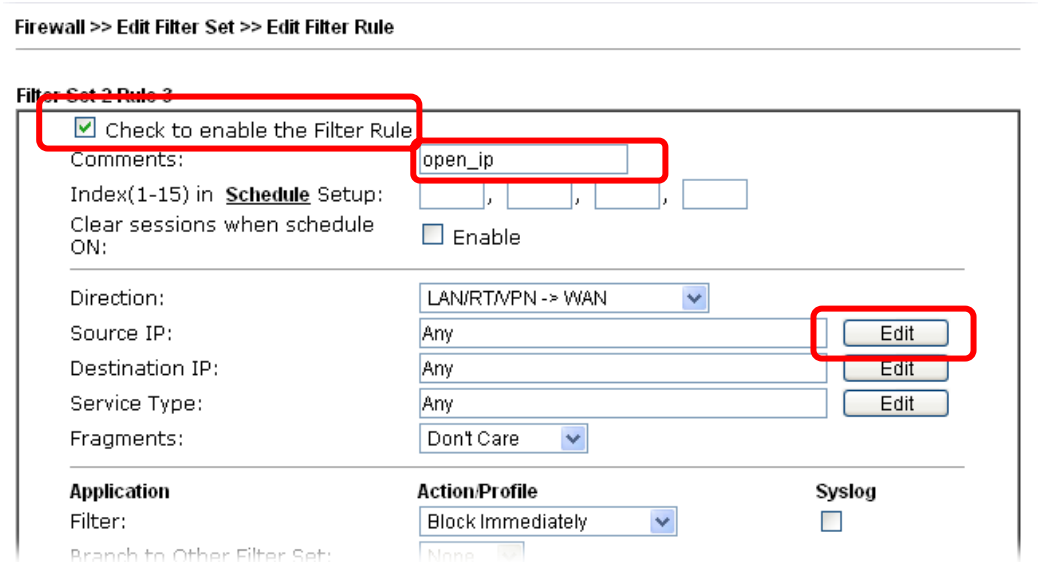

6. A dialog box will be popped up. Choose **Range Address** as **Address Type** by using the drop down list. Type 192.168.1.10 in the field of **Start IP**, and type 192.168.1.20 in the field of **End IP**. Then, click **OK** to save the settings. The computers within the range can access into the Internet.

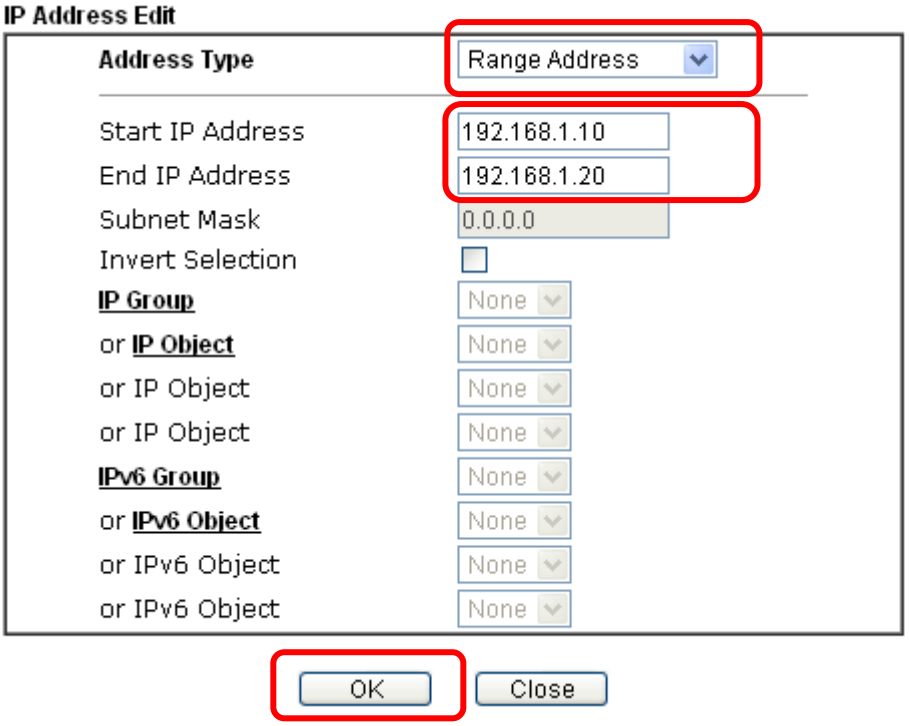

7. Now, check the content of **Source IP** is correct or not. The action for **Filter** shall be set with **Pass Immediately.** Then, click **OK** to save the settings.

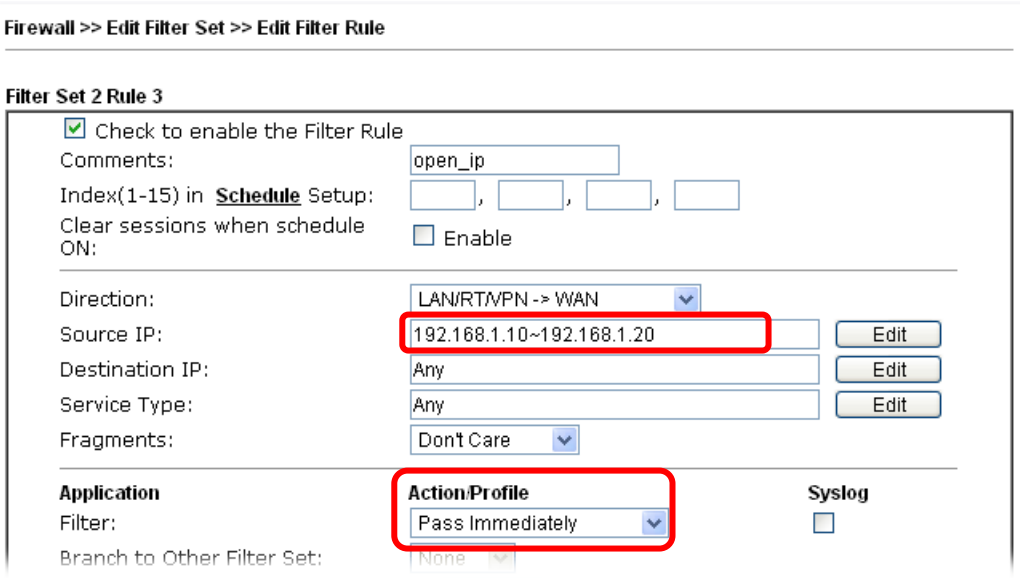

8. Both filter rules have been created. Click **OK**.

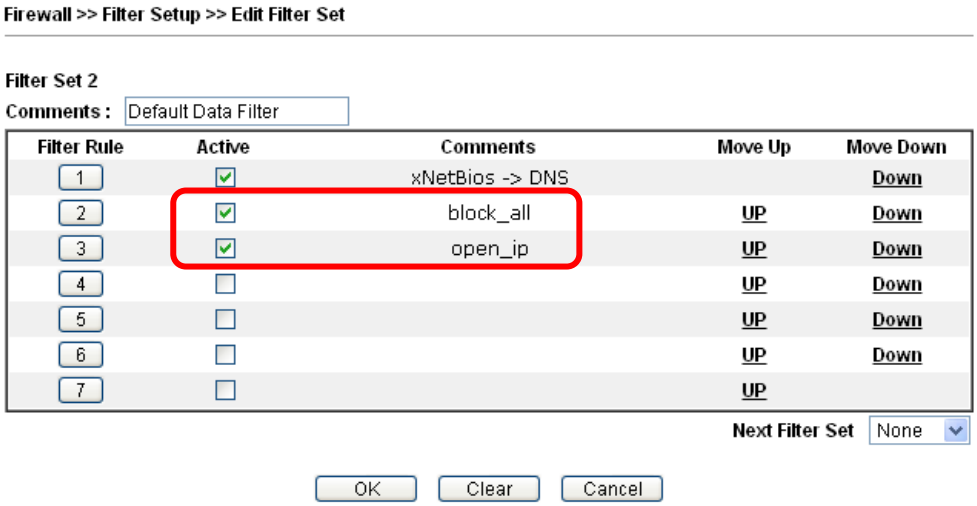

9. Now, all the settings are configured well. Only the computers with the IP addresses within 192.168.1.10 ~ 192.168.1.20 can access to Internet.

4.13 How to Block Facebook Service Accessed by the Users via Web Content Filter / URL Content Filter

There are two ways to block the facebook service, Web Content Filter and URL Content Filter.

Web Content Filter,

Benefits: Easily and quickly implement the category/website that you want to block.

Note: License is required.

URL Content Filter,

Benefits: Free, flexible for customize webpage.

Note: Manual setting (e.g., one keyword for one website.)

I. Via Web Content Filter

1. Make sure the Web Content Filter (powered by Commtouch) license is valid.

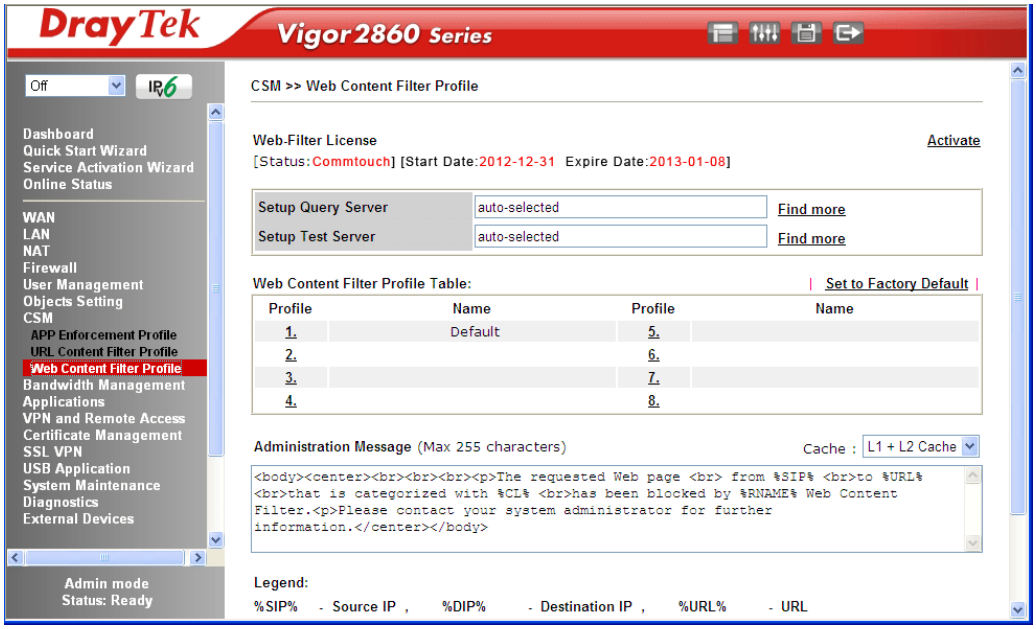

How to register/activate Web Content Filter (WCF) license? Please visit for getting more information:

***How to Register AI/AV/AS/WCF Service (Service Activation Wizard)**
(http://www.draytek.com/user/SupportFAQDetail.php?ID=1955)

***How to Activate Anti-Virus/Anti-Intrusion/Anti-Spam Service**
(http://www.draytek.com/user/SupportFAQDetail.php?ID=286)

How to use the Web Content Filter (WCF)
(http://www.draytek.com/user/SupportFAQDetail.php?ID=1953)

* **What the Web Content Filter (WCF) license benefits are**,
(http://www.draytek.com/user/PdInfoDetail.php?Id=110)

2. Open **CSM >> Web Content Filter Profile** to create a WCF profile. Check **Social Networking** with Action**, Block**.

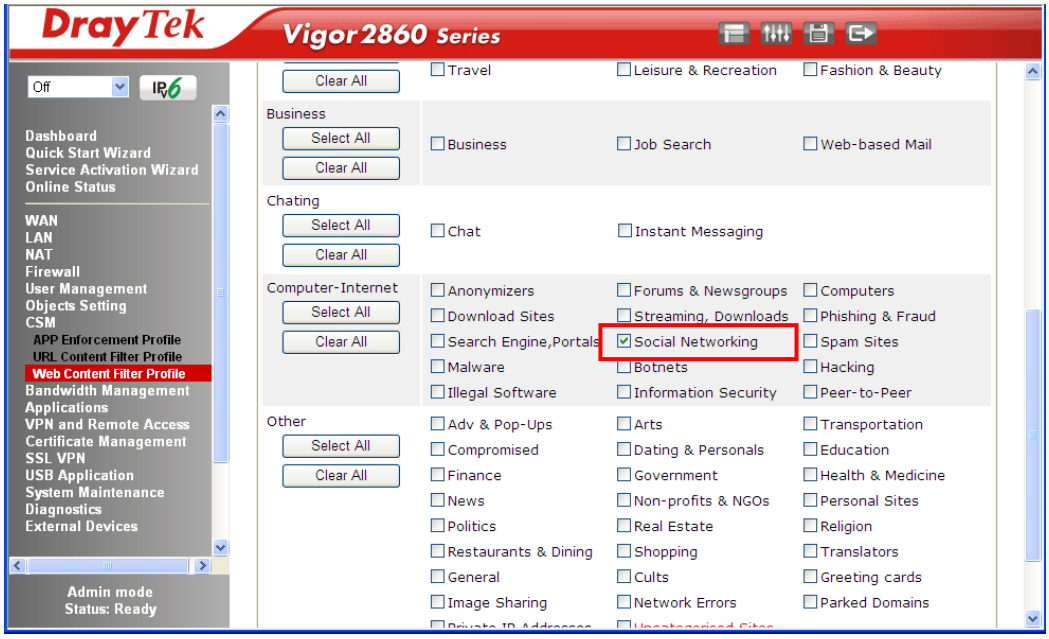

3. Enable this profile in **Firewall>>General Setup>>Default Rule**.

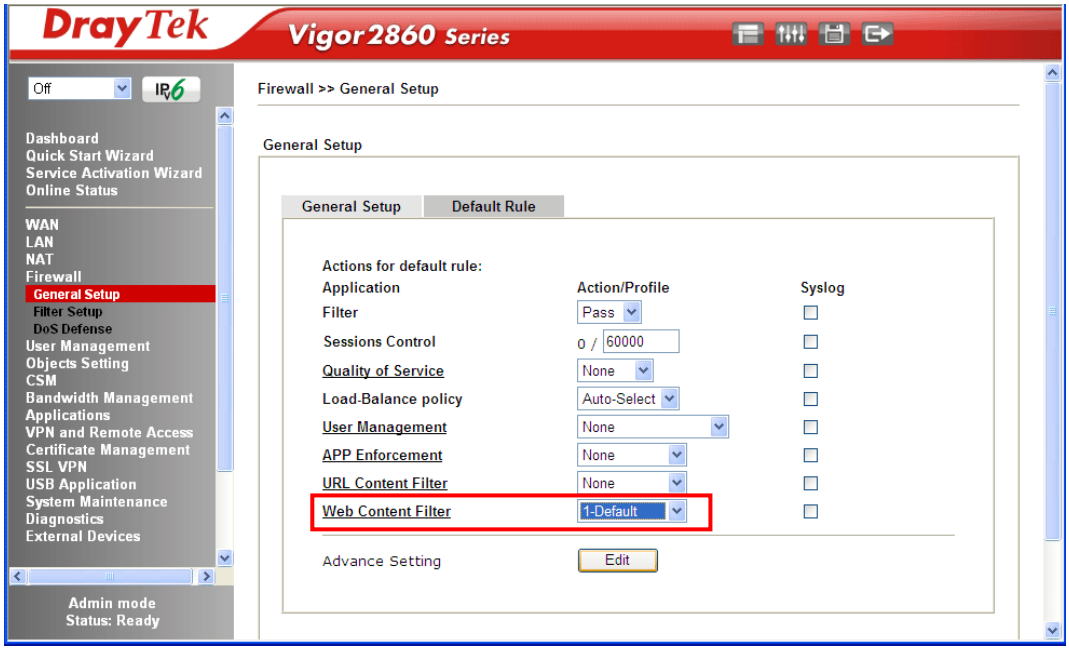

4. Next time when someone accesses facebook via this router, the web page would be blocked and the following message would be displayed instead.

The requested Web page
from 192.168.2.114
to www.facebook.com/
that is categorized with [Social Networking]
has been blocked by Web Content Filter.
Please contact your system administrator for further information.
[Powered by DrayTek]

II. Via URL Content Filter

A. Block the web page containing the word of “Facebook”

1. Open **Object Settings>>Keyword Object**. Click an index number to open the setting page.
2. In the field of **Contents**, please type *facebook*. Configure the settings as the following figure.

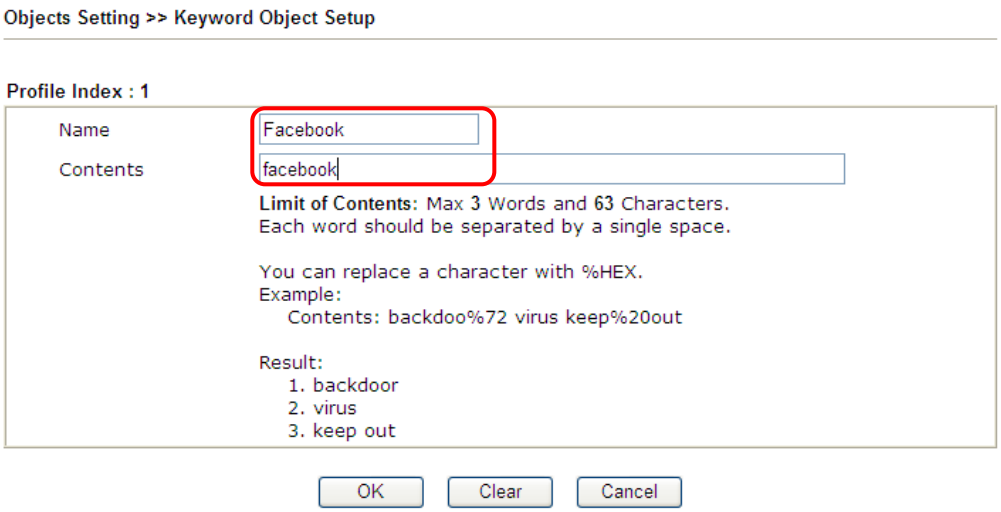

3. Open **CSM>>URL Content Filter Profile**. Click an index number to open the setting page.
4. Configure the settings as the following figure.

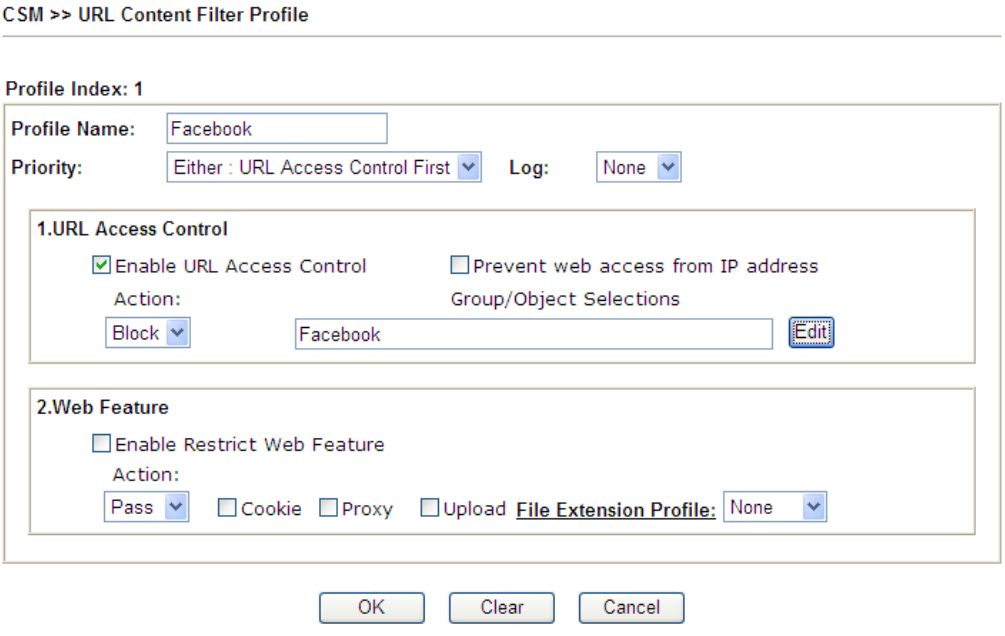

5. When you finished the above steps, click **OK**. Then, open **Firewall>>General Setup**.

6. Click the **Default Rule** tab. Choose the profile just configured from the drop down list in the field of **URL Content Filter**. Now, users cannot open any web page with the word "facebook" inside.

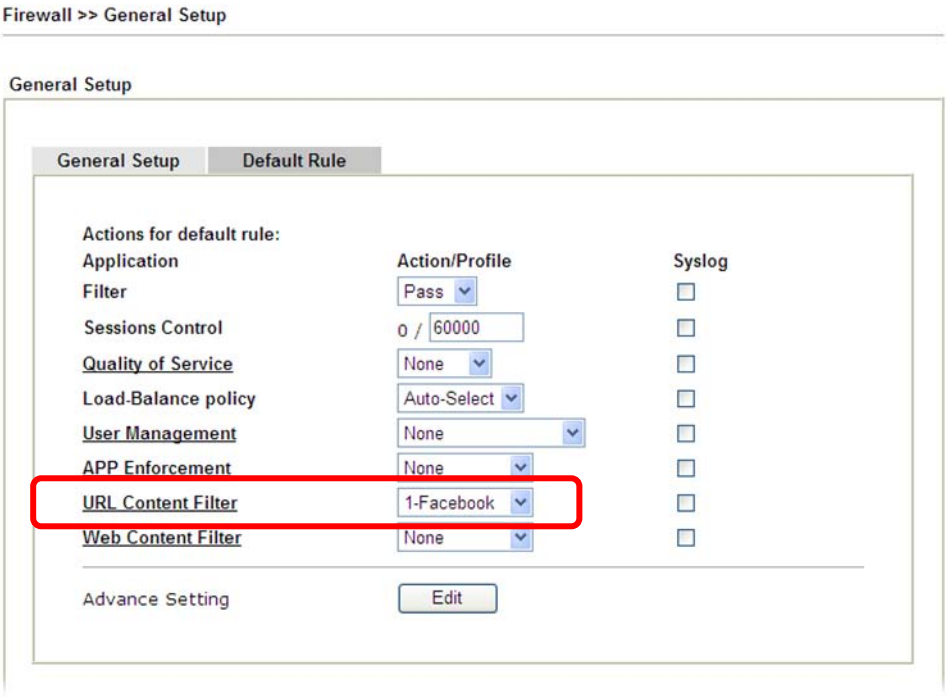

B. Disallow users to play games on Facebook

1. Open **Object Settings>>Keyword Object**. Click an index number to open the setting page.
2. In the field of **Contents**, please type *apps.facebook*. Configure the settings as the following figure.

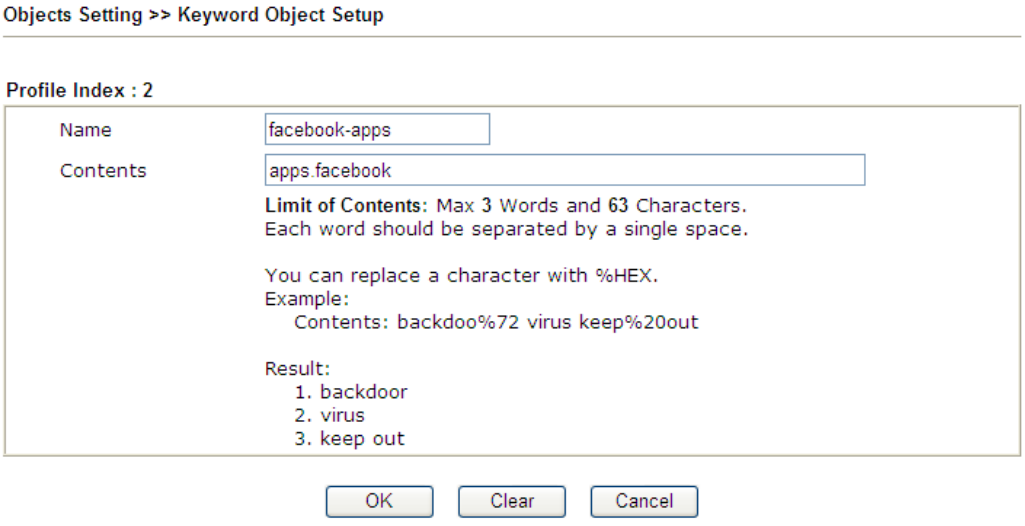

3. Open **CSM>>URL Content Filter Profile**. Click an index number to open the setting page.

4. Configure the settings as the following figure.

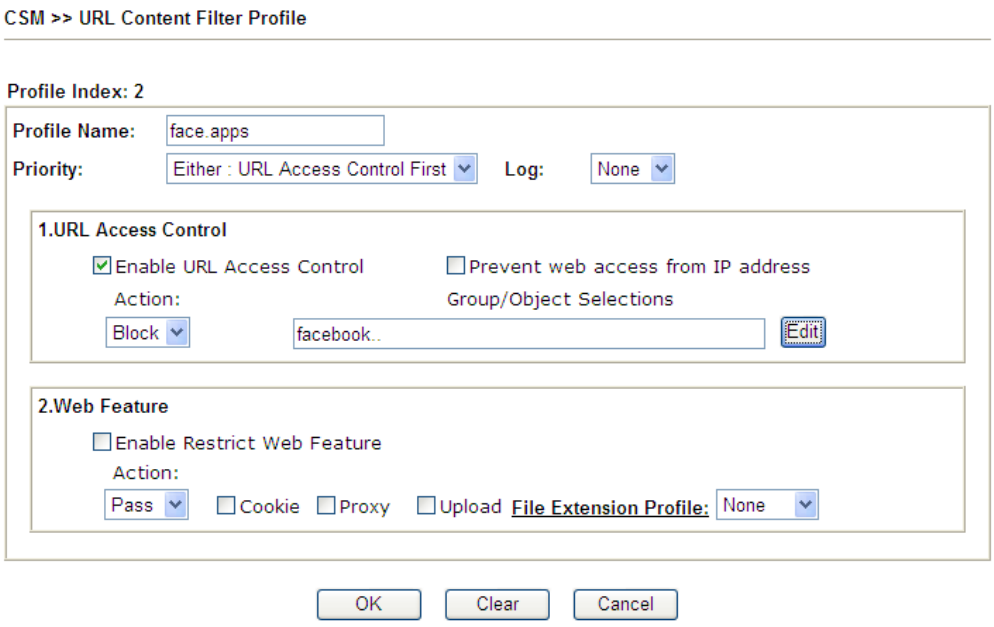

5. When you finished the above steps, please open **Firewall>>General Setup**.

6. Click the **Default Rule** tab. Choose the profile just configured from the drop down list in the field of URL Content Filter. Now, users cannot open any web page with the word "facebook" inside.

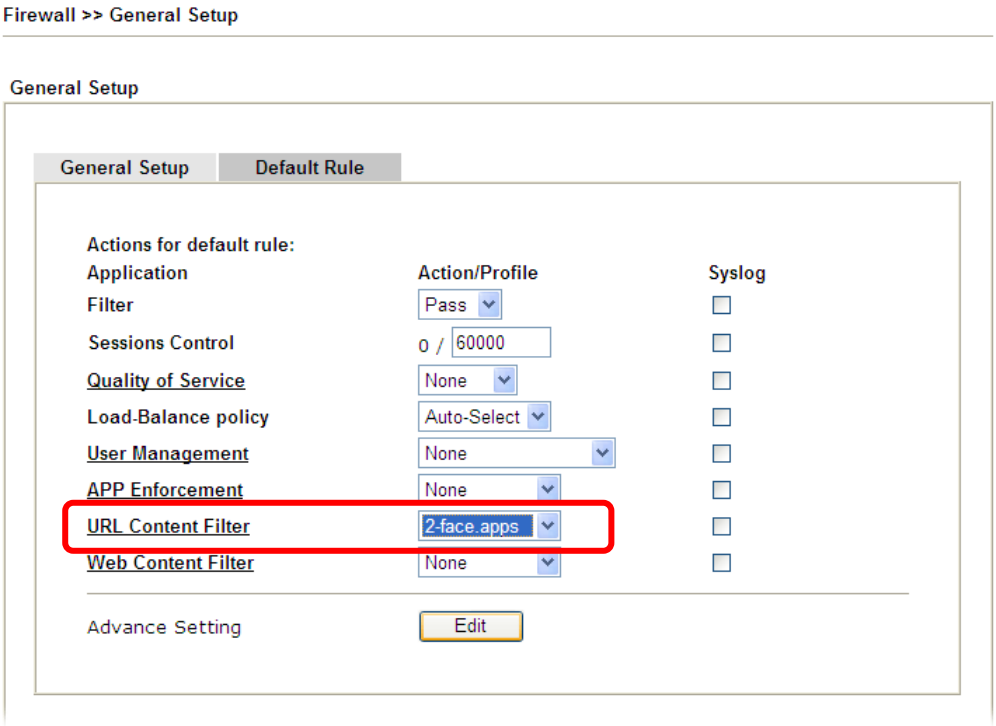

5 Trouble Shooting

This section will guide you to solve abnormal situations if you cannot access into the Internet after installing the router and finishing the web configuration. Please follow sections below to check your basic installation status stage by stage.

- Checking if the hardware status is OK or not.
- Checking if the network connection settings on your computer are OK or not.
- Pinging the router from your computer.
- Checking if the ISP settings are OK or not.
- Backing to factory default setting if necessary.

If all above stages are done and the router still cannot run normally, it is the time for you to contact your dealer for advanced help.

5.1 Checking If the Hardware Status Is OK or Not

Follow the steps below to verify the hardware status.

1. Check the power line and WLAN/LAN cable connections.
   Refer to "**1.3 Hardware Installation"** for details.
2. Turn on the router. Make sure the **ACT LED** blink once per second and the correspondent **LAN LED** is bright.

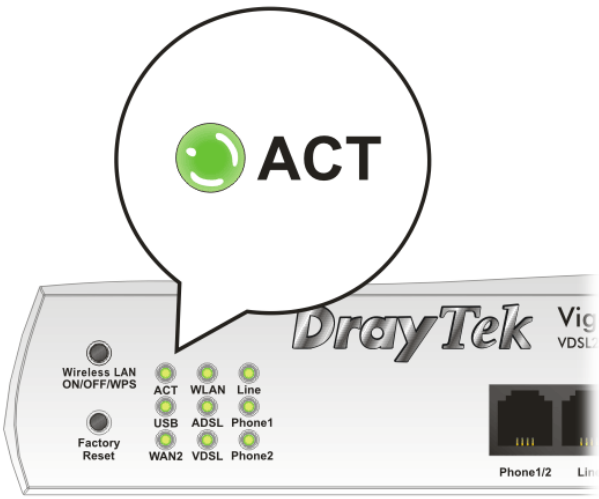

3. If not, it means that there is something wrong with the hardware status. Simply back to **"1.3 Hardware Installation"** to execute the hardware installation again. And then, try again.

5.2 Checking If the Network Connection Settings on Your Computer Is OK or Not

Sometimes the link failure occurs due to the wrong network connection settings. After trying the above section, if the link is stilled failed, please do the steps listed below to make sure the network connection settings is OK.

For Windows

> The example is based on Windows XP. As to the examples for other operation systems, please refer to the similar steps or find support notes in **www.DrayTek.com**.

1. Go to **Control Panel** and then double-click on **Network Connections**.

2. Right-click on **Local Area Connection** and click on **Properties**.

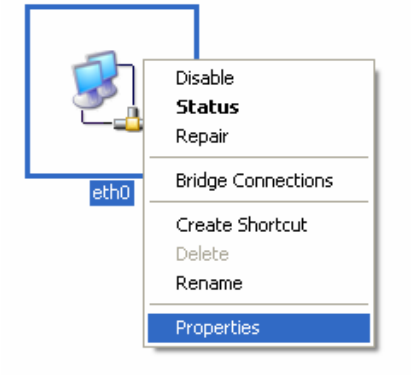

3. Select **Internet Protocol (TCP/IP)** and then click **Properties**.

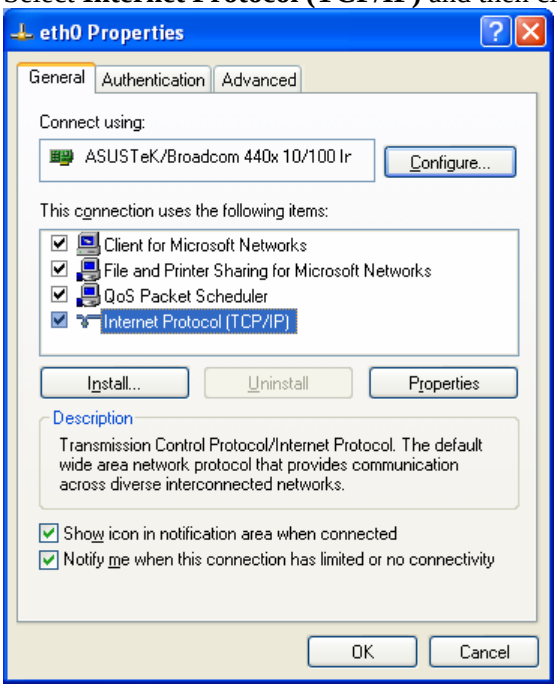

4. Select **Obtain an IP address automatically** and **Obtain DNS server address automatically**.

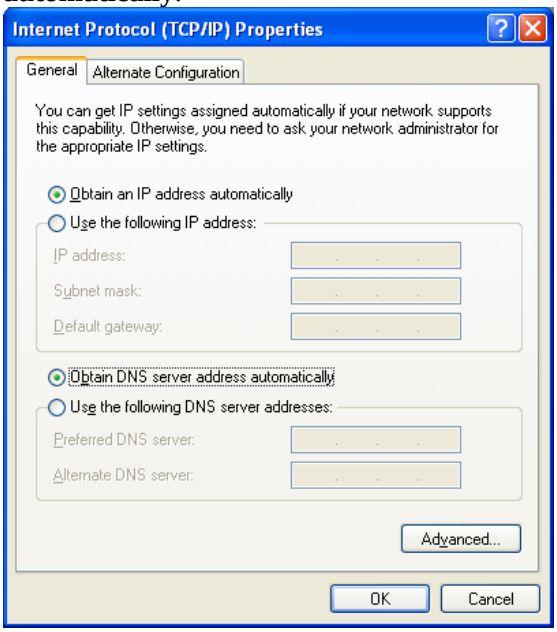
Internet Protocol (TCP/IP) Properties
General
Alternate Configuration
You can get IP settings assigned automatically if your network supports this capability. Otherwise, you need to ask your network administrator for the appropriate IP settings.
Obtain an IP address automatically
Use the following IP address:
IP address:
Subnet mask:
Default gateway:
Obtain DNS server address automatically
Use the following DNS server addresses:
Preferred DNS server:
Alternate DNS server:
Advanced...
OK
Cancel

For Mac OS

1. Double click on the current used Mac OS on the desktop.
2. Open the **Application** folder and get into **Network**.
3. On the **Network** screen, select **Using DHCP** from the drop down list of Configure IPv4.

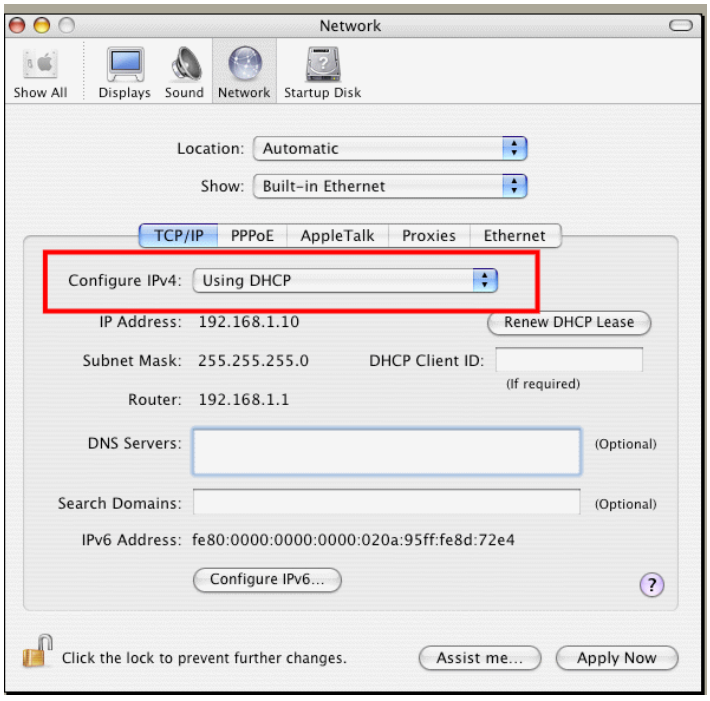

5.3 Pinging the Router from Your Computer

The default gateway IP address of the router is 192.168.1.1. For some reason, you might need to use "ping" command to check the link status of the router. **The most important thing is that the computer will receive a reply from 192.168.1.1.** If not, please check the IP address of your computer. We suggest you setting the network connection as **get IP automatically**. (Please refer to the section 5.2)

Please follow the steps below to ping the router correctly.

For Windows

1. Open the **Command** Prompt window (from **Start menu> Run**).
2. Type **command** (for Windows 95/98/ME) or **cmd** (for Windows NT/ 2000/XP/Vista). The DOS command dialog will appear.

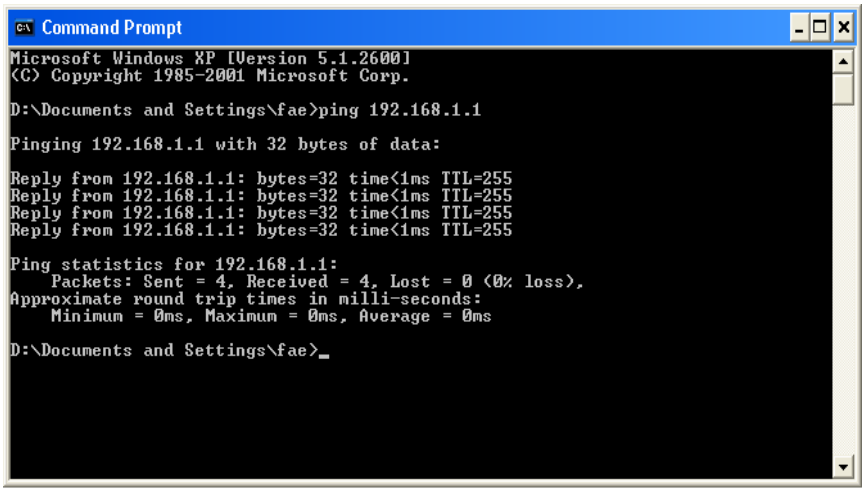
Command Prompt
Microsoft Windows XP [Version 5.1.2600]
(C) Copyright 1985-2001 Microsoft Corp.
D:\Documents and Settings\fae>ping 192.168.1.1
Pinging 192.168.1.1 with 32 bytes of data:
Reply from 192.168.1.1: bytes=32 time<1ms TTL=255
Reply from 192.168.1.1: bytes=32 time<1ms TTL=255
Reply from 192.168.1.1: bytes=32 time<1ms TTL=255
Reply from 192.168.1.1: bytes=32 time<1ms TTL=255
Ping statistics for 192.168.1.1:
Packets: Sent = 4, Received = 4, Lost = 0 (0% loss),
Approximate round trip times in milli-seconds:
Minimum = 0ms, Maximum = 0ms, Average = 0ms
D:\Documents and Settings\fae>

3. Type ping 192.168.1.1 and press [Enter]. If the link is OK, the line of **"Reply from 192.168.1.1:bytes=32 time<1ms TTL=255"** will appear.
4. If the line does not appear, please check the IP address setting of your computer.

For Mac OS (Terminal)

1. Double click on the current used MacOs on the desktop.
2. Open the **Application** folder and get into **Utilities**.
3. Double click **Terminal**. The Terminal window will appear.
4. Type **ping 192.168.1.1** and press [Enter]. If the link is OK, the line of **"64 bytes from 192.168.1.1: icmp_seq=0 ttl=255 time=xxxx ms**" will appear.

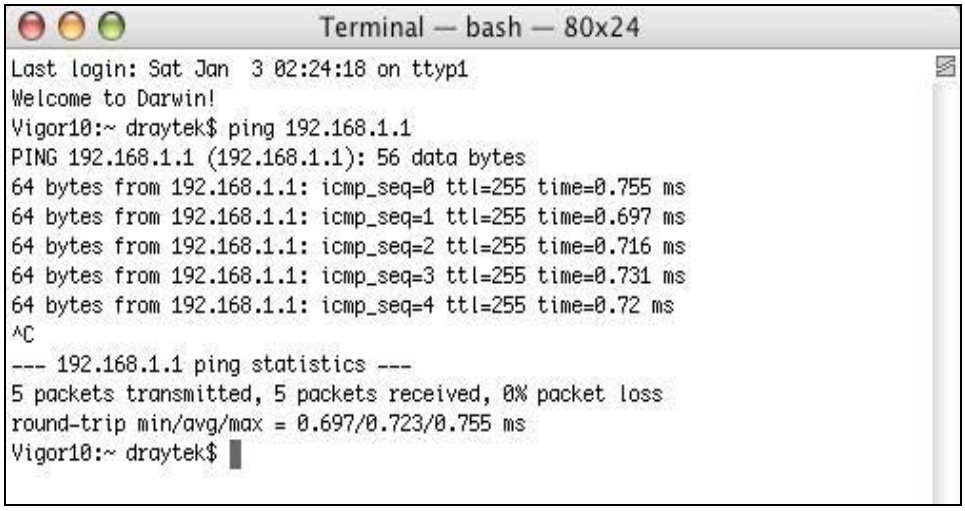
Terminal — bash — 80x24
Last login: Sat Jan 3 02:24:18 on ttyp1
Welcome to Darwin!
Vigor10:~ draytek$ ping 192.168.1.1
PING 192.168.1.1 (192.168.1.1): 56 data bytes
64 bytes from 192.168.1.1: icmp_seq=0 ttl=255 time=0.755 ms
64 bytes from 192.168.1.1: icmp_seq=1 ttl=255 time=0.697 ms
64 bytes from 192.168.1.1: icmp_seq=2 ttl=255 time=0.716 ms
64 bytes from 192.168.1.1: icmp_seq=3 ttl=255 time=0.731 ms
64 bytes from 192.168.1.1: icmp_seq=4 ttl=255 time=0.72 ms
^C
--- 192.168.1.1 ping statistics ---
5 packets transmitted, 5 packets received, 0% packet loss
round-trip min/avg/max = 0.697/0.723/0.755 ms
Vigor10:~ draytek$

5.4 Checking If the ISP Settings are OK or Not

Open **WAN >> Internet Access** page and then check whether the ISP settings are set correctly. Click **Details Page** of WAN1-WAN3 to review the settings that you configured previously.

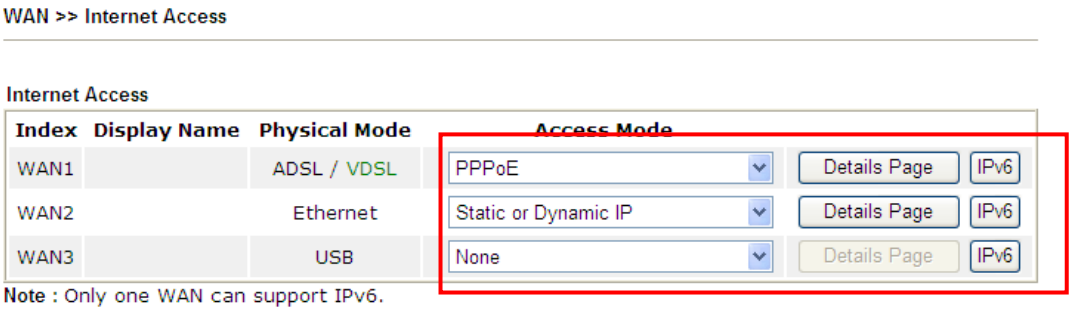

5.5 Problems for 3G Network Connection

When you have trouble in using 3G network transmission, please check the following:

Check if USB LED lights on or off

You have to wait about 15 seconds after inserting 3G USB Modem into your Vigor2860. Later, the USB LED will light on which means the installation of USB Modem is successful. If the USB LED does not light on, please remove and reinsert the modem again. If it still fails, restart Vigor2860.

USB LED lights on but the network connection does not work

Check the PIN Code of SIM card is disabled or not. Please use the utility of 3G USB Modem to disable PIN code and try again. If it still fails, it might be the compliance problem of system. Please open DrayTek Syslog Tool to capture the connection information (WAN Log) and send the page (similar to the following graphic) to the service center of DrayTek.

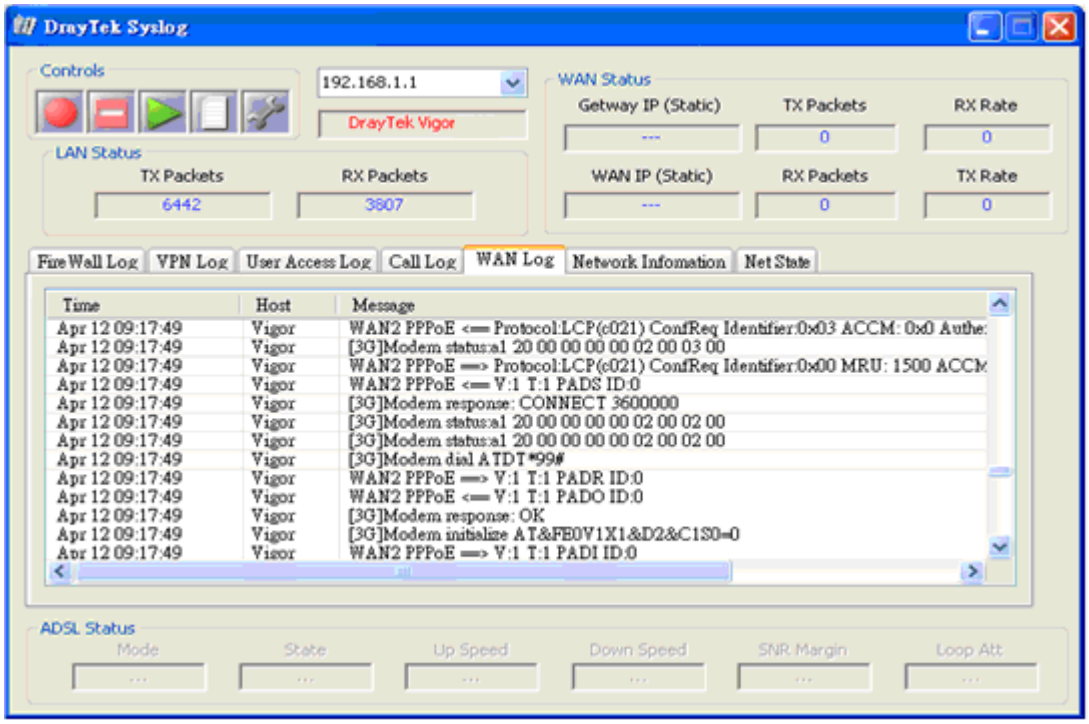

Transmission Rate is not fast enough

Please connect your Notebook with 3G USB Modem to test the connection speed to verify if the problem is caused by Vigor2860. In addition, please refer to the manual of 3G USB Modem for LED Status to make sure if the modem connects to Internet via HSDPA mode. If you want to use the modem indoors, please put it on the place near the window to obtain better signal receiving.

5.6 Backing to Factory Default Setting If Necessary

Sometimes, a wrong connection can be improved by returning to the default settings. Try to reset the router by software or hardware. Such function is available in **Admin Mode** only.

Warning: After pressing **factory default setting**, you will loose all settings you did before. Make sure you have recorded all useful settings before you pressing. The password of factory default is null.

Software Reset

You can reset the router to factory default via Web page. Such function is available in **Admin Mode** only.

Go to **System Maintenance** and choose **Reboot System** on the web page. The following screen will appear. Choose **Using factory default configuration** and click **Reboot Now**. After few seconds, the router will return all the settings to the factory settings.

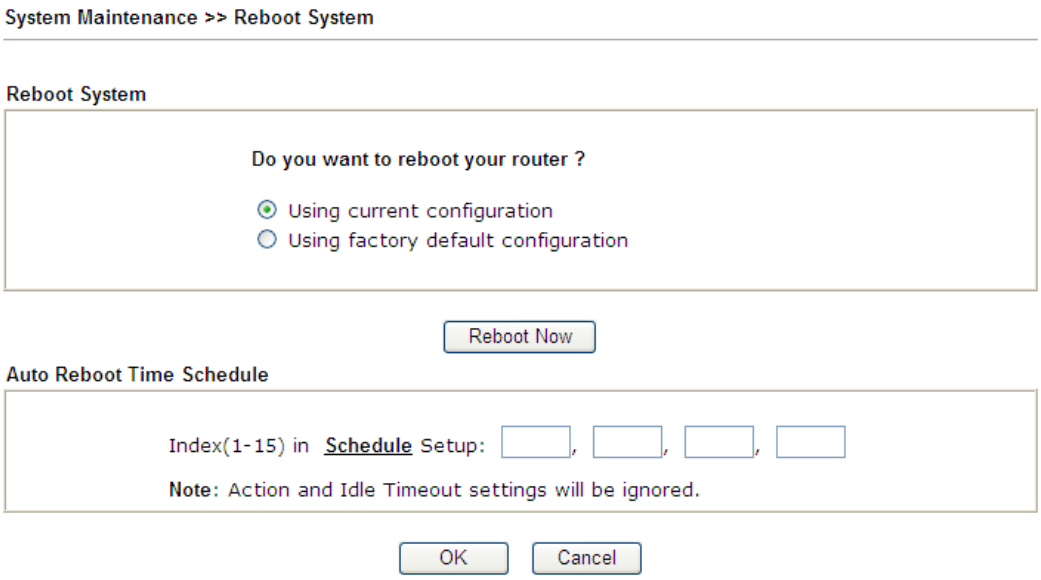

Hardware Reset

While the router is running (ACT LED blinking), press the **Factory Reset** button and hold for more than 5 seconds. When you see the **ACT** LED blinks rapidly, please release the button. Then, the router will restart with the default configuration.

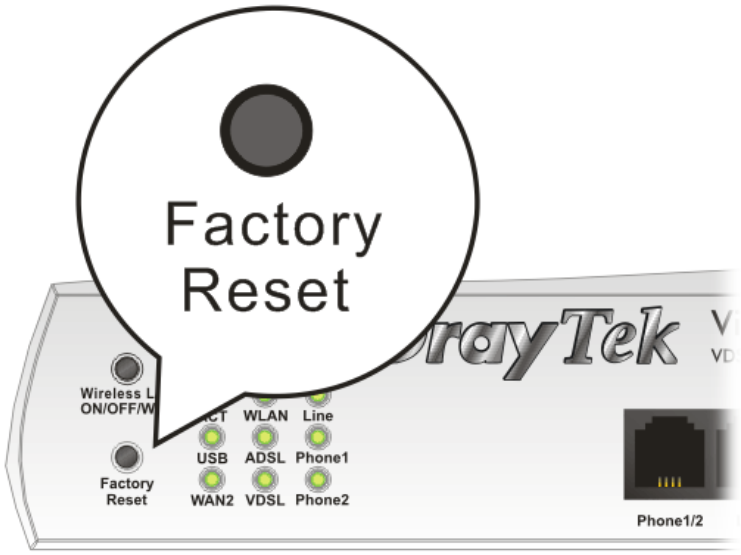

After restore the factory default setting, you can configure the settings for the router again to fit your personal request.

5.7 Contacting Your Dealer

If the router still cannot work correctly after trying many efforts, please contact your dealer for further help right away. For any questions, please feel free to send e-mail to support@DrayTek.com.